

FRONT

IR LED

EXT MIC

S JACK

A/V JACK

USB JACK

DV JACK

LED LIGHT

RMT

1	USB_VCC	1
2	DM(O-)	2
3	GND	3
4	DP(+)	4
5	GND	5
6	GND	6
7	LED_VCC	7
8	LED_VCC	8
9	S_JACK_DET	9
10	GND	10
11	EXT_MIC_L	11
12	EXT_MIC_R	12
13	GND	13
14	SEP_C	14
15	GND	15
16	SEP_C	16
17	GND	17
18	SLOW_SH_KEY	18
19	TPB	19
20	XTPB	20
21	GND	21
22	XTPA	22
23	TPA	23
24	GND	24
25	AUDIO_R	25
26	AUDIO_L	26
27	GND	27
28	AV_JACK_DET	28
29	VIDEO	29
30	GND	30
31	IR_LAMP_CTL	31
32	IR_VCC	32
33	MIC_JACK_DET	33
34	RM_VCC	34
35	REMOCON	35
36	GND	36

1	INT MIC L
2	GND
3	INT MIC R
4	GND

CN801

INT MIC

1	BLK	1	BLK
2	CVF_3V	2	CVF_3V
3	R-Y	3	R-Y
4	CVF_Y	4	CVF_Y
5	B-Y	5	B-Y
6	OSD_R	6	OSD_R
7	OSD_G	7	OSD_G
8	OSD_B	8	OSD_B
9	CVF_DATA	9	CVF_DATA
10	CVF_STB	10	CVF_STB
11	LCD/CFV_CLK	11	LCD/CFV_CLK
12	VCR_5V	12	VCR_5V
13	OSD_COMP	13	OSD_COMP
14	CVF_12V	14	CVF_12V
15	GND	15	GND
16	GND	16	GND
17	EVF_Y	17	EVF_Y
18	CVF_5V	18	CVF_5V

CNE01

LCD

DIGITAL	NO	ANALOG
GND	1	GND
LCD_MIRROR	2	LCD_MIRROR
LCD_-15V	3	LCD_-15V
LCD_+15V	4	LCD_+15V
LCD_VD	5	AUD_5V
LCD_HD	6	BLK
GND	7	GND
LCD_CTL	8	LCD_CTL
LCD/CFV_CLK	9	LCD/CFV_CLK
LCD_DATA	10	LCD_DATA
LCD_STB	11	LCD_STB
DCLK	12	GND
LS07	13	OSD_B
LS06	14	OSD_G
LS05	15	OSD_R
LS04	16	B-Y
LS03	17	LCD-Y
LS02	18	R-Y
LS01	19	LCD_7.5V
LCD_3V	20	LCD_3V
LCD_BL_ON	21	LCD_BL_ON
GND	22	GND
GND	23	GND
BL_5V	24	BL_5V
BL_5V	25	BL_5V
LS01	26	N.C

CNL302

LENS

1	N.C	N.C	2
3	GND	NIGHT_CONT	4
5	FOCUS_LED	FOCUS_SEN	6
7	VCC	ZOOM_B+	8
9	ZOOM_B-	ZOOM_A-	10
11	ZOOM_A+	VCC	12
13	ZOOM_LED	ZOOM_SEN	14
15	FOCUS_A-	FOCUS_A+	16
17	FOCUS_B+	FOCUS_B-	18
19	DRIVE+	HALL_IN+	20
21	HALL_OUT+	HALL_IN-	22
23	HALL_OUT-	DRIVE-	24
25	DAMP+	DAMP-	26
27	N.C		

CCD

1	HALL_IN+	FOCUS_VCC	2
3	HALL_IN-	ZOOM_SEN	4
5	DRIVE+	ZOOM_LED	6
7	FOCUS_B-	NIG_GND	8
9	FOCUS_A+	DAMP+	10
11	DAMP-	DRIVE+	12
13	NIG_CTRL	HALL_OUT+	14
15	FOCUS_SEN	HALL_OUT-	16
17	FOCUS_LED	FOCUS_B+	18
19	ZOOM_VCC	FOCUS_A-	20
21	ZOOM_A-	ZOOM_B+	22
23	ZOOM_B-	ZOOM_A+	24
25	V4	V3	26
27	V2	V1	28
29	H2	H1	30
31	RG	GND	32
33	GND	-7.5V	34
35	GND	CCD-OUT	36
37	15V	15V	38
39	GND	VSUB	40

CNC01

1	GND	SYS_3V	2
3	GND	PI_SI	4
5	GND	PI_SO	6
7	UNREG	PI_CS	8
9	UNREG	PI_MODE	10
11	UNREG	PI_SCK	12
13	UNREG	HEAD_SW	14
15	DC_JACK_DET	BATT_SW_DET	16
17	CHG_CTL	TMODE	18
19	CHG_AMP	TBUSY	20
21	UART_TXD	UART_RXD	22
23	GND	MICOM_RESET	24
25	GND	EJECT	26
27	CURRENT_V-DET	ENVE_OUT	28
29	MENU_DOWN	GND	30
31	GND	GND	32
33	GND	BATT_V_DET	34
35	MENU_UP	START/STOP	36
37	CHG_LED	CAM_SW	38
39	M/ENTER_KEY	VCR_SW	40

CNR01

REAR

LITHIUM BATT.

CAM OFF

PLAYER

DC JACK

BATTERY TERMINAL

1	BATT_DET	UNREG	18
2	HEAD_SW	UNREG	17
3	ENVE_OUT	MICOM_RESET	16
4	UART_RXD	UART_TXD	15
5	PI_CS	PI_MODE	14
6	BAT_GND	PI_SCK	13
7	TBUSY	PI_SO	12
8	GND	PI_SI	11
9	TMODE	SYS3V	10

CNR02

MAIN

CN401

CNP01

CN901

CN301

CNA01

MICOM READ/WRITE(*)

1	UART_TXD	UART_RXD	2
3	GND	JTRST	4
5	JTD1	JTMS	6
7	JTCK	JTDO	8
9	DSP_RESET	VDD	10
11	MICOM_RST	DREST	12
13	VCC	DBG	14
15	SDI/DINT	DCLK	16
17	PCST0	PCST1	18
19	PCST2	PCST3	20
21	GND	SDAO/TPC	22

CN703

CN601

1	FG_GND
2	FG(-)
3	FG(+)
4	FG_VCC
5	COIL_U
6	COIL_U
7	COIL_V
8	COIL_V
9	COIL_W
10	COIL_W
11	HALL_VCC
12	HW(+)
13	HW(-)
14	HALL_GND
15	HV(+)
16	HV(+)
17	HU(-)
18	HU(+)

CN602

1	END_SENSOR_E
2	LED_ANODE
3	L/M_REV
4	L/M_FWD
5	LED_CATHODE
6	DEW_GND
7	DEW
8	CASS_SW_GND
9	CASS_SW_3V
10	REEL_S_SENSOR
11	REEL_T_SENSOR
12	REEL_3V
13	REEL_GND
14	START_SENSOR_E
15	START_SENSOR_C
16	COMMON
17	MODE_SW0
18	MODE_SW1
19	MODE_SW2
20	MIC_GND
21	REC_SW
22	MIC_SCK
23	MIC_SDA
24	MIC_VCC

CN603

1	DRUM_W
2	DRUM_W
3	COIL_COM
4	SENS_COM
5	D_FG
6	DRUM_FG
7	DRUM_V
8	DRUM_V
9	DRUM_U
10	DRUM_U

CN101

1	GND
2	CH1(F)
3	CH1(S)
4	GND
5	CH2(F)
6	CH2(S)
7	GND

CN704

1	GND
2	ZOOM_AD
3	PHOTO_KEY
4	SS3V

DECK

CAPSTAN

DRUM HEAD

1	FG_GND
2	FG(-)
3	FG(+)
4	FG_VCC
5	COIL_U
6	COIL_U
7	COIL_V
8	COIL_V
9	COIL_W
10	COIL_W
11	HALL_VCC
12	HW(+)
13	HW(-)
14	HALL_GND
15	HV(-)
16	HV(+)
17	HU(-)
18	HU(+)

1	END_SENSOR_E
2	LED_ANODE
3	L/M_REV
4	L/M_FWD
5	LED_CATHODE
6	DEW_GND
7	DEW
8	CASS_SW_GND
9	CASS_SW_3V
10	REEL_S_SENSOR
11	REEL_T_SENSOR
12	REEL_3V
13	REEL_GND
14	START_SENSOR_E
15	START_SENSOR_C
16	COMMON
17	MODE_SW0
18	MODE_SW1
19	MODE_SW2
20	MIC_GND
21	REC_SW
22	MIC_SCK
23	MIC_SDA
24	MIC_VCC

1	GND
2	CH1(F)
3	CH1(S)
4	GND
5	CH2(F)
6	CH2(S)
7	GND

RIGHT

ZOOM

PHOTO

1	GND
2	ZOOM_AD
3	PHOTO_KEY
4	SS3V

CNT01

LEFT

CNLF05

CNLF01

CNLF02

CNLF03

1	SPK+
2	SPK-

1	SPK+
2	SPK+
3	GND
4	GND
5	FUNCTION KEY
6	FUNCTION KEY
7	SS_3V
8	BLK
9	LCD_3V
10	LCD_MIRROR
11	LCD_1+15V
12	LCD_1+15V
13	CD_IL_IOCTL
14	CD_OPEN
15	BL_5V
16	BL_5V
17	LCD_STB
18	LCD_1+15V
19	CD_HD
20	CD_MD
21	GND
22	GND
23	LS00
24	LS01
25	LS02
26	LS03
27	LS04
28	LS05
29	LS06
30	LS07
31	GND
32	DCLK
33	CD_IL_IOCTL
34	CD_1+15V
35	R_Y
36	CD_1+15V
37	BL_Y
38	CD_1+15V
39	CD_1+15V
40	CD_1+15V
41	CD_1+15V
42	CD_1+15V
43	CD_1+15V
44	CD_1+15V
45	CD_1+15V

CNLF04

CARD DET

1	SD DATA2
2	SD DATA1
3	SD DATA0
4	SD DATA0
5	SD DATA0
6	SD DATA0
7	SD DATA0
8	SD DATA0
9	SD DATA0
10	SD DATA0
11	SD DATA0
12	SD DATA0
13	SD DATA0
14	SD DATA0
15	SD DATA0
16	SD DATA0
17	SD DATA0
18	SD DATA0
19	SD DATA0
20	SD DATA0

메모리/테이프

DISPLAY

PB ZOOM

V.LIGHT

LCD ON/OFF

FUNCTION

1	FUNCTION KEY
2	GND

EASY-Q

S.SHOW

REW

FF

STOP