

Highlight *Voice call*, *Video call*, or *Message* and press **O** (Reset)

1 Highlight entry or open Entry details

- 1 Highlight entry or open Entry details
- 2 Select *Options* → *Delete* → *Selected* → *Yes*

1 Highlight entries

To select **Phonebook** or **USIM Card Phonebook**
Select *Options* → *View from Phone* or *View from USIM*

5
Phonebook

7075C (E).book 16 ページ 2006年10月26日 木曜日 午前11時19分

5

Press **w** (Delete) and proceed to Step 7 when all are not checked

6

Enter Phone Password, press **c** (Confirm)

7

Select **Yes**

Deleting All Entries at Once

Delete all Phonebook or USIM Card Phonebook entries.

1

Highlight entries
To move between Phonebook and USIM Card Phonebook
Select *Options* → *View from USIM* or *View from Phone*

2

Select *Options* → *Delete* → *All*

3

Enter Phone Password, press **c** (Confirm) → **Yes**

5-16

My Phonebook Details

Confirm handset phone number. Add your name, mail address, street address, and other information.

1

Press **c** and Press **0**

To enter or edit other items

① Press **w** (Edit)

 
 
② Enter or edit items following the same procedures for Phonebook items; when finished, then press **w** (Save)

 Options


Item	Description
Send my phonebook details	Send as a vfile; select <i>Via message</i> to create a message with vfile attached (P.17-6), or <i>Via Bluetooth</i> to send vfile wirelessly (P.12-6).
Delete	Delete owner info except numbers on USIM Card.
Save to Data Folder	Create a vfile and save it to <i>Other documents</i> in Data Folder.
Copy item	Copy highlighted entry item.
Print via Bluetooth	Print My phonebook details (name, phone number information) using the printer via Bluetooth® connection.




707SC(E).book 18 ページ 2006年10月26日 木曜日 午前11時19分



5-18

 

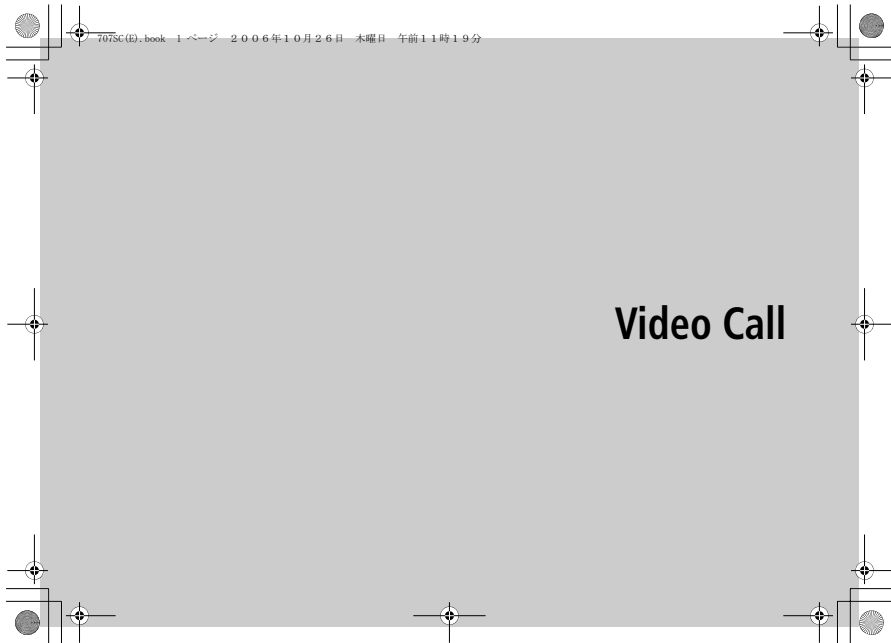

707SC (B).book 1 ページ 2006年10月26日 木曜日 午前11時19分

Video Call

Before Using Video Calls

Exchange voice and video via Video Call-compatible 3G handsets.

You may choose not to send your own image (P.6-6).

Video Call Precautions

- Calls to incompatible handsets may be disconnected; charges apply.
- It may be difficult to use Speaker Phone with earpiece volume raised; lower volume or use Stereo Earphone Microphone.
- Ambient noise may hamper voice quality; use Stereo Earphone Microphone.
- Using Speaker Phone in public may disturb other; please mind your manners.

Initiating a Video Call

Dial directly or from Phonebook entries or Call Log records.

- 1 Enter a phone number
 - 2 Select *Options* → *Video call*
- 6-2

3 Press *y* to end the call

- Tip
- Engaged Video Call Operations (P.6-3)

When Video Call cannot be connected

Unavailable for a video call... appears; select *Options* → *Voice call* or *Create message* to contact the recipient, or *View contact details* to open Phonebook. Select *Add to Phonebook* to save the receiver's number to Phonebook or USIM Card Phonebook.

Initiating a Call (P.2-3)

Receiving a Video Call

- 1 When 707SC rings/vibrates, press *c* (Accept)

Loudspeaker on? appears;
Select *Yes* or *No*


Allow own picture to be shown? appears;
Select *Yes* or *No*

2 Press **y** to end the call

- Tip
- **To adjust ringtone volume**
While 7075C is ringing, press **n** or **b**.
 - **When a Stereo Earphone Microphone is connected**
Press Stereo Earphone Microphone switch for 1+ seconds to answer video calls. Press for 1+ seconds to end a Video Call.
 - **To disconnect a Video Call without answering it**
Press **o** (Busy)
 - **To change or cancel outgoing image**
Set 7075C to send Substitute Image beforehand (P.6-6). Alternatively, change to Substitute Image during a call (P.6-6).
 - **Send Your Image or Substitute Image during a Video Call**
After Step 1, Your Image appears. When confirmation appears, select *Yes* or *No* to send Your Image or Substitute Image. When Video Call connects Your Image or Substitute Image appears.
 - **Engaged Video Call Operations (P.6-5)**

Engaged Video Call Operations

 Perform operations from Video Call Menu or *Options*.



- 1 Large Display (Normally, the other party's image)
- 2 Small Display (Normally, your image)
- 3 The other party's name or phone number
- 4 Call duration
- 5 Meaning of the icon at cursor position

Video Call Menu Icons

- / : Toggle Speaker Phone Off/On
- : Toggle Incoming Image Size
- / : Freeze or unfreeze outgoing image

: Flip image

6
Video Call

Highlight  /  and press **c**

② Use **S** to adjust brightness

7075C (E).book 5 ページ 2006年10月26日 木曜日 午前11時19分

Tip

- **To adjust earpiece volume**
Press **j** during a Video Call.
- **To enlarge or reduce outgoing image**
Press **n** or **b** during a Video Call.
- **When outgoing image is canceled**
7075C send caller Substitute Image.

Item	Description
Send DTMF	Send push tones.
Memo	Create and save text memos (P.14-10).
Details	Open Phonebook Entry details.
Switch to headset/ Switch to phone	Appears when Bluetooth® compatible headset is in use. Select headset or phone (handset).

Engaged Video Call Options

Item	Description
Normal/Speaker on	Toggle Speaker Phone off/on (P.6-4).
Mute	Cancel sending outgoing image/mic/ key tones (P.6-4).
Display options	Adjust outgoing image appearance/ quality (P.6-4).
Settings	Select Video Call settings (P.6-5).
Phonebook	Open Phonebook Search window.
Add to Phonebook	Save number to Phonebook or USIM Card Phonebook (P.5-6).

Video Call Settings

Sending Your Image

Default Setting = Always ask

When *Always ask* is set, Choose between Your Image or Substitute Image as outgoing image each time a Video Call is received.

6

Video Call

6-5

- 1 Press **c** and select *Settings* → *Call settings* → *Video call* → *Show my picture*

- 2 Select the setting and press **c** (Save)

Selecting a Substitute Image

Default Setting ■ Camera Off

Select an image to use as the outgoing image (in place of Your Image).

- 1 Press **c** and select *Settings* → *Call settings* → *Video call* → *Select still picture*

- 2 Press **c** (Change)

- 3 Open Data Folder, select a file and press **c** (Save)

Tip

- To restore Substitute Image to its default

- ① Perform Steps 1 and 2
- ② Select any image file in Data Folder → *Options* → *Reset*

Retry Settings

Default Setting ■ Always ask

- 1 Press **c** and select *Settings* → *Call settings* → *Video call* → *Retry with*

- 2 Select the setting and press **c** (Save)

707SC (E).book 7 ページ 2006年10月26日 木曜日 午前11時19分

Tip

- The contents of *Retry* with are:
Always ask: Select an action from *Options*.
Voice call: Choose whether or not to redial number as a Voice Call.
Messages: Choose whether or not to create a message.
None: Return to Standby after a failed Video Call.
Automatic retry option changes by the setting.

Tip

- To send sound
 - ① During a Video Call, select *Options* → *Mute*
 - ② Uncheck *Voice*
 - ③ Press **w** (Save)

Voice Mute

Default Setting **a** Off

Set *Voice mute* to *On* to answer Video Calls with no sound sending to caller.

1 Press **c** and select *Settings* → *Call settings* → *Video call* → *Voice mute*

2 Select *On* and press **c** (Save)

 
 
6

Video Call


6-7




707SC (E).book 8 ページ 2006年10月26日 木曜日 午前11時19分



6-8

 

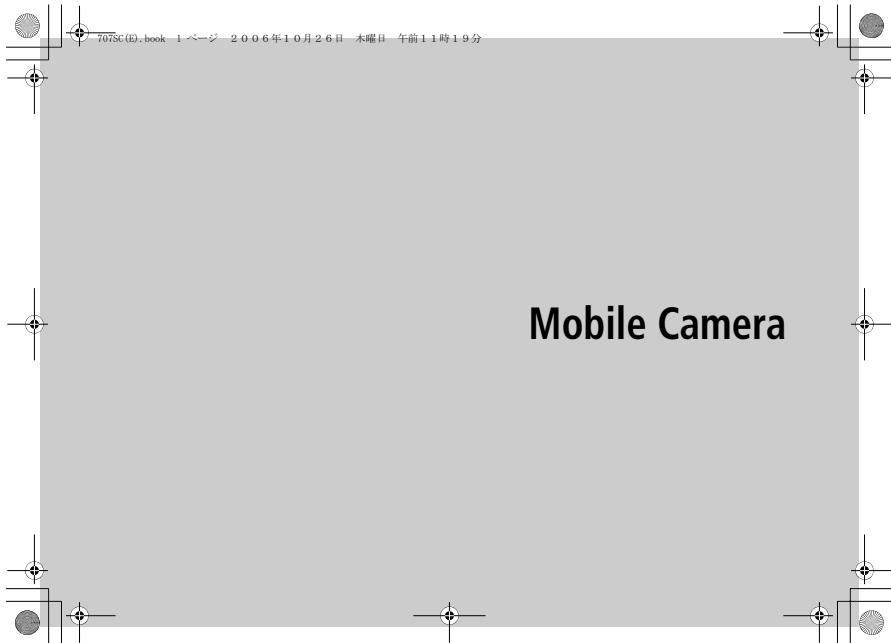

7075C(0).book 1 ページ 2006年10月26日 木曜日 午前11時19分

Mobile Camera

Before Using Mobile Camera

Capture still images in JPEG format or video in 3GP format.

Mobile Camera Precautions


- Use a dry soft cloth to remove debris from camera lens.
- Avoid camera shake; hold 707SC steady or place it on a stable surface and use Timer.
- Mobile Camera employs high precision technology, however, some pixels may seem brighter or darker than others.
- Leaving 707SC in a hot place for an extended period before image capture/save may affect image quality.
- Exposing camera lens to direct sunlight may affect color filter.

7

Mobile Camera


707SC Camera

707SC has rotating camera. Capture still images/videos with rotating Camera lens inwards/outwards to suit various situations. Images/videos may appear upside down on Display by Camera lens direction. Use **n** to display images/videos in the normal position.

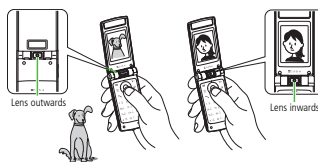

7-2

Using Display as Viewfinder

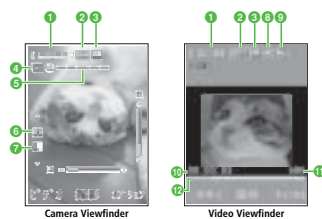

1 Size

☐ : 35mm (1:1) ☐ : 28mm (1:1) ☐ : 25mm (1:1) ☐ : 20mm (1:1)
☐ : 16mm (1:1) ☐ : 12mm (1:1) ☐ : 10mm (1:1) ☐ : 8mm (1:1)

2 Quality

☐ : Superfine ☐ : Fine
☐ : Normal ☐ : Low
☐ : Economy

3 White Balance

☐ : Auto ☐ : Fine ☐ : Cloudy
☐ : Incandescent ☐ : Fluorescent

4 Mode

No display : Single shot
☐ : Multi-shot (6 shots) ☐ : Multi-shot (9 shots)
☐ : Multi-shot (15 shots)
☐ : Mosaic shot (2 x 2) ☐ : Mosaic shot (3 x 3)

5 Timer (When set)

☐ : 3 seconds
☐ : 5 seconds
☐ : 10 seconds

6 Display Position (Top & Bottom)

☐ : Normal display when lens outwards
☐ : Normal display when lens inwards

7 Display Position (Left & Right)

☐ : Normal image
☐ : Mirror image

8 Audio Recording

☐ : On ☐ : Off

9 Recording Time

☐ : Limit for S! Mail ☐ : 10 seconds
☐ : 30 seconds ☐ : Normal recording

- ⑩ Elapsed Recording Time
- ⑪ Total Data Size/Recording Time
- ⑫ Progress Bar

Capturing a Still Image

Camera Mode


Select *Single shot* to capture single images, *Multishot* or *Mosaic shot* to capture multiple images. Save images in Pictures.

Mode	Description	Image size
Single shot	Capture single images, select size for purpose; attach images to S! Mail, save as Wallpaper, etc.	1600 x 1200 1280 x 960 640 x 480 320 x 240 240 x 320 240 x 192
Multi-shot	Press shutter once to capture 6, 9 or 15 sequential images.	320 x 240

Mode	Description	Image size
Mosaic shot	Capture multiple images, one at a time; 707SC automatically combines single images (4 for 2 x 2 or 9 for 3 x 3) into one composite image.	240 x 192

Tip

- **When using Single shot mode with a flame**
Image size is automatically adjusted to 240 x 192.

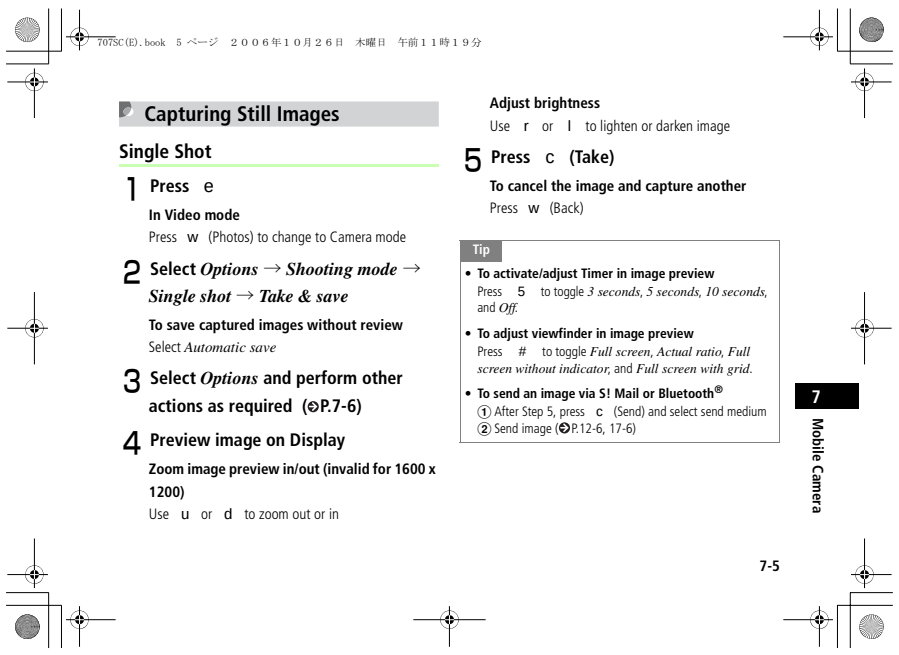

Capturing Still Images

Single Shot

1 Press **e**
In Video mode
Press **w** (Photos) to change to Camera mode

2 Select *Options* → *Shooting mode* → *Single shot* → *Take & save*
To save captured images without review
Select *Automatic save*

3 Select *Options* and perform other actions as required (P.7-6)

4 Preview image on Display
Zoom image preview in/out (invalid for 1600 x 1200)
Use **u** or **d** to zoom out or in

Adjust brightness
Use **r** or **l** to lighten or darken image

5 Press **c (Take)**
To cancel the image and capture another
Press **w** (Back)

Tip

- **To activate/adjust Timer in image preview**
Press **5** to toggle *3 seconds*, *5 seconds*, *10 seconds*, and *Off*.
- **To adjust viewfinder in image preview**
Press **#** to toggle *Full screen*, *Actual ratio*, *Full screen without indicator*, and *Full screen with grid*.
- **To send an image via S! Mail or Bluetooth®**
① After Step 5, press **c** (Send) and select send medium
② Send image (P.12-6, 17-6)

Preview Options

Available options may vary by mode and other settings.

Item	Description
Shooting mode	Select Shooting mode and save setting for <i>Single shot</i> , or image count for <i>Multi-shot</i> or <i>Mosaic shot</i> (P.7-5, 7-9).
Effects	Select <i>Black & White</i> , <i>Sepia</i> or <i>Negative</i> effects filters. When an effect is active, select <i>None</i> to cancel.
Frames	Add a frame to image in Single shot mode.
Timer	Activate self-timer (P.7-5).
Go to photos	Open Pictures folder.
Camera settings	Select image size, image quality, etc. (P.7-13).
Camera shortcuts	Open a function shortcuts graphic (P.7-10).

Review Options

Item	Description
Delete	Delete the last image captured.
Set as	Set image for Wallpaper, Phonebook entries, or Substitute Image.
Edit photo	Edit an image in Pictures folder (P.7-15).
Dynamic Effect	Create Flash images using Still images (P.7-19).
Rename	Change file name.
mPostcard	Create a mobile postcard (P.7-7).
Go to photos	Open Pictures folder.
Lock/Unlock	Set/release file protection.
Details	Confirm file size or format.

- 

- 7-7

7 Mobile Camer

- 7

Mobile Camera:

- 6 To edit line art, press **O** (Edit)

- ① Select *Options* → *Move*
- ② Use **a** to move image and press **w** (Done)

- ① Select *Options* → *Move*
② Use **a** to move image and press **w** (Done)
- To change line art size**
- ① Select *Options* → *Size*
② Use **j** to adjust image and press **w** (Done)

707SC (E).book 8 ページ 2006年10月26日 木曜日 午前11時19分

7

Mobile Camera

7-8

To rotate line art

①Select *Options* → *Rotate*

②Use *s* to rotate image and press *w* (Done)

To change line art color

①Select *Options* → *Change colour*

②Use *s* to select color and press *w* (Done)

To adjust line art shadow

①Select *Options* → *Shadow on* or *Shadow off*

②Press *w* (Done)

7 Press *w* (Save) and enter a file name

To save and send image

①Press *c* (S & S)

②Select medium and send (P.12-6, 17-6)

Multi Shot

1 Press *e*

In Video mode

Press *w* (Photos) to change Camera mode

2 Select *Options* → *Shooting mode* → *Multi-shot* and select the number of images to capture

3 Select *Options* and perform other actions as required (P.7-6)

4 Preview image on Display

 
Zoom in/out

Use *u* or *d* to enlarge or reduce image

Adjust brightness

Use *r* or *l* to lighten or darken image

5 Press *c* (Take)



6 View captured still image(s)

To view still images individually

- ① Highlight the image and press **c** (View)
- ② Press **C**

To retake a still image

Press **w** (Back)

Mosaic Shot

1 Press **e**

 
In Video mode

Press **w** (Photos) to change Camera mode

2 Select *Options* → *Shooting mode* →

Mosaic shot to select the number of images to capture

3 Select *Options* and perform other actions as required (ⓘP.7-6)



4 Preview image on Display

Zoom in/out

Use **u** or **d** to zoom in or out

Adjust brightness

Use **r** or **l** to brighten or darken image

5 Press **c** (Take) for each image

 
6 View captured still images



Mosaic Mode (2 x 2)

To retake an image


Press **w** (Back)



7

Mobile Camera

 7-9



Shortcut Key Operations

Change the settings by pressing the key assigned to each item.

Available shortcuts vary by mode or setting status.

Key	Item	Description
1	Size	1600 x 1200, 1280 x 960, 640 x 480, 320 x 240, 240 x 320, 240 x 192
2	Quality	Superfine, Fine, Normal, Low, Economy
3	Shooting mode	Single shot, Multi-shot (6, 9, 15 shots), Mosaic shot (2 x 2, 3 x 3)
4	White balance	Auto, Fine, Cloudy, Incandescent, Fluorescent
5	Timer	3 seconds, 5 seconds, 10 seconds
6	Frames	Select from 9 types
7	Effects	Black & White, Sepia, Negative
0	Photo album	-
#	Screen mode	Toggle Full screen, Actual ratio, Full screen without indicator, Full screen with grid
w	Mode switch	-

Key	Item	Description
n	Vertical inverse	-
b	Horizontal inverse	-
j	Zoom	-
s	Brightness	-

Capturing Video

Video Mode

Capture videos suitable for attaching to mail or saving as a record.

Alternatively, capture videos without sound. Captured video is saved in 3GP format to the Videos folder of Data Folder.

Capturing Video

1 Press **e**

In Camera mode

Press **w** (Videos) to open Video mode

2 Select *Options* and perform other actions as required (P.7-11)

3 Preview image on Display

Zoom in/out

Use **u** or **d** to enlarge or reduce image

Adjust brightness

Use **r** or **l** to lighten or darken image

4 Press **c** (Record)

5 Press **c** (Save) and end

After recording time elapses

Capturing automatically ends and captured video is saved automatically.

6 Press **c** (Play) to view captured video

To continue capturing

Press **w** (Back)

Tip

- **To activate/adjust Timer when capturing**

In image preview, press **5** to toggle 3 seconds, 5 seconds, 10 seconds, Off.

Preview Options

Item	Description
Effects	Select <i>Black & White</i> , <i>Sepia</i> , or <i>Negative</i> effects filters. When an effect is active, select <i>None</i> to cancel.
Timer	Activate self-timer (P.7-11).
Go to videos	Open Videos folder.
Video settings	Select image size, image quality, etc. (P.7-14).
Camcorder shortcuts	Open a function shortcuts graphic (P.7-12).

 Review Options

Item	Description
Edit	Edit Video files in Data Folder (P.7-17).
Resolution	Select video display size while playing or paused.
Send	Send file via S1 Mail (P.17-6) or Bluetooth® (P.12-6).
Set as	Set captured videos as Voice ringtone or Video ringtone.
Delete	Delete the last video captured.
Rename	Change file name.
Go to videos	Open Videos folder.
Lock/Unlock	Set/release file protection.
Details	Confirm file size or format.

7

Mobile Camera


 Shortcut Key Operations

Change the settings by pressing the key assigned to each item.

Key	Item	Description
1	Size	320 x 240, 176 x 144, 128 x 96
2	Quality	Fine, Normal, Low, Economy

Key	Item	Description
3	Shooting time	Limit for S1 Mail, 10 seconds, 30 seconds, Normal recording
4	White balance	Auto, Fine, Cloudy, Incandescent, Fluorescent
5	Timer	3 seconds, 5 seconds, 10 seconds
6	Audio recording	On, Off
7	Effects	Black & White, Sepia, Negative
0	Record album	-
w	Mode switch	-
n	Vertical inverse	-
b	Horizontal inverse	-
j	Zoom	-
s	Brightness	-

 7-12



Mobile Camera Settings

Make settings related to image capturing including the size, image quality, save location, etc. of images.

Camera Settings

Default Setting ■ Size: 240 x 320 ■ Quality: Normal
■ Viewfinder: Full screen
■ Shutter sound: Shutter 1
■ Multi-shot speed: High
■ Single shot mode: Take & save
■ White balance: Auto
■ Default name: Photo

1 Press **e**

In Video mode

Press **w** (Photos) to change to Camera mode

2 Select **Options** → **Camera settings**

3 Select an item and perform operations to set

To set image size

- ① Select *Size*
- ② Select the setting and press **c** (Save)

To set image quality

- ① Select *Quality*
- ② Select the setting and press **c** (Save)

To set Viewfinder

- ① Select *Viewfinder*
- ② Select the setting and press **c** (Save)

To set the shutter sound

 
 
 
- ① Select *Shutter sound*
- ② Select the setting and press **c** (Save)

To set sequential shot speed

- ① Select *Multi-shot speed*
- ② Select the setting and press **c** (Save)

To set the Single shot mode

- ① Select *Single shot mode*
- ② Select the setting and press **c** (Save)



707SC (E).book 14 ページ 2006年10月26日 木曜日 午前11時19分

7

Mobile Camera

To set white balance

① Select *White balance*

② Select the setting and press **c** (Save)

To set file name

① Select *Default name*

② Enter file name

Video Settings

Default Setting

Recording time: Limit for S! Mail

Size: 176 x 144

Quality: Economy

Audio recording: On

Default name: Video

1 Press **e**

In Camera mode

Press **w** (Videos) to change to Video mode

2 Select *Options* → *Video settings*

3 Select an item and adjust settings

To set duration

① Select *Recording time*

② Select the setting and press **c** (Save)

To set size

① Select *Size*

② Select the setting and press **c** (Save)

To set image quality

① Select *Quality*

② Select the setting and press **c** (Save)

To set voice recording

① Select *Audio recording*

② Select the setting and press **c** (Save)

To set file name

① Select *Default name*

② Enter file name

7-14

Tip

- **Video recording time**
When the recording time is set to *Normal recording*, video with maximum of approximately one hour can be recorded in ordinary mode.
- **When Recording time is set to Limit for S! Mail**
Unable to set *Size with 320 x 240*; Quality is automatically set to *Economy*, and cannot be changed.

Viewing Images

View images/video clips saved in Data Folder.

Viewing Still Images

- 1 Press **e**
In Video mode
Press **w** (Photos) to change Camera mode
- 2 Select *Options* → *Go to photos*
- 3 Highlight a file and press **c** (View)

Viewing Videos

- 1 Press **e**
In Camera mode
Press **w** (Videos) to change to Video mode
- 2 Select *Options* → *Go to videos*
- 3 Highlight and select a file and press **c** (Play)

 
 
 
 
Editing Still Images

Edit image files saved in Data Folder.

- 1 Press **c**, select *Data folder* and select an image to edit
- 2 Highlight a file and press **c** (View)
- 3 Press **c** (Edit)

7

Mobile Camera



4 Edit using *Options*

To change the size of an image

- ① Select *Resize*
- ② Select the setting
- ③ Enter *Width* or *Height* (if *Customise* is selected)
- ④ Press **w** (Done)

To add effects to an image

- ① Select *Effects*
- ② Select the setting
- ③ Press **w** (Done)

To add blur or correct red-eye

- ① Select *Partial effects* → *Partial blur* or *Redeye repair*
- ② Select *Options* and select the suitable operation
- ③ Press **w** (Done)

To adjust an image

- ① Select *Adjust* → *Brightness/Contrast/Colour*
- ② Adjust the image
- ③ Press **w** (Done)

To add a frame

- ① Select *Frames*
- ② Use **s** to select a frame
- ③ Press **w** (Done)

To add clip art to an image

- ① Select *Cliparts*
- ② Select a piece of clip art to add to an image
- ③ Select *Options* → *Size* and use **j** to adjust the clip art size
- ④ Select *Options* → *Rotate* and use **s** to turn the clip art
- ⑤ Select *Options* → *Move* and use **a** to move the clip art
- ⑥ Press **w** (Done)

To add text to image (320 x 240 or above)

- ① Select *Insert text*
- ② Enter text
- ③ Select *Options* → *Size* and use **j** to adjust the text size

707SC (E).book 17 ページ 2006年10月26日 木曜日 午前11時19分

④ Select *Options* → *Rotate* and use **s** to turn the text

⑤ Select *Options* → *Font size* → *Large*/*Normal*/*Small*

⑥ Select *Options* → *Colour* and use **a** to adjust the text color

⑦ Press **w** (Done)

To rotate image

① Select *Rotate*

② Select *90° R* or *90° L*

③ Press **w** (Done)

To flip image

① Select *Flip*

② Select *Vertically* or *Horizontally*

③ Press **w** (Done)

To crop image

① Select *Crop*

② Select *Options* → *Size* and use **j** to adjust the trimming size

③ Select *Options* → *Shape* and use **s** to select the trimming shape

④ Select *Options* → *Move* and use **a** to adjust the trimming position

⑤ Select *Options* → *Crop*

⑥ Press **w** (Done)

5 Press c (Save)

6 Enter a name for the image

Editing Videos

Edit Video files in Data Folder.

1 Press **c** , and select *Data Folder* → *Videos*

2 Highlight a file, select *Options* → *Edit*

3 Edit using *Options*

To cut video

① Select *Cut*

7 Mobile Camera

7-17

- ② Press **c** (Play)
- ③ Press **w** (Start) at the start point
- ④ Press **w** (End) at the End point
- ⑤ To cancel and retry, press **o** (Reset) and repeat ② to ④
- ⑥ Press **w** (Done)

To merge multiple videos

- ① Select *Merge*
- ② Check files to merge (Up to ten files)
- ③ Repeat ② to check all target files
- ④ Press **w** (Done)
- ⑤ Press **c** (Merge)

To replace sound from other video/sound

- ① Select *Replace sound* → *From other video* or *From other sound*
- ② Press **c** (Open)
- ③ Select a file and press **w** (Done)

4 Press **c** (Save)

5 Enter a file name

7-18

Tip

- **To confirm video before editing**

Press **w** (Preview)

- **To add files to merge videos**

- ① After ⑤ in Step 3 in "To merge multiple videos," select *Options* → *Add*
- ② Perform ② to ⑤ in Step 3 in "To merge multiple videos"

- **To delete the file order for merging**

- ① After ⑤ in Step 3 in "To merge multiple videos," use **s** to highlight the file to delete
- ② Select *Options* → *Delete* → *Yes*

- **To change the file order for merging**

- ① After ⑤ in Step 3 in "To merge multiple videos," use **s** to highlight the file to move
- ② Select *Options* → *Change order*
- ③ Use **s** to highlight a personal folder or a file, highlight the file and press **c**

Create Flash®

Create Flash® images using still images saved in Pictures folder, already created Flash® images saved in Other documents folder, or still images previewed immediately after shooting; newly created Flash® images are saved to Other documents folder in Data Folder.

1 Press **c** and *Camera* → *Dynamic effect list*

2 Select files

3 Perform creation operations

To add frame to image

- ① Select  (Frame)
- ② Select the frame

To add icon to image

- ① Select  (Icon)
- ② Select the icon

- ③ Select *Options* → *Size*, use **j** to adjust the size and press **w** (Done)
- ④ Select *Options* → *Rotate* and use **s** to adjust the angle as required
- ⑤ Use **a** to adjust the position and **w** (Done)
- ⑥ Repeat ① to ⑤ to add more icons

To add text to image

- ① Select  (Text)
- ② Enter text
- ③ Select *Options* → *Font size* and adjust the size as required, and press **w** (Done)
- ④ Select *Options* → *Font color* and use **s** to adjust the color as required, and press **w** (Done)
- ⑤ Use **a** to adjust the position and **w** (Done)
- ⑥ Use **s** to change scroll direction and press **w** (Done)
- ⑦ To add more text, select  (Text), press **c** (Insert) and repeat ② to ⑦

To add watch on image

- ① Select  (Watch)
- ② Select the watch
- ③ Press **w** (Done)

To reset image during editing

- ① Select  (Reset)
- ② Select *Yes*

4 Press **w** (Save)

5 Enter an image name

Tip

- **To delete added frame/watch**
 - ① After Step 2, select  (Frame) or  (Watch)
 - ② Press **w** (Delete)
- **To delete added icon(s)/text(s)**
 - ① After Step 2, select  (Icon) or  (Text)
 - ② Use **s** to highlight more icons/texts to delete
 - ③ Press **w** (Delete)
 - ④ Press **c** (Done)
- **Available icon/text to add**
Up to 5 icons/texts can be added.

7-20

• To create Flash® images using images already saved in Data Folder

- ① Highlight image saved in Data Folder and select *Options* → *Dynamic Effect*
- ② Perform Steps 1 to 3 (P.7-19) in "Create Flash®"

Note

- Created Flash® images cannot be sent as message.

 
Attaching Images to a Message

Attach captured image or recorded video and send via S! Mail.

1 After capturing, press **c** (Send) → *As message*

To send video



In image review, select *Options* → *Send* → *As message*



2 Enter an address, subject, text, etc., and send

Tip

  
- To send a still image or video via Bluetooth®
Select *Via bluetooth* in Step 1 (P.12-6).



7



Mobile Camera

 7-21







  707SC(E).book 22 ページ 2006年10月26日 木曜日 午前11時19分



7-22

 

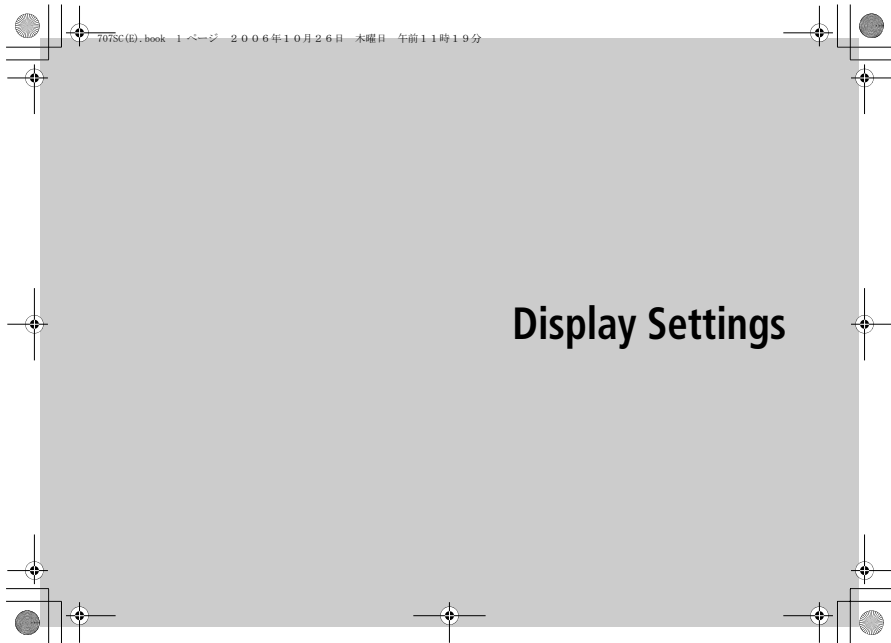

707SC (E).book 2 ページ 2006年10月26日 木曜日 午前11時19分

Display Settings8

Standby Display Settings

Wallpaper

Default Setting Pictures

Set *Pictures* that displays the saved still images or animations, or *Photo slide* that displays still images one by one, or *mPet world image*. Set to hide still image.

1 Press c and select *Settings* → *Display settings* → *Wallpaper*

2 Perform operations to set

To change settings

Select *Pictures*, *Photo slide*, *mPet world image*, or *None*

To change the image of *Pictures*

1 Highlight *Pictures* and press w (Edit)

2 Select the save location of files and select a file

3 Press c (Set)

To set/edit the image of *Photo slide*

1 Select *Photo slide* and press w (Edit)

2 Perform Steps 2 to 4 in "Setting Photo Slide" (P.8-2) or perform Steps 2 and 3 in "Editing Photo Slide" (P.8-3)

3 Press c (Save)

Tip

After setting mPet
mPet operations are enabled (P.24-5). Press y to show Standby as usual; various operations can be performed.

Note

With no pet selected in *mPet*, *mPet world image* cannot be set as Wallpaper.

Photo Slide

1 Press c and select *Tools* → *Photo slide*

8-2

- Display

Display Settings

- 4** Press **c** (Set) and select *Yes* (crop sides) or *No* (show full image)

8-3

Tip

- ## Editing Photo Slide

2 Perform editing operations

① Select *Options* → *Replace*

- ② Check a still image to set and press **w** (Done)

① Highlight the still images to change order, select *Options* → *Change Order*

- ② Use **a** to change order and press **c** (Save)

To delete a still image

Highlight the still image to delete, select *Options* → *Delete* → *Yes*

Copyright Clearance Center

- Tip**

To display large in the window, select **Yes** in Step 3. To display in the original horizontal and vertical ratio, select **No**.

Default Setting = Off

Display Settings

8

8-4

3 Press **c** (Save)

707SC (E).book 5 ページ 2006年10月26日 木曜日 午前11時19分

Tip

- When **Dual clock** is set

In Standby, two types of clock appear. Upper clock indicates time of the district set by "Changing Home Time Zone" (P.1-20). Bottom clock indicates time of the district set by "Dual clock."

Operator Name

Default Setting

Off

In Standby, show or hide operator name.

1

Press **c** and select **Settings** → **Display settings** → **Operator name**

2

Select the setting and press **c** (Save)

Menu Display

Menu Style

Default Setting

Black

Change Display type of menu list (Except Yahoo! Keitai menu).

1

Press **c** and select **Settings** → **Display settings** → **Main menu style**

2

Perform operations to set

To set **Bicycle**

1

Select **Bicycle**

2

Use **s** to change the type

3

Press **d** and Use **s** to change seasons

To set **Amoeba** or **Slider**

1

Select **Amoeba** or **Slider**

2

Use **s** to change the type

Display Settings 8

8-5

3 Press **C**

4 Press **W** (Save)

Default Setting = Off

Display Settings

- 1 Press **c** and select *Settings* → *Display settings* → *Popup menu*
- 2 Select the setting and press **c** (Save)

- **When you highlight a middle item that has no small item**
Menu balloons are not displayed. They are not displayed in *Alarms* in Tool Menu either.

Default Setting = Large

Set main menu item font size.

- 1 Press **c** and select *Settings* → *Display settings* → *List font size*
- 2 Select the setting and press **c** (Save)

Zoom List

Default Setting ◀ Off

Set whether to enlarge highlighted item of a menu in selection display.

- 1 Press **c** and select *Settings* → *Display settings* → *Zoom list*
- 2 Select the setting and press **c** (Save)

Tip

- Applicable range of the zoom list setting

Zoom list setting is applied to the third layer menu and lower. For example, in a case you select *Settings* → *Call settings* → *Voice call* → *Diverts*, the menu *Voice call* and lower menus are zoomed.

Backlight Brightness & Duration

Adjusting Display Brightness

- 1 Press **c** and select *Settings* → *Display settings* → *Brightness*
- 2 Use **a** to adjust brightness and press **c** (Save)

Backlight Duration

Default Setting ◀ On: 15 seconds ▶ Dim: 5 seconds

Set Display backlight lighting time and make display settings. Display becomes dimmer when the time set in *On* has elapsed and Display goes off when the time set in *Dim* has elapsed.

1 Press **c** and select *Settings* → *Display settings* → *Backlight time*

2 Select an item and make settings

To set the time to light brightly

- ① Select On field
- ② Select the time to set and press **c**

To set the time till Display goes off

- ① Select Dim field
- ② Select the time to set and press **c**

3 Press **w** (Save)

Sub LCD Light

Default Setting = Power saving mode

1 Press **c** and select *Settings* → *Display settings* → *Sub LCD light*

2 Select the setting and press **c** (Save)

Tip

• The contents of *Sub LCD light* are:

On: Turn on for 3 seconds after closing 7075C, then the bottom part of Sub LCD turns off.

Power saving mode: Turn on for 3 seconds after closing 7075C, then turns off.

Off: Always off.

Sub LCD always turns off while 7075C is opened.

Dialing Display

Default Setting = Font type: Normal

Change Display to appear when dialing in Standby mode.

When character type is set to either *Normal* or *Serif*, alternatively, change the font size, color, and/or background color.

1 Press **c** and select *Settings* → *Display settings* → *Dialling display*

707SC (E).book 9 ページ 2006年10月26日 木曜日 午前11時19分

2 Select an item and make settings

To set font type

① Select *Font type*

② Use *s* to switch font type

To set the font size

① Select *Font size*

② Use *s* to select the size

To set font color

① Select *Font colour*

② Use *s* to select the setting

③ Use *u* to move cursor to Color selection field and use *s* to select a color (For *Monochrome* only)

To set background color

① Select *Background colour*

② Use *s* to select the color

3 Press *c* (Save)

Greeting Messages

Default Setting

• Main LCD: No entry

• Sub LCD: No entry

Change power on message for Display.

1 Press *c* and select *Settings* → *Display settings* → *Greeting message* → *Main LCD or Sub LCD*

2 Edit power on message text

Display Settings

8

8-9



 
 
Display Language


Default Setting ■ 日本語 (Japanese)

Set 707SC user interface to appear in English, Japanese, or Korean.

1 Press **c** and select 設定 → 一般設定
→ **Language** or 言語選択

2 Select **English** and press **c** (保存/)



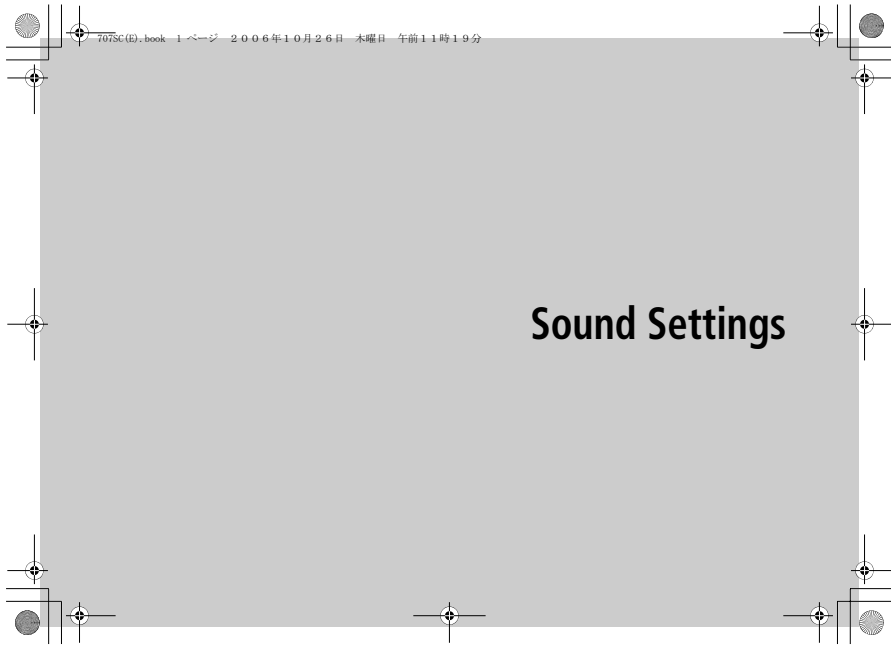

707SC (B).book 1 ページ 2006年10月26日 木曜日 午前11時19分

Sound Settings

Changing Profile Settings

Change 707SC incoming transmission response by profile.

In Car Profile, select a different method to answer calls.

1 In Standby, press * for 1+ seconds

2 Highlight a profile and press w (Edit)

To set Ringtone volume

- ① Select *Ringtone volume* and select item to set
- ② Use *s* to adjust volume
- ③ Press *w* (Play) to check the volume and press *c*
- ④ Press *w* (Save)

To set ringtone for Voice/Video Call

- ① Select *Ringtone* and select *Voice call* or *Video call*
- ② Select the save location for files

③ Highlight a melody, select *Options* → *Play*

④ Press *o* (Select)

⑤ Press *w* (Save)

To set ringtone for S! Mail/SMS

① Select *Ringtone* and select *Messages*

② Select the setting

③ Press *w* (Play) to check the ringtone and press *c*

④ Press *w* (Save)

To set vibrator

① Select *Vibration* and select the items

② Select the setting and press *c* (Save)

To set ringtone duration for S! Mail/SMS

① Select *Message ringtone duration*

② Enter duration and press *c*

To set sound effect or key tone volume

① Select *Key tone volume*

② Use *s* to adjust the volume and press *c* (Save)

To make sound effect

- ① Select *Phone sounds*
- ② Check an item to set and press **w** (Save)

To set key tone

- ① Select *Key tones*
- ② Select the setting and press **c** (Save)

To set the answering method (Car Profile only)

- ① Select *Call answer mode*
- ② Select the setting and press **c** (Save)

Tip

- **Ringtone volume**

Select **▲** to adjust volume step by step. Ringtone volume become louder gradually.

- **Acoustic shock**

Setting Acoustic shock function *On*, even with high Ringtone volume for Voice Call/Video Call, the 707SC rings at Level 1 volume for the first two seconds, then at the set volume.

- **Incoming call answering mode in Car Profile**

With *Any key* set, answer an incoming call with any key except **w**, **o**, **y**, or Side Key **n** or **b**. With *Automatic* set, automatically answer it and talk with the speaker without performing key operations.

- **To set the time (seconds) to answer automatically in Car Profile**

After ② in "To set the answering method" in Step 2, select *Automatic*, press **w** (Edit), select the setting and press **c** to set the answering method.

- **To set a ringtone after recording with Voice recorder**

After ② in "To set ringtone" in Step 2, select *amr* file.

- **To adjust the volume while 707SC rings**

Press Side Key **n** or **b** while 707SC rings.

707SC (E).book 4 ページ 2006年10月26日 水曜日 午前11時19分

9

Sound Settings

- **To set notification by display indicator only (Mute)**
To set receiving notifications (for incoming calls/received messages) by display indicator only, mute *Ringtone volume* and set *Vibration Off*. 707SC shows mute indicator ().
- **To change ringtone title for S! Mail/SMS**
 - ① After ② in "To set ringtone for S! Mail/SMS" in Step 2, highlight *Data Folder* and press  (Change)
 - ② Select location to save the file
 - ③ Highlight the file, select *Options* → *Play*
 - ④ Press  (Select)
 - ⑤ Press  (Save)
- **To adjust the key tone volume in Standby**
In Standby, press Side Key *n* or *b*.

 **Sound settings in Settings**
Sound settings in *Settings* is a menu for changing the settings of Normal Profile. Other mode settings cannot be changed.

707SC (E).book 5 ページ 2006年10月26日 木曜日 午前11時19分

Profile settings

Available items vary by each Mode. The defaults are as listed below.

9

Sound Settings

9-5

Item	Profile	Normal	Manner	Car	Meeting	Outdoor
Ringtone volume						
Voice call		Level 4	—	Level 4	Off	Level 5
Video call		Level 4	—	Level 4	Off	Level 5
Messages		Level 4	—	Level 4	Off	Level 5
Ringtone						
Voice call		03 acapella.mmf	—	03 acapella.mmf	03 acapella.mmf	03 acapella.mmf
Video call		Techno Dance.mp4	—	Techno Dance.mp4	Techno Dance.mp4	Techno Dance.mp4
Messages		Pure	—	Pure	Pure	Pure
Vibration						
Voice call		On	On	On	On	On
Video call		On	On	On	On	On
Messages		On	On	On	On	On

—: Setting deactivated




9 Sound Settings


Item \ Profile		Normal	Manner	Car	Meeting	Outdoor
Ringtone duration		5 Seconds	—	5 Seconds	5 Seconds	5 Seconds
Messages	Key tone volume	Level 2	—	Level 4	Off	Level 5
Phone sounds		Several tones On	Alerts on call	Several tones On	Xylophone	Several tones On
Key tones		Xylophone	—	Xylophone	Xylophone	Xylophone
Call answer mode		—	—	Normal	—	—
Answer machine		—	On	—	—	—

Phone sounds setup items

Available items vary by each Mode. The volume of these sounds follows the Key tone volume settings.

Item	Description
All	Check/uncheck all of the effect sound items.
Popup box alerts	Generate sound when a confirmation or warning message appears.
Minute minder	Generate sound at approximately every minute during a call.
Call connect tone	When a call is initiated, the call is connected before the ringtone sounds on other party's handset and you will be notified with a tone that the other party will be called from now.
Call end tone	Generate sound at the end of a call.
Power on	Generate sound when the power is turned on.
Open/close folder	Generate sound when opening or closing handset.
Alerts on call	Generate sound when alarm is activated or mail is received during a call.

   

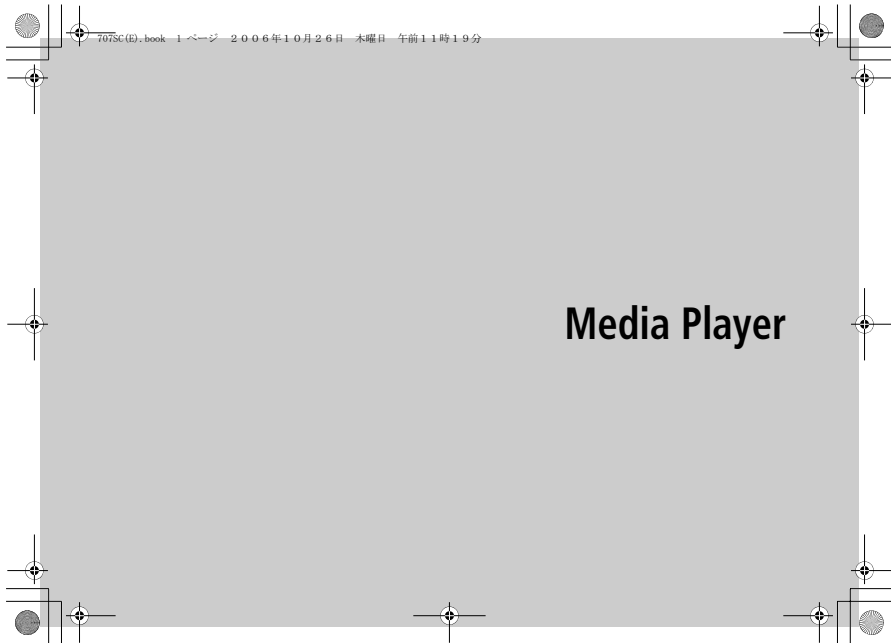


10

Media Player

Before Using Media Player

Play sound or video files saved in Data Folder or stream online media.

- From Music or Video menu, select *Download music* or *Download videos*, to access Yahoo! Keitai and download media files.
- Hear sound not only from the speaker, but also using the stereo earphone microphone. Insert the plug as shown in the figure below. When using the speaker, unplug the stereo earphone microphone from handset.

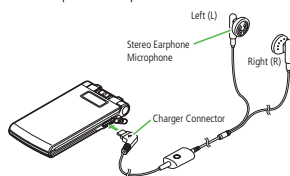

- Use the stereo earphone microphone not only for listening to music but also for initiating voice calls. When 707SC rings/vibrates while playing music using a stereo earphone microphone, press the switch on the stereo earphone microphone for 1+ seconds to answer the call.

Playable File Type

Player	File (Extension)
Music	MPEG4 Audio (mp4, aac, 3gp (Sound only))
Video	MPEG4 (mp4, 3gp)

Tip

- **Other restrictions**
Files other than described above saved in Sounds & Ringtones in Data Folder are not playable with Media Player. To play these files, select directly from Sounds & Ringtones folder in Data Folder.

Playing Music

1 Press **c** and select **Media Player** → **Music**

2 Perform file selection operations

To select from *All music*

Select *All music* and highlight the file

To select from *Recent music*


Select *Recent music* and highlight the file

To select from *Most played music*

Select *Most played music* and highlight the file

To playback using Playlist (OP.10-7)

3 Press **c** (Play)

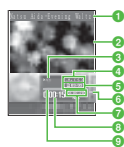

Melody Player Window

① Artist's name and title (File name when the music title information is unknown)

② Skin

③ Status : PLAY / PAUSE / STOP

④ Repeat mode

⑤ (Off) / ⑥ (One) / ⑦ (Shuffle) / ⑧ (All)

⑨ File number/Total number of files

⑩ Playing volume

⑪ Total playing time

⑫ Elapsed playing time

⑬ Progress bar

10

Media Player

10-3

Tip

• To end the playback and return to *Options*

Press **C**. If you press **C** while *Options* appearing/operating *Options*, *Options* closes/returns to the previous menu.

• If there is an incoming call while playing

The play pauses and a ringtone sounds. After the call is ended, Media player continues to pause the playback.

• If Message is received while playing

 or  appears on the top of Display and 707SC vibrates to notify you.

• When the time set for alarm has come while playing

Playing pauses, Alarm sounds and alarm details appears. Press any key to stop Alarm sound and restart playing. Press any key again to restore Media Player display.

• To set melody file as Ringtone/Alert tone

While a file is highlighted or playing is paused or stopped, press **w** (Set as) and choose how to use the file. However, a file that cannot be set to be a ringtone will not be set a ringtone.

• To use another function while listening to music

Use Switch Bar (P.1-22).

 All music

All playable files by Media Player's *Music* function appear. Up to 9999 files can be listed.

 Download music

Use *Download music* as shortcut to a download site. Select to connect to a download site on the internet.

 Music search

Music search of Media Player is a shortcut to a music search site *Music search*. It allows you to search for music by music category or keyword.

 Recent music/Most played music

Recent music shows playback record in recent days. The most recent played file appears on top of the list. *Most played music* shows frequently played files record. The most frequent played file appears on top of the list. Up to 100 records can be saved.

Player Window & List Options

Available items vary by file type, etc.

Item	Description
Send	Send file via S! Mail (P.17-6) or Bluetooth® (P.12-6).
Add	Add files to Playlist. Select <i>Playlist</i> to add all files contained in another Playlist. Select <i>Files</i> to add selected files to Playlist.
Move track in playlist	Change order of files in Playlist.
View bookmark	Access a page containing a streaming play link saved as a bookmark.
View history	Access a page containing a streaming play link already accessed.
Add to playlist	Files in <i>All music</i> are added to Play List. Choose <i>Selected file</i> to add highlighted file, or <i>Multiple file</i> to add multiple files to Playlist.
Play by	Play tracks by album, artist or genre.
Delete	Delete a highlighted file or all files.
Rename	Change file name.
Lock/Unlock	Set/release file protection.

Item	Description
Details	Confirm file size, etc.
Stop	Stop playing.
Play via	Playback music files. When Playback display, select <i>Phone</i> to sound from speaker. Select <i>A/V headset</i> to sound from speaker or Bluetooth®-compatible devices (stereo headphone, etc.) (P.12-7).
Transfer to A/V headset/Transfer to Phone	Toggle sound output between Bluetooth®-compatible devices (stereo headphone, etc.) and Phone (P.12-7).
Download content key	Purchase or acquire Content Key.
Create playlist	Create new Playlist (P.10-6).
Rename	Change Playlist name.
Open playlist	Open Playlist.
Player settings	Select settings related to Media Player (P.10-7).

10

Media Player

10-5

10

Media Player

Tip

- **With Transfer to A/V headset is set**
Raise/lower volume from A/V headset. 707SC cannot be used to raise/lower volume.

Playing Melodies Using a Playlist

Create Playlist

Create a maximum of 20 Playlists, each containing up to 100 files.

- 1 Press **c** and select **Media Player** → **Music**
- 2 Select **Options** → **Create playlist**
- 3 Enter Playlist name
- 4 Select the created Playlist
- 5 Select **Options** → **Add** → **Files**

10-6

6 Check every file to save and press **w** (Save)

Tip

- **To create new Playlist by selecting all tracks in existing Playlist:**
 - ① Perform Steps 1 to 3
 - ② Select **Options** → **Add** → **Playlist**
 - ③ Select Playlist from which to add all melodies
- **To change the name of Playlist**
 - ① Highlight Playlist, select **Options** → **Rename**
 - ② Enter Playlist name
- **To delete selected Playlist**
Highlight Playlist, select **Options** → **Delete** → **Selected** → **Yes**
- **To delete all Playlists**
 - ① Highlight Playlist, select **Options** → **Delete** → **All**
 - ② Enter Phone Password and press **c** (Confirm)
 - ③ Select **Yes**

707SC (E).book 7 ページ 2006年10月26日 木曜日 午前11時19分

Play

1 Press **c** and select *Media Player* → *Music*

2 Select Playlist to play, select *Options* → *Play*

Changing Music Player Settings

Repeat Mode

Default Setting = OFF

Play a single track repeatedly, all files in All music, or tracks from Playlist, randomly or repeatedly.

1 Press **c** and select *Media Player* → *Music*

2 Select *Options* → *Player settings* → *Repeat mode*

3 Select an item and press **c** (Save)

Tone Volume

1 Press **c** and select *Media Player* → *Music*

2 Select *Options* → *Player settings* → *Tone volume*

3 Use **a** to adjust the volume and press **c** (Save)

Audio Skin

Default Setting = Rainbow wave

Set one of two images to appear on Display while playing a melody.

Media Player1010-7

7075C (E).book 8 ページ 2006年10月26日 木曜日 午前11時19分

10

Media Player

1 Press **c** and select *Media Player* → *Music*

2 Select *Options* → *Player settings* → *Audio Skin*

3 Select the setting and press **c** (Save)

Visualization Mode

Visualization On/Off

Default Setting

On

Select whether to display the skin set in *Visualization*, to display the controller, and to activate backlight settings on Display while playing AAC or AAC+ format file within MPEG4.

1 Press **c** and select *Media Player* → *Music*

2 Select *Options* → *Player settings* → *Visualization* → *Visualization mode*

3 Select the setting and press **c** (Save)

Skin, Show Controller, & Backlight

Default Setting

Skin: Flowers

Show controller: Show

Backlight: Normal

Select one of 10 skins to display while playing a melody file. To display this skin on the whole window, set the *Show controller* to *Hide*. With the Backlight set to *Always on*, while handset is open, view the skin while listening to music.

1 Press **c** and select *Media Player* → *Music*

10-8

2 Select *Options* → *Player settings* →
Visualization → *Skin*, *Show controller*,
or *Backlight*

3 Select the setting and press **c** (Save)

Playing Video

1 Press **c** and select *Media Player* →
Video

2 Perform operations to select files

To select from *All Video*

Select *All Video* and highlight the file

To select from *Recent video*


Select *Recent video* and highlight the file

To select from *Most Played video*

Select *Most Played video* and highlight the file

To select from *Playlist* (P.10-7)

3 Press **c** (Play)

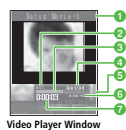

❶ Artist's name and title (File name when the video title information is unknown)

❷ Playing status : PLAY/PAUSE/STOP

❸ Progress bar

❹ File no./Total number of files

❺ Playing volume level

❻ Total playing time

❼ Elapsed playing time

10

Media Player

10-9

Tip

• To set video file as Ringtone

Highlight the file press **w** (Set as) with suspending Playback, then perform operations to set (P.11-11). The operations are unavailable for files those cannot be set for ringtone.

• Playlist

- ① After Step 1, select **Options** → **Create playlist**
- ② Perform Steps 2 to 5 in "Create Playlist" (P.10-6)

■ All Video

All playable files by Media Player's **Video** function appear. Up to 9999 files can be listed.

■ Download videos

Use **Download videos** as shortcut to a download site. Select to connect to a download site on the internet.

■ Recent video/Most Played video

Recent video shows playback record in recent days. The most recent played file appears on top of the list. **Most Played Video** shows frequently played files record. The most frequent played file appears on top of the list. Up to 100 records can be saved.

■ Player Window & List Options

Select **Options** in Player window or list and perform operations listed below. Available items vary by file type, etc.

Item	Description
Full screen view	Display video on the whole window.
Add	Add files to Playlist. Select Playlist to add all files contained in another Playlist. Select files to add selected (not all) files to Playlist.
Move track in playlist	Change order of files in Playlist.
Stop	Stop playing video.
Edit	Edit video files (P.7-17).
Resolution	Set video display size.
Send	Send file via S! Mail (P.17-6) or Bluetooth® (P.12-6).
View bookmark	Access a page containing a streaming play link saved as a bookmark.
View history	Access a page containing a streaming play link already accessed.

Item	Description
Add to playlist	Add a file to Playlist in <i>All Video</i> . Select <i>Selected file</i> to add a highlighted file to Playlist. Select <i>Multiple file</i> to add multiple files to Playlist.
Delete	Delete a highlighted file or all files.
Rename	Change file name.
Lock/Unlock	Set/release file protection.
Details	Confirm file size, etc.
Play via	Playback music files. When Playback display, select <i>Phone</i> to sound from speaker. Select <i>A/V headset</i> to sound from speaker or Bluetooth®-compatible devices (stereo headphone, etc.) (P.12-7).
Transfer to A/V headset/Transfer to Phone	Toggle sound output between Bluetooth®-compatible devices (stereo headphone, etc.) and Phone (P.12-7).
Create Playlist	Create new Playlist (P.10-6).
Rename	Change Playlist name.

Item	Description
Player settings	Select settings related to Media Player (P.10-11).

Player Settings

Repeat Mode

Default Setting = Off

Set to play a file repeatedly; set to play all files in a folder at random or repeatedly.

- 1 Press **c** and select **Media Player** → **Video**
- 2 Highlight a file and press **c** (**Play**)
- 3 Select **Options** → **Player settings** → **Repeat mode**
- 4 Select the setting and press **c** (**Save**)

10

Media Player

10-11

707SC (E).book 12 ページ 2006年10月26日 木曜日 午前11時19分

10

Media Player

Tone Volume

1 Press **c** and select *Media player* →
Video

2 Highlight a file and press **c** (Play)

3 Select *Options* → *Player settings* →
Tone volume

4 Use **a** to adjust the volume and
press **c** (Save)

Resolution


Set the size of videos appearing on Display during play or
pause.

1 Press **c** and select *Media Player* →
Video

2 Highlight a file and press **c** (Play)

3 Select *Options* → *Resolution* and
select a size

10-12

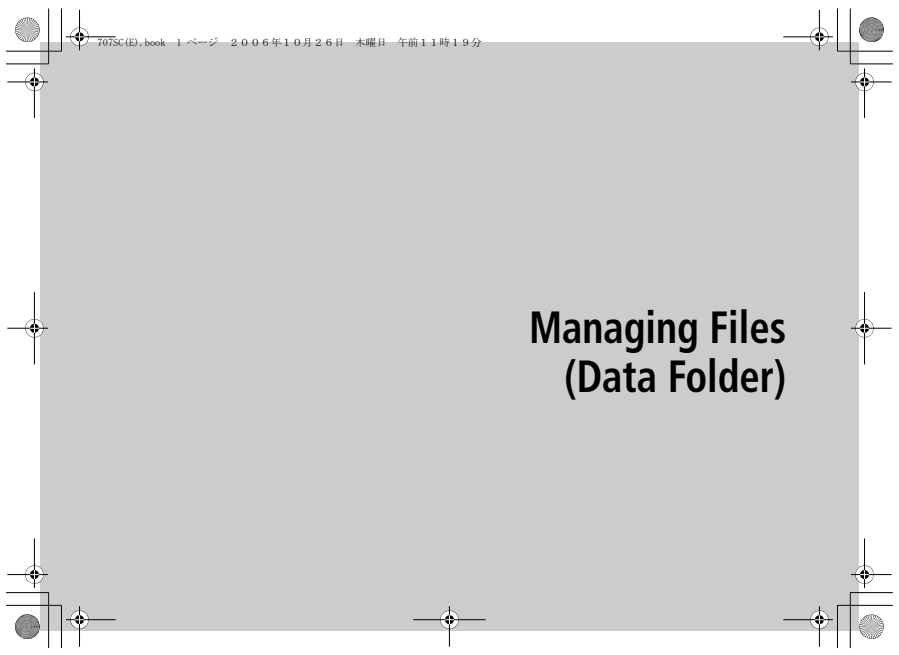

707SC (B).book 1 ページ 2006年10月26日 木曜日 午前11時19分


**Managing Files
(Data Folder)**

Data Folder

707SC files are organized in folders by file format.

Default Folders

Data Folder contains six Default folders; new files are saved to the appropriate folder (see right). Create additional sub-folders in Default folders as required.

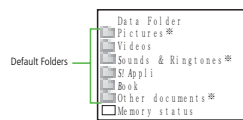

※ Sub-folder *Pre-installed*
(For files which come pre-installed with handset).

Folder	Description	File Formats ¹
Pictures	All still images	JPEG, BMP, GIF, WBMP, PNG, Animation GIF
Videos	All videos	MPEG4 (3GP, MP4)
Sounds & Ringtones	All sounds recorded with Voice Recorder, downloaded music, and other sound files	SMAF/MIDI/SP-MIDI, MPEG4 Audio, AMR
SI Appli	SI Appli	JAVA
Book	Save downloaded electronic comic/photo book files	CCF
Other documents	Documents, graphics/animation requiring File Viewer for display; Flash [®] files, vfiles, etc. are saved here	SWF, SVG, vCard, vCalendar, PDF, XLS, DOC, PPT, TXT, Unsupported files

¹ Copy or move sorted files (by their file types) to other folders as required.

Tip

- **Savable number of files/folders**
Up to 999 files/folders can be saved each Default Folder.

Memory status

By selecting *Memory status*, view the memory usage of each Data Folder.
Alternatively, use the setup menu to view this (P15-8).

Download links

, displayed in Data Folder, is a shortcut to a download site. If you select this shortcut, connect to a download site on the internet.

Download Book feature

In Data Folder, Use *Download Book* in Book Folder as shortcut to a download site. Select to connect to a download site on the internet.

Saved Files

Opening Files

- 1 Press **c** and select *Data Folder*
- 2 Select the folder where a file is saved
- 3 Highlight a file and press **c** (View/Play/Select)

Tip

- **To use Slide Show**
 - ① Perform Steps 1 to 3 to display images
 - ② Select *Options* → *Slide show*
- **To enlarge or reduce image**
 - ① Perform Steps 1 to 3 to display an image
 - ② Select *Options* → *Zoom*
 - ③ Press **w** () to enlarge, **o** () to reduce, or **a** to scroll the image
 - ④ Press **C** to return to the previous window

11

Managing Files (Data Folder)

- **After enlarging/reducing image**

After ② in "To enlarge or reduce image," press **O** () to display list window.

Press **O** () to change window view; select another file to check.

- **File List Indicators**

⚡ : Nontransferable

⚡ : Nontransferable and unusable

🔒 : Protected

🔒 : Copyrighted file (Transferable, Content Key valid)

🔒 : Copyrighted file (Transferable, Content Key expired)

🔒 : Copyrighted file (Nontransferable, Content Key valid)

🔒 : Copyrighted file (Nontransferable, Content Key expired)

🖼️ : Wallpaper set (P.11-10)

🔔 : Ringtone set (P.11-11)

- **When another USIM Card is inserted into 707SC**

Other than preinstalled nontransferable files/preinstalled copyrighted files cannot be used.

- **To show displayed image in Full screen view**

After Step 3, select *Options* → *Full screen view*. For partially displayed image, use **a** to change the display area. Press **O** (Rotate) to rotate the image. Press **C** to return to the previous view.

- **Viewing File Details**

Select *Options* → *Details*

Note

- A file that is larger than 3 MB cannot be displayed. Also, a file that is larger than 1600 x 1200 pixels cannot be edited or zoomed. A file that is larger than 1.3 MB cannot be set as Incoming image or Substitute Image.

Activating Camera or Voice Recorder from Data Folder

Select *Options* → *Take photo*; activate Camera in Camera mode by highlighting the Pictures folder or an image file captured by 707SC.

In the same way, select *Options* → *Record video*; activate Camera in Video mode by highlighting the Videos folder or a video captured by 707SC.

Select *Options* → *Record sound*; activate Voice Recorder by highlighting the Sounds & Ringtones folder or sound file captured by 707SC.

707SC (E).book 5 ページ 2006年10月26日 木曜日 午前11時19分

Using File Viewer

Open PDF, XLS, DOC, PPT, or TXT files saved in Data Folder; File Viewer activates automatically. Select Normal View or Full Screen View; navigate files via *Options* or shortcuts.

Normal View

Full Screen View

Navigation Shortcuts

1 Press **c** and select *Data Folder*

2 Select file location then file

3 Select *Options*/navigation shortcuts to navigate

To scroll

Press **a**

To change Display appearance

Select *Options* → Full screen view or Normal view

To enlarge or reduce the image

① Select *Options* → Zoom

② Press *In* or *Out* to enlarge/reduce

To fit document size to Display

Select *Options* → Fit to screen

To move a page

Select *Options* → Go to and select an item

To move to specified page

① Select *Options* → Go to → Page

② Enter page number

To capture current screen

Select *Screen capture*

11

Managing Files (Data Folder)

11-5

707SC (E).book 6 ページ 2006年10月26日 木曜日 午前11時19分

11

Managing Files (Data Folder)

To rotate image 90 degrees clockwise

① Select *Options* → *Rotate*

② Select *Options* → *Rotate* to return to the previous window

To search words in the page

① Select *Options* → *Search*

② Enter words

③ Press **3** to continue searching forward or press **1** to continue searching backward, for the same word

To view assigned shortcut keys

Select *Options* → *FileViewer shortcuts*

Tip

• After capturing

Captured files are saved in *Other documents* in 707SC Data Folder (Phone) as JPEG format.

File Viewer Settings

Default Setting

• Panning: 10 pixel

• Reflow: Off

• Map on: On

• Controller: On

• Name: Capture

1 Press **c** and select *Data Folder*

2 Select save location and select the file

3 Select *Options* → *Settings*

4 Perform operations to set

To assign scroll range per press of **a**

① Select *Panning*

② Select the setting and press **c** (Save)

To fit text width to Display

① Select *Reflow*

② Select *On* and press **c** (Save)

11-6

Navigation Shortcuts

- | Key | Description |
|-------------------|--|
| Side Key n | Zoom in |
| Side Key b | Zoom out |
| 2 | Move to the first page |
| 4 | Move to the previous page |
| 5 | Rotate 90 degrees clockwise or cancel |
| 6 | Move to the next page |
| 8 | Move to the final page |
| * | Select Normal View or Full Screen View |

Confirmation Window & List Options

- For items other than window operation options, see "Data Folder Options" (P.11-13).

Note

- If a document includes many pages or complicated designs, all pages of the document may not be able to be displayed.
- If a file includes any language other than Japanese or English, that file may not appear properly.

- **When *Reflow* is set to *On***
Fit text width (such as doc. or txt.) to 7075C window width.
No need to scroll right/left to show the contents.

- **When Map on is set to On**
In bottom right of the window, map showing the current position/area in the whole page appears. The current position/area is indicated in red frame.

In bottom right of the window, map showing the current position/area in the whole page appears. The current position/area is indicated in red frame.

11

Managing Files (Data Folder)

Viewing Graphics/Animation with the SVG-T/Flash® Viewer

View SVG, SVGZ, and SWF formatted files in Data Folder. When one of these files is selected from Data Folder list, the SVG-T/Flash® Viewer is automatically launched.

View the graphics/animation on Normal View or Full Screen View. In either mode, *Options* and shortcut (Key operations) are available to control Display.



Normal View



Full Screen View

- 1 Press **c** and select **Data Folder**
- 2 Select file location then file

3 Select *Options*/navigation shortcuts to navigate

To change Display appearance

Select *Options* → *Full screen view* or *Normal view*

To enlarge or reduce the image

① Select *Options* → *Zoom*

② Press **w** (🔍) to enlarge an image or **o** (🔍) to reduce

③ Use **a** to scroll the window

④ Press **c** to return to the previous window

To pause or restart an flash® image

Select *Options* → *Pause* or *Resume*

To select image quality

Select *Options* → *Quality* and select an item

To rotate the screen 90 degrees clockwise or counterclockwise

Select *Options* → *Rotate* and select an item

707SC (E).book 9 ページ 2006年10月26日 木曜日 午前11時19分

Tip

- To set an image for Wallpaper**
Press **w** (Set as) on Normal View, or in *Options* of Full Screen View, select *Set as* and select *Wallpaper*.

Confirmation Window & List Options

For items other than window operation options, see "Data Folder Options" (P.11-13).

Sorting Files

Sort files in various ways.

1 Select *Options* → *Sort by*

2 Select an item

To sort files in descending order of dates

Select *Date*

To sort files by file types

Select *Type*

To sort files by file names

Select *Name*

To sort files in ascending order of size

Select *Size*

To sort files by status of Content Key

Select *Activation Status*

Tip

- When folders are contained in a list**
Folders are placed at the top in any order.
- Sorting order when *Type* is selected**
Files are sorted in the alphabetical order of the file extension (For example doc, jpg, swt, and such).
- Sorting order when *Name* is selected**
Files are sorted in the order of number → alphanumerics → Japanese character of the file names.
- Sorting order when *Activation status* is selected**
Files are displayed in the following order:
Unrestricted file → Nontransferable file → Copyrighted file (Content Key valid) → Copyrighted file (Content Key expired) → Nontransferable and unusable file

11

Managing Files (Data Folder)

11-9

707SC (E).book 10 ページ 2006年10月26日 木曜日 午前11時19分

11

Managing Files (Data Folder)

Using Files

Wallpaper

Set an image file as Wallpaper of Display, an image in Phonebook, or a Substitute Image for Video Calls to display with incoming calls.

1

Highlight a file and press **w** (Set as)

To set while viewing an image

Highlight a file, press **c** (View) and press **w** (Set as)

2

Set the Use of the File

To set as Wallpaper on Display

Select *Wallpaper*, confirm the preview and press **c** (Set)

To set as Phonebook image for use with an incoming call

① Select *Caller ID*

② Search and select an entry in which to place the image and press **c** (Set)

To set as Substitute Image for use with an incoming Video Call

① Select *Still picture*

② Press **c** (Save)

Tip

- To edit a still image (P.7-15)
- To create a mobile postcard (P.7-7)
- To print a still image (P.12-12)

11-10

707SC (E).book 11 ページ 2006年10月26日 木曜日 午前11時19分

Setting Sound File as Ringtone

Change ringtone settings in Normal profile (P.3-3).

1 Press **c** , select **Data Folder** and select location to save the file

2 Highlight the file and press **w** (Set as)

3 Perform operations to set

To set ringtone for Voice Calls

Select *Voice ringtone*

To set ringtone for Video Calls

Select *Video ringtone*

To set ringtone for Phonebook entries

① Select *Caller ringtone*

② Search Phonebook and select an entry

To set ringtone for S! Mail/SMS

Select *Message alert tone*

Tip

• **Settings Restriction**

MPEG4 files with audio codec (AAC, AAC+, or Enhanced AAC+), can be set only when they are copyrighted.

Setting Video File as Ringtone

Change ringtone settings in Normal profile (P.3-3).

1 Press **c** , select **Data Folder** and select location to save the file

2 Highlight the file and press **w** (Set as)

3 Perform operations to set

To set video file as ringtone for Voice Call

Select *Voice ringtone*

To set video file as ringtone for Video Call

Select *Video ringtone*

To set ringtone for Phonebook entries

Select *Caller ringtone*

11

Managing Files (Data Folder)

11-11

Tip

• Settings Restriction

MPEG4 files (mp4, 3gp) with audio codec (AAC, AAC+, or Enhanced AAC+), can be set only when they are copyrighted.

11

Managing Files (Data Folder)

Setting Flash® file as Wallpaper

1 Press **c** and select **Data Folder** →
Other documents

To set while viewing a Flash® image

Highlight the file, press **c** (View) and press
w (Set as)

2 Highlight the file, press **w** (Set as)3 Select **Wallpaper**4 Check preview window and press
c (Set)

Saving a vFile

vFile is the standard format to exchange Phonebook data, etc. via the Internet. 707SC uses vCard (extension: vcf) format for Phonebook data; also uses vCalendar (extension: vcs) format for Schedule/To Do data.

Save a vFile stored in Data Folder to Phonebook, calendar, or as a scheduled event.

1 Press **c**, select **Data Folder** and
select save location for the vFile2 Select a file and press **c** (Register)

Data Folder Options

Perform the following operations from *Options* in list or viewing windows. *Options* that appear vary by the type of file or folder.

For *Options* used for the File Viewer or SVG-T/Flash® Viewer, see "Using File Viewer" (P.11-5) or "Viewing a Graphics/Animation with the SVG-T/Flash® Viewer" (P.11-8).

Item	Description
Edit	Edit a still image or Videos (P.7-15).
Dynamic Effect/ Dynamic effect list	Create Flash® images using Still images (P.7-19).
Full screen view	Display Still image in full screen (P.11-5).
Playback	Playback video files. When playback display, select <i>Phone</i> to sound from speaker. Select <i>A/V headset</i> to sound from Bluetooth®-compatible devices (stereo headphone, etc.) (P.12-7).

Item	Description
Transfer to A/V headset	Switch sound output to Bluetooth®-compatible devices (stereo headphone, etc.) (P.12-7).
Register to phonebook	Export a vCard file to Phonebook (P.11-12).
Register to Calendar	Export a vCalendar file to Calendar (P.11-12).
Send	Send file via S! Mail (P.17-6) or Bluetooth® (P.12-6).
mPostcard	Create a mobile postcard (P.7-7).
Zoom	Enlarge or reduce still image being confirmed (P.11-3).
Browser access	Access linked site included in electronic comic/photo book files.
Sort by	Sort files (P.11-9).
Move	Move files from/to 707SC another folder.
Copy	Copy files and paste from/to 707SC another folder.
Add to playlist	Add files to Playlist. Highlight <i>Selected</i> and select to add a file. Highlight <i>Multiple</i> and select to add multiple files at once.

11 Managing Files (Data Folder)

Item	Description
Delete	Delete a file/files (P.11-17).
Delete folder	Delete a folder (P.11-17).
Take photo	Activate Camera in Camera mode (P.11-4).
Record video	Activate Camera in Video mode (P.11-4).
Record sound	Activate Voice Recorder (P.11-4).
Rename	Change file name (P.11-15).
Rename folder	Change folder name (P.11-15).
Show/Hide file info	In List window for Picture Folder with thumbnail view, set to display folder/file name when highlighted.
View By	Select List window type for Picture Folder. Select <i>Last</i> to show folder/file in list view. Select <i>Thumbnail</i> view to show folder/file in thumbnail view.
Create folder	Create a new folder (P.11-15).
Print via Bluetooth® connection.	Print Still images using the printer via USB/Bluetooth® connection.
Lock/Unlock	Set/release file protection.
Download	Purchase or acquire Content Key.
Content key	

Item	Description
Details	Confirm file/folder properties.
Content key info	Show the list of Content Keys for the files in Data folder, manage them by selecting <i>Delete</i> to delete (P.11-19) or <i>Details</i> to check the details.

11-14

707SC (E).book 15 ページ 2006年10月26日 木曜日 午前11時19分

Managing Files/Folders

Create Folder

Create sub-folders in Default folders.

1 Press **c** and select *Data Folder*

2 Select Default folder to create a sub-folder

3 Select *Options* → *Create folder*

4 Enter a name

Changing a File Name/Folder Name

Change the name of a file or a created sub-folder.

1 Press **c** and select *Data Folder*

2 Select Default folder and highlight a sub-folder or a file to change the name, select *Options* → *Rename folder* or *Rename*

3 Enter a name

Tip

• When a file is locked

You cannot change the file name.

Moving a File/Folder

Move a file/folder to another folder or a location outside folders.

1 Press **c** and select *Data Folder*

2 Select Default folder and highlight a sub-folder or a file to move

3 Select *Options* → *Move*

11

Managing Files (Data Folder)

11-15

7075C (E).book 16 ページ 2006年10月26日 木曜日 午前11時19分

11
Managing Files (Data Folder)

4 Move the file or folder

To move one file or all files in the same folder or all created sub-folders

Select *Selected* or *All*

To select and move multiple files or created sub-folders

① Select *Multiple*

② Check files or created sub-folders to move and press **w** (Move)

5 Select the destination folder → Move here

Tip

- To check/uncheck all files or folders at once
Press **o** (Mark all) or **o** (Unmark all)
- When a file is locked
You cannot move the file.

When there is a file or folder with the same name at the destination

You have to change the name of the file or folder to move. In message text, enter a new name.

Note

- The files downloaded with 7075C may not appear/playback properly when moving to other mobile phones or inserting other's USIM Card into 7075C.

Copying Files/Folders

Make a copy of a file or folder in another folder or a location outside folders.

1 Press **c** and select *Data Folder*

2 Highlight a folder or a file to copy, select *Options* → *Copy*

11-16

707SC(E).book 17 ページ 2006年10月26日 木曜日 午前11時19分

3 Copy the file or folder

To copy one file or all files in the same folder or all folders

Select *Selected* or *All*

To select and copy multiple files or folders

① Select *Multiple*

② Check files or folders to copy and press **w** (Copy)

4 Select the destination folder and select *Paste here*

Tip

- To check/uncheck all files or folders at once (P.11-16)
- When a copy of a file or folder is pasted to the same location as the original
- The pasted file or folder is saved under another name, i.e., *_001* is automatically added to the name.

- When there is a file or folder with the same name in the destination

You have to change the name of the file or folder to paste. In message text, enter a new name.

Note

- The file that forwarding is impossible and the copyrighted file cannot be copied.

Deleting a File/Folder

Delete

1 Press **c** and select *Data Folder*

2 Highlight a file, select *Options* → *Delete*

11 Managing Files (Data Folder)

11-17

7075C (E).book 18 ページ 2006年10月26日 木曜日 午前11時19分

11
Managing Files (Data Folder)

3 Delete the file

To delete one file
Select *Selected* → *Yes*

To delete all files from the same folder

- 1 Select *All*
- 2 Enter Phone Password press **c** (Confirm) and select *Yes*

To select and delete multiple files

- 1 Select *Multiple*
- 2 Check files, press **w** (Delete)
- 3 Enter Phone Password and press **c** (Confirm) (If all files are checked)
- 4 Select *Yes*

Tip

- **To check/uncheck files or folders at once (P.11-16)**
- **If a file is set as Wallpaper or ringtone, or locked**
A confirmation message appears. Select *Yes* to execute deletion. To delete multiple or all files, select *No* to delete only those files without setting or protection.

- **When file has Content Key**
A confirmation message appears. Select *Yes* to delete both the file and Content Key.

Delete Folder

- 1 Press **c** and select *Data Folder*
- 2 Select Default folder and highlight a created sub-folder to delete, select *Options* → *Delete folder*
- 3 Enter Phone Password, press **c** (Confirm) and select *Yes*

If no file saved in a sub-folder
Phone Password is not required.

 
 
11-18

Tip

- **If a folder contains files set as Wallpaper, ringtones, or locked/copyrighted files**
A confirmation message appears. Select *Yes* to execute folder deletion. Select *No* to delete only files without designated uses or protection, leaving the folder undeleted.
- **When file in a folder has Content Key**
A confirmation message appears. Select *Yes* to delete both the file and Content Key.



Deleting a Content Key

- 1 Press **c** and select *Data Folder*
- 2 Select *Options* → *Contents key info*
- 3 Perform operations to delete
 - To delete a Content Key
Select *Selected*
 - To delete all Content Keys
Select *Delete all*







  707SC(E).book 20 ページ 2006年10月26日 木曜日 午前11時19分



11-20

 

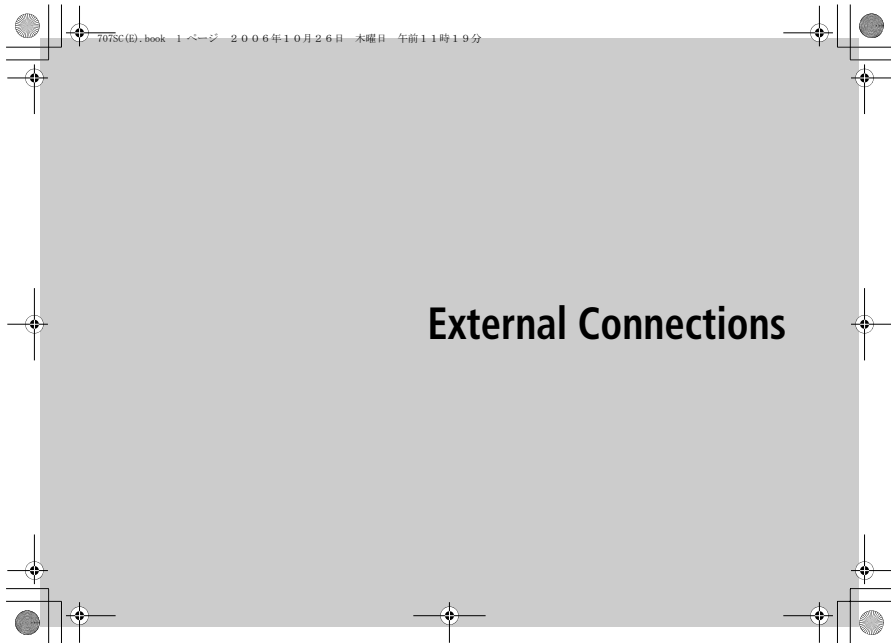

External Connections

Send and receive data to/from a Bluetooth®-compatible device, without any physical connection. Alternatively, connect 707SC with various devices, like a Personal Computer or a printer to exchange data or print out images via a USB cable.

12

Bluetooth®

Exchange data among Bluetooth®-compatible devices including mobile phones such as 707SC using signals. When a Bluetooth® handsfree device is connected, converse without operating 707SC directly with your hands. Alternatively, use a dialup-connection devices, to access the Internet or for other purposes.

Before Using Bluetooth® Communications

Bluetooth® communications can be performed only when others using Bluetooth®-compatible devices with the same profiles.

The Bluetooth® specifications of 707SC are as listed below.

Item	Specification
Communication Standard	Bluetooth® Standard Version 1.2
Applicable profiles	Headset Handsfree Serial Port Dialup Networking File Transfer Object Push Advanced Audio Distribute Audio/Video Remote Control Basic Imaging Basic Printing ¹
Output	Bluetooth® Power Class2

12-2

707SC (E).book 3 ページ 2006年10月26日 木曜日 午前11時19分

Item	Specification
Line-of-signal distance ²	Approximately 10 meters or less
Frequency band used	2.4 GHz

1 For Printing function only.

2 Varies by radio interference and other conditions.

Bluetooth® Precautions

- 707SC may not work with all Bluetooth®-compatible devices.
- Exchanging data may be unavailable with some devices even if they are Bluetooth®-compatible devices and they may have different operating procedures, displays or actions of 707SC, depending on their characteristics and/or specifications.
- The radio band (2.4GHz) used by Bluetooth®-compatible devices is also used by various other devices. Therefore, the transmission rate or distance may be reduced or communications may be blocked due to the influences of other devices.

Tip

- To check Bluetooth® functions available
 - Press **c** and select *Settings → Connectivity → Bluetooth → Bluetooth service*
 - Select an item and view the contents
- To confirm the device address of 707SC
Press **c** and select *Settings → Connectivity → Bluetooth → My Information*

Talking using wireless or handsfree mode may induce noise depending on the other connected devices and/or the communications environment.

707SC Bluetooth® function does not allow multiple devices when Bluetooth®-compatible headset is connected.

USB and Bluetooth® functions cannot be used at the same time.

Set the Bluetooth® function off before connecting a USB cable to handset.

12

External Connections

12-3

Activation

12

External Connections

- ## 2 Select the setting

Activate the Bluetooth[®] function of the other device beforehand.

- press C

5 Within 30 seconds, enter the same passkey on the other device

Tip

- **Passkey**
The Passkey is a password used to connect Bluetooth®-compatible devices. When connecting to a handsfree device, enter the Passkey specified for it. You are not required to enter the Passkey again for a registered device.
- **If authentication with the other device has failed**
A confirmation message appears asking whether to try authentication again. Select *Yes* to retry.
- **If ten peripheral devices have already been registered**
A message indicating the device memory is full appears.
- **To check Bluetooth® functions available for each device**
 - ① Press **C** and select *Settings* → *Connectivity* → *Bluetooth* → *My devices*
 - ② Highlight a device, select *Options* → *Service list*
 - ③ Highlight an item, select *Options* → *Help* and view the contents

- **To change the name of a registered device**

- ① Press **C** and select *Settings* → *Connectivity* → *Bluetooth* → *My devices*
- ② Highlight a device, select *Options* → *Rename*
- ③ Enter a new name

- **To delete a device from My devices**

- ① Press **C** and select *Settings* → *Connectivity* → *Bluetooth* → *My devices*
- ② Highlight a device, select *Options* → *Delete* → *Selected* or *All*
- ③ Enter Phone Password, press **C** (Confirm) (In the case of *All* only) and select *Yes*

- **To search for or register a device from other Bluetooth®-compatible devices (P.12-10)**

External Connections

- **To send data after viewing the contents**
Some functions allow sending option from Details/Playback window.

707SC (E).book 7 ページ 2006年10月26日 木曜日 午前11時19分

1

When a confirmation window appears, select **Yes**

2

A/V Headset

Connect Bluetooth®-compatible headphone/headset devices to Media Player to enjoy playback sounds.

1 Playback Melody/video files using Media Player (P.10-3, 10-9)

2 Select *Options* → *Transfer to A/V headset*

3

Select headset device

To register device

Select *Search new device* and search the device to register (P.12-4)

Tip

• Operations while Melody is stopped

① In Melody Playback window, select *Options* → *Play via* → *A/V headset*

② Select the destination device or *Search new device* and search the device to register (P.12-4)

12

Print Still image in Data Folder

Connect Bluetooth®-compatible printer to 707SC; enable to print Still images/vFiles in Data Folder directly through handling 707SC. Set paper size/number for printing with 707SC.

See User Guide attached to printer for printer operations/ paper settings.

External Connections

12-7

7075C (E).book 8 ページ 2006年10月26日 木曜日 午前11時19分

12

External Connections

1 In Data Folder list window, highlight still image/vFile

2 Select *Options* → *Print via* → *Bluetooth*

3 Select receiver's device

To register receiver's device

Select *Search new device* to search and register (P.12-4)

4 Perform operations to set

To set a paper size

Select *Paper size* and the setting

To set the number of copies

Select *Number of copies*, enter the number of copies (1 to 99) and press **c**

To set the number of pages to print on a sheet

Select *Paper per sheet* and the setting (1 to 16)

To set whether or not to print the date

Select *Date print* and the setting

To set whether or not to print a frame

Select *Frame* and the setting

To set a print quality

Select *Print quality* and the setting

5 Press **o** (Preview)

6 Check the preview window and press **c** (Print)

Accessing Connected Device Files

Access the shared folders and files of the other party's device. Alternatively, receive or delete data residing on the other device.

1 Press **c** and select *Settings* → *Connectivity* → *Bluetooth* → *My devices*

2 Select a device

7075C (E).book 9 ページ 2006年10月26日 木曜日 午前11時19分

3 Approve access on the side sharing the data

Tip

- To receive an accessed file

After Step 3, select a file to receive.

Locations of received files

Received files are automatically saved to Data Folder. The type of the folder that a file is saved to vary by file format; for example, JPEG and BMP files are saved to the *Pictures* folder and vFiles to the *Other documents* folder.

Connecting Handsfree

Register the handsfree device following the steps for "Search for and Register a Bluetooth®-Compatible Device" (P.12-4) beforehand.

Waiting Connection Request

In the steps given below, 7075C is placed in mode waiting for a handsfree-device connection request.

1 Press **c** and select *Settings* → *Connectivity* → *Bluetooth* → *My devices*

2 Select a handsfree-compatible device

When Passkey entry window appears

Enter the same Passkey as is set for the handsfree device

Answering Mode

Default Setting

Normal

If the setting is changed to *Automatic* a call to 7075C will be answered without the operation of any keys.

12

External Connections

12-9

7075C (E).book 10 ページ 2006年10月26日 木曜日 午前11時19分

12

External Connections

1 Press **c** and select **Settings** → **Connectivity** → **Bluetooth** → **Answering mode**

2 Select the setting

Tip

- **To set the time (Seconds) before automatic reception**
After Step 1, highlight **Automatic**, select **Options** → **Edit** and select the number of seconds to ring before answering.

Handsfree Mode

Default Setting

 = Handsfree Mode

Select answer settings for calls when handsfree devices connected.

1 Press **c** and select **Settings** → **Connectivity** → **Bluetooth** → **Handsfree setting**

2 Select the setting

Tip

- **While Private Mode is set**
Answer outgoing/incoming calls with 7075C for calls made with 7075C; answer outgoing/incoming calls with handsfree devices for calls made with handsfree devices.
- **While Handsfree Mode is set**
Answer all outgoing/incoming calls with handsfree devices.

Changing Bluetooth® Settings

My Phone's Visibility

Default Setting

 = On

To activate search and saving from other Bluetooth®-compatible devices, you have to make your 7075C visible.

7075C (E).book 11 ページ 2006年10月26日 木曜日 午前11時19分

1 Press **c** and select *Settings* → *Connectivity* → *Bluetooth* → *My phone's visibility*

2 Select the setting

Bluetooth® Name

Default Setting = 7075C

The displayed name shown on another device for your 7075C can be changed.

1 Press **c** and select *Settings* → *Connectivity* → *Bluetooth* → *My Information*

2 Select *Bluetooth Name*

3 Modify the name and press **c**

Secure Mode for Data Transfer

Default Setting = On

If set *On*, a confirmation message appears before you sending data.

1 Press **c** and select *Settings* → *Connectivity* → *Bluetooth* → *Secure mode*

2 Select the setting

USB Connection

Connect 7075C to a PC via a USB cable to exchange data between the devices. Alternatively, connect a printer to print still images.

12

External Connections

12-11

Connecting to a PC

Perform the following:

- Send files from Data Folder of 707SC
- Receive files from the PC and saving them to Data Folder
- Perform packet data communications

Before Using the USB Connection

Before connecting 707SC to a PC with a USB cable, you have to install the USB driver and the Samsung PC Studio. For more information about the installation procedure, operating conditions of a PC available, etc., see the User's guide in the attached CD-ROM.

 
Connecting to a Printer

Connect 707SC to a PictBridge-compatible printer with a USB cable and directly print still images from Data Folder. Alternatively, set a paper size, number of copies, and other items from 707SC.

For more information about printer operations and paper setting, see the printer's User Manual.

Printing a Still Image from Data Folder

- 1 Highlight a still image file in Data Folder
- 2 Select *Options* → *Print via* → *USB*
- 3 Connect 707SC to a printer with a USB cable
- 4 Select the printer settings
 - To set a paper size
Select *Paper size* and select the setting
 - To set the number of copies
Select *Number of copies*, enter the number of copies (1 to 99) and press **c**



To set the number of pages to print on a sheet

Select *Paper per sheet* and select the setting (1 to 16)

To set whether or not to print the date

Select *Date print* and select the setting

To set whether or not to print a frame

Select *Border* and select the setting

To set a print quality

 
 
Select *Print quality* and select the setting

5 Press **c**

6 Check the preview window and press
c (**Print**)

Note

- Never disconnect the USB cable during printing.




12

External Connections





 12-13







  707SC (E).book 14 ページ 2006年10月26日 木曜日 午前11時19分



12-14

 

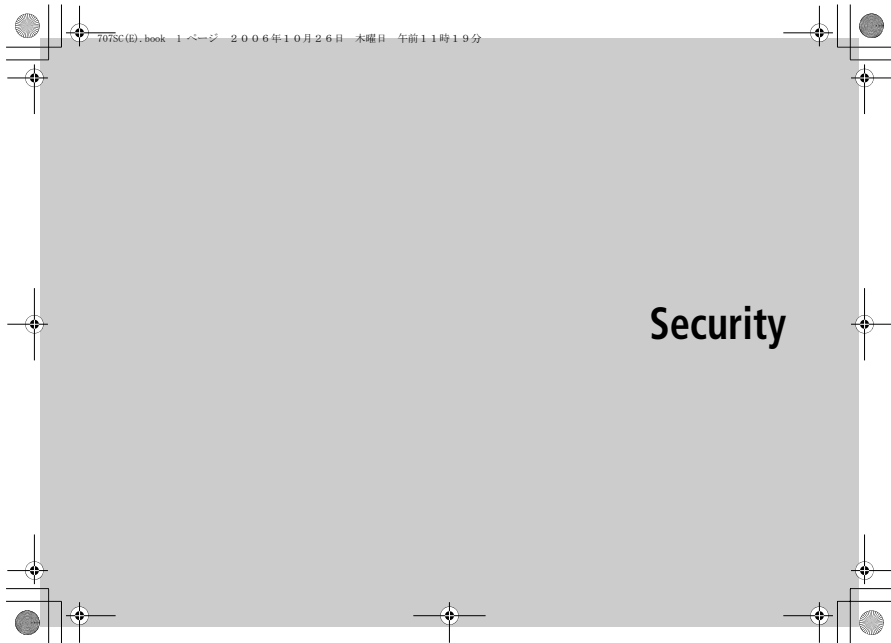

707SC (B).book 1 ページ 2006年10月26日 木曜日 午前11時19分

Security

7075C (E).book 2 ページ 2006年10月26日 木曜日 午前11時19分

13

Security

Change Phone Password

Default Setting = 9999

1 Press **c** and select *Settings* → *Security* → *Change phone password*

2 Enter current Phone Password and press **c** (Confirm)

3 Enter new Phone Password (4 digits) and press **c** (Confirm)

4 Enter new Phone Password again and press **c** (Confirm)

PIN

PINs are security codes for USIM Card. For more information, see "USIM Card" (P.1-2).

Changing PIN/PIN2

1 Press **c** and select *Settings* → *Security* → *Change PIN code* or *Change PIN2 code*

2 Enter current PIN or PIN2 and press **c** (Confirm)

3 Enter new PIN or PIN2 (4 to 8 digits) and press **c** (Confirm)

4 Enter new PIN or PIN2 again and press **c** (Confirm)

Note

- When *PIN lock* (P.13-3) is set to *Disable*, PIN cannot be changed.

13-2

To require PIN authentication each time the power is turned on, set this function to *Enable*.

- 1 Press **c** and select *Settings* → *Security* → *PIN lock*
- 2 Select the setting and press **c** (Save)
- 3 Enter PIN and press **c** (Confirm)

13 Security

If PIN or PIN2 is been incorrectly entered three consecutive times, PIN or PIN2 lock is set, restricting operations of 707SC. Unlock PIN or PIN2 lock in the steps given below.

- 1** With PIN lock unlocking code (PUK Code) entry window displayed, enter PUK Code and press **c** (Confirm)
- 2** Enter new PIN or PIN2 (4 to 8 digits) and press **c**
- 3** Enter new PIN or PIN2 again and press **c**

Note

- For more information about PIN and PIN2 lock unlocking codes (PUK and PUK2 Codes), contact Customer Service (P.25-25).
- If incorrect PIN lock unlocking code is entered ten consecutive times, USIM Card is locked (The count is not cleared when handset is turned off).
- There is no way to unlock the locked USIM Card. Contact Customer Service (P.25-25).

13

Security

USIM Lock

Default Setting = Disable

Set handset so that it is deactivated unless a USIM password is entered when another USIM Card is installed in handset.

1 Press **c** and select **Settings** → **Security** → **USIM lock**

2 Select the setting and press **c** (**Save**)

3 Enter a USIM password (4 to 8 digits) and press **c** (**Confirm**)

To set **Disable**

The settings are saved and the operation completes.

To set **Enable**

Proceed to Step 4

4 Enter the USIM password again and press **c** (**Confirm**)

13-4

Tip

- **USIM password**

This is a password dedicated to USIM Card authentication. If the USIM password matches, the other USIM Card can also be used for 707SC.

Change USIM password each time the USIM check setting is set to *Enable*.

- **When you forget your USIM password**

Insert a USIM Card (with USIM lock set to *Enable*) to 707SC and execute All reset (P.13-11).

Handset Security

Phone Lock

Default Setting = Disable

Set *Phone lock* to *Enable*; then Phone Password entry is required each time the power is turned on.

- 1 Press **c** and select *Settings* → *Security* → *Phone lock*

- 2 Select the setting and press **c** (Save)

- 3 Enter Phone Password and press **c** (Confirm)

Password Lock

Default Setting = Disable

Set *Password lock* to *Enable*; then hide Softkeys in Standby. Press any key; Phone Password entry window appears. Enter Phone Password to cancel Password lock; 707SC operations are enabled.

- 1 Press **c** and select *Settings* → *Security* → *Password lock*
- 2 Select the setting and press **c** (Save)
- 3 Enter Phone Password and press **c** (Confirm)

13

Security

13-5

707SC (E).book 6 ページ 2006年10月26日 木曜日 午前11時19分

13

Security

Tip

- When Password lock is canceled

Password lock is automatically set to *Disable*.

Privacy Lock

Default Setting

Unlock all

Set *Privacy lock* to require Phone Password entry each time calling up checked function/functions (selected among *All*, *Messages*, *Data Folder*, *Phonebook*, *Call log*, *Calendar*).

1

Press **c** and select *Settings* → *Security* → *Privacy lock*

2

Check the functions to lock and press **w** (Save)

3

Enter Phone Password and press **c** (Confirm)

Activate Secret Mode

Default Setting

Hide

Set Secret Mode to *Hide*; then hide the saved entry information (with Phonebook Secret Mode *On*) in Phonebook list.

1

Press **c** and select *Settings* → *Security* → *Activate Secret mode*

2

Enter Phone Password and press **c** (Confirm)

3

Select the setting and press **c** (Save)

13-6

Tip

- Under following conditions, 707SC turns the setting to *Hide*; *Activate Secret mode* is set to *Show* then 707SC is powered on again.

Mobile Tracker

Default Setting: Off

Set *Mobile tracker* to *On*; then 707SC notifies when another USIM Card (not the one in 707SC during the setting operations) is inserted. Set SMS address for notification. Up to 2 addresses can be specified.

- 1 Press **c** and select *Settings* → *Security* → *Mobile tracker*
- 2 Enter Phone Password and press **c** (Confirm)
- 3 Select Activation field
- 4 Select *On* and press **c** (Select)

5 Select Recipients field and enter an address

To select an address from Phonebook

- ① Highlight To field and select *Options* → *Phonebook*
- ② Search Phonebook and select an entry (P.5-9)
- ③ Highlight phone number and press **c** (Select)

To enter a phone number directly

- ① Highlight To field and select *Options* → *Direct input*
- ② Enter phone number

6 Press w (Done)**7 Select Sender field and enter a sender's name****8 Press w (Save)****9 Press w (Accept) after checking the items**

13

Security

7075C (E).book 8 ページ 2006年10月26日 木曜日 午前11時19分

13

Security

Tip

- **To delete an address**
After Step 5, highlight the address, select *Options* → *Delete*

With another USIM Card inserted

When powered on replacing with another USIM Card; 7075C send a notification SMS to your specified address during the handset activation. The SMS sending never come to the person (who replace the USIM Card)'s notice. 7075C also send a notification SMS when Phone Password is incorrectly entered three consecutive times during *Mobile tracker* setting is *Off*.

Rejecting Incoming Calls

Reject calls by callers who do not send caller IDs/by callers who are unable to send caller IDs. In addition, nuisance calls can also be rejected by registering the caller phone numbers to a Black list.

Reject Withheld

Default Setting = Off

1 Press **c** and select *Settings* → *Call settings* → *All calls* → *Reject incoming calls*

2 Select *Reject withheld field*

3 Select the setting and press **c**

4 Press **w** (Save)

Reject Unavailable

Default Setting = Off

Reject/accept calls by callers who are unable to send caller IDs, like International calls from overseas/transferred calls from landlines.

13-8

707SC (E).book 9 ページ 2006年10月26日 木曜日 午前11時19分

1

Press **c** and select *Settings* → *Call settings* → *All calls* → *Reject incoming calls*

2

Select *Reject unavailable field*

3

Select the setting and press **c**

4

Press **w** (Save)

Black List

1

Press **c** and select *Settings* → *Call settings* → *All calls* → *Reject incoming calls*

2

Select *Black list field*

3

Set the phone number

To enter a phone number directly

① Select *Options* → *Add* → *Direct input*

② Enter phone number

To select a phone number from Phonebook

① Select *Options* → *Add* → *Phonebook*

② Search Phonebook and select an entry (P.5-9)

③ Select phone number

To enter a phone number using Call Log

① Select *Options* → *Add* → *Call log*

② Select the log record

4

Press **C** and press **w** (Save)

Tip

To delete phone numbers from Black list

① Perform Steps 1 and 2

② Highlight the phone number to delete, select *Options* → *Delete* → *Selected* or *All* → *Yes*

13

Security

13-9

7075C (E).book 10 ページ 2006年10月26日 木曜日 午前11時19分

Reject Black List

1 Press **c** and select *Settings* → *Call settings* → *All calls* → *Reject incoming calls*

2 Select Reject black list field

3 Select the setting and press **c**

4 Press **w** (Save)

13

Security

Calls from phone numbers in *Black list*

Calls are not connected. Caller hears a busy tone. *Missed call* appears in Standby. Press **w** (View) to see Missed Calls.

Restoring Defaults

Clear Memory

Clear Data Folder, Messaging folders, Phonebook (Phone) entries, and Calendar entries each or all at once.

1 Press **c** and select *Settings* → *Memory settings* → *Phone memory* → *Clear memory*

2 Check items to reset and press **w** (OK)

3 Enter Phone Password, press **c** (Confirm) and select *Yes*

13-10

Master Reset

Reset Settings

Clear Saved contents/settings and restore defaults. However, the following contents are not restored.

Setting menu	Content not to be reset
Phone settings	Contents set in Time and Date fields for <i>Time & date</i>
Display settings	Contents set in <i>Brightness</i>
Call settings	<i>All calls</i> → <i>Reject incoming calls</i> →contents saved in <i>Black list</i> <i>Voice call</i> / <i>Video call</i> →contents saved/set in <i>Divers</i> <i>Voice call</i> →contents set in <i>Call waiting</i> Contents set in <i>Call barring</i> Contents set in <i>Voice mail</i>
Phonebook settings	Contents saved/set in <i>My phonebook details</i> , <i>Category settings</i>
Connectivity	<i>Preferred networks</i>
Security	<i>USIM lock</i> , <i>PIN lock</i> , <i>Change PIN code</i> , <i>Change PIN2 code</i>

- 1 Press **c** and select *Settings* → *Memory settings* → *Phone memory* → *Master reset* → *Reset settings*

- 2 Enter Phone Password, press **c** (Confirm) and select *Yes*

Reset All

Restore 707SC defaults and delete Phonebook (Phone), Messaging, and Data Folder contents/settings. Original files and S! Appli are restored.

 
 
- 1 Press **c**, select *Settings* → *Memory settings* → *Phone memory* → *Master reset* → *Reset all*
- 2 Enter Phone Password, press **c** (Confirm) and select *Yes*

13


Security




707SC (E).book 12 ページ 2006年10月26日 木曜日 午前11時19分



13-12

 

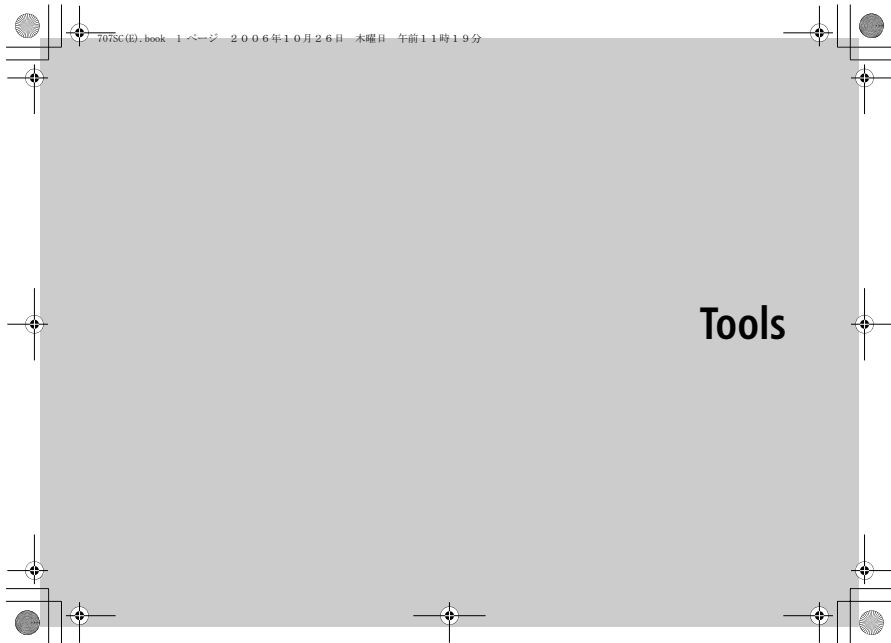

707SC (E).book 2 ページ 2006年10月26日 木曜日 午前11時19分

14

Tools

Alarms

Wake-up Alarm/Alarms

Register a Wake-up alarm and 4 other alarms. Each alarm can be named and the name given to Alarm appears when Alarm sounds. Once an alarm time is saved, it can only be set/reset by switching *Alarm activation* to *On* or *Off*. In addition to setting one time only alarm, set alarms to repeat on specific days of the week or everyday.

1 Press **c** and select *Tools* → *Alarms*

2 Select an alarm from *Wake-up alarm* to *Alarm4*

3 Select Alarm activation field

4 Select *On* and press **c**

5 Select and set other items as required

Set a name (*Wake-up alarm* cannot be edited)

① Select Alarm name field

② Enter the name to set

Set Alarm time

Highlight Alarm time field and enter the time

Set an Alarm sound

① Select Alert tone field

② Select the location of sound file, select an alarm sound and press **c**

Set Vibrator

① Select Vibration field

② Select the setting and press **c**


Set Alarm volume

① Select Alarm volume field

② Use **s** to adjust the volume

③ Press **w** (Play) to check the volume and press **c** (Save)

14-2

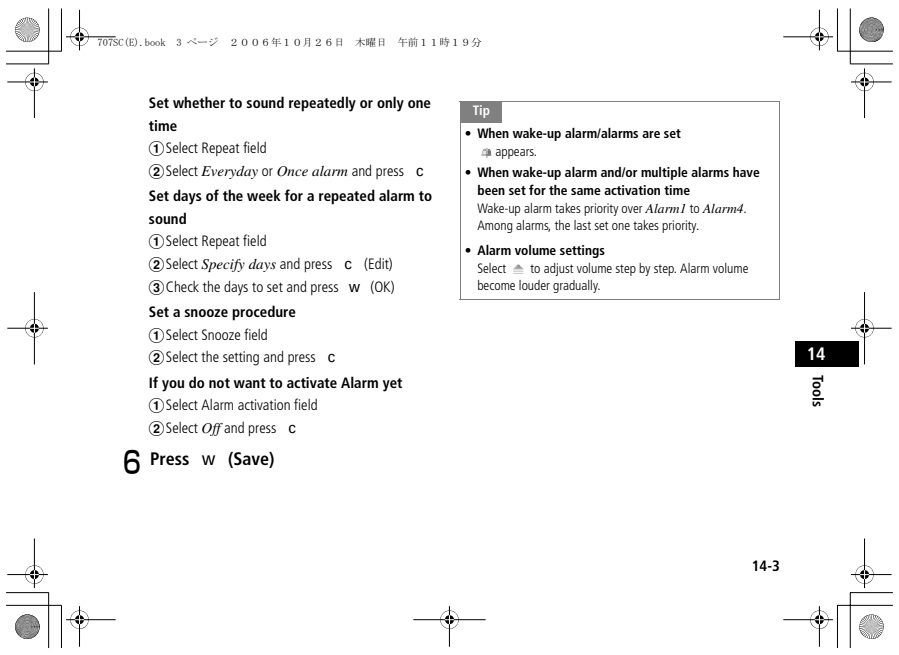

Set whether to sound repeatedly or only one time

- ① Select Repeat field
- ② Select *Everyday* or *Once alarm* and press **c**

Set days of the week for a repeated alarm to sound

- ① Select Repeat field
- ② Select *Specify days* and press **c** (Edit)
- ③ Check the days to set and press **w** (OK)

Set a snooze procedure

- ① Select Snooze field
- ② Select the setting and press **c**

If you do not want to activate Alarm yet

- ① Select Alarm activation field
- ② Select *Off* and press **c**

Tip

- **When wake-up alarm/alarms are set**
⌚ appears.
- **When wake-up alarm and/or multiple alarms have been set for the same activation time**
Wake-up alarm takes priority over *Alarm1* to *Alarm4*.
Among alarms, the last set one takes priority.
- **Alarm volume settings**
Select to adjust volume step by step. Alarm volume become louder gradually.

6 Press **w (Save)**

14
Tool

Alarm sound is generated as soon as capturing of recording finishes.

Default Setting = Off

If you set this setting to **On**, even when the power is turned off, the power is automatically turned on at the time set for a wake-up alarm or alarm.

-

2 Select *On* or *Off* and press **c** (Save)

14-4

- Cancel Auto power settings under following conditions; near electronic devices requiring high-precision control or handling weak signals, in places such as airplanes or hospitals prohibiting the use of mobile phones.

 
Calendar

Displaying Calendar

There are three modes for displaying Calendar. Select a date on Monthly or Weekly view window to display Daily view window for the selected day.



100



Module



Daily View Window

707SC (E).book 6 ページ 2006年10月26日 木曜日 午前11時19分

14

Tools

Tip

- **To display the previous or next month on Monthly view window**
Press * / # , highlight Year/Month field and press S
- **To display the previous or next week on Weekly view window**
Press * / # , highlight Year/Month field and press S
- **To display the previous or next day on Daily view window**
Press S , * , or #
- **To view a particular month or week**
From Monthly view window or Weekly view window, change Display by specifying year, month, and day as follows.
① In the calendar window, select *Options* → *Go to*
② Select Date, enter the year, month, and day and press c
When *Today* is selected in Step ②, the current date is highlighted on the window of the current month or week.

Calendar Window Format

Default Setting

= Starting day: Sunday
= Default view mode: Monthly view

Set Calendar to begin with Sunday or Monday.
Alternatively, set the window displayed when activating Calendar.

1

Press c and select *Tools* → *Calendar*

2

Select *Options* → *Settings*

3

Select settings

Set the first day of week

① Select *Starting day*
② Select the setting and press c (Save)

Set the default view mode

① Select *Default view mode*
② Select the setting and press c (Save)

14-6

707SC (E).book 7 ページ 2006年10月26日 木曜日 午前11時19分

Tip

- **When settings are changed**
A change in *Starting day* is immediately reflected. Selecting the settings of *Default view mode* can be applied when you deactivate calendar and then reactivate it.
- **To temporarily change display mode**
In the calendar window, select *Options* → *View mode* → *Display mode*

Saving New Entries to Calendar

Scheduled Events

Save a maximum of 100 items.

1 Press **c** and select *Tools* → *Calendar*

2 Select *Options* → *Add new* → *Schedule*

3 Select items and make settings

Set a title

Select Title field and enter a text

Set details

Select Details field and enter a text

Set a starting date

Highlight Start date field and enter a date

Set a starting time

Highlight Start time field and enter a time

Set an ending date

Highlight End date field and enter a date

Set an ending time

Highlight End time field and enter a time

Set an event location

Select Location field and enter a text

14

Tools

14-7

707SC (E).book 8 ページ 2006年10月26日 木曜日 午前11時19分

14

Tools

Set an alarm

① Check Alarm field to select

② Highlight Before field, enter an interval before Alarm time, use **s** to highlight Unit field and switch to an appropriate unit

③ Select Alert tone field, select a location of sound files and select an alert tone

Set Repeat

① Check Repeat field to select

② Use **s** to highlight Time cycle field and specify the time cycle unit

③ Highlight Value field and enter a value

④ Highlight Until date field and enter a year, month, and day to stop repetition

Set Expiry time for a Calendar Event

Use **s** to highlight Expiry field and switch the expiry limit

4 Press **w** (Save)

Tip

• To make it easier to enter a Start date and/or End date

Put cursor on the target date on Calendar window before Step 2 to show that date in Start date or End date field.

• When an event entry has expired

An event is automatically deleted from Calendar when it expires. For example, if the expiration is set to *After 1 year*, and event repetition not set, the indication is deleted when one year has elapsed from the ending date of the event. With repetition set, it is deleted one year after the ending date of the last repetition. To deactivate automatic deletion, set the expiry to *Disable*.

14-8

7075C (E).book 9 ページ 2006年10月26日 木曜日 午前11時19分

Anniversary/Holiday

Register a maximum of 50 anniversaries and 50 holidays.

1 Press **c** and select **Tools** → **Calendar**

2 Select **Options** → **Add new** → **Anniversary or Holiday**

3 Select items and make settings

Set a text

① Select Text entry field

② Enter text

Set a date

Highlight Date field and enter the date

Set an alarm (Anniversary only)

① Check Alarm field to select

② Highlight Before field, enter an interval before the anniversary Alarm time, use **s** to highlight Unit field and switch to an appropriate unit

③ Highlight Alarm time field, and enter a time

④ Select Alert tone field, select the location of sound of files and select an alert tone

Set to repeat every year

Check Repeat every year field

4 Press **w** (Save)

Tip

To make it easier to enter a date

Put cursor on the target date on Calendar window before Step 2 to show that date in Date field.

14

Tools

14-9

707SC (E).book 10 ページ 2006年10月26日 木曜日 午前11時19分

14

Tools

Memo

Up to 20 memos can be registered. Memos can be registered even while talking (P.2-8, 6-5).

1 Press c and select Tools → Calendar

2 Select Options → Add new → Memo

3 Select the memo text box and enter text

To set the date

Select Date and enter the date

4 Press w (Save)

Tip

To make it easier to enter a date (P.14-9)

Tasks

Register a maximum of 100 time-limited items and manage them in a list.

1 Press c and select Tools → Calendar

2 Select Options → Add new → Task

3 Select items and make settings

Set a title

① Select Title field

② Enter title

14-10

707SC (E).book 11 ページ 2006年10月26日 木曜日 午前11時19分

①Select Task field

②Enter text

To set the starting date

Highlight Start date field and enter the date

To set the due date

Highlight Due date field and enter the date

Set an alarm

①Check Alarm field

②Highlight Before field, enter a value for how long before the task starts the alarm should sound, use s to highlight field of units and select an appropriate unit

③Highlight Alarm time field and enter the time

④Select Alert tone field, select the location of sound files and select an alert tone

Set a priority level

Use s to highlight Priority field and select a value

4 Press w (Save)

Tip

- To make it easier to enter a Starting date or Due date**
Put cursor on the target date on Calendar window before Step 2 to show that date in Starting date and Due date field.

Volume of Alarm sound

The volume follows the setting of *Tone volume* for Voice calls; the setting of *Voice call* in *Vibration* for Vibrator.

When the time set for Alarm comes

Alarm sounds and a message appears. To stop Alarm, press any key. Press c to cancel the message display. With no action to stop Alarm, a message appears indicating Missed alarm event. Press w (View) to view the message.

When a call is being initiated or during a call

During a call or connection (*Connecting...* appears), 707SC notifies with a short sound and indicator; uncheck *Alerts on call* (in Phone sounds setting) to notify only by an indicator. When an outgoing call is being Initiated (*Dialing...* appears), 707SC notifies only by an indicator. Press c to clear an indicator.

14

Tools

14-11

Editing Calendar Entries

- ## Editing and Saving as New Entries

Press **C** and select *Tools* → *Calendar*

- 2 Open a window listing entries

To open a window listing entries for a single day

Select a date on Monthly view window or Weekly view window, or use **S** to change the date on Daily view window

To view events by type

Select *Options* → *Event list* and select a type

3 Select and view details

Tip

- ### 3 Select an item to edit

4 Press **C** (Edit)

707SC (E).book 13 ページ 2006年10月26日 木曜日 午前11時19分

5 Change the information as required

6 Press **w** (Save) and select *New* or *Update*

Marking a Task as Completed

1 Press **c** and select *Tools* → *Calendar*

2 Select *Options* → *Event list* → *Task*

3 Highlight a completed task, select *Options* → *Completed*

To remove the completion mark
Select *Options* → *To do*

Tip

- To sort tasks

In the Task window, select *Options* → *Sort by* and select a sorting type. Classify tasks into completed/uncompleted ones or sort them by due date or priority.

Deleting Calendar Entries

1 In Calendar window or saved contents list, select *Options* → *Delete*

2 Delete the entry

To delete only the highlighted entry
Select *Selected* → *Yes*

To delete all entries of the current month or week
Select *This month* or *This week* → *Yes*

To delete only entries from a specific period of time

① Select *Periods*

② Enter the start and end dates

③ Press **c** (Delete) and select *Yes*

14 Tools

14-13

To delete all entries or all before the highlighted date

- ① Select *All* or *All past data*
- ② Enter Phone Password, press **c** (Confirm) and select *Yes*

Tip**• To collectively delete multiple registered items**

Select registered unnecessary items from a list by type and delete them collectively.

- ① Press **c** and select *Tools* → *Calendar*
- ② Select *Options* → *Event list* and select the type
- ③ Select *Options* → *Delete* → *Multiple*
- ④ Check the items to delete, press **w** (Delete) and select *Yes*

14**Tools****Calendar Options**

Perform the following operations from *Options* on a window listing Calendar entries:

Item	Description
Add new	Save a new Calendar entry (P.14-7).
Send schedule/ Send task	Send Calendar entry via S! Mail (P.17-6) or Bluetooth® (P.12-6).
View mode	Select a display mode (P.14-7).
Go to	Display a particular month or week by changing Monthly/Weekly view window (P.14-6).
Event list	View events listed by type (P.14-12).
Delete	Delete a Calendar entry (P.14-13).
Completed/ To do	Set or cancel the task completion mark (P.14-12).
Sort by	Sort tasks (P.14-13).
Save to Data Folder	Create a vfile and save it to <i>Other documents</i> in Data Folder.
Settings	Select Calendar Display settings (P.14-6).

707SC(E).book 15 ページ 2006年10月26日 木曜日 午前11時19分

Item	Description
Missed alarm event	View the message of a missed alarm (P.14-12).
Print via Bluetooth	Print highlighted schedule event or task using the printer via Bluetooth® connection.
Memory status	Check memory usage for Calendar functions (P.14-12).

Voice Recorder

Voice Recorder can record voice of a maximum of 60 minutes. Voice Recorder can be started from the tool menu, as well as during a call, *Options* of Data Folder, or Message creation window. Voice recording can be activated during a call.

Voice Recorder Window

Control Voice Recorder with Softkeys and navigation key.

Recording Window

Navigation key

Remaining recording time

Elapsed time

Playback Window

Navigation key

Play time

Elapsed time

14
Tools

14-15

7075C (E).book 16 ページ 2006年10月26日 木曜日 午前11時19分

14

Tools

Recording Voice

The recorded voice is saved to *Sounds & Ringtones* Data Folder.

1 Press **c** and select *Tools* → *Voice recorder*

To change the fixed recording time (P.14-17)

2 Press **c** (Record)

3 Press **w** (Stop) or continue recording until the set time runs out

4 As required, press **c** (Play) to replay

To pause

Press **c** (Pause)

To resume

Select *Options* → *Record*

To record voice from *Options* (P.14-16)

Playing Voice

Replay a voice file saved in Data Folder.

1 Press **c** and select *Tools* → *Voice recorder*

2 Select *Options* → *My sounds*

3 Highlight the file and press **c** (Play)

Voice Recorder Options

Operate listed below from *Options* before and after recording. *Options* and selectable items vary by the conditions. For more information about available options after selecting *My sounds*, see "Data Folder Options" (P.11-13).

Item	Description
Record	Start recording.
My sounds	Call up list of sound files saved in the <i>My sounds</i> folder.
Send	Send a file via S! Mail (P.17-6) or Bluetooth® (P.12-6).
Set as	Set voice for ringtone, etc.

Item	Description
Delete	Delete a recorded voice file.
Rename	Change file name.
Lock/Unlock	Set/release file protection.
Details	Confirm recorded sound file size, etc.
Record settings	Select the file name assigned automatically or the fixed recording time (P.14-17).

Changing Voice Recorder Settings

Default Name

Default Setting = Voice

The voice recorded with Voice recorder is saved under a name such as "Voice 001." "Voice" can be changed to another word.

- 1 Press **c** and select **Tools** → **Voice recorder**

- 2 Select **Options** → **Record settings** → **Default name**

- 3 Enter a name

Tip

- If the default name is changed
The naming rule is applied from the next recording.

Recording Time

Default Setting = 5 minutes

- 1 Press **c** and select **Tools** → **Voice recorder**

- 2 Select **Options** → **Record settings** → **Recording time**

 
- 3 Select a duration and press **c** (**Save**)

World Clock

World clock allows you to check the current time all over the world.

Viewing World Clock

- 1 Press **c** and select **Tools** → **World clock**



Current time and city name of area 1
Current time and city name of area 2

Selecting Areas

Default Setting = *Tokyo, Seoul* for both areas

When you save a second time zone, easily check the time at that area looking at World clock.

- 1 Press **c** and select **Tools** → **World clock**

- 2 Use **j** to highlight area 1 and use **s** to change city name

To set summer time

- ① Press **o** (DST)
- ② Check the area to set summer time and press **w** (Done)

- 3 Press **c** (Save)

707SC(E).book 19 ページ 2006年10月26日 木曜日 午前11時19分

Using Calculator

Arithmetic operations to a maximum of 13 digits can be performed.

1

Press **c** and select **Tools** →
Calculator

2

Calculate

To enter numbers

Press keys

To enter +, -, ×, or ÷

Press **r**, **l**, **u**, or **d**

To display the calculation result

Press **c**

To enter ., (, or)

Press **w** **(.())** to toggle symbols

To move cursor left or right

Press ***** or **#**

To erase a symbol in a mathematical expression

Place cursor after a symbol to erase and press **C**

To erase both the mathematical expression and the calculation result

Press **C** for 1+ seconds

Converting Currencies or Units

Convert the currencies for various countries. Alternatively, convert the units of length, weight, etc.

14

Tools

14-19

Converting Currencies

- 1** Press **c** and select **Tools** → **Converter** → **Currency**



Original currency
Enter the amount in original currency
Target currency
Converted amount appears

- 2** Select Original currency field and the currency

To replace the original currency with the target currency
Press **o** (Reverse)

- 3** Select Original currency amount field and enter the amount

To enter a decimal point
Press *****

- 4** Select Target currency field and the currency

- 5** View the result in the target currency

To check the exchange rate

- ① Highlight either of Currency fields and press **w** (View Rate)

- ② Press **C** to return to the Original window

To change the exchange rate

- ① Highlight either of Currency fields and press **w** (View Rate)

- ② Select the base currency to change the rate, highlight the currency, select **Options** → **Edit**

- ③ Enter the rate and press **c** (Save)

To add a currency unit

- ① Press **w** (View Rate)
- ② Select *Options* → *Add Rate*
- ③ Enter the currency unit/rate and press **c** (Save)

Converting Units

- 1** Press **c** and select *Tools* → *Converter*

- 2** Select *Length, Weight, Volume, Area, or Temperature*



Original unit
Enter a value in original unit
Target unit
The converted value appears

- 3** Select Original unit field and select the unit

To replace the original unit with the target unit

Press **o** (Reverse)

- 4** Highlight Original unit value field and enter the value

To enter a decimal point

Press *****

To enter/delete "-" when converting temperature

Press **#**

- 5** Select target Unit field and select the unit

14

Tools

707SC (E).book 22 ページ 2006年10月26日 木曜日 午前11時19分

6 View the result in Converted value field

To clear the values

Press **w** (Clear)

Stopwatch

707SC can be used as a stopwatch for measuring a maximum of ten lap times plus the total time.

1 Press **c** and select *Tools* → *Stopwatch*

2 Press **c** (Start)

3 Press **c** (Lap) to measure a lap time or **w** (Stop) to stop time measurement

Dictionary

Look up English/Japanese dictionaries.

1 Press **c** and select *Tools* → *Dictionary*

2 Select a dictionary

To use English dictionary

Select *English dictionary*

To use Japanese dictionary

Select *Japanese dictionary*

3 Enter a word to search

4 Select a target word

14

Tools

14-22

707SC(E).book 23 ページ 2006年10月26日 木曜日 午前11時19分

Interpreter

Use 707SC Interpreter as a translator to find frequently used phrases in particular places (such as an airport), through voice prompts in each language. Available languages are English, Korean, and Chinese. Select place name or the phrases using keys or your voice.

1 Press **c** and select *Tools* →

Interpreter

2 Select the language

3 Select an item

To set by your voice

Speak the item in menu to 707SC after the beep

To set by keys

Use **a** to highlight the item and press **c**

4 Select the phrase

To set by your voice

Speak the phrase for inquiry to 707SC after the beep

To set by keys

Press **w** (メニュー) to select the item

5 Highlight the phrase and press **c**

To listen the phrase

Press **w** (音を聴く)

To listen the phrase again

Press **w** (リピート)

Tip

- To play voice prompts
After Step 3, press **o** (ボイスオン)
- When もう一回言ってください appears
707SC could not recognize your voice. Speak clearly again or say another phrases.

 
 
14

Tools


14-23




707SC (E).book 24 ページ 2006年10月26日 木曜日 午前11時19分



14-24

 

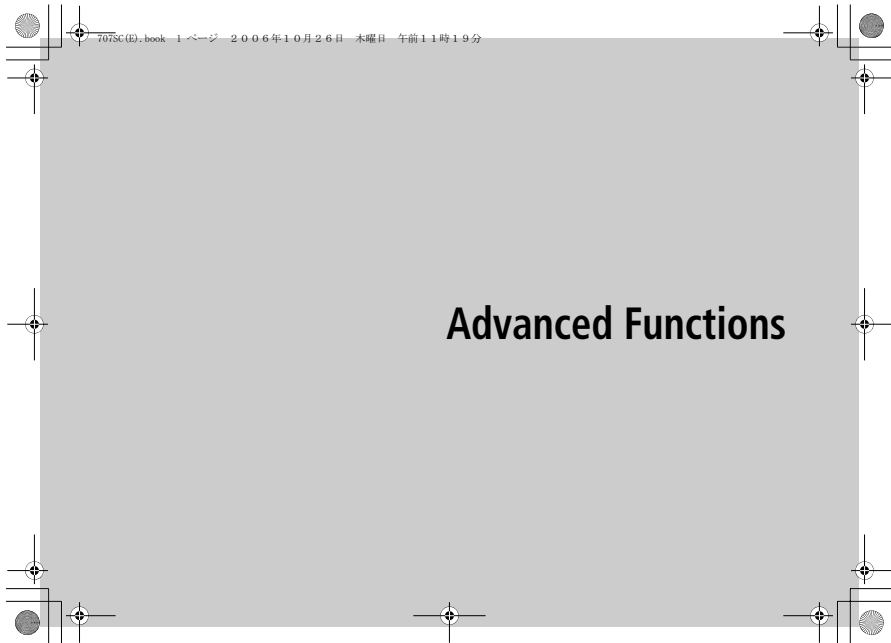

15

Advanced Functions

2 Select a value and press **c** (Save)

- **When *Retry with* is set for Video Call**
Automatic redialing settings take priority.
- **When receiver has activated Voice Mail or Call Forwarding**
The call is forwarded and automatic redialing is canceled.

Default Setting = 010

1 Press **c** and select *Settings* → *Call settings* → *Voice call* → *International dial* → *Int'l prefix*

2 Enter an international code

707SC(E).book 3 ページ 2006年10月26日 木曜日 午前11時19分

Editing Country Codes

Default Setting

• 1: Japan 2: KOR 3: GBR 4: ITA 5: CHE
6: ESP 7: DEU 8: PRT 9: NLD 10: FRA
11: MCO 12: USA 13: SWE 14: AUS
15: CHN 16: HKG 17: TWN
18 to 20: Unused

Add a country code or delete an unnecessary one.

1 Press **c** and select *Settings* → *Call settings* → *Voice call* → *International dial* → *Country codes*

2 Perform operations to add, change, or delete

To add or change

① Highlight the item to add or change and press **c** (Change)
② Select Country name field and enter the country name
③ Highlight Country code, enter code and press **w** (Save)

To delete

Highlight item to delete, press **w** (Delete) and select *Yes*

Earphone call

Default Setting

• Earphone call activate: Off
• Call number: No list


When *Earphone call* is set to *On*, press switch for 1+ seconds to call specified number.

1 Press **c** and select *Settings* → *Call settings* → *Voice call* → *Earphone call*

15

Advanced Functions

15-3

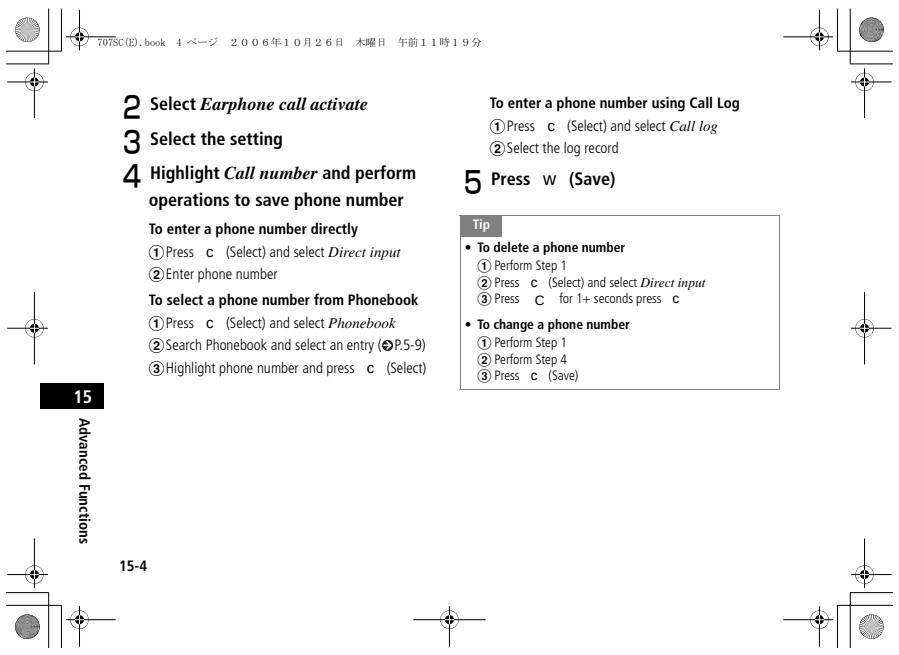

- 2 Select Earphone call activate**
- 3 Select the setting**
- 4 Highlight *Call number* and perform operations to save phone number**

- To enter a phone number directly**
- ① Press **c** (Select) and select *Direct input*
 - ② Enter phone number
- To select a phone number from Phonebook**
- ① Press **c** (Select) and select *Phonebook*
 - ② Search Phonebook and select an entry (P.5-9)
 - ③ Highlight phone number and press **c** (Select)

- To enter a phone number using Call Log**
- ① Press **c** (Select) and select *Call log*
 - ② Select the log record

5 Press **w (Save)**

Tip

- **To delete a phone number**
 - ① Perform Step 1
 - ② Press **c** (Select) and select *Direct input*
 - ③ Press **C** for 1+ seconds press **c**
- **To change a phone number**
 - ① Perform Step 1
 - ② Perform Step 4
 - ③ Press **c** (Save)

707SC (E).book 5 ページ 2006年10月26日 木曜日 午前11時19分

Handling Incoming Calls

Anykey Answer

Default Setting

Off

Answer Voice Calls using keys other than **c** (Accept) or **t**.

1 Press **c** and select *Settings* → *Phone settings* → *Anykey answer*

2 Select *On* or *Off* and press **c** (Save)

Tip

• Answering a Voice Call when *On* is set (P.2-3)

Acoustic Shock

Default Setting

On

To avoid 707SC starts to ring at high volume, even when high Ringtone volume for Voice Call/Video Call is set, Acoustic shock enables 707SC starts to ring at Level 1 volume for the first two seconds, then at the set volume.

1 Press **c** and select *Settings* → *Call settings* → *All calls* → *Acoustic shock*

2 Select the setting and press **c** (Save)

15

Advanced Functions

15-5

Active Folder

Default Setting: Off

When *On*, open 707SC to answer an incoming call.

- 1 Press **c** and select *Settings* →
Phone settings → *Active folder*
- 2 Select *On* or *Off* and press **c** (Save)

Side Key Silence/Reject

Default Setting: Silence

Use **n** or **b** to mute ringer or reject an incoming call.
Select from *Reject* (disconnect the call) or *Silence* (silence the incoming tone).

- 1 Press **c** and select *Settings* →
Phone settings → *Side key*
- 2 Select a value and press **c** (Save)

15-6

Side Key Lock

With this function set to *On*, Side Keys of 707SC are locked. Avoid accidental key presses when 707SC is placed inside a bag, etc.

- 1 Press **c** and select *Settings* →
Phone settings → *Side key lock*
- 2 Select *On* or *Off* and press **c** (Save)