 


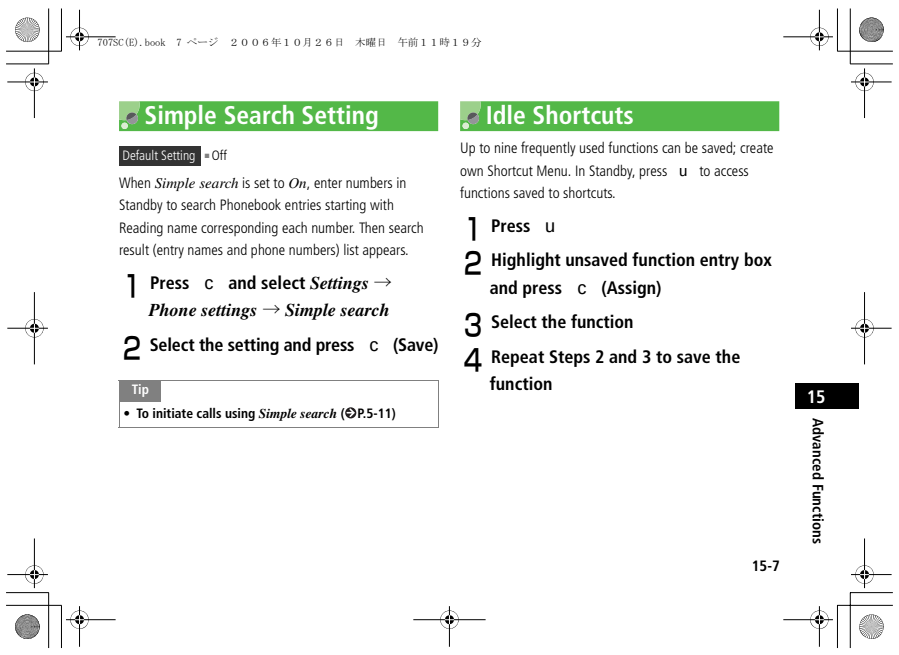

Simple Search Setting

Default Setting Off

When *Simple search* is set to *On*, enter numbers in Standby to search Phonebook entries starting with Reading name corresponding each number. Then search result (entry names and phone numbers) list appears.

- 1 Press **c** and select *Settings* → *Phone settings* → *Simple search*
- 2 Select the setting and press **c** (Save)

Tip

- To initiate calls using *Simple search* (P.5-11)

Idle Shortcuts

Up to nine frequently used functions can be saved; create own Shortcut Menu. In Standby, press **u** to access functions saved to shortcuts.

- 1 Press **u**
- 2 Highlight unsaved function entry box and press **c** (Assign)
- 3 Select the function
- 4 Repeat Steps 2 and 3 to save the function

Tip

• To change functions

- ① In Step 2, Highlight the function, select *Options* → *Assign*
- ② Select *Yes* and select the function

• To sort functions

- ① In Step 2, Highlight the function, select *Options* → *Change Order*
- ② Use **a** to highlight the target function box and press **c** (Select)

• To delete functions

- In Step 2, Highlight the function, select *Options* → *Delete* → *Yes*

• To restore defaults

- In Step 2, Highlight the function, select *Options* → *Reset* → *Yes*

Memory Status

Check the following information:

- Available shared memory
 - Status of SMS and SI Mail mailboxes
 - Status of memory in Data Folder
 - Status of Calendar items registered
 - Status of Phonebooks (Handset and USIM Card)
- Alternatively, delete saved entries and/or files.

1 Press **c** and select *Settings* → *Memory settings* → *Memory status*

 
 
2 Select an item to check

Tip


- **To delete the contents**
When the contents in Data folder, Calendar or Phonebook are to be deleted
① Perform Steps 1 and 2
② Highlight an item, press **C** (Select), select **Yes** and view an entry
③ Check the fields to delete, press **W** (Delete) and select **Yes**
After Step ③, in "To delete the contents," enter Phone Password, press **C** (Confirm) and select **Yes**
• **To check/uncheck all contents at once**
After Step ③, in "To delete the contents," select *Options* → *Mark all* or *Unmark all*
• **When the checked contents contain the contents that functions or locks are set in**
After Step ③, in "To delete the contents" or the "To delete all contents" operation, the confirmation window appears. If you select **Yes**, the deletion is performed. If you select **No**, only files without functions or locks set are deleted.




707SC (E).book 10 ページ 2006年10月26日 木曜日 午前11時19分



15-10

 

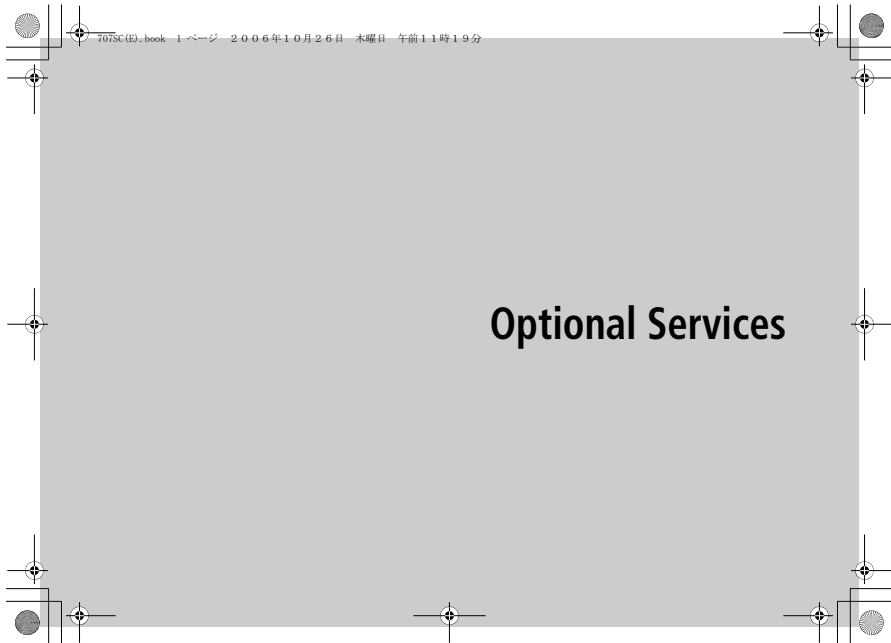 

Optional Services

707SC (E).book 2 ページ 2006年10月26日 木曜日 午前11時19分

Optional Services

16

Optional Services

The following optional services are available with 707SC:

Service	Description
Call Forwarding	When you know you will be unable to answer calls to 707SC, automatically divert calls to a specified number.
Voice Mail	Divert all or all unanswered calls to Voice Mail Center; access caller messages via 707SC from within the service area or via a touchtone phone anywhere.
Call Waiting*	A tone sounds for incoming calls when the line is engaged. Put the line on hold to answer or alternate between lines.
Conference Call*	Open another line while one is engaged; toggle lines or talk on all simultaneously. Add new parties to an existing conference; talk on up to five lines simultaneously.
Call Barring	Restrict incoming or outgoing calls by condition.

Service	Description
Caller Identification	Show or hide your own number when placing calls.

* This service requires a separate subscription.

Note

- When *Out* appears, access services from a touchtone landline. For details, contact Customer Service (☎P.25-25).

Forwarding Condition	Description
No reply	Unanswered calls are diverted after the specified ring time, or when the line is busy or 7075C is out-of-range.
Always	7075C does not ring/vibrate for incoming calls; calls are diverted automatically and Missed Call does not appear.

- Call Forwarding and Voice Mail cannot be used at the same time.
- Activating Call Forwarding cancels Voice Mail.
- Call Forwarding is not available when *All outgoing calls* or *All incoming calls* in Call Barring is active (Call Barring takes priority over Call Forwarding).

1 Press **c** and select *Settings* → *Call settings* → *Voice call* or *Video call* → *Diverts*

2 Select *No reply* or *Always*; view the current settings

After viewing, press **I** to return to the previous window

7075C (E).book 4 ページ 2006年10月26日 木曜日 午前11時19分

Optional Services

16

3 Highlight Forwarding address field and enter a number

To select a phone number from Phonebook

① Highlight forwarding Address field and select Options → Phonebook

② Select Phonebook, highlight a phone number and press c (Select)

4 For No reply, highlight Waiting time field and set a time

5 Press c (ON)

Tip

• When Call Forwarding (No reply) is active

While 7075C rings/vibrates, answer a call or press o (Busy) to forward it.

Cancel All

Cancel all Diverts services at once.

1 Press c and select Settings → Call settings → Voice call or Video call → Diverts → Cancel all

Tip

• To stop Call Transfer service for each forwarding condition

① Press c and select Settings → Call Settings → Voice call or Video call → Diverts

② Select No reply or Always

③ Press w (OFF)

Check Status

1 Press c and select Settings → Call settings → Voice call or Video call → Diverts → Check status

16-4

Note

- Optiona

- Tip**

- ### Optional Services

707SC (E).book 6 ページ 2006年10月26日 木曜日 午前11時19分

Optional Services

16

Canceling Voice Mail

Cancel all Voice mail services at once.

1 Press **c** and select *Settings* → *Call settings* → *Voice mail* → *Cancel all*

Tip

- To cancel Voice Mail by forwarding condition
 - ① Press **c** and select *Settings* → *Call settings* → *Voice mail*
 - ② Select *No reply* or *Always*
 - ③ Press **w** (OFF)

Listening to Messages

When a caller saves a message at Voice Mail Center, in standby, a message appears. Also,  appears at the top of Display.



Notification

While Message Appears

Connect to Voice Mail Center as described below and follow voice prompts.

1 Press **w** (Dial)

To check message details

Press **c** while message appears

16-6

707SC (E).book 7 ページ 2006年10月26日 木曜日 午前11時19分

Tip

- **To access caller message from overseas**
 - ① Press **0** for 1+ seconds and enter **+**
 - ② Enter 819066514170 and press **t**
- **To delete a message without listening to it**
Press **o** (End).
- **To clear** 
Voice Mail Indicator disappears when messages are accessed via 707SC.

While No Message Appears

1 Enter 1416 and press **t**

Incoming Call Notification

If there was a call that could not be answered because you were out of service area or handset was powered off, it is notified with SMS. It is also notified when a caller saves a message at Voice Mail Center while you are talking to other party.

Incoming Call Notification

1 Enter 1414 and press **t** (Free of charge)

When setting from a general subscriber phone in Japan (Free of charge)

Dial 090-665-1414 and press **t**

When setting in overseas (Charged)

Press **0** for 1+ seconds, enter **+**, enter 81-90-665-14191 and press **t**

2 Perform operations following the audio prompts

Optional Services

16

16-7

707SC (E).book 8 ページ 2006年10月26日 木曜日 午前11時19分

Optional Services

16

Call Waiting*

* A separate subscription is required to use this service.
This service is only available for Voice Calls.

Activating or Canceling

1 Press **c** and select *Settings* → *Call settings* → *Voice call* → *Call waiting*

2 Activate or cancel the service

To activate
Press **c** (ON)

To cancel
Press **w** (OFF)

Receiving a Second Call

When there is an incoming call during a call, you are notified with a specific interrupt sound and display. Place the current call on hold and answer the second call.

1 When you hear the interrupt sound, press **c** (Accept)

2 Select *Hold active call*

 
To end the current call and answer the second call
Select *End active call*

3 Press **w** (Swap) to toggle the calls

4 To end the current call, press **y**

To end the call on hold
Select *Options* → *End* → *Held call*

16-8

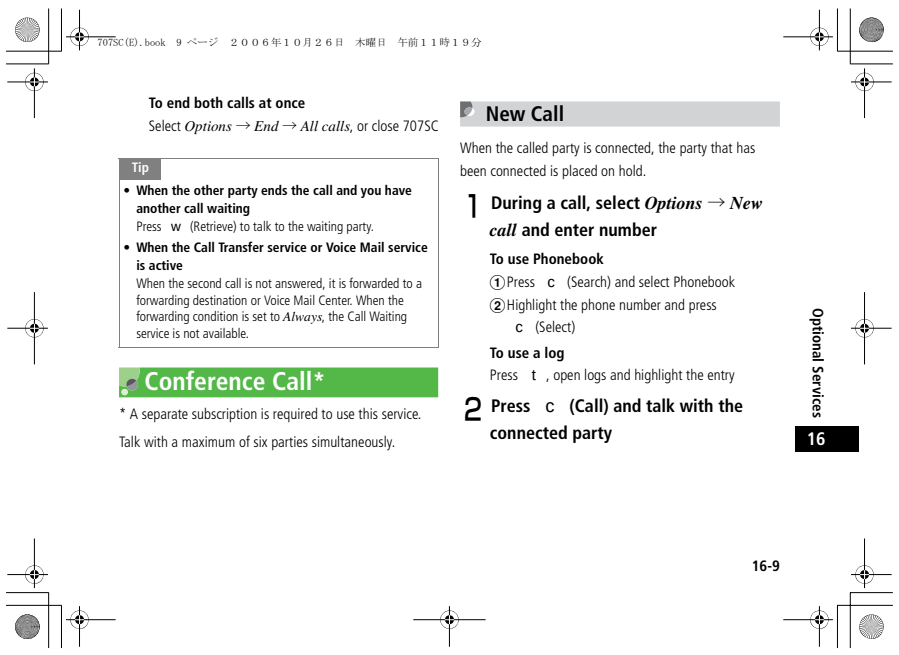

To end both calls at once
Select *Options* → *End* → *All calls*, or close 707SC

Tip

- **When the other party ends the call and you have another call waiting**
Press **w** (Retrieve) to talk to the waiting party.
- **When the Call Transfer service or Voice Mail service is active**
When the second call is not answered, it is forwarded to a forwarding destination or Voice Mail Center. When the forwarding condition is set to *Always*, the Call Waiting service is not available.

 **Conference Call***
* A separate subscription is required to use this service.
Talk with a maximum of six parties simultaneously.

 New Call

When the called party is connected, the party that has been connected is placed on hold.

1 During a call, select *Options* → *New call* and enter number

- To use Phonebook**
- ① Press **c** (Search) and select Phonebook
 - ② Highlight the phone number and press **c** (Select)

To use a log
Press **t** , open logs and highlight the entry

2 Press **c (Call) and talk with the connected party**

707SC (E).book 10 ページ 2006年10月26日 木曜日 午前11時19分

Optional Services

16

Engaged Conference Call Operations

1

Call another party during a call (P.16-9)

2

Press w (Swap) to switch connected calls

Tip

- To end the call on hold**
During a call, select *Options* → *End* → *Held call*
- To end all calls**
During a call, select *Options* → *End* → *All calls*, or close 707SC
- When the current caller ends the call while using Conference Call service**
A party on hold remains on-hold state. Switch to the on-hold party to talk.

Join

1

During a call, initiate a call to another party (P.16-9)

2

Select *Options* → *Join*

Tip

- To call with only one person**
During a call, select *Options* → *Split* and select a caller to talk to
- To end the call for a specific caller**
During a call, select *Options* → *End* → *Select participant*, check callers to end and press w (End)
- To end the all calls**
During a call, press y
- When one party ends the call during Conference Call**
Continue talking with remaining parties.

16-10

Call Barring

Use this service to bar outgoing/incoming calls for Voice/Video Calls, sending/receiving SMS under the conditions listed below.

Item	Description	
Restrict outgoing calls	All outgoing calls	Deactivates initiating calls and SMS sending, except emergency calls.
	Outgoing Intl calls	Deactivates initiating international calls and SMS sending within your current location.
	Intl except home	Deactivates initiating international calls and SMS sending within your current location or except Japan.
Restrict incoming calls	All incoming calls	Deactivates reception of all calls and SMS receiving.
	Incoming when roaming	Deactivates reception of all calls and SMS receiving while outside of Japan.

When setting restrictions, you are required to enter Network Password (The 4-digit number dedicated to Outgoing/incoming service specified at the subscription).

Note

- If incorrect Network Password is entered three consecutive times, setting or canceling the Call Barring service is deactivated. Note that, in this case, change Network Password and Center Access code. For more information, contact Customer Service (☎P.25-25).
- When the Call Transfer service or Voice Mail service is active, you cannot use *All outgoing calls* or *All incoming calls* (Call Transfer service or Voice Mail service takes priority).

Tip

- **When an attempt is made to initiate a call while calls are restricted**
A message appears indicating that outgoing call restriction is active. The message may appear after a while depending on the area where using 707SC.

Restrict Outgoing/Incoming Calls

Restrict outgoing calls and/or Restrict incoming calls for each type of call (Voice/Video Calls, SMS)/transmission.

- 1 Press **c** and select **Settings** → **Call settings** → **Call barring**
- 2 Select **Voice call**, **Video call**, or **SMS** and select a restriction type
- 3 Enter Network Password

4 Set or cancel call barring

To set

Press **c** (ON)

To cancel

Press **w** (OFF)

Tip

- **To check settings**
Perform Steps 1 and 2. After checking the settings, press **C** to return to the previous window.

Cancel All

Canceling outgoing and incoming call is available for each of call types (Voice and Video Calls, SMS)/transmission.

- 1 Press **c** and select **Settings** → **Call settings** → **Call barring**
- 2 Select **Voice call**, **Video call**, or **SMS** → **Cancel all**

707SC (E).book 13 ページ 2006年10月26日 木曜日 午前11時19分

3 Enter Network Password and press **c**

Changing Network Password

1 Press **c** and select *Settings* → *Call settings* → *Call barring* → *Change password*

2 Enter the current Network Password in *Old* field and new Network Password (4 digits) in *New* and *Cnf* (Confirm) field, then press **c** (Confirm)

Caller ID

Show or hide your own phone number when calling from 707SC.

Show My Number

Default Setting = By network

1 Press **c** and select *Settings* → *Call settings* → *All calls* → *Show my number*

2 Select the setting and press **c** (Save)

Tip

- When set to *By network*
Automatically set to Show/Hide your number by current network status.

Optional Services

16

16-13



Adding 186 or 184

Use 186 (Show ID) or 184 (Hide ID) prefixes to show or hide your number when calling from 707SC, regardless of the *Show my number* setting.

1 Enter Show ID or Hide ID Prefix

To show Caller ID

Press 1 8 6

To hide Caller ID

 
 
 
Press 1 8 4

 
2 Enter phone number

3 Press t

To initiate a Video Call

Select *Options* → *Video call*



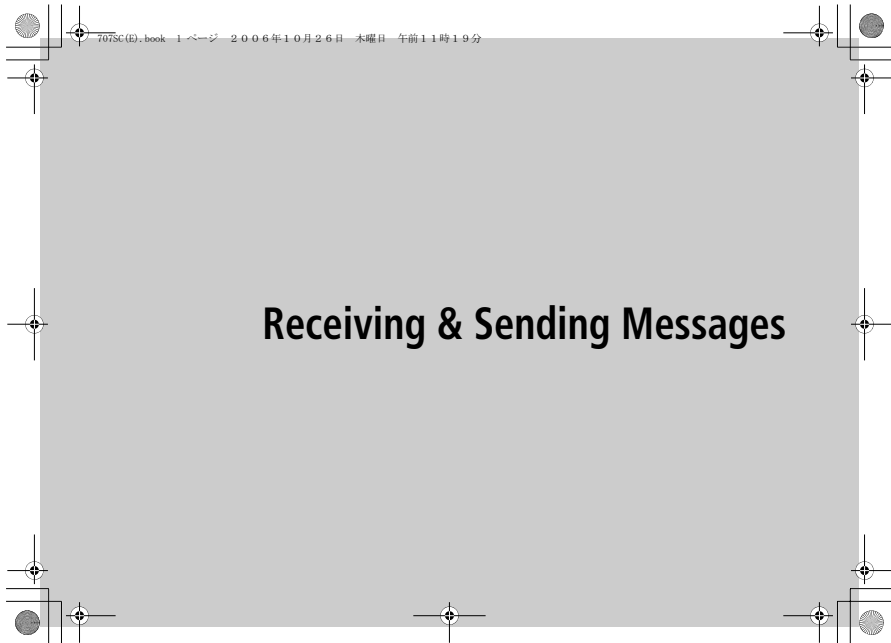

707SC (E).book 2 ページ 2006年10月26日 木曜日 午前11時19分

17

Receiving & Sending Messages

Getting Started

S! Mail

Use this service to send/receive long text messages, images, videos, other files, and sounds between S! Mail compatible SoftBank handsets and PCs via e-mail.

A separate subscription is required to use S! Mail and receive e-mail.

SMS

Use this service to send/receive short text messages between SMS-compatible SoftBank handsets using phone numbers.

Tip

Retry function

If the other party's handset cannot receive a message because the power turned off or out-of-range, 707SC keeps the message saved on Mail Server; then send to the other party after signal reception recovers stable.

Checking for New Messages

When a message is received in Standby mode, reception notification appears. The number of received messages, senders and reception dates/times appear.



Number of received messages

Sender

Reception date and time

Reception Notification Window

17-2

1 Press **w** (View)

 


Received Message List

When multiple messages appear

Use **s** to select the  tab and press **w** (View)

2 Select a new received message



SMS Window



S! Mail Text

Tip

• When a message is received (out of Standby mode)

 or  appears on the top of Display. When 707SC is closed, an icon like  appears on Sub Display (P.1-8, 1-10). The icon does not appear with *Sub LCD light* (P.8-8) set to *Off*.

• Received message count

When there are unread messages, the total number of new and unread messages appears.

• Sender information

A phone number or mail address appears. When the sender has been saved in Phonebook, you will see the name saved in Phonebook. When an incoming image has been saved in Phonebook or an incoming image has been set for the group, the image appears at the same time. While Secret Mode is set to *Hide* and Phonebook Secret Mode is set to *On* for message receiver/sender information; sender's name/image does not appear.

Operations in SMS window

In SMS window, press Side Keys **n** **b** to enlarge/reduce text font size. Alternatively, press **u** or **d** for 1+ seconds to auto scroll. To stop auto scroll, press any key. Press **r** or **l** to adjust the scroll speed.

707SC (E).book 4 ページ 2006年10月26日 水曜日 午前11時19分

17

Receiving & Sending Messages

3D Pictogram (P.20-5)

By default, when you check an incoming/unread message (Except S! Mail that is set for Slide Show or with an attachment), the message text appears in 3D Pictogram. After 3D Pictogram display ends or **w** (Stop) is pressed, Message window appears. Perform various operations after Message window appears.

Retrieving Complete Messages

When *Home network* (P.20-3) or *Roaming* (P.20-3) is set to *Manual*, S! Mail is temporarily stored on Mail Server; part of the received message is sent to 707SC as a reception notification. Retrieve complete messages from Mail Server.

1 Press **w** and select *Received msgs*

2 Select a message with the rest of it

3 Press **c** (Retrieve)

4 Select complete message

Notification Details

Message Window

17-4

7075C (E).book 5 ページ 2006年10月26日 木曜日 午前11時19分

Tip

- Received Message list window indicators
 - Unread reception notification (Priority: High)
 - Unread reception notification (Priority: Standard)
 - Unread reception notification (Priority: Low)
 - Read reception notification (Priority: High)
 - Read reception notification (Priority: Standard)
 - Read reception notification (Priority: Low)
- To retrieve complete messages from Message list window (P.19-2)

Message window for S! Mail with an attachment

The first page shows the file name for the attachment and the second and subsequent pages show the message. Use **r** to read the message or select **Options → Play** to start Slide Show.

Message window for S! Mail with Slide Show set

Select **Options → Play** to play the slide. During playing, press **c** (Pause)/ **w** (Stop) to pause/stop it. Use **s** to manually select pages.

Message window for S! Mail with an inserted file (P.17-17, 17-18)

If an image is inserted, the image appears with the message. If sound is inserted, select **Options → Play** to play sound. If Slide Show is set, sound is played when the page with an inserted sound appears. If video is inserted, select **Options → Play** and press **o** (Video) to play video. If Slide Show is set, **Video** appears at the lower right and pressing **o** (Video) plays sound when the page with an inserted video appears.

Message window with a file requiring purchasing/obtaining Content Key

■ appears on a page with an inserted file that you cannot view/play. Select **Options → Download content key** to view/play the file.

Using Received Messages

Send a message directly to the sender.

1 Press **w** (Reply) on the Message window

17-5

707SC (E).book 6 ページ 2006年10月26日 木曜日 午前11時19分

17

Receiving & Sending Messages

2 Create a message and press w (Send)

Tip

- **Subject display of S! Mail for replies**
The subject of a replied S! Mail is prefixed with "RE:" automatically.

Creating Messages

Two types of messages are available on 707SC: S! Mail and SMS. The number of characters that can be sent and entry items are different between these types (Shown below).

	S! Mail	SMS
Number of characters that can be sent	Approximately 10,000 single-byte/double-byte characters ¹ Approximately 10,000 characters in one slide ² (Up to 300K bytes ³)	Maximum of 70 single-byte/double-byte, Katakana characters Maximum of 160 single-byte alphanumerics (Up to 140 bytes)
Entry items	Address	Yes
	Subject	Yes
	Attachment	Yes
	Message	Yes

Yes: Available
No: Not available
1 The number of characters that can be sent varies by the attachment size, etc.
2 Set a maximum of 20 slides in one message.
3 Total size of all kinds of messages (Including address, subject, text, and attachments).

 
17-6

Using the Mail Art Function

When displaying an S! Mail window, use mail art function to display text messages and/or images consecutively like slides or with a background color (P.17-12, 17-15, 17-18).

Procedures

Mails should be created in the flow as shown below. Items other than *Destination* should be entered as required.

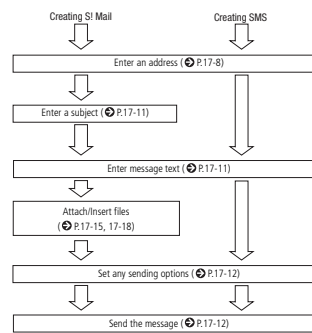

17-7

17

Receiving & Sending Messages

7075C (E).book 8 ページ 2006年10月26日 木曜日 午前11時19分

17

Receiving & Sending Messages

Tip

- To set sending options beforehand (P.20-2, 20-5)

Automatic Change of Message Type

When message creation is started, the message type is set to SMS; it automatically changes to S! Mail when one of the following occurs:

- Entering mail address as a destination
- Entering a subject
- Entering characters exceeding the number of characters that can be sent by SMS
- Inserting files on Slide Show page
- Attaching or inserting a file
- Changing the address type to Cc or Bcc

When the message is modified to allow it to be sent as SMS, for example, by deleting an attached or inserted file or a subject, the message type automatically changes to SMS. Depending on message creation conditions, it may not automatically change type. If the mail type is not changed automatically, change it manually (P.17-12).

Address

Enter a phone number or mail address for S! Mail or a phone number for SMS as a message address. Up to twenty addresses can be entered.

1 Press w and select Create msg

Address field

Subject field

 
 
Attach field

Message field

Text entry field

Message Creation Window

17-8



2 Enter an address

To select an address from Phonebook

- ① Select Address field and select *From Phonebook*
- ② Search Phonebook and select an entry (P.5-9)
- ③ Highlight a phone number or mail address and press **c** (Select)

To enter an address directly

- ① Select Address field and select *Enter Recipient*
- ② Enter phone number or mail address

To select an address from sent records

Select Address field and select the record

To select an address from a Phonebook Category

- ① Select Address field and select *From Category*
- ② Select a Category, with/without Address selection window, highlight an address to enter and press **c** (Select)

3 To enter another address

To enter an address directly

 
 
- ① Select Address field
- ② Select Entry field and select *Enter Recipient*
- ③ Enter phone number or mail address and press **w** (Done)

To select an address from Phonebook

- ① Select *Options* → *Add recipients* → *Phonebook*
- ② Search and select Phonebook
- ③ Highlight a phone number or mail address and press **c** (Select)

To select an address from a Phonebook Category

- ① Select *Options* → *Add recipients* → *Category*
- ② Select a Category, with/without Address selection window, highlight an Address to enter and press **c** (Select)



17 Receiving & Sending Messages

- Tip
- To create a message using a template (P.17-14)
 - ① In Step 3, select *Options* → *Recipient list*
 - To confirm the entered address
 - In Step 3, select *Options* → *Recipient list*
 - To add an address after confirming the entered address
 - ① In Step 3, select *Options* → *View recipient list*
 - ② Select Entry field and perform operation in the same way as Step 2
 - ③ Press W (Done)
 - To send a message after confirming the entered address
 - ① In Step 3, select *Options* → *View recipient list*
 - ② Select *Options* → *Send*
 - To change the address type to To, Cc, or Bcc
 - ① In Step 3, select *Options* → *View recipient list*
 - ② Select *Options*, highlight an address → *Change recipients* → To, Cc, or Bcc
 - To delete an address
 - ① In Step 3, select *Options* → *View recipient list*
 - ② Select *Options*, highlight an address → *Remove*

- To copy, cut, or paste characters (P.4-13)
- Displaying Address field
 - When multiple addresses have been saved, ■ and the number of addresses appear in Address field on Message creation window.
- Note
 - If the free space of the shared memory (P.25-15) on 7075C is less than 464K bytes, you cannot create a message. To create a message, delete unnecessary messages.
 - If the shared memory (P.25-15) becomes low while in a message creation, you may not be able to save the message in Drafts.
 - A message created on 7075C may not appear the same way on the other party's phone.
 - Message sent with Subject/Text in Hangul, may appear as spaces or be deleted on the other party's phone.

707SC (E).book 11 ページ 2006年10月26日 木曜日 午前11時19分

1

In Message creation window, select Subject field

2

Enter a subject

Tip

- To copy, cut, or paste characters (P.4-13)
- To set/release the prediction entry function (P.4-14)

1

In Message creation window, select Message field

2

Enter the message

When Slide Show is set (P.17-12)

Select Text entry field

Tip

- To copy, cut, or paste characters (P.4-13)
- To use an SMS template or Phonebook entry (P.4-11)
- To change the font size of characters being entered
In Step 2, select Options → Font Size → Small, Standard, or Large
- To set/release the prediction entry function (P.4-14)
- To set Slide Show (P.17-12)
- To insert image files, etc. in a Message field (P.17-15, 17-18)
- To view the text in 3D Pictogram
In Message creation window, highlight Message field, select Options → 3D Pict. Disp.

17

Receiving & Sending Messages

17-11

Sending a Message

Tip

- **To set sending settings for a message being created**
 - ① In Message creation window, select *Options* → *Sending options*
 - ② Select an item and make settings (P.20-2, 20-5)
 - ③ Press w (Apply) or w (Save)
- **To change the message type**
 - ① In Message creation window, highlight all fields except Address field
 - ② Select *Options* → *Change to S! Mail* or *Change to SMS* → Yes

 Slide Show

7 In Message creation window, select *Options* → *Insert* → *Text*



3 To add a Text entry field for Slide Show, perform Steps 1 and 2

- **To insert *Image, Sound, or Video***
Perform operations in "Inserting a File" (☞ P.17-17).
Alternatively, other files can be inserted in the same page.
But image/video or sound/video cannot be displayed in the same page.
- **To delete a Text entry field**
① In Message creation window, highlight Text entry field
② Select *Options* → *Remove* → *Yes*
- **To preview Slide Show before sending**
① In Message creation window, highlight a field other than Address field
② Select *Options* → *Preview*
③ Select *Options* → *Play*

Set the font color, font style, interval time for displaying Slide Show, background color, etc.

1 In Message creation window,
highlight Message field

2 Set options as required

- ① Select *Options* → *Edit style*
- ② Highlight *Select page* and use **S** to display *All pages*

Set the page display

1 Highlight a Character entry field to set

- ① Highlight a Character entry field to set
- ② Select *Options* → *Edit style*
- ③ Highlight *Slide interval* and enter a time

- ① Select *Options* → *Edit style*
- ② Highlight *Select page* and use **s** to display *All pages*
- ③ Highlight *Font colour* and use **a** to highlight a color

- 1 Highlight a Character entry field to set

707SC (E).book 14 ページ 2006年10月26日 木曜日 午前11時19分

17

Receiving & Sending Messages

② Select *Options* → *Edit style*

③ Highlight *Font colour* and use **a** to highlight a color

Set font size for all pages

① Select *Options* → *Edit style*

② Highlight *Select page* and use **s** to display *All pages*

③ Highlight *Font Size* and use **s** to display a size

To set font size for a single slide page

① Highlight a Character entry field to set

② Select *Options* → *Edit style*

③ Highlight *Font Size* and use **s** to display a size

To change the display order for text and images (Videos)

① Select *Options* → *Edit style*

② Highlight *Select page* and use **s** to display *All pages*

③ Highlight *Order item* and use **s** to display *Text-Top or Image (Video)*

3 Press **c** (Save)

Tip

- To preview the style before sending
 - ① In Message creation window, highlight a field other than Address field
 - ② Select *Options* → *Preview*
 - ③ Select *Options* → *Play*

Note

- If the type of message being created is SMS, *Edit style* or *Preview* does not appear in *Options*.

Templates

Create and send a message using S! Mail or SMS template.

1 Press **w** and select *Templates* →
S! Mail templates or *SMS templates*

2 Highlight an S! Mail or SMS template

17-14

707SC(E).book 15 ページ 2006年10月26日 木曜日 午前11時19分

3 Select Options → Send

4 Create a message and press w (Send)

Tip

- To use after viewing an S! Mail template
 - ① Perform Steps 1 and 2
 - ② Select Options → View
 - ③ Select Options → Play as required
 - ④ Select Options → Edit and send
- To register a template (P.4-16, 18-19)

Attaching/Inserting Files

A file that can be attached/inserted to an S! Mail is limited in size to 294K bytes (except the message address, subject and message text size). Up to 20 files can be attached to one S! Mail.

Tip

- To check the size of a message being created
Select S! Mail as the Type of the message, the message size appears in the upper-right corner.

Note

- Note that some recipients may not be able to receive attachment or inserted files.
- Video files that cannot be sent by S! Mail (File size: over 294K bytes, Size: over 176 x 144, Quality: other than Economy, or etc.) are attached/inserted, the message indicating attaching/inserting failed appears.

Attaching/Inserting a File from Data Folder, etc. into Message Field

Attach images, video, and/or sounds saved in Data Folder to a message, as well as any contents saved in Phonebook and Calendar (converted as vCard format or vCalendar format). If you insert a file in Message field, display/play the file when you view the Message window.

17-15

Receiving & Sending Messages

707SC (E).book 16 ページ 2006年10月26日 木曜日 午前11時19分

 
Receiving & Sending Messages

17

Attaching a File

1 In Message creation window, Select Attach field

2 Perform operations to attach



Message Creation Window
(File Attached)

To attach file

① Select *Data Folder*

② Select a file from Data Folder

To attach Phonebook data as vCard file format

① Select *Phonebook details*

② Search Phonebook and select an entry (P.5-9)

③ Press **w** (Add)

To attach Calendar items as vCard file format

① Select *Calendar item*

② Select the items

Tip

To add a file

Perform Step 1 to 2 in "Attaching a file" (P.17-16)

To check an attachment

① In Message creation window, highlight a file in Attach field and select *Options* → *View attachment*

② Select a file

If you attach a file

An icon indicating the file type and the file name is displayed in Attach field.

Image Sound

Video vCalendar

vCard File other than above

To replace a file

① In Message creation window, highlight a file in Attach field and select *Options* → *View attachment*

② Highlight a file and select *Options* → *Replace*

③ Perform Step 2 in "Attaching a file" (P.17-16)

17-16

- ① In Message creation window, highlight a file in Attach field and select *Options* → *View attachment*
- ② Select *Options* → *Remove* → *All* → *Yes*

To insert a file with Slide Show set (P.17-12)

-

Message Creation Window
(File Inserted)

707SC (E).book 18 ページ 2006年10月26日 木曜日 午前11時19分

17

Receiving & Sending Messages

Tip

- **To preview an inserted file**
 - ① Select *Options* → *Preview*
 - ② Select *Options* → *Play*
- **If you insert a file**

In Message creation window, the icon indicating the file type, file name, and file size is displayed in Text entry field. If you inserted an image with no restrictions on its being displayed, the image will be shown in reduced size instead of the icon.

■ : Images that cannot be displayed because of Content Key has not been purchased or otherwise obtained

🔊 : Sound

🎥 : Video
- **To replace a file**
 - ① In Message creation window, highlight a file in Text entry field
 - ② Select *Options* → *Replace*
 - ③ Select a file, an entry, or a calendar item
- **To delete a file**
 - ① In Message creation window, highlight a file in Text entry field
 - ② Select *Options* → *Remove* → *Yes*

- **To insert a file where another file has already been inserted**

A new Slide Show page is added automatically and the file is inserted. In case of an image file and sound file, both can be inserted on the same page.

Creating & Inserting a File

 
While creating a message, create a file and insert it. The file inserted to Message field is displayed/played when Message window is opened.

In Message creation window, select *Options* → *Create & Insert*

To insert a file with Slide Show is set

- ① In Message creation window, highlight Text entry field where a file to be inserted
- ② Select *Options* → *Create & Insert*

17-18

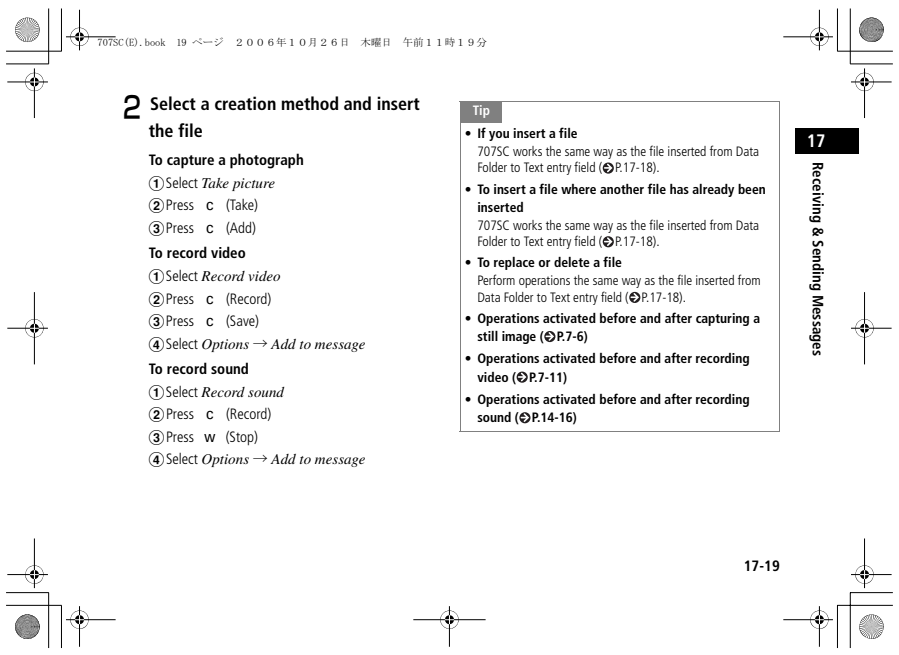

2 Select a creation method and insert the file

To capture a photograph

- ① Select *Take picture*
- ② Press **c** (Take)
- ③ Press **c** (Add)

To record video

- ① Select *Record video*
- ② Press **c** (Record)
- ③ Press **c** (Save)
- ④ Select *Options* → *Add to message*

To record sound

- ① Select *Record sound*
- ② Press **c** (Record)
- ③ Press **w** (Stop)
- ④ Select *Options* → *Add to message*

Tip

- **If you insert a file**
707SC works the same way as the file inserted from Data Folder to Text entry field (P.17-18).
- **To insert a file where another file has already been inserted**
707SC works the same way as the file inserted from Data Folder to Text entry field (P.17-18).
- **To replace or delete a file**
Perform operations the same way as the file inserted from Data Folder to Text entry field (P.17-18).
- **Operations activated before and after capturing a still image (P.7-6)**
- **Operations activated before and after recording video (P.7-11)**
- **Operations activated before and after recording sound (P.14-16)**

● Saving Created Messages

● Save to Drafts

When temporarily stopping message creation to perform other operations, save the message being created to the Drafts.

- 1 In Message creation window, select *Options* → *Save to Drafts*

Tip

- When **C / y / l** is pressed on Message creation window
When **C**, **y**, or **l** is pressed after entering something or attaching or inserting a file, a message appears asking whether to finish creating the message. Select **Yes** to save the created message to Drafts.

Note

- Only when any of addresses, subject, and text is entered or a file is attached/inserted, *Save to Drafts* appears in *Options*.

● Save as a Template

 
By saving a message with fixed contents, etc. as an S! Mail templates, new S! Mail can be easily created and sent.

- 1 In Message creation window, highlight **Attach** field or **Text entry** field

- 2 Select *Options* → *Save as template*

Note

- *Saved as template* appears in *Options* only when a subject is entered or the message is longer than SMS, or when a file is inserted.

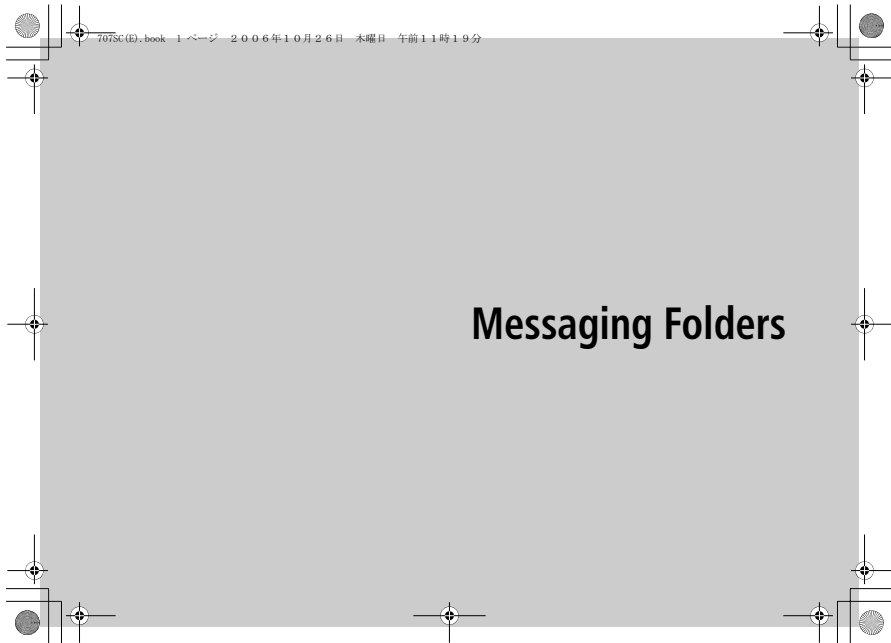

Messaging Folders

18

Messaging Folders

Viewing Messages

Five mailboxes are created on 707SC.

Mailbox	Message type
Received msgs	Received messages.
Drafts	Message drafts saved before completion.
Unsent msgs	Messages unsent because of failure or cancellation, or waiting to be sent.
Sent msgs	Messages already sent.
Templates	S/I Mail or SMS saved as templates.

Tip

- To check message memory status
 - ① Press **w**
 - ② Select *Memory status*
 - ③ Select *SMS, S/I Mail (By count)*, or *S/I Mail (By size)*
- To create a personal folder in Received msgs (P.18-15)

Note

- When adding a new SMS to Drafts, Unsent msgs, or Sent msgs cause the maximum number of allowed message to be exceeded, the oldest SMS is deleted automatically.

Message Lists

From list of *Received msgs* or *Unsent msgs*, view the messages.

1 Press **w**

2 Select *Received msgs* or *Unsent msgs*



Received Message List

Select a message

- In **Message window**, press ***** or **#**
Switch between previous and next window.
- **When pressing Side Keys n b in SMS window**
Press Side Key **n** to enlarge font size by two levels; press Side Key **b** to reduce font size by two levels
- **To view a sent message**
 - ① In Step 2, select *Sent mgs*
 - ② Highlight a message, select *Options* → *View*
- **To view S! Mail details**
In Step 3, highlight a message, select *Options* → *Details*

The following information appears in lists for each Messaging folder.



18 Messaging Folders

- Received Message Indicators
 - ✉: Unread S1 Mail (Priority: High)
 - ✉: Unread S1 Mail (Priority: Standard)
 - ✉: Unread S1 Mail (Priority: Low)
 - ✉: Unread S1 Mail (Priority: High; Video and/or sound inserted)
 - ✉: Unread S1 Mail (Priority: Standard; Video and/or sound inserted)
 - ✉: Unread S1 Mail (Priority: Low; Video and/or sound inserted)
 - ✉: Read S1 Mail (Priority: High)
 - ✉: Read S1 Mail (Priority: Standard)
 - ✉: Read S1 Mail (Priority: Low)
 - ✉: Read S1 Mail (Priority: High; Video and/or sound inserted)
 - ✉: Read S1 Mail (Priority: Standard; Video and/or sound inserted)
 - ✉: Read S1 Mail (Priority: Low; Video and/or sound inserted)

- Draft Message Indicators
 - ✉: Unread reception notification (Priority: High)
 - ✉: Unread reception notification (Priority: Standard)
 - ✉: Unread reception notification (Priority: Low)
 - ✉: Read reception notification (Priority: High)
 - ✉: Read reception notification (Priority: Standard)
 - ✉: Read reception notification (Priority: Low)
 - ✉: Unread SMS
 - ✉: Read SMS
 - ✉: Unread SMS (saved in USIM Card)
 - ✉: Read SMS (saved in USIM Card)
 - ✉: Unread S1 Mail Delivery Report
 - ✉: Read S1 Mail Delivery Report
 - ✉: Unread SMS Delivery Report
 - ✉: Read SMS Delivery Report
 - ✉: Receiving S1 Mail
 - ✉: S1 Mail (Priority: High)
 - ✉: S1 Mail (Priority: Standard)
 - ✉: S1 Mail (Priority: Low)
 - ✉: S1 Mail (Priority: High; Video and/or sound inserted)
 - ✉: S1 Mail (Priority: Standard; Video and/or sound inserted)
 - ✉: S1 Mail (Priority: Low; Video and/or sound inserted)
 - ✉: SMS

18-4

• Unsent Message Indicators

- ✉: SI Mail
- ✉: SI Mail (Video and/or sound inserted)
- ✉: SMS
- ✉: Sending SI Mail

• Sent Message Indicators

- ✉: SI Mail
- ✉: SI Mail (Video and/or sound inserted)
- ✉: SMS
- ✉: SMS (saved in USIM Card)

• Copyrighted file indicators

Attached/inserted copyrighted file indicators

- ⇒: Transferable, Content Key has already been purchased
- ⇒: Transferable, Content Key has not been purchased or otherwise obtained
- ⇒: Nontransferable, Content Key has already been purchased
- ⇒: Nontransferable, Content Key has not been purchased or otherwise obtained

• While Secret Mode is set to *Hide*

Phonebook Secret Mode is set to *On* for message receiver/sender information; only the number or email addresses appear (instead of the name).

Message Window Operations**Saving to Phonebook**

Save the phone number/mail address of the sender/recipient to Phonebook while displaying Message window (Received)/Reception notification window.

- 1 In Message window, select **Options** → **Add to Phonebook** → **Phone or USIM**

2 Select *New* or *Update*

To save as a new entry

Select *New*

To save to an existing entry

① Select *Update*

② Search Phonebook and select an entry (☞P.5-9)

3 Select an icon**4 Save other items (☞P.5-4)**

707SC (E).book 6 ページ 2006年10月26日 木曜日 午前11時19分

18

Messaging Folders

5 Press **w** (Save)

Note

- When an underlined phone number, mail address or URL is highlighted on a message window, *Add to Phonebook* does not appear in *Options*.

Saving as an S! Mail Template

Save received or sent S! Mail as an S! Mail template.

1 In Message window, select *Options* →

Save as S! Mail template

Tip

- If a message appears indicating name duplication
 - Press **c**
 - Press **c** (Select) and enter the name
 - Press **w** (Save)
- When a name entry window has opened
 - Press **c** (Select) and enter the name
 - Press **w** (Save)

Note

- While displaying S! Mail sent from a PC or other devices, *Add to S! Mail template* does not appear in *Options*.

Message Window Options

Item	Description
Play	Play Slide Show, inserted video, or sound (P.17-5).
Retrieved	Receive subsequent part of the notified message.
Reply	Reply to the sender of the reception notification.
Reply to all	Send reply to all entered S! Mail recipients.
Forward	Forward received message.
Download content key	Purchase or acquire Content Key.
Delete	Delete displayed messages.
Save as S! Mail template	Add displayed S! Mail as an S! Mail template (P.18-6).

18-6

707SC (E).book 7 ページ 2006年10月26日 木曜日 午前11時19分

Item	Description
Item copy	Save files attached or inserted in an S! Mail to Data Folder (P.18-14).
Add to Phonebook	Save number or mail address to Phonebook or USIM Card Phonebook (P.18-5).
Details	Confirm S! Mail size, etc.
3D Pict. Disp.	Display a message in 3D Pictogram (P.20-5).
Move to Phone/USIM	Move an SMS received or being sent to handset or USIM Card (P.18-18).

Replaying to a Message

1 Press **w** and select *Received msgs*

2 Highlight message, select *Options* → *Reply*

To reply to all recipients entered in the S! Mail

Highlight message, select *Options* → *Reply to all*

3 Create a message and press **w** (Send)

Tip

- The subject of message replies**
The subject of an S! Mail reply is prefixed with "RE:" automatically.
- While Reply with text is set to On**
Under two line breaks, received message text is automatically entered in Text entry field.

Note

- If free space of the shared memory (P.25-15) on 707SC is less than 464K bytes, you cannot reply to a message. To reply to the message, first delete unnecessary messages.**

18

Messaging Folders

18-7

707SC (E).book 8 ページ 2006年10月26日 木曜日 午前11時19分

18

Messaging Folders

Forwarding a Message

Forward a received or sent message to another recipient.

1 Press **w** and select *Received msgs* or *Sent msgs*

2 Highlight message, select *Options* → *Forward*

3 Create a message and press **w** (Send)

Tip

- The subject of forwarded messages**
The subject of a forwarded S! Mail is prefixed with "FW:" automatically.

Note

- If free space of the shared memory (P25-15) on 707SC is less than 464K bytes, you cannot forward a message. To forward the message, first delete unnecessary messages.

Sending from Drafts

1 Press **w** and select *Drafts*

2 Highlight the message and press **w** (Send)

When *Send* does not appear

① Press **c** (Edit)

② Enter address and press **w** (Send)

18-8

Tip

• To view the contents of multiple messages or S! Mail templates while selecting them

- ① Repeat Steps 1 and 2
- ② Select *Options* → *Delete* → *Multiple*
- ③ Highlight message or S! Mail template, select *Options* → *View*

• To collectively select/deselect multiple messages or S! Mail templates

- ① Repeat Steps 1 and 2
- ② Select *Options* → *Delete* → *Multiple*
- ③ Select *Options* → *Mark all* or *Unmark all*

• To collectively select/deselect multiple SMS templates

- ① Perform Steps 1 and 2
- ② Select *Options* → *Delete* → *Multiple*
- ③ Press ☐ (Mark all) or ☐ (Unmark all)

Note

- While highlighting an S! Mail template designated as default, *Delete* does not appear in *Options*.

Designating & Deleting a Mailbox

- 1 Press **w** to select *Settings* → *Delete all*
- 2 Check a mailbox to delete
- 3 Repeat Step 2 to check all target mailboxes
- 4 Press **w** (Delete)
- 5 Enter Phone Password, and press **c** (Confirm) to select *Yes*

707SC (E).book 11 ページ 2006年10月26日 木曜日 午前11時19分

1 Press **w**

2 Select a mailbox

To delete an S! Mail or SMS template
Select *Templates* → *S! Mail templates* or *SMS templates*

3 Select *Options* → *Delete* → *All*

4 Enter Phone Password, press **c** (Confirm) and select *Yes*

Deleting All Messages from a Mailbox

Delete saved templates all at once.

Note

- Personal folders cannot be deleted by this operation. To delete Personal folders, perform the following operations: *Messaging* → *Settings* → *Delete all*
- You cannot delete the S! Mail template designated as the default.

18

Messaging Folders

18-11

Linked Information

If Message window or Notification details window contains an underlined number, mail address, or URL; save it to Phonebook or use it to place a call, send messages, save bookmark, or access the site.

As linked information, following number of characters can be recognized for each S! Mail Font size setting:
Maximum of 45 lines (1,035 characters) for *Standard*, 54 lines (1,026 characters) for *Large*, and 41 lines (1,025 characters) for *Small*.

☛ Saving to Phonebook

- 1 In Message window, select a phone number, mail address, or URL and select *Add to phonebook* → *Phone* or *USIM*
- 2 Select saving method to create a new entry or update an existing entry
 - To save as a new entry
Select *New*
 - To save to an existing entry
 - ① Select *Update*
 - ② Search Phonebook and select an entry (☞ P.5-9)
- 3 Select an icon
- 4 Save other items (☞ P.5-4)
- 5 Press *w* (Save)

18-12

Note

- When you select a URL, you cannot select *USIM* in Step 1.

☛ Saving as a Bookmark

- 1 In Message window, select a URL and select *Bookmark*
- 2 Press *c* (Select) to enter a subject and press *w* (Save)

☛ Initiating a Call, Sending a Message, or Accessing the Web

Use phone number/mail address/URL information in Message window or Notification details window.

- 1 In Message window, take procedures down below

707SC (E).book 13 ページ 2006年10月26日 木曜日 午前11時19分

To initiate a Voice Call

Select a phone number and select *Voice call*

To initiate a Video Call

Select a phone number and select *Video call*

To send a message

① Select a phone number or mail address and select *Create msg*

② Create a message and press **w** (Send)

To access the Web

Select URL and select *Go to URL*

Tip

- **Operations in Notification details window**

Phone number/mail address/URL information except in *From* (other party's phone number) can be used.

Using an Attachment

Viewing an Attachment

Open images/play sounds attached to S! Mail. For vCard/ vCalendar, open Details to see contents.

Select a file and select *Open file*

Tip

- **To save a file in Data Folder directly**

In Message window, select a file → *Save items*

- **To save vCard/vCalendar to Phonebook/Calendar directly**

In Message window, select a file → *Register to Phonebook* or *Register to Calendar*

- **To register vCard/vCalendar to Phonebook/Calendar after viewing**

① Perform Step 1

② Press **c** (Register)

18

Messaging Folders

18-13

707SC (E).book 14 ページ 2006年10月26日 木曜日 午前11時19分

18

Messaging Folders

When a file requiring Content Key is attached

If you perform Step 1, a message appears and you cannot open the file. To view the file, select *Save items* in Step 1 to save and purchase/obtain Content Key from Data Folder (P.11-13).

When an attachment has a restriction (only one time playback allowed)

When you perform Step 1, a message appears notifying you that only one time playback is allowed).

Saving Attachments to Data Folder

Save S! Mail attachment/inserted files to 707SC.

1 In Message window, select *Options* → *Save items*

2 Perform file selection operation

To select and save one file

1 Highlight a file

2 Press **c** (Select) or select *Options* → *Selected*

To select and save multiple files

1 Select *Options* → *Multiple*

2 Check the files to save

3 Repeat 2 to check all target files

4 Press **w** (Save)

To save all files

Select *Options* → *All*

Tip

To select or deselect multiple files at once

1 In Step 2, select *Options* → *Multiple*

2 Press **o** (Mark all) or **o** (Unmark all)

When a popup message appears indicating the file name is a duplicate while saving

1 Press **c**

2 Press **c** (Select) and change the file name

3 Press **w** (Save)

Note

When a file is highlighted in Message window, *Save items* does not appear in *Options*.

18-14

Managing Folders

Create personal folders in Received msgs; organize and save in the folders for each mail types. Set own security setting for personal folders.

Create Folder

- 1 Press **w** and select *Received msgs*
- 2 Select *Options* → *Create folder*
- 3 Enter a name

Edit Folder

Change name for personal folders.

- 1 Press **w** and select *Received msgs*
- 2 Select *Options* → *Edit folder*
- 3 Enter a name

Security ON/OFF

Set Security setting for a personal folder; require Phone Password entry to check messages in the personal folder.

- 1 Press **w** and select *Received msgs*
- 2 Highlight the personal folder, select *Options* → *Security ON/OFF*
- 3 Enter Phone Password and press **c** (Confirm), then select *Yes*

Tip

- **Folder with Security setting**
 appears indicating Security setting has been selected.
- **With Security settings On**
Select personal folders; Phone Password entry window appears. Enter Phone Password and press **c** ; Message list window in the personal folder appears.

707SC (E).book 16 ページ 2006年10月26日 木曜日 午前11時19分

Messaging Folders

18

Moving Messages

1 Press **w** and select *Received msgs*
To move messages in personal folder to another personal folder
Select a personal folder

2 Highlight message, select *Options* → *Move this*

3 Select the destination folder
To resent messages to *Received msgs*
Select *Received msgs*

Delete Folder

1 Press **w** and select *Received msgs*

2 Highlight the personal folder, select *Options* → *Delete folder* → *Yes*
To select personal folder with Security setting *On*
Enter Phone Password and press **c** (Confirm)

3 Select *Yes*

From Message List

Saving to Phonebook

1 Press **w** and select *Received msgs*, *Unsent msgs* or *Sent msgs*

2 Highlight message, select *Options* → *Add to Phonebook*

18-16

707SC(E).book 17 ページ 2006年10月26日 木曜日 午前11時19分

3 Select a phone number or mail address and select *Phone* or *USIM*

4 Select saving method to create a new entry or update an existing entry

To save as a new entry

Select *New*

To save to an existing entry

① Select *Update*

② Search Phonebook and select an entry (P.5-9)

5 Select an icon

6 Enter additional items as required (P.5-4)

7 Press **W** (Save)

Sorting Messages

Available sorting types to display vary by Message list window of the mailbox.

1 In Message list window, select *Options* → *Sort by*

2 Select an item

To sort in descending order of date

Select *Date*

To sort by sender

Select *Sender*

To sort by recipient

Select *Recipient*

To display read and unread messages separately

Select *Unread to read* or *Read to unread*

18

Messaging Folders

18-17

707SC (E).book 18 ページ 2006年10月26日 木曜日 午前11時19分

18

Messaging folders

To display messages separately by message type

Select *Message type*

To sort by subject

Select *Subject*

To sort in descending order of message size

Select *Size*

Tip

- **Listing order when selecting *Message type***
Listed in the order of SMS → SI Mail (Including message notification) → SMS saved in USIM Card.
- **Listing order when selecting *Sender, Recipient, or Subject***
Listed in the order of single-byte symbol → single-byte number → single-byte alphabet → single-byte Katakana → double-byte symbol → double-byte Hiragana → double-byte Katakana → Kanji → double-byte number → double-byte alphabet. But if *Subject* is selected, messages with no subject are listed at the top.

Move to Phone/Move to USIM

Move received SMS or sent SMS.
Save up to ten messages to USIM Card.

1 Press **w** and select *Received msgs* or *Sent msgs*

2 Move messages

To move from USIM Card to 707SC

① Highlight an SMS saved on USIM Card

② Select *Options* → *Move to phone*

To move from 707SC to USIM Card

① Highlight an SMS saved in USIM Card

② Select *Options* → *Move to USIM*

18-18

Tip• **Message List SMS Indicators**

- : Unread SMS
- : Read SMS
- : Unread SMS (USIM Card)
- : Read SMS (USIM Card)
- : Sent SMS
- : Sent SMS (USIM Card)

• **To move received SMS in personal folder to USIM Card**

A confirmation message appears. Select **Yes** to complete the move.

Saving an S! Mail Template

For more information about saving an SMS template, see "SMS Templates" (P.4-16).

1 Press **w** and select **Templates** →

S! Mail templates

2 Select **Options** → **Add new**

3 Select **Subject field or Text entry field** and enter a subject or message

4 Press **w** (**Save**)

Tip• **To view an S! Mail template being created**

In Step 3, select **Options** → **Preview**

• **To display and view an S! Mail template**

In Step 2, highlight S! Mail template, select **Options** → **View**

• **To modify an S! Mail template**

- ① In Step 2, select a registered S! Mail template and perform modification operation
- ② Press **w** (**Save**)

• **To delete an S! Mail template**

Perform the same operation as for a message (P.18-9).

• **To copy, cut, or paste characters (P.4-13)**• **To use contents of an SMS template or Phonebook (P.4-11)****18**

Messaging Folders

18-19

- **To change the font size of characters being entered**
① In Step 3, select Text entry field, select *Options* → *Font Size*
② Select any of *Small*, *Standard*, or *Large*
- **To set/release the prediction entry function (P.4-14)**
- **Setting Slide Show/inserting a file**
① In Step 3, select *Options* → *Insert or Create & Insert*
② Perform setting, attaching, or inserting operation (P.17-12, 17-17, 17-18)
- **To view the text in 3D Pictogram**
In Step 3, highlight Text entry field, select *Options* → *3D Pict. Disp.*

Message List Options

Item	Description
Retrieve	Retrieve complete S! Mail from the Server.
Reply	Reply to the sender (P.18-7).
Reply to all	Send reply to all entered S! Mail recipients (P.18-7).
Forward	Forward received message (P.18-8).

Item	Description
Move this	Move received mails to a personal folder (P.18-16).
Create folder	Create a personal folder (P.18-15).
Edit folder	Change personal folder name (P.18-15).
Security On/Off	With Security setting <i>On</i> , enter Phone Password to check mails in a personal folder (P.18-15).
Delete folder	Delete a personal folder (P.18-16).
View	Open sent messages or S! Mail templates (P.18-3, 18-19).
Edit	Edit unsent message (P.18-8).
Delete	Delete messages or templates (P.18-9, 18-11).
Move to phone/ Move to USIM	Move SMS between 707SC and USIM Card (P.18-18).
Sort by	Sort messages (P.18-17).
Add to Phonebook	Save number or mail address to Phonebook or USIM Card Phonebook (P.18-16).
Details	Check memory status in a personal folder or confirm S! Mail size, etc.

Item	Description
Cancel retrieving	Stop message retrieval from Mail Server.
Send	Send message using S1 Mail template or SMS template (P.17-14).
Add new	Save a new S1 Mail template or SMS template (P.4-16, 18-19).

 
 
Messaging Folders

18


18-21




707SC(E).book 22 ページ 2006年10月26日 木曜日 午前11時19分



18-22

 

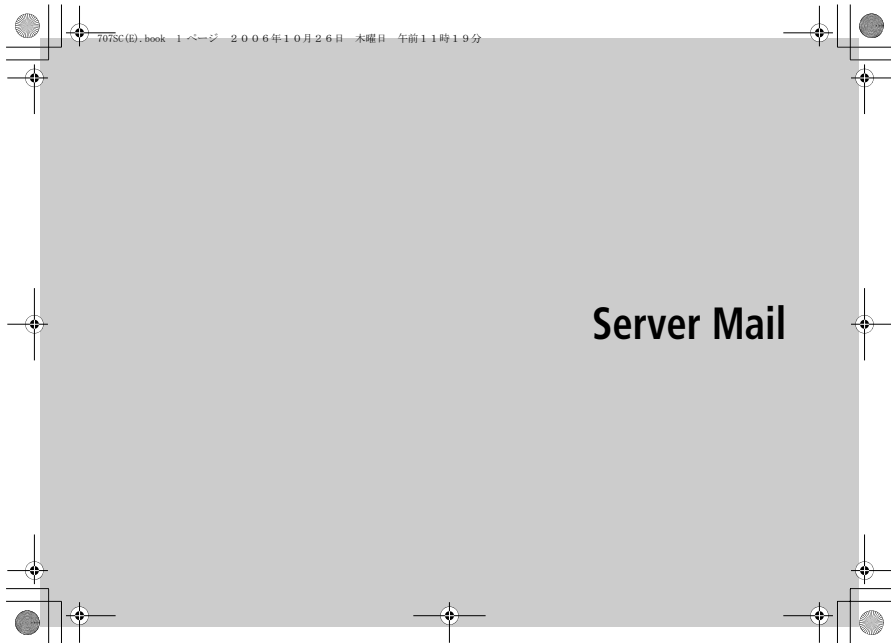 

707SC (E).book 2 ページ 2006年10月26日 木曜日 午前11時19分

19

Server Mail

Message List

View messages stored on the Mail Server in a list form.
Retrieve, forward, or delete messages.

Acquire Mail List

1 Press **w** and select *Server mail box*

2 Select *Acquire Mail List*

Tip

- To check Mail Server usage state
 - ① Select *Server mail volume* in Step 2
 - ② Press **c** (Update) and select *Yes* to update to the latest information

Download

1 Press **w** and select *Server mail box*

2 Select *Mail List*

3 Highlight the message, select *Options*
→ *Download*

Tip

- To receive all messages from Message list window
In Step 2, select *Retrieve All Mail*

19-2

Delete

- 1 Press **w** and select *Server mail box*
- 2 Select *Mail List*
- 3 Delete unwanted messages

To delete one message

- ① Highlight a message
- ② Select *Options* → *Delete* → *Selected* → *Yes*

To delete multiple messages

- ① Select *Options* → *Delete* → *Multiple*
- ② Check a message to delete
- ③ Repeat ② to check all target messages to delete
- ④ Press **w** (Delete) and go to ⑥ if unmarking all
- ⑤ Enter Phone Password and press **c** (Confirm)
- ⑥ Select *Yes*

To delete all messages

- ① Select *Options* → *Delete* → *All*
- ② Enter Phone Password, press **c** (Confirm) and select *Yes*

Tip

- To select/deselect multiple messages at once

- ① Perform Steps 1 and 2
- ② Select *Options* → *Delete* → *Multiple*
- ③ Select *Options* → *Mark all* or *Unmark all*

Remote Forward

Forward a message from the Mail Server to another address. Contents except the address are sent without modification.

- 1 Press **w** and select *Server mail box*
- 2 Select *Mail List*
- 3 Highlight message, select *Options* → *Remote Forward*

4 Enter an address

To directly enter an address

- ① Select Entry field and select *Enter Recipient*
- ② Enter a phone number or mail address

To enter an address using a log

Select Entry field and select a displayed log entry

To select an address from Phonebook

- ① Select Entry field and select *From Phonebook*
- ② Search Phonebook and select an entry (P.5-9)
- ③ Highlight a phone number or mail address and press **w** (Select)

 
To select an address from Category of Phonebook

- ① Select Entry field and select *From Category*
- ② Select a Category, with/without an Address selection window, highlight an address and press **w** (Select)

5 Select *Options* → *Send*

Tip

- **Message subject**
The subject of a forwarded message is prefixed with "FW:" automatically.
- **To set other sending options for a message being created**
(1) In Step 5, select *Options* → *Sending options*
(2) Select an item and perform operations to set (P.20-2)
(3) Press **W** (Apply)
- **To delete an address**
In Step 5, highlight a recipient, select *Options* → *Remove*
- **To change the address type to To, Cc, or Bcc**
(1) In Step 5, highlight a recipient, select *Options* → *Change recipients*
(2) Select any of *To*, *Cc*, or *Bcc*





19-5







  707SC (E).book 6 ページ 2006年10月26日 木曜日 午前11時19分



19-6

 

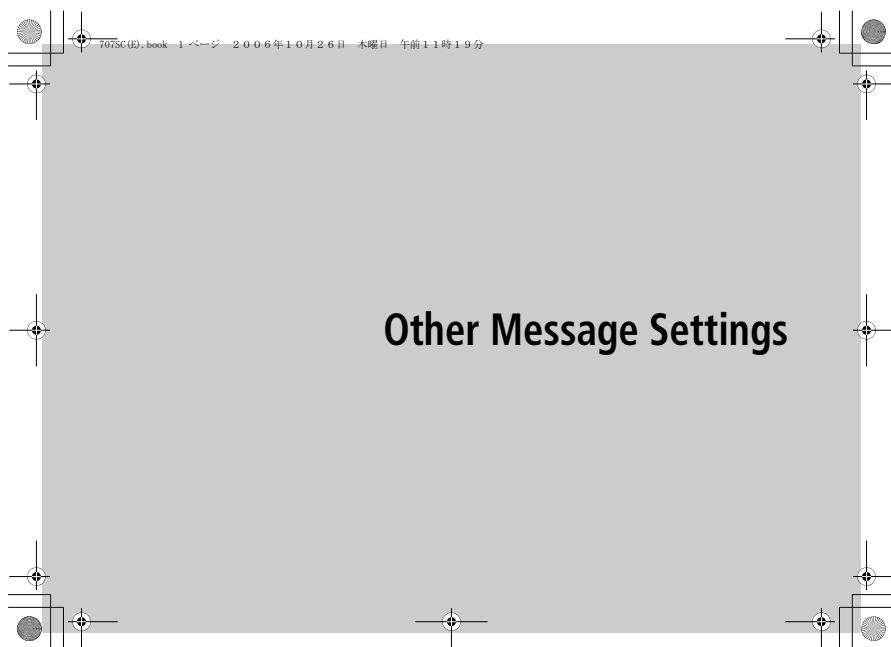 

707SC (B).book 1 ページ 2006年10月26日 木曜日 午前11時19分

Other Message Settings

Other Message Settings

- 20-2

- Check *Request delivery report*

3 Press **w** (Save)

Tip

- **When the retention set in *Expiration* expires**
The S! Mail is deleted automatically from the Mail Server.
- **When retention is set in *Delivery***
When the specified time has elapsed, the S! Mail is sent from the Mail Server.
- **When *Request delivery report* is checked**
When an S! Mail is sent from the Mail Server, a distribution report is sent to your handset.

Receiving Settings

Default Setting ■ Home network: Manual
■ Roaming network: Manual

Set options related to receiving S! Mail.

1 Press **w** and select **Settings** →
S! Mail → **Receiving options**

2 Select an item and set

To set the receiving method to use in Japan

- ① Select **Home network**
- ② Select an item and press **c**

To set the receiving method while overseas

- ① Select **Roaming network**
- ② Select an item and press **c**

3 Press **w** (Save)

Tip

- The contents of **Home network** and **Roaming network** are:
Auto download: Receive automatically.
Manual: Receive only reception notification.

20

Other Message Settings

20-3

707SC (E).book 4 ページ 2006年10月26日 木曜日 午前11時19分

20

Other Message Settings

Message Size

Default Setting 300KB

Deactivate sending messages exceeding the specified size.

1

Press **w** and select **Settings** →
S! Mail → **Message size**

2

Select an item and press **c** (Save)

Default Style

Default Setting Font color: Black Font size: Large
Background color: White
Slide interval: Custom time (3 seconds)

Set font color, font style, background color, and Slide Show time intervals. Alternatively, change display settings for each S! Mail sent (P.17-13).

1

Press **w** and select **Settings** →
S! Mail → **Default style**

2

Set options

Font color

① Select *Font color*
② Use **a** to highlight a color and press **c**

To set a font size

① Select *Font Size*
② Select an item and press **c**

Background color

① Select *Background color*
② Use **a** to highlight a color and press **c**

Slide Show time intervals

① Select *Slide interval*
② Select an item, with *Custom time*, enter a time
③ Press **c**

3

Press **w** (Save)

SMS Settings

Default Setting ■ Delivery report: Unchecked
■ Character support: Automatic

Set options related to sending SMS. Alternatively, set options for each SMS to send (P.17-12).

1 Press **w** and select **Settings** → **SMS**

2 Set options

Request a delivery report

Check *Delivery report*

Change the character set of fonts used in the text

- ① Select *Character support*
- ② Select an item and press **c**

3 Press **w** (Save)

Tip

■ When *Delivery report* is checked

When an SMS is sent from the Mail Server, a distribution report is sent to your handset.

3D Pictogram Settings

Default Setting ■ Display type: New mails only
■ Background: Pattern 1
■ Running Speed: Normal

3D Pictogram is a function that allows you to display in 3D animation for words, pictograms, or emoticons in message text.

Activate or deactivate 3D Pictogram or set the background color and display speed.

1 Press **w** and select **Settings** → **3D pictogram**

20

Other Message Settings

20-5

7075C (E).book 6 ページ 2006年10月26日 木曜日 午前11時19分

20

Other Message Settings

2 Set options

Whether to use 3D Pictogram

- ① Select *Display type*
- ② Select an item and press **c** (Save)

Background pattern and font colors

- ① Select *Background*
- ② Press **s**, display the pattern and press **c** (Save)

To set a display speed

- ① Select *Running speed*
- ② Select an item and press **c** (Save)

Tip

- **The contents of *Display type* are:**
Always: Use 3D Pictogram when viewing every message.
New mails only: Use 3D Pictogram only when viewing an unread message received.
OFF: Not use 3D Pictogram.

Note

- Such as file-attached/Slide Show set S! Mail may not appear properly in 3D Pictogram.

Reply with text

Default Setting = Off

 
When creating reply message, set to include received message text.

- 1 Press **w** and select *Settings* → *Reply with text*
- 2 Select an item and press **c** (Save)

Tip


- **The contents of *Reply with text* are:**
On: Reply with text including received message text.
Off: Reply with text not including received message text.

20-6

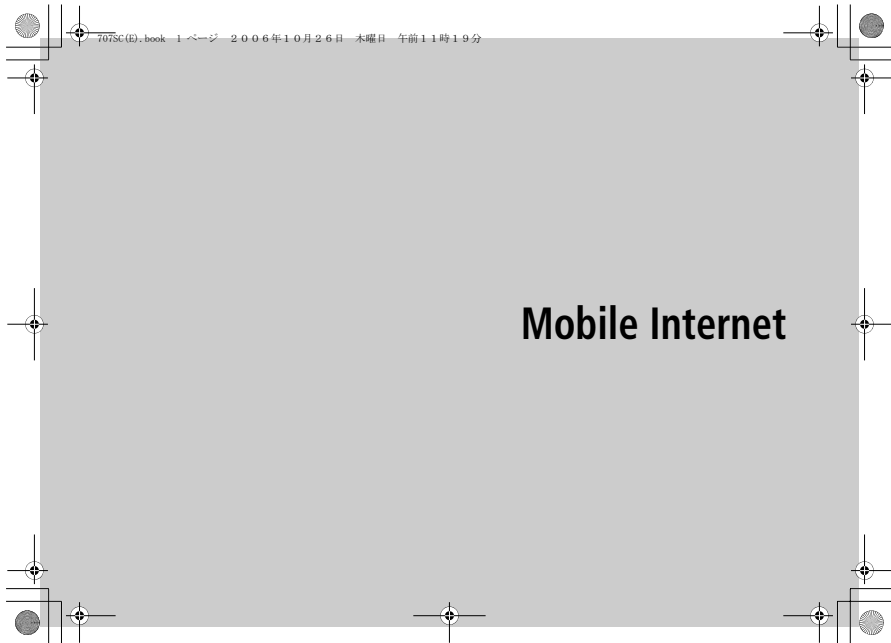

7075C00.book 1 ページ 2006年10月26日 木曜日 午前11時19分

 Mobile Internet

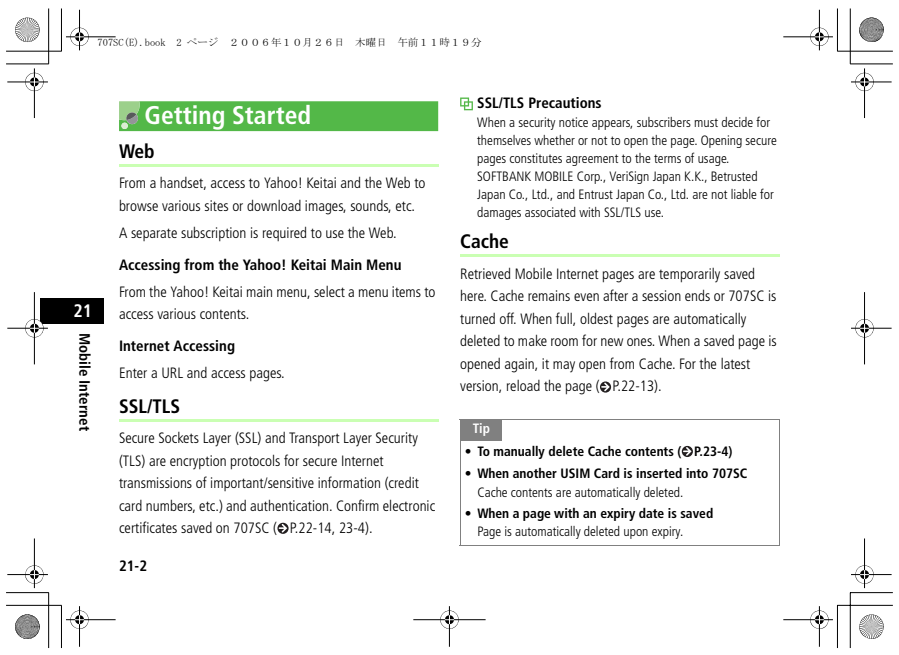

Getting Started

Web

From a handset, access to Yahoo! Keitai and the Web to browse various sites or download images, sounds, etc.
A separate subscription is required to use the Web.

Accessing from the Yahoo! Keitai Main Menu
From the Yahoo! Keitai main menu, select a menu items to access various contents.

Internet Accessing
Enter a URL and access pages.

 
SSL/TLS
Secure Sockets Layer (SSL) and Transport Layer Security (TLS) are encryption protocols for secure Internet transmissions of important/sensitive information (credit card numbers, etc.) and authentication. Confirm electronic certificates saved on 7075C (P.22-14, 23-4).

SSL/TLS Precautions
When a security notice appears, subscribers must decide for themselves whether or not to open the page. Opening secure pages constitutes agreement to the terms of usage.
SOFTBANK MOBILE Corp., VeriSign Japan K.K., Betrustrusted Japan Co., Ltd., and Entrust Japan Co., Ltd. are not liable for damages associated with SSL/TLS use.

Cache
Retrieved Mobile Internet pages are temporarily saved here. Cache remains even after a session ends or 7075C is turned off. When full, oldest pages are automatically deleted to make room for new ones. When a saved page is opened again, it may open from Cache. For the latest version, reload the page (P.22-13).


Tip

- **To manually delete Cache contents (P.23-4)**
- **When another USIM Card is inserted into 7075C**
Cache contents are automatically deleted.
- **When a page with an expiry date is saved**
Page is automatically deleted upon expiry.

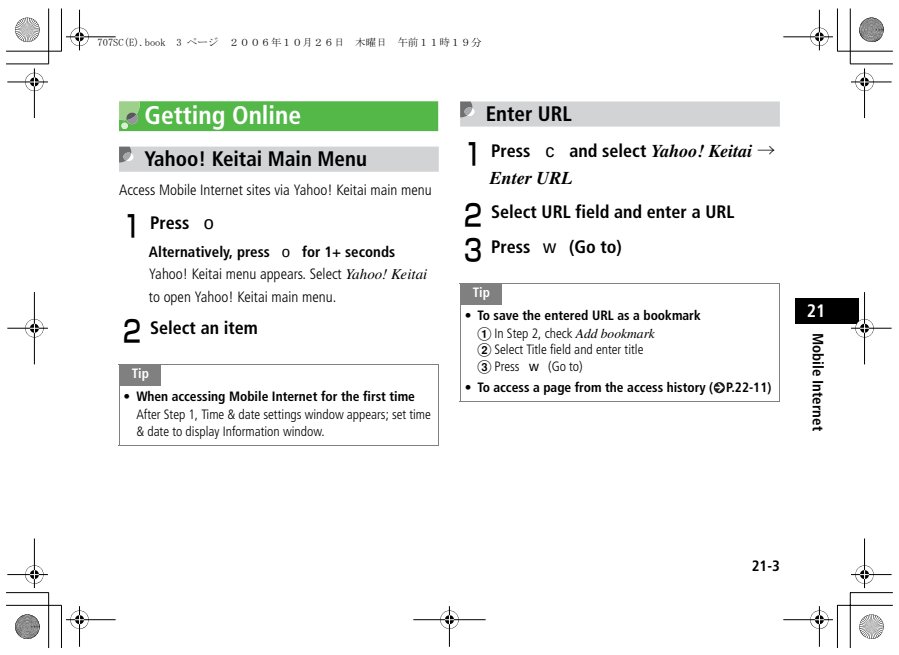

Operations on pages are as follows.

 Scroll bar appears when page content extends beyond current view.



d / r : Scroll down by one line

When a horizontal scroll bar appears, use `r` to scroll right

u / l : Scroll up by one line

When a horizontal scroll bar appears, use **⬅** to scroll left

Side Key **b** : Scroll page down by multiple lines

Side Key n : Scroll page up by multiple lines

When selecting an item such as link, move cursor to that item.



d / r : When items are listed vertically, move cursor down

When the page is already scrolled to the bottom, alternatively, press Side Key **b** to move cursor down

u / I : When items are listed vertically, move cursor
up

 
When the page is already scrolled to the top, alternatively, press Side Key **n** to move cursor up

Tip

- **When items are listed in the same row**
Press **s** to move cursor right or left.
- **When you move cursor**
The selected item is highlighted or enclosed in a frame of dotted lines if it is link to another page.

Tip

- **If w (Back)/ C is pressed with no previous page displayed**
A message appears asking whether to terminate the Web connection; select **Yes** to terminate the Web connection.

Previous or Next Page

Highlight link, etc. and press **c** : Display the next page

Alternatively, select *Options* → *Forward* to change the window

w (Back) or **C** : Display the previous page

Text Entry/Item Selection

An information window may show fields and items given below.

**1 Text entry field**

Enter data, certification passwords, etc.; highlight Text entry field, press **c** and enter text

707SC (E).book 6 ページ 2006年10月26日 木曜日 午前11時19分

21

Mobile Internet

2 Radio button

Select only one of the selection items. Highlight an item with  and press **c** to select it (Appearing as ).

3 Menu field

Display a menu and select an item. Highlight a menu, press **c** to display the menu. Use **j** to highlight the item and press **c** to select the item. When multiple items can be selected for Menu field, press **C** to cancel multiple selections.

4 Check box

Select any number of selection items. Highlight an item with  and press **c** to select it (Appearing as ). To deselect a selected item, highlight  and press **c**.

5 Command button

Perform operations assigned to a button such as *send* or *reset*. Highlight a command button and press **c** to execute the operation.

Note

- The appearance of text entry or item selection varies by page opened.

Using Linked Info

Use phone numbers, mail addresses, and URLs contained on an page to initiate calls, create and send messages, and access other pages.

Available phone numbers, mail addresses, and URLs are underlined.

21-6

707SC (E).book 7 ページ 2006年10月26日 木曜日 午前11時19分

Using Page Links

1 Open a page containing linked info

2 Use the available links

To initiate a Voice Call

Select a phone number and select *Voice Call*

To create and send messages

① Select a phone number or mail address and select *Create message*

② Create messages and press w (Send)

To access another page

Select a URL

Saving to Phonebook

1 Open a page with linked number or address

2 Select a number or address and select *Save Number or Save Address* → *Phone or USIM*

3 Create a new entry or update an existing entry

To save as a new entry

Select *New*

To add to an existing entry

① Select *Update*

② Search for an existing entry to modify (P.5-9)

4 Select an icon

5 Save the item (P.5-4)

6 Press w (Save)

 
 
21

Mobile Internet


21-7




707SC (E).book 8 ページ 2006年10月26日 木曜日 午前11時19分



21-8

 

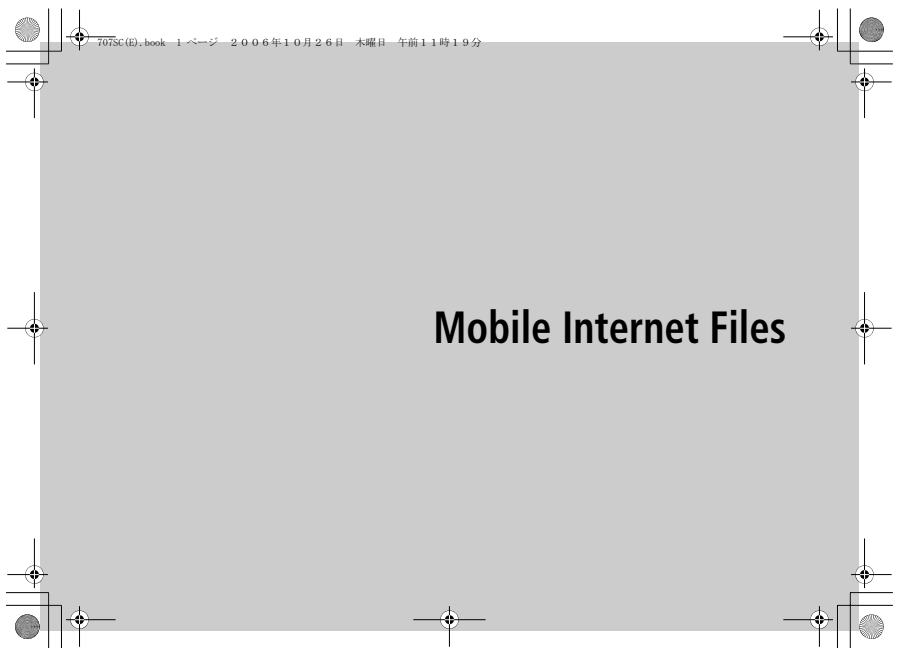 

707SC (B).book 1 ページ 2006年10月26日 木曜日 午前11時19分

Mobile Internet Files

707SC (E).book 2 ページ 2006年10月26日 木曜日 午前11時19分

22

Mobile Internet Files

Using Image Files

Saving Images to Data Folder

Saving Linked Images

Download and save images from page links.

1 Open a page containing an image link

2 Select link

3 Press **c**

When details appear

Press **c**

4 Press **C**

To open the image

Press **c** (Launch)

To set saved image as Wallpaper

Press **w** (Set) and perform Step 3 in "Wallpaper"

(P.22-3)

22-2

Saving Page Images

Save a page image to Data Folder.

1 Open a page with an image

2 Select *Options* → *Save* → *Save image*

3 Highlight the image and press **c** (Save)

4 Press **C**

To open the image

Press **c** (Launch)

To set saved image as Wallpaper

Press **w** (Set) and perform Step 3 in "Wallpaper"

(P.22-3)

5 Press **C** to end the operation

To save another image

Repeat Step 3

Tip**• If the same file name exists**

- ① Press **c** (Edit) and change the file name
- ② Press **w** (Save)

• Viewing images

- Press **w** (Set as) to set Wallpaper. (P.22-3).
- Press **c** (Zoom) to enlarge or reduce the image. Press **o** (Details) to view image details.

• When SVG-T/SWF format file is saved

- Options* appears on the save image confirmation window, then select *Options* and execute various operations (P.11-8).

Wallpaper

Set a saved image as Wallpaper.

1 Open image to set as Wallpaper
(P.22-2)**2 Press w (Set as)****3 Select an item****To set as Wallpaper**

- ① Select *Wallpaper*
- ② Press **c** (Set)

To set as incoming image for Phonebook entries

- ① Select *Caller ID*
- ② Search Phonebook and select an entry (P.5-9)
- ③ Press **c** (Set)

To set as outgoing image

- ① Select *TV call Still picture*
- ② Press **c** (Save)

707SC (E).book 4 ページ 2006年10月26日 木曜日 午前11時19分

Note

- For SVG-T/SWF format file, *Settings* does not appear. For Wallpaper, open Data Folder and open an image (P.11-8).

Using Sound Files

Playing Sound

Play sounds from page links.

1 Open a page containing link

2 Select link to sound

Saving Sound Files to Data Folder

Download sound files from page links and save them to Data Folder.

1 Open a page containing a sound link

2 Select link

3 Press **c**
When details appear
Press **c**

4 Select *Exit*
To play sound
Select *Launch*

22

Mobile Internet Files

22-4

707SC (E).book 6 ページ 2006年10月26日 木曜日 午前11時19分

22

Mobile Internet Files

Using Video Files

Playing a Video

Play video from a page link.

1 Open a page containing a video link

2 Select link

Saving Videos to Data Folder

Download and save videos from page links.

1 Open a page containing a video link

2 Select link

3 Press **c**
When details appear
Press **c**

4 Press **C**

22-6

To play video
Press **c** (Launch)

To set saved video as Ringtone
Press **w** (Set as) and perform Step 3 in "Setting Video File as Ringtone" (P.11-11)

Tip

If same file name exists

① Press **c** (Edit) and change the file name

② Press **w** (Save)

To play video
Press **w** (Set as) and set saved video as Ringtone (P.11-11). For other operations, refer to *Media Player* (P.10-9).

Options

The items listed vary by the window status.

Item	Description
Resolution	Set video display size while playing or paused.
View bookmark	Access a page containing a streaming play link saved as a bookmark.

Item	Description
View history	Access a page containing a streaming play link already accessed.
Details	Set video display size while playing or paused.
Player settings	Select settings related to Media Player (P.10-11).

Streaming

Enjoy audio visual media while it downloads. Access compatible files via page links, etc. Downloaded content cannot be saved.

1 Open a page containing a streaming video link

2 Select link

Tip

- **To stream files**
Operate the same as *Media Player* (P.10-3, 10-9).

Note

- **Even when use of streaming is temporarily stopped, communications continue, so packet communication fees continue.**

Options

The items listed vary by the window status.

Item	Description
Resolution	Set video display size while playing or paused.
Add bookmark	During accessing, save a page containing a streaming play link as a bookmark.
View bookmark	Access a page containing a streaming play link saved as a bookmark.
View history	Access a page containing a streaming play link already accessed.

22 Mobile Internet Files

- ## 2 Select a page

Deleting a Saved Page

1 Press **c** and select **Yahoo! Keitai** → **Saved pages**

2 Delete as required

To delete one page

- 1 Highlight a page
- 2 Select **Options** → **Delete** → **Selected** → **Yes**

To delete multiple pages

- 1 Select **Options** → **Delete** → **Multiple**
- 2 Check a page to delete
- 3 Repeat Step 2 to check all target pages
- 4 Press **w** (Delete) and select **Yes**

To delete all pages

- 1 Select **Options** → **Delete** → **All**
- 2 Enter Phone Password, press **w** (OK) and select **Yes**

Tip

- To select/deselect multiple pages at once

- 1 In Step 2, select **Options** → **Delete** → **Multiple**
- 2 Select **Options** → **Selected/All**

Saving Bookmarks

Saving an Address as a Bookmark

By saving the Web addresses (URLs) of frequently used pages as bookmarks, access those pages. Up to 30 URLs can be saved as bookmarks.

1 Open a page

2 Select **Options** → **Bookmarks** → **Add to Bookmarks**

7075C(E).book 10 ページ 2006年10月26日 木曜日 午前11時19分

22

Mobile Internet Files

3 Check the title and URL

To change the title/URL

① Select Title or URL field

② Change a title or URL

4 Press w (Save)

Tip

To manually enter and save a bookmark

① Press c and select Yahoo! Keitai → Bookmarks

② Select Options → Add bookmark

③ Select Subject field and enter a subject

④ Select URL field and enter a URL

⑤ Press w (Save)

Opening a Bookmark

1 Press c and select Yahoo! Keitai → Bookmarks

2 Select a bookmark

Tip

To send a bookmark URL in a message

① In Step 2, highlight a bookmark, select Options → Send URL

② Create a message and press w (Send)

Editing Bookmarks

Modify the title or URL of bookmark.

1 Press c and select Yahoo! Keitai → Bookmarks

2 Highlight a bookmark, select Options → Edit bookmark

3 Select Title field or URL field, and modify the title or URL

4 Press w (Save)

22-10

Deleting a Bookmark

1 Press **c** and select **Yahoo! Keitai** → **Bookmarks**

2 Delete as required

To delete one bookmark

- 1 Highlight a bookmark
- 2 Select **Options** → **Delete** → **Selected** → **Yes**

To delete multiple bookmarks

- 1 Select **Options** → **Delete** → **Multiple**
- 2 Check a bookmark to delete
- 3 Repeat 2 to check all target bookmarks
- 4 Press **w** (Delete) and select **Yes**

To delete all bookmarks

- 1 Select **Options** → **Delete** → **All**
- 2 Enter Phone Password, press **w** (OK) and select **Yes**

Tip

• To select/deselect multiple bookmarks at once

- 1 In Step 2, select **Options** → **Delete** → **Multiple**
- 2 Select **Options** → **Selected/All**

History

The history records up to 50 URLs of accessed pages. Using the history, access pages previously accessed.

1 Press **c** and select **Yahoo! Keitai** → **History**

 
2 Use the history

To access a page from the history URL

Select URL

To delete a history URL

- 1 Highlight the URL
- 2 Select **Options** → **Delete** → **Selected** → **Yes**

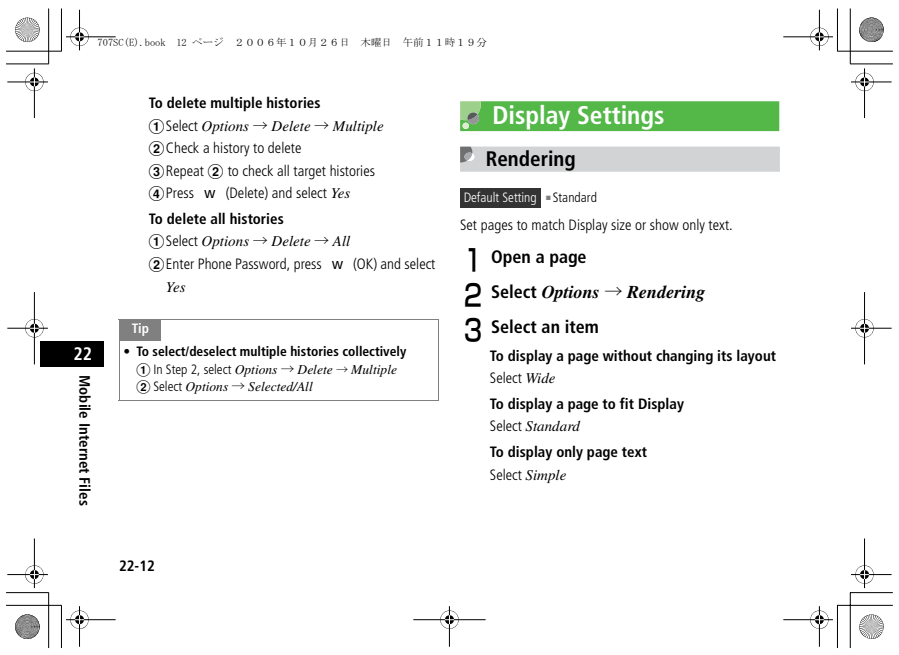

To delete multiple histories

- ① Select *Options* → *Delete* → *Multiple*
- ② Check a history to delete
- ③ Repeat ② to check all target histories
- ④ Press **w** (Delete) and select *Yes*

To delete all histories

- ① Select *Options* → *Delete* → *All*
- ② Enter Phone Password, press **w** (OK) and select *Yes*

Tip

- To select/deselect multiple histories collectively
 - ① In Step 2, select *Options* → *Delete* → *Multiple*
 - ② Select *Options* → *Selected/All*

Display Settings

Rendering

Default Setting = Standard

Set pages to match Display size or show only text.

1 Open a page

2 Select *Options* → *Rendering*

3 Select an item

To display a page without changing its layout

Select *Wide*

To display a page to fit Display

Select *Standard*

To display only page text

Select *Simple*

707SC(E).book 13 ページ 2006年10月26日 木曜日 午前11時19分

Search Text

1 Display information window

2 Select *Options* → *Search text*

3 Select Text entry field and enter the word

4 Select the searching direction and press *w* (Search)

Copy Text

1 Display information window

2 Select *Options* → *Copy Text*

3 In a text entry window, select *Options* → *Copy*

4 Use *a* to move cursor on the first character and press *c* (Start)

To copy all texts in text entry window

Press *o* (All) to copy

5 Use *a* to specify the range and press *c* (End)

Reload

1 Open a page

2 Select *Options* → *Reload*

22

Mobile Internet Files

22-13

707SC (E).book 14 ページ 2006年10月26日 木曜日 午前11時19分

Page Details

View current page information including URL and page title.

1 Open a page

2 Select *Options* → *Browser setting* → *Page details*

Send URL

Attach the URL of the current page to a message and send it.

1 Open a page

2 Select *Options* → *Send URL*

3 Create a message and press **w** (Send)

Server Certificate

View server certificates of a page using a SSL/TLS connection.

1 Open a secure page

2 Select *Options* → *Browser setting* → *Certificates*

3 Select *Server certification* and select a certificate

Tip

- When you open a page that uses SSL/TLS,  appears on the top of Display.

22

Mobile Internet Files

22-14

Returning to Default Page

Return to the Yahoo! Keitai main menu.

- 1 Open a page
- 2 From any page, select *Options* → *Yahoo! Keitai*

Encoding

Default Setting = Auto

If page text appears garbled, change character encoding.


- 1 Open a page
- 2 Select *Options* → *Browser setting* → *Encoding*
- 3 Select an option and press **c** (Save)

Information Window Options

Item	Description
Forward	Move to the next information window (P.21-5).
Bookmark	Add or open bookmarks (P.22-9).
Saved pages	Save information windows to Saved pages. Display information window from Saved pages (P.22-8, 22-8).
Text search	Search text in information window (P.22-13).
Reload	Reload the information for a page (P.22-13).
Enter URL	Enter a URL to open another site/page (P.21-3).
Rendering	Change the displaying method for pages (P.22-15).
Copy text	Copy text in information window (P.22-13).
Save	Save images and sounds to Data Folder (P.22-2, 22-4).
Send URL	Send URLs of a page in a message (P.22-14).

Item	Description
History	Access a page you have already visited (P.22-1).
Yahoo! Keitai	Return to the Yahoo! Keitai main menu (P.22-15).
Browser setting	
Make detailed settings for Web Browser.	
Set text size in information window (P.23-3).	
Text size	
Set various settings for image/sound downloads (P.23-2).	
Downloads	
Delete all information from the cache.	
Empty cache	
Delete all cookies (tokens left by various Web cookies sites on your handset).	
Empty cookies	
Activate or deactivate cookies.	
Cookie options	
View the certificate (P.22-14, 23-4).	
Certificates	
View the detailed information about a page (P.22-14).	
Page details	
Set whether to notify a Web site of your Manufacture	
handset's serial number.	
No.	
Encoding	
Change the character codes set for the page currently displayed (P.22-15).	

Item	Description
Java Script	Set Java Script on/off (P.23-3).
About browser	View detailed information about the browser.

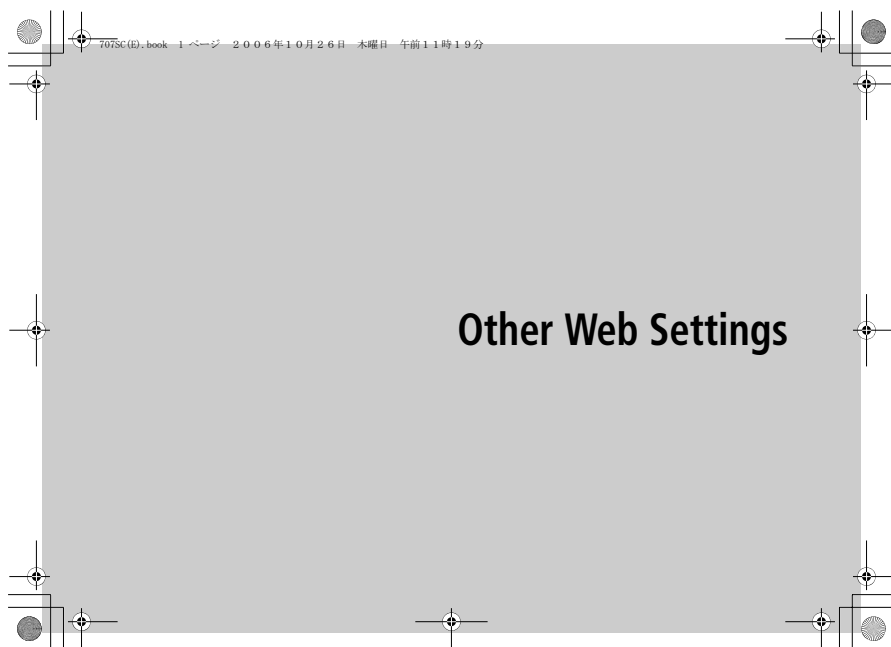 

707SC (B).book 1 ページ 2006年10月26日 木曜日 午前11時19分

Other Web Settings

707SC (E).book 3 ページ 2006年10月26日 木曜日 午前11時19分

Activating/Deactivating Java Script

Default Setting = Off

1 Press c and select Yahoo! Keitai → Browser settings → Java script

2 Select an item and press c (Save)

Text Size

Default Setting = Normal

Change the size of the page fonts.

1 Press c and select Yahoo! Keitai → Browser settings → Text size

2 Select an item and press c (Save)

Manufacture Number

Default Setting = Off

Set 707SC to automatically send handset serial number to Websites upon request for user identification.

1 Press c and select Yahoo! Keitai → Browser settings → Manufacture number

2 Select an item and press c (Save)

Browser Information

1 Press c and select Yahoo! Keitai → Browser settings → About browser

23

Other Web Settings

23-3

7075C (E).book 4 ページ 2006年10月26日 木曜日 午前11時19分

Certificates

View electronic certificate saved on 7075C.

1 Open a page using SSL/TLS

2 Select *Options* → *Browser setting* → *Certificates*

3 Select *Root certificate* to view the certificate

Refresh Browser

Empty Cache/Empty Cookies

Delete information saved in Cache and Cookies.

1 Press **c** and select *Yahoo! Keitai* → *Browser settings*

2 Delete as required

 
To delete Cache contents
Select *Empty cache* → **c** (Yes)

To delete Cookies
Select *Empty cookies* → **c** (Yes)

23

Other Web Settings

23-4

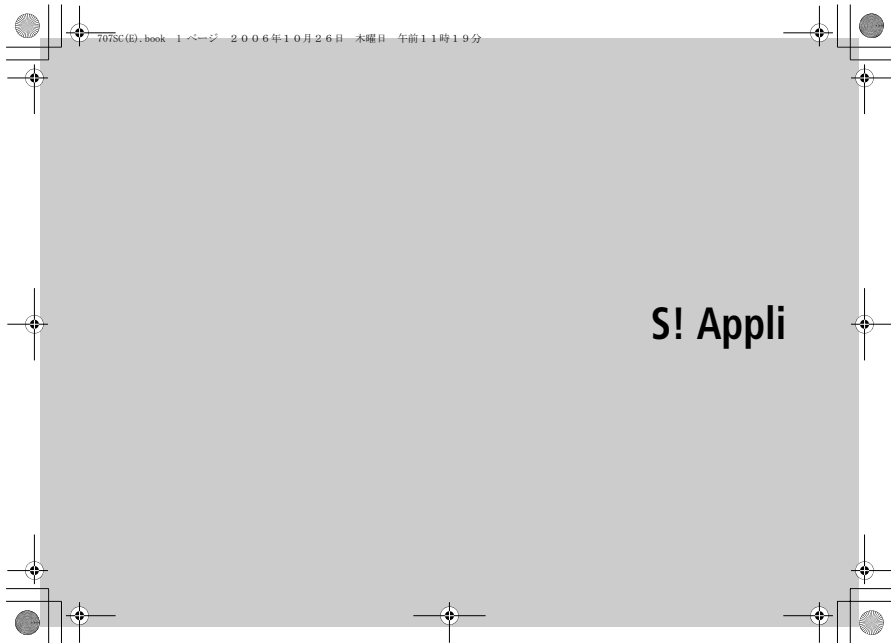

707SC (B).book 1 ページ 2006年10月26日 木曜日 午前11時19分

S! Appli

707SC (E).book 2 ページ 2006年10月26日 木曜日 午前11時19分

Getting Started

S! Appli

Download 707SC-compatible S! Appli including games, 3D images, and information via Mobile Internet sites.

- Use only compatible S! Appli.
- To download S! Appli, separate subscription is required and communication fees apply.

Network S! Appli

Some S! Appli require network connection. Enjoy network gaming or access real-time information like stock prices.

- A separate subscription is required to download S! Appli or use those which require network connection.
- Connection fees apply.

24

S! Appli

24-2

Downloading S! Appli

1 Press **c** and select *S! Appli* →
S! Application list

2 Select *Download S! Appli*

3 Select *S! Appli* to download

4 Select *Yes*
When details appear
Press **c**

5 Select *Exit*
To activate S! Appli
Select *Launch*

707SC (E).book 3 ページ 2006年10月26日 木曜日 午前11時19分

Starting S! Appli

1 Press c and select S! Appli →
S! Application list

2 Select S! Appli and press c (Start)

Tip

- When S! Appli is active
 appears.

Exit, Pause, & Resume

Exiting or Pausing S! Appli

1 Press y while a S! Appli is being
executed

2 Choose to exit/pause

To exit S! Appli
Press w (Exit)

To pause S! Appli
Press c (Pause)

Tip

- When S! Appli is paused
707SC returns to Standby and appears.
- When 707SC is closed while S! Appli is active
S! Appli is paused.

24

S! Appli

24-3

7075C (E).book 5 ページ 2006年10月26日 木曜日 午前11時19分

1 Press **c** and select *S! Appli* → *S! Application list*

2 Delete S! Appli

To delete one S! Appli

Select *Options* → *Delete* → *Selected* → *Yes*

To delete multiple S! Appli

① Select *Options* → *Delete* → *Multiple*

② Check S! Appli to delete

③ Repeat Step ② to check all target S! Appli

④ Press **w** (Delete) and select *Yes*

To delete all S! Appli

① Select *Options* → *Delete* → *All*

② Enter Phone Password, press **c** (Confirm) and select *Yes*

③ Select *Yes* to delete all S! Appli or *No* to exclude locked ones

Tip

• When all S! Appli are checked

In Step 2, perform ① to ③ in "To delete multiple S! Appli," press **w** (Delete) in ④ and proceed the following procedures

① Enter Phone Password, press **c** (Confirm) and select *Yes*

② Select *Yes* to delete all S! Appli or *No* to exclude locked ones

• To select/deselect multiple S! Appli at once

① In Step 2, select *Options* → *Delete* → *Multiple*

② Select *Options* → *Mark all* or *Unmark all*

mPet

With 7075C mPet, raise your own virtual pet. Train or enjoy playing games with.

Selecting Pet

1 Press **c** and select *S! Appli* → *S! Application list* → *mPet* → *Yes*

24

S! Appli

24-5

mPet Operations

Window Operations

In *Options*, set *Navigation* to *Shortcut mode*, then press corresponding button to select operation; set *Navigation* to *Walking mode*, then use **a** to move pet to specified location and select operation. Available operations in each location are listed below.

Location	Operation		Description
	Shortcut mode	Walking mode (Window area)	
Garden	1	Notes (Upper Left)	Play the <i>Ding Dong</i> game.
	2	Front Door (Upper)	Move to Living Room.
	3	Flower Bed (Upper Right)	Go for a walk.
	4	Ball (Down Right)	Play the <i>Stanza</i> game.

Location	Operation		Description
	Shortcut mode	Walking mode (Window area)	
Living Room	1	Door (Upper Left)	Move to Garden.
	2	Back Door (Upper Right)	Move to Kitchen.
Kitchen	1	Back Door (Upper Left)	Move to Living Room.
	2	Door (Upper Right)	Move to Bed Room.
	3	Bowl (Down Right)	Feed full meal.
	4	Today's Saying (Down Left)	Display Today's Saying.
	5	Snacks (Upper)	Give snacks.
Bed Room	1	Door (Upper Left)	Move to Kitchen.
	2	Laundry Basket (Upper)	Bathe pet.

24-7

Location	Operation		Description
	Shortcut mode	Walking mode (Window area)	
Bed Room	3	Dog House (Upper Right)	Pet sleeps.
	4	Book (Down Right)	Play English Quiz.
	5	Injector (Down Left)	Cure pet.

Action Operations

In mPet window, press **w** (Action) to perform the operations listed below (*Train/Commend/Discipline*).
Pet growth varies by operations.

	Item	Description
	Train	
	Sit	Teach pet to sit down.
	Roll	Teach pet to roll over.
	Turn	Teach pet to turn around.
	Bark	Teach pet to bark.
	Paw	Teach pet to give you a paw.

Item	Description	
Commend	Praise	Praise pet for good behavior.
	Pet	Cheer pet up.
Discipline	Warn	Order pet not to do.
	Punish	Punish pet for bad behavior.

Tip

- When pet refuse to act**
Pet sometimes refuse to act as operated, due to such as the first time operation, pet status. Teach pet repeatedly or check the status and take care.
- When each operation ends**
Pet barks and responds to operation with emotional state text bubble; pet status window appears. Check the pet status by following category: *Health/Fatigue/Fullness/Clean/Stress/Obedient/Intimacy*.

Options

Item	Description
Location	Select a location from among <i>Garden/Living room/Kitchen/Bedroom</i> .
Pet Inventory	Show Pet list to select various settings (P.24-9).
Pet Status	Check Pet status while pet is playing around.
Options	Select mPet sound/display settings (P.24-10).
Help	Check mPet operations description.

Other Operations

Adopt a New Pet

Up to 5 pets can be adopted.

1 In mPet window, select *Options* → *Pet Inventory*

2 Select *Options* → *Adopt a new pet*

3 Perform Steps 2 and 3 in "Select Pet" (P.24-5)

Pet Inventory

1 In mPet window, select *Options* → *Pet Inventory*

2 Select a pet

- Tip**
- **Pet status**
In Step 2, select *Options* → *View status*
 - **Rename your pet**
 - ① In Step 2, highlight the pet
 - ② Select *Options* → *Rename*
 - ③ Enter a name

24

SI Appli

24-9

7075C (E).book 11 ページ 2006年10月26日 木曜日 午前11時19分

Tip

- The contents of Sound are:**
Sound & Vibrate: Pet barks and 7075C vibrates simultaneously.
Sound only: Pet barks.
Vibrate: 7075C vibrates with no pet barking.
No sound: No vibration and with no pet barking.
- The contents of Navigation are:**
Shortcut mode: Show available shortcuts indicators in mPet window to use assigned shortcuts keys.
Walking mode: Use **a** to move locations with the pet.
- The contents of Sound type are:**
Voice: Indicate the selected action operation by voice.
Melody: Indicate the selected action operation by melody.

To browse CCF files, acquire Content Key. No Content Key is required to browse the default sample files in 7075C.

Browsing Electronic Comic

1 Press **c** and select *S! Appli* →
S! application list
→ コミックサーフィン

Tip

- After starting**
Refer to ヘルプ in コミックサーフィン.

Comic Surfing

"コミックサーフィン" is the file viewer for browsing electronic comic/photo book files (CCF files) saved in *Book* folder in Data Folder. Enlarge/reduce images, scroll the page easily, browse more lively images with sound/vibration effects.

24

S! Appli

24-11

707SC(E).book 12 ページ 2006年10月26日 木曜日 午前11時19分

Security

Default Setting

- Net Access: Per session
- Application Autoinvocation: Per session
- Local connectivity: Per session
- Read user data access: Per access
- Write use data access: Per access

Set whether to allow S! Appli to automatically use communication functions. Alternatively, set to display a confirmation message when activating S! Appli or using communications.

24

S! Appli

24-12

1

Press **c** and select **S! Appli** → **S! Application list**

2

Highlight **S! Appli**, select **Options** → **Permissions**

3

Select items to set

Web accessing functions

Select **Net Access**

Automatic starting functions

Select **Application Autoinvocation**

Connection functions to external devices

Select **Local connectivity**

Read user data access function

Select **Read user data access**

Write user data access function

Select **Write user data access**

4

Select items and press **c** (**Save**)

7075C (E).book 13 ページ 2006年10月26日 木曜日 午前11時19分

Tip

- The contents of *Permissions* are:**
Setting for each item are as follows. Settings vary by item.
Always: Always allow the use of the function.
Per session: After activating, S! Appli asks, for the first use, whether to allow the use of the function. Display this message only once.
Per access: Every time you use a function, display a message for confirmation.
Never: Never allow the use of the function.
- To restore defaults**
In Step 3, select *Reset* → *Yes*

S! Appli Settings

Make S! Appli settings and restore defaults.

Backlight

Default Setting ▾ Normal settings

Set Display settings for the backlight.

1 Press **c** and select *S! Appli* →
S! Appli settings → *Backlight*

2 Select the setting and press **c**

Tip

- The contents of *Backlight* are:**
Always On: Set the backlight always on.
Always Off: Set the backlight always off.
Normal settings: Settings of *Backlight time* (P.8-7) for *Display settings* take priority.

Application Volume

Default Setting ▾ Level 3

Adjust the volume of sounds.

1 Press **c** and select *S! Appli* →
S! Appli settings → *Application Volume*

24

S! Appli

24-13

707SC (E).book 14 ページ 2006年10月26日 木曜日 午前11時19分

2

Use **a** to adjust the volume and press **c**

Tip

• Sound volume in Manner Profile

Sound volume follows the settings of the current Manner Profile.

Vibration

Default Setting

On

Set whether or not to activate the vibration when using S! Appli with vibrator.

1

Press **c** and select *S! Appli* → *S! Appli settings* → *Vibration*

2

Select an item and press **c**

S! Appli Sort

Default Setting

By Date

1

Press **c** and select *S! Appli* → *S! Appli settings* → *S! Appli sort*

2

Select an item and press **c**

Reset S! Appli Settings

Restore S! Appli settings to defaults.

1

Press **c** and select *S! Appli* → *S! Appli settings* → *Reset S! Appli settings*

 
2

Enter Phone Password, press **c** (Confirm) and select *Yes*

24

S! Appli

24-14

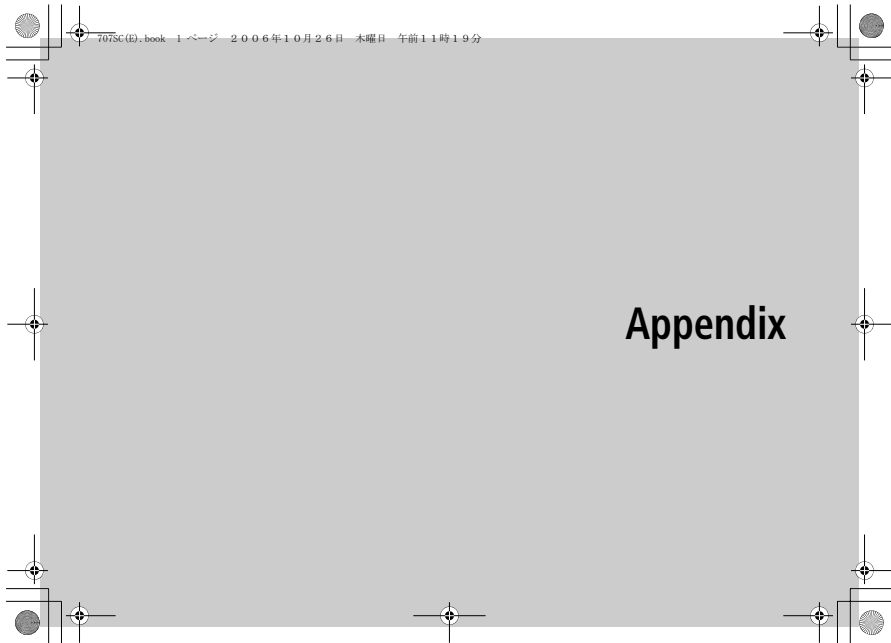

Appendix

 Functions

Main Menu Item	Item	Page
SI Appli	SI Application list	P.24-2
	SI Appli Settings	P.24-13
Yahoo! Keitai	Yahoo! Keitai	P.21-3
	Bookmarks	P.22-9
	Saved pages	P.22-8
	Enter URL	P.21-3
	History	P.22-11
Media Player	Browser settings	P.23-2
	Music	P.10-3
Camera	Video	P.10-9
	Take photo	P.7-5
	Record video	P.7-11
	Go to photos	P.7-6
	Go to videos	P.7-12
	Dynamic effect list	P.7-19
	Video editor	P.7-17

Main Menu Item	Item	Page
Data Folder	Pictures	P.11-2
	Videos	P.11-2
	Sounds & Ringtones	P.11-2
	SI Appli	P.11-2
	Book	P.11-2
	Other documents	P.11-2
Messaging	Memory status	P.11-3
	Received msgs	P.17-4, 18-2
	Create msg	P.17-8
	Drafts	P.18-8
	Unsent msgs	P.18-9
	Sent msgs	P.18-8
	Templates	P.17-14
	Server mail box	P.19-2
	Settings	P.20-2, 20-5
	Memory status	P.18-2

Main Menu	Item	Page
Tools	Alarms	P.14-2
	Calendar	P.14-5
	Voice recorder	P.14-15
	World clock	P.14-18
	Calculator	P.14-19
	Converter	P.14-19
	Stopwatch	P.14-22
	Dictionary	P.14-22
	Photo slide	P.8-2
	Interpreter	P.14-23
	Memory status	P.14-12
	Phonebook List	P.5-9
Settings	Phone settings	P.9-4
	Sound settings	P.8-1
	Display settings	P.8-1
	Call settings	-
	Phonebook settings	P.5-1
	Connectivity	P.12-1
	Security	P.13-1
	Software Update	P.25-10
	Memory settings	P.13-10, 15-8
Main Menu	Item	Page

Troubleshooting

■ 707SC does not turn on

- ☑ Is battery empty?
➔ Replace or charge battery.
- ☑ Is battery installed in 707SC?
➔ Install battery correctly.

■ When power is turned on, PIN entry window appears

 
- ☑ Is *PIN lock* set to *Enable*?
➔ If *PIN lock* is *Enable*, enter PIN.

■ When power is turned on, USIM password entry window appears

- ☑ Is *USIM lock* set to *Enable*?
➔ If *USIM lock* is *Enable*, enter USIM password.

■ Please insert USIM card or This card cannot be recognized appears when 707SC is turned on or executing a function

- ☑ Is USIM Card correctly installed?
➔ Check to see if USIM Card is correctly installed. If the message appears even though USIM Card is correctly installed, it may be damaged.
- ☑ Is an incorrect USIM Card used?
➔ Check to see if correct USIM Card is used. Use USIM Card specified by SoftBank.
- ☑ Are the IC contacts of USIM Card contaminated with fingerprints, etc.?
➔ Wipe contamination off with a clean, dry cloth, and install USIM Card correctly.



■ **Reading USIM Cannot operate or Reading USIM Card Cannot start appears**

➔ USIM Card data is being read. Try again later.

■ **A Busy tone continues after dialing**

☒ Have you entered a phone number beginning with zero such as an area code?

➔ Enter a phone number beginning with zero such as an area code.

☒ Is 707SC set to *Offline mode*? ( appears)

➔ Change 707SC to another mode such as *Normal*.

■ ** or Out appears and no calls can be initiated**

☒ 707SC is out-of-range.

➔ Move to a place where the signal is stronger and try again.

■ **Calls are interrupted or disconnected**

☒ Does  or Out appear?

➔ Move to a place where the signal is stronger and try again.

 
 
 
☒ Is battery empty?

➔ Replace or charge battery.

■ **Unable to initiate a call**

☒ Is Call Barring set?

➔ Deactivate Call Barring.



707SC (E).book 6 ページ 2006年10月26日 木曜日 午前11時19分

25

Appendix

■ Unable to open Phonebook entry, Data Folder, Call Log, Calendar, or Messaging

☑ Is Privacy lock set?

➡ Cancel Privacy lock.

■ Clicking noise is heard during a call

☑ Noise may be generated when the signal is weak or while moving between coverage areas.

■ Unable to charge battery

☑ Is AC Charger Connector securely inserted into 707SC?

➡ Insert AC Charger Connector securely.

☑ Is AC Charger securely inserted into an electric outlet?

➡ Insert AC Charger securely.

☑ Is battery installed in 707SC?

➡ Install battery correctly.

☑ Are the charging terminals of 707SC, battery or the connector plug of AC Charger clean?

➡ Clean the contacts with a dry cotton swab, etc.

☑ Has battery been charged in places with ambient temperature below 5 °C or above 40 °C.

➡ Charge battery in places with ambient temperature between 5 °C and 40 °C.

☑ Battery may need to be replaced.

➡ Replace with a new battery.

☑ Does battery always lose its charge quickly after being charged?

➡ Battery life has expired. Replace with a new battery.

25-6

- ☑ Does 707SC or battery become very warm during charging?
- ➔ If the temperature rises too much, charging may stop. After 707SC and battery are cool, retry charging.

■ Devices become hot

- ☑ During charging, AC Charger may become hot.
- ☑ 707SC may become hot during charging or a long call.
- ➔ If 707SC can be touched with your hand, it is normal. If it is too hot to touch, immediately stop charging and contact Customer Service (☎P.25-25).

■ Battery drains quickly

 
- ☑ Battery may drain quickly depending on the operating environment (Ambient temperature, charging conditions, or Signal Strength), operations, and settings.
- ➔ Use 707SC in an appropriate environment and reduce operations requiring high power (☎P.1-11).

■ Display flickers

- ☑ Is 707SC used near a fluorescent light?
- ➔ Use 707SC as far away from a fluorescent light as possible.

■ Display is dim or unlit

- ☑ This may be due to the characteristics of Display and not a problem. The time (seconds) until Display is dimmed or unlit can be changed by adjusting the Backlight time.

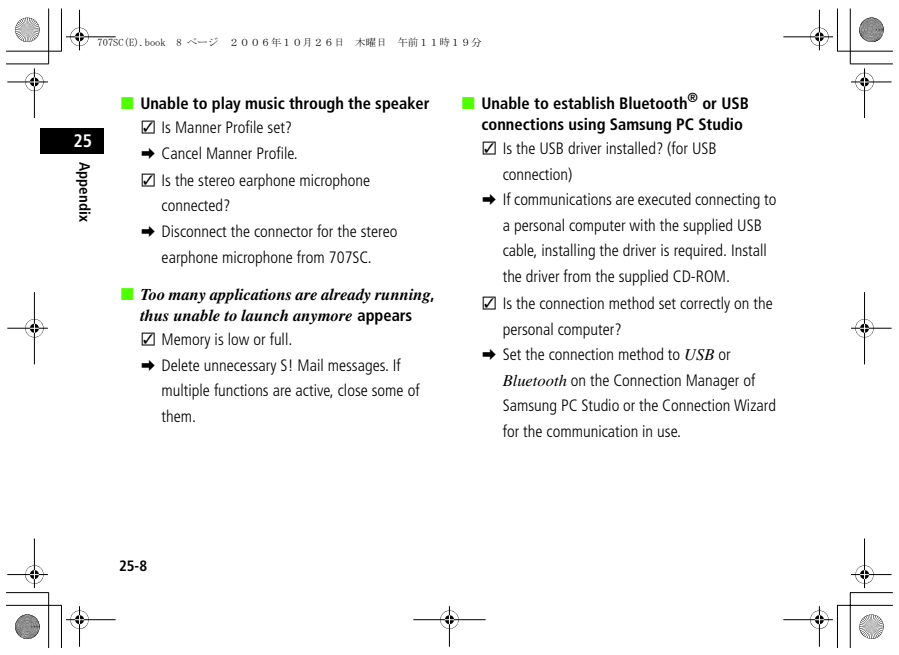

■ Unable to play music through the speaker

☒ Is Manner Profile set?

➔ Cancel Manner Profile.

☒ Is the stereo earphone microphone connected?

➔ Disconnect the connector for the stereo earphone microphone from 707SC.

■ *Too many applications are already running, thus unable to launch anymore appears*

☒ Memory is low or full.

➔ Delete unnecessary S! Mail messages. If multiple functions are active, close some of them.

■ Unable to establish Bluetooth® or USB connections using Samsung PC Studio

☒ Is the USB driver installed? (for USB connection)

➔ If communications are executed connecting to a personal computer with the supplied USB cable, installing the driver is required. Install the driver from the supplied CD-ROM.

☒ Is the connection method set correctly on the personal computer?

➔ Set the connection method to *USB* or *Bluetooth* on the Connection Manager of Samsung PC Studio or the Connection Wizard for the communication in use.

- ☒ Are the settings of Bluetooth® or the USB connection port of the PC same as those for Samsung PC Studio?
 - ➔ Make sure port settings match those set for Samsung PC Studio Connection Manager or Connection Wizard.

■ **Some Phonebook entries do not appear**

- ☒ Is 707SC set to *Hide* in Secret Mode?
 - ➔ Set to *Show* in Secret Mode.

■ **Message cannot be created**

- ☒ Shared Memory may be full.
 - ➔ Delete unnecessary messages. If available memory is less than 464 KB, messages cannot be created.

■ **Try again appears**

- ☒ Signal conditions are poor.

- ➔ Move for a stronger signal and try again.

■ **Sending message failed or Unknown error appears**

- ☒ Network connection failed.
 - ➔ Try again later.

■ **All available connections are busy appears**

- ☒ New S! Mail arrives while 707SC is being used for packet data communications.
 - ➔ End the data communication and try again.

■ **Service unavailable appears**

- ☒ 707SC is outside the service area.
 - ➔ Send from within the service area.

■ **No response appears**

- ☒ Network/Server is busy.
 - ➔ Try again later.

■ **Change from flight profile to other profile for network service, created message will be saved in outbox appears**

- ☒ *Offline mode* is active.
- ➔ Cancel *Offline mode* and try again.

■ **Cannot download because of too large data appears**

- ☒ S! Appli memory is full.
- ➔ Delete unnecessary S! Appli and try again.

■ **Received invalid data. Quit download or Cannot download because of too large data appears**

- ➔ File cannot be downloaded; cancel download.

🔧 Software Update

Check for 707SC software updates and download as required. Choose to begin *Update* or *Schedule update*.

1 Press c and select Settings →

Software update

2 Press w (Yes)

707SC connects to network.

3 Read Terms of Use and select Agree

Read through Terms of Use before selecting *Agree*.

4 Enter Center Access Code (☎P.1-23) and press c

Update Result appears.

5 Press **c**

To update immediately

Select *Update now* to start the update. When completed, 707SC turns the power off and on again; then Notification window appears.



Notification Window

To schedule later update

- ① Select *Schedule update*
- ② Press **c** (Yes)
- ③ Press **w** (Yes)
- ④ Select schedule date and press **c**
- ⑤ Select schedule time and press **c**
- ⑥ Confirm schedule date & time and press **c**

Tip

• Operation procedures

Procedures can be found in the SoftBank Website (<http://www.softbank.jp>).

• Connection fees

Connection fees do not apply to updates (including checking for updates, downloading, and rewriting).

• Scheduled update time comes

Confirmation window appears at scheduled update time. Press **c** or wait approximately ten seconds to start. Update will not start while 707SC is in use. When the current operation ends, confirmation window appears. But other functions active, and ten minutes after scheduled update time, scheduled update is automatically canceled.



Notification Window

• To cancel *Schedule update*

- ① Perform Steps 1 to 5, select *Cancel schedule*
- ② Press **w** (Yes)

- **Charge battery beforehand; a low battery may cause update to fail.**

- When Scheduled update time comes and 7075C is out-of-range, Software Update does not start.
- Keep 7075C in a place where signal is strong and stable.
- 7075C Phonebook entries, media files, and other contents are not affected by software updates, but always back-up important information (note that some files cannot be copied). SoftBank is not liable for damages from lost information, etc.
- During update, calling or receiving messages, etc. cannot be used.
- Update may take for a while.
- Update failure may disable 7075C. Contact SoftBank Customer Center, Customer Assistance.

Symbols

Double-byte Symbols

[illegible]


Single-byte Symbols

<space> ! " # \$ % & ' () * + , - . / : ; < = > ?
@ [\] ^ _ { | } ~ . 「 」 , . -

Symbol Conversions

Symbol Label	Symbol	Symbol Label	Symbol
あつと	@@	こめ	※
いこーる	==	ころん	::
えん	¥	さんかく	△▲▽▼
おんぶ	♪	しかく	□■◇◆
かける	x	どう	×#々
かつこ	O I J K L () H " ' X) [] () < > 》	ばーせんと	%%
		ほし	☆★
		まる	○●◎
から	～	やじるし	→←↑↓

 Pictograms

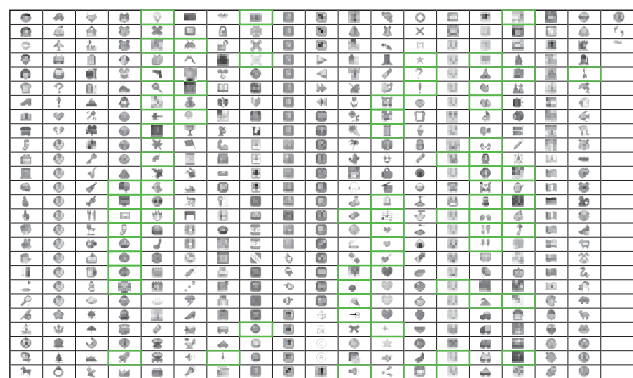

- Pictograms with are animated.
- Some pictograms and animated pictograms may not appear properly on some models of SoftBank handsets or other devices.

Memory List

Shared Memory		
S! Mail	Received msgs	Up to 500 messages
	Drafts	Up to 10 messages
	Unsent msgs	Up to 10 messages
	Sent msgs	Up to 250 messages
SMS	Received msgs	Up to 500 messages
	Drafts	Up to 10 messages
	Unsent msgs	Up to 10 messages
	Sent msgs	Up to 250 messages
Data Folder	Pictures	Up to 999 items (files and subfolders) per folder
	Videos	
	Sounds & Ringtones	
	S! Appli	
	Book	
	Other documents	

Specifications

707SC specifications may change without prior notice.

SoftBank 707SC

Item	Specification
Weight	Approximately 97 g
Continuous Talk Time	Voice Call: Approximately 165 minutes (3G)
	Approximately 310 minutes (GSM)
	Video Call: Approximately 100 minutes (3G)
Continuous Standby Time (707SC closed and sub Display OFF)	Approximately 255 hours (3G)
	Approximately 300 hours (GSM)
Dimensions (W x H x D)	Approximately 51.4 x 102.5 x 11.9 mm (707SC closed)
Maximum Output	0.25 W

- 707SC with battery installed.

- Battery Time is calculated by SoftBank under stable signal conditions. Calling in poor signal conditions or leaving 707CS on out-of-range will consume more power and may reduce Battery Time by more than half.
- Frequent 707CS operations requiring Backlight (e.g., Yahoo! Keitai) may reduce Continuous Talk Time and Continuous Standby Time.
- Using video for Wallpaper may significantly reduce Continuous Talking and Continuous Standby Times.
- Using SI Appli may reduce Continuous Talking and Continuous Standby Times.
- Continuous Talk Time is an average measured with a new, fully charged battery in stable signal conditions. Continuous Standby Time is an average measured with a new, fully charged battery with 707CS closed without calls or operations, in Standby, in stable signal conditions. Alternating between usage and Standby shortens Continuous Talk Time and Continuous Standby Time. Talk Time/Standby Time may vary by environment (battery status, ambient temperature, etc.).

Item	Specification
Voltage	3.7 V
Type	Lithium-ion
Capacity	880 mAh
Dimensions (W x H x D)	Approximately 46.3 x 36.9 x 5.2 mm (without protruding parts)

Item	Specification
Power Source	AC 100 V-240 V, 50/60 Hz (with power cable)
Output Voltage/ Current	DC 5 V/720 mA
Charging Temperature	5 to 40 °C
Dimensions (W x H x D)	Approximately 53 x 49 x 20 mm (without cables)
Cord Length	Approximately 180 cm

 INDEX

A

AC Charger	1-14
Acoustic shock	15-5
Activate Secret mode	13-6
Activating Bluetooth®	12-4
Activating S! Appli	24-3
Active Folder	15-6
Add to playlist	10-5
Adding Reject Black List	13-9
Adjusting earpiece volume	2-7
Adjusting ringtone volume	2-3, 6-3
Adjusting volume level to play	10-7, 10-12
Alarms	14-2
All music	10-3
Anniversary	14-9
Answer Machine	2-5
Answering mode	12-9
Anykey answer	15-5

Applicable Profiles for Bluetooth®

.....	12-2
Attaching files	18-13
Attaching to a message for sending still images	7-20
Attaching to a message for sending videos	7-20, 11-13
Attaching/Inserting a file	17-15
Audio Skin	10-7
Auto power ON	14-4
Auto redial	15-2

B

Backlight	8-7, 10-8, 24-13
Battery	1-10, 1-12
Bluetooth®	12-2
Bluetooth® Address	12-3
Bluetooth® service	12-3
Browser Information	23-3

C

Cache	21-2
Calculator	14-19

Calendar	14-5
Calendar window format	14-6
Call answer mode	9-3
Call cost limit	2-12
Call Log Records	2-9
Call Transfer service	16-3
Call Waiting	16-8
Caller ID	16-13
Camera	7-2
Camera mode	7-4
Camera setting	7-13
Capturing continuous images	7-8
Capturing in Mosaic shot	7-9
Capturing mode	7-4
Capturing still images	7-5
Capturing videos	7-10
Category	5-7
Centre access code	1-23
Certificates	22-16, 23-4
Changing a file name	11-15
Changing a folder name	11-15, 18-15
Changing mail address	20-2
Changing phone password	13-2

25-18

Downloading a SI Appli	24-2
Drafts	18-2
DTMF	2-8, 6-5
Dynamic effect list	7-19

E

Earphone call	15-3
Editing bookmarks	22-10
Editing Calendar details	14-12
Editing Phonebook	5-14
Editing still images	7-15
Editing Style	17-13
Editing the title for a Saved page	22-8
Editing Videos	7-17
Effect sound and keypad tone volume	9-2
Effect sound setting	9-3, 9-7
Effects	7-12
Encode	22-15
Entering a number to select an item	1-21
Entering by quoting text	4-11

Entering characters	4-2, 4-5
Entering emoticons	4-10
Entering pictograms	4-10
Entering symbols	4-10
Entering URL	21-3
Entry mode for characters	4-2
Event list	14-12
External Device Port	1-7

F

File details	11-14
File Viewer	11-5
Font size	4-15, 8-6, 8-9, 23-3
Forwarding	18-8
Forwarding Messages	19-4
Forwarding messages in server ...	19-4
Frames	7-6, 7-16

G

Greeting Messages	8-9
-------------------------	-----

H

Holiday	14-9
Home zone	1-20

I

Icons for attached files	17-16
Icons for files	11-2, 11-4
Icons on Drafts list	18-4
Icons on My devices list	12-6
Icons on Received messages list	18-4
Icons on Sent messages	18-5
Icons on Unsent messages list	18-5
Image display	23-2
In-car charger	1-16
Initiating a call	2-2, 2-14
Initiating a call overseas	2-14
Initiating a Video Call	6-2
Initiating an international call	2-2, 2-14
Inserting/Removing USIM Card	1-3
Installing and removing battery ...	1-12

International code	15-2	Locking/Unlocking sound files ...	14-17	mPostcard	7-6
International roaming	2-13	Locking/Unlocking S! Appli	24-4	Multi Selector	xiv
Interpreter	14-23			Mute	2-3, 2-8, 9-4
Invoking a function with Switch Bar	1-22	M		My devices	12-4, 12-8, 12-9
Invoking functions from Main menu	1-20	Mail art function	17-7	My phone's name	12-11
Mailbox	18-2	Mail Server	19-2	My phone's visibility	12-10
Items to save to Phonebook	5-2	Mailbox	18-2	My phone's visibility for Bluetooth®	12-10
		Main menu style	8-5		
J		Manner profile	3-2	N	
Java Script	23-3	Mark default number	5-14	Network mode	2-13
Jump	4-14	Maximum of message size	20-4	Network password	1-24, 16-13
K		Media Player	10-2	Network Profile	2-13
Key assignments	4-3	Memo	14-10	Network selection	2-13
Keypad tone	9-3	Message	17-2	Network S! Appli	24-2
		Message details	18-3		
L		Message List	19-2	O	
Language	8-10	Message type icon	18-3	Offline Profile	3-2
List Font Size	8-6	Missed Call	2-4, 2-9	Opening Saved page	22-8
Locking/unlocking	11-14	Mobile Postcard	7-7	Operating messages in server	19-2
Locking/unlocking files	11-14	Mobile tracker	13-7	Operations available during a Video Call	6-3
		Modifying characters	4-12	Operations during a call	2-8
		Move to USIM	18-20		
		mPet	24-5		
25-20					

Option menu	1-23
Outgoing/incoming call barring service	16-11
Owner information	5-16

P

Page Details	22-14
Page Window	21-4
Password Lock	13-5
Pasting characters	4-13
Phone lock	13-5
Phonebook search	5-9
Photo slide	8-2
PIN	1-5
PIN authentication at power on	1-5, 13-3
PIN lock	13-3
PIN2	1-5
PIN2 lock unlocking code	13-3
Player settings	10-7, 10-11
Playing melody	10-3
Playing video	7-15, 10-9
Playing voice	14-16

Popup menu	8-6
Power ON/OFF	1-17, 1-18
Predictive entry function ON/OFF	4-14
Preferences	23-2
Preferred network	2-14
Pre-installed	11-2
Print via Bluetooth®	12-7
Privacy Lock	13-6
Providing Manufacturer Number	23-3
PUK Code	1-5, 13-3
Putting a call on hold	2-7

Q

Quoting for entries	4-11
---------------------------	------

R

Received call log	2-9
Received messages	18-2
Receiving a call	2-3
Receiving a Video Call	6-2
Receiving all messages	19-2

Receiving data via Bluetooth®	12-7
Receiving message in server	19-2
Receiving settings	20-3
Record settings	14-17
Recording voice	14-16
Registering an S! Mail Template	18-19
Registering as S! Mail Template	18-6
Registering SMS templates	4-16
Registering to bookmark	22-9
Registering to Phonebook	5-4
Rejecting call reception	15-6
Rejecting incoming calls	13-8
Renaming a still image file	7-6
Renaming My devices	12-5
Renaming sound files	14-17
Repeat mode	10-7, 10-11
Reply	17-5, 18-7
Reply with text	20-6
Reset	13-11
Reset all	13-11
Reset settings	13-11

S

Resetting a call cost	2-11	Sending a bookmark URL	22-10	SMS templates	4-11
Resetting Call times	2-11	Sending a message from Drafts	16-8	Softkey	xiii
Resetting PIN lock	13-3	Sending data via Bluetooth®	12-6	Software Update	25-10
Resetting S! Appli settings	24-14	Sending from Unsent Messages	16-9	Sort	11-9, 14-13, 18-17
Restarting paused S! Appli	24-4	Sending settings	17-12, 20-2, 20-5	Sorting files	11-1
Retry function	17-2	Sending sound files	14-16	Sound file details	14-17
Retry with	6-6	Sending still images via Bluetooth®	12-6	Sound file setting	14-16
Ringtone for a Voice Call	5-8	Sending URLs	22-14	Sound playback	23-2
		Sending videos via Bluetooth®	7-12, 12-6	Sound Settings	9-4
				Speaker Phone call	2-7
				Speed dialing	5-12
				SSL/TLS	21-2
				SSL/TLS certificate	23-4
				Still image details	7-6
				Stopping or Pausing S! Appli	24-3
				Stopwatch	14-22
				Streaming	22-7
				Sub LCD Light	8-8
				Substitute images	6-6
				SVG-T/Flash® Viewer	11-8
				Switching callers	16-10
				S! Appli	24-2
				S! Appli detailed information	24-4

S! Mail	17-2
S! Mail templates	17-14

T

Task	14-10
Templates	4-11, 18-2
Timer	7-11

U

Unsent messages	18-2
Updating information	22-13
Updating mail list	19-2
USB connection	12-11
User dictionary	4-15
USIM Card	1-2
USIM lock	13-4
USIM password	13-5
Using a file	11-10
Using a template	17-14
Using SMS templates	4-16

V

Various settings for Video Call	6-5
vFile	11-12
Vibration	14-2, 24-14
Vibrator/Sound settings	9-2
Video Mode	7-10
Video settings	7-14
Viewfinder	7-3
Viewing a file	11-3
Viewing attached files	18-13
Viewing Call cost	2-11
Viewing Call Log Records	2-9
Viewing Call times	2-11
Viewing Saved Calendar Entries	14-12
Viewing your phone number (My Phonebook details)	5-16
Visualization	10-8
Voice Mail Service	16-5
Voice Recorder	14-15
Volume	2-7, 9-2, 24-13

W

Wake-up Alarm	14-2
Wallpaper	8-2
Web	21-2
Web access from a bookmark	22-10
Web connection from access logs	22-11
World clock	14-18

Y

Yahoo! Keitai	22-16
---------------------	-------

Z

Zoom list	8-7
-----------------	-----

Numerics

3D Pictogram	20-5
--------------------	------

Customer Service

If you have questions about SoftBank handsets or services, please call General Information.

For repairs, please call Customer Assistance.



SoftBank Customer Center	SoftBank International Call Center
From a SoftBank handset, dial toll free at 157 for General Information or 113 for Customer Assistance	From outside Japan, dial +81-3-5351-3491 (Please take care to dial correctly; international charges will apply.)

Call these numbers toll free from landlines.


Subscription Areas	Contact
Hokkaido, Aomori, Akita, Iwate, Yamagata, Miyagi, Fukushima, Niigata, Tokyo, Kanagawa, Chiba, Saitama, Ibaraki, Tochigi, Gunma, Yamanashi, Nagano, Toyama, Ishikawa, Fukui	General Information ☎ 0088-240-157 (Toll-free)
	Customer Assistance ☎ 0088-240-113 (Toll-free)
Aichi, Gifu, Mie, Shizuoka	General Information ☎ 0088-241-157 (Toll-free)
	Customer Assistance ☎ 0088-241-113 (Toll-free)
Osaka, Hyogo, Kyoto, Nara, Shiga, Wakayama	General Information ☎ 0088-242-157 (Toll-free)
	Customer Assistance ☎ 0088-242-113 (Toll-free)
Hiroshima, Okayama, Yamaguchi, Tottori, Shimane, Tokushima, Kagawa, Ehime, Kochi, Fukuoka, Saga, Nagasaki, Oita, Kumamoto, Miyazaki, Kagoshima, Okinawa	General Information ☎ 0088-250-157 (Toll-free)
	Customer Assistance ☎ 0088-250-113 (Toll-free)



  707SC (E).book 26 ページ 2006年10月26日 木曜日 午前11時19分




25-26

 



 707SC (E).book 1 ページ 2006年10月26日 木曜日 午前11時19分



SoftBank 707SC User Guide

October 2006 Version 1

SOFTBANK MOBILE Corp.



モバイルリサイクルネットワーク
環境省リサイクルマークに認定

To help protect the environment and recycle valuable resources, mobile phone, and PHS shops displaying the above mark accept mobile phones, batteries, and chargers of all manufacturers.

*Mobile phones, batteries, and chargers collected for recycling cannot be returned.

*To protect your privacy, delete any personal information (telephone numbers, call log records, messages, etc.) beforehand.

*For more information, please visit your nearest SoftBank Shop.

Model name : SoftBank 707SC

Manufacturer : Samsung Electronics Co., Ltd.

