

Test setup photos of EUT

1. Test mode of EUT

- The testing was set in the three modes as below and measured for each position

A. Pad mode : ANT1 is operating only



B. Stand mode I : ANT2 is operating only




C. Stand mode II : ANT3 is operating only



2. Worst case of orthogonal planes each frequency band

- Test setup photos for each mode were reported as representative worst axis after radiated measurements for three orthogonal positions were complete.

A. Photo of Radiated Spurious Emission Test (Below 30 MHz)

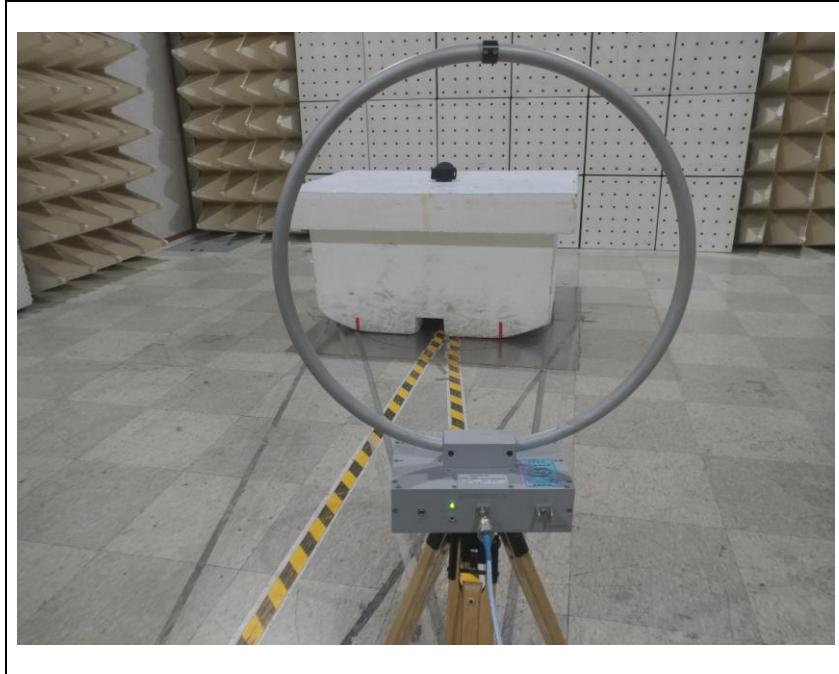

3. Photos of AC Power line emission test




4. Photos of MPE test Set up

B-Field Probe (For ANT1)


Point A



Point B

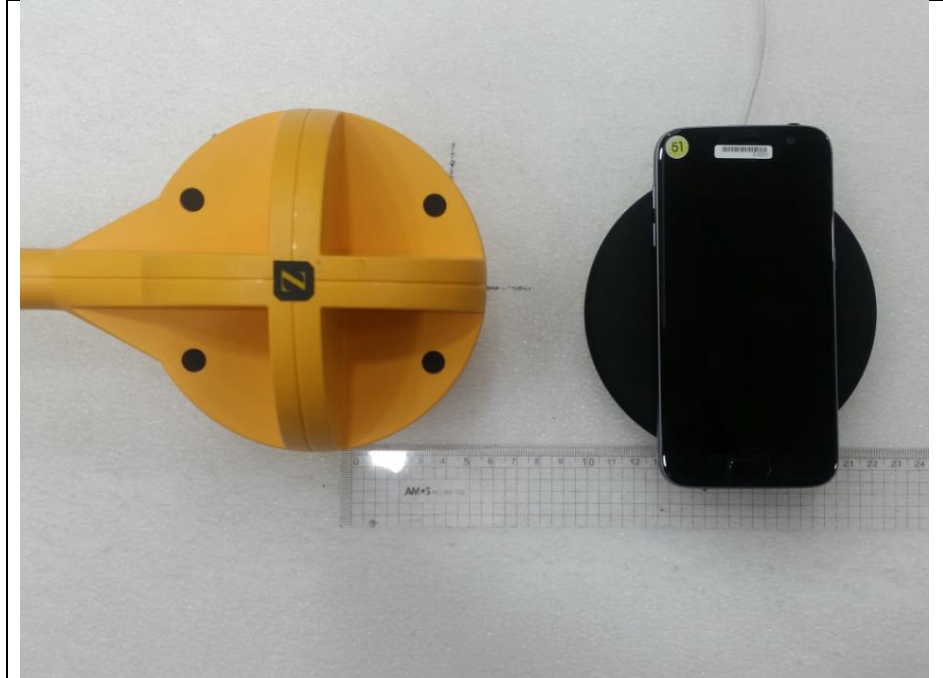

Point C

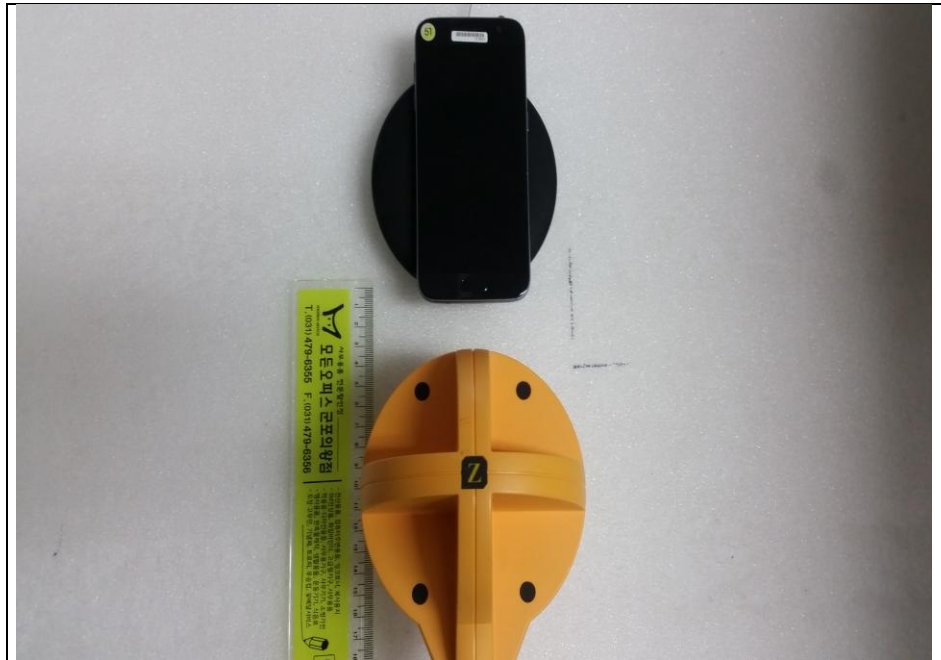

Point D





E-Field Probe (For ANT1)



Point B



Point C



Point D



Point E



Point F



B-Field Probe & E-Field Probe (For ANT2)



B-Field Probe & E-Field Probe (For ANT3)

