

CNS03

EIS3V	1	39
V_REF	2	38
GND	3	37
GND	4	36
GYRO_H	5	35
GYRO_V	6	34
H_REF	7	33
CVF_12V	8	32
CVF_3V	9	31
LCD/ CVF_CLK	10	30
CVF_STB	11	29
LCD/ CVF_DATA	12	28
CVF_5V	13	27
C_SYNC	14	26
OSD_B	15	25
OSD_R	16	24
OSD_G	17	23
LCD_B	18	22
LCD_G	19	21
LCD_R	20	20
TX	21	19
RX	22	18
CTS	23	17
RTS	24	16
SHOE_MIC_L	25	15
SHOE_MIC_R	26	14
ZOOM_MIC_CTL	27	13
SHOE_UNREG	28	12
SHOE_UNREG	29	11
SHOE_UNREG	30	10
SHOE_ID1	31	9
SHOE_ID2	32	8
FLASH_TIME	33	7
GND	34	6
GND	35	5
SHOE_RESET	36	4
EXT_MIC_L	37	3
EXT_MIC_R	38	2
MIC_JACK_DET	39	1

EIS3V

V_REF

GH

GV

H_REF

CVF_12V

CVF_3V

CVF_CLK

CVF_STB

CVF_DATA

CVF_5V

C_SYNC

OSD_B

OSD_R

OSD_G

LCD_B

LCD_G

LCD_R

SHOE_UNREG

SHOE_ID1

SHOE_ID2

FLASH_TIME

SHOE_RESET

MIC_L

MIC_R

MIC_JACK_DET

52465-1091

CNS04

H_REF	1
GND	2
GYRO_H	3
GND	4
EIS_3V	5
EIS_3V	6
GND	7
GYRO_V	8
GND	9
V_REF	10

H_REF

GH

GND

EIS3V

GV

V_REF

CVF_12V

CVF_CLK

CVF_STB

CVF_DATA

CVF_5V

C_SYNC

OSD_B

OSD_R

OSD_G

LCD_B

LCD_G

LCD_R

CVF_3V

MIC_L

MIC_R

MIC_JACK_DET

GND
TTT

SHOE_MIC_L

SHOE_MIC_R

ZOOM_MIC_CTL

SHOE_RESET

SHOE_ID1

TX

SHOE_ID2

RX

FLASH_TIME

CTS

RTS

SHOE_UNREG

CNS01

16	CVF_12V
15	GND
14	GND
13	LCD/ CVF_CLK
12	CVF_STB
11	LCD/ CVF_DATA
10	CVF_5V
9	C_SYNC
8	OSD_B
7	OSD_R
6	OSD_G
5	LCD_B
4	LCD_G
3	LCD_R
2	CVF_3V
1	GND

CONNECTOR

JS01

JACK-PHONE

CNS02

54393-2192

21	SHOE_GND
20	SHOE_GND
19	SHOE_GND
18	SHOE_GND
17	SHOE_MIC_L
16	SHOE_MIC_R
15	SHOE_MIC_GND
14	SHOE_MIC_GND
13	ZOOM_MIC_CTL
12	SHOE_RESET
11	SHOE_ID1
10	TX
9	SHOE_ID2
8	RX
7	FLASH_TIME
6	CTS
5	P_SAVE
4	RTS
3	SHOE_UNREG
2	SHOE_UNREG
1	SHOE_UNREG

54393-3992