



Antenna and Device Information

★ Distance between Main antenna and edge

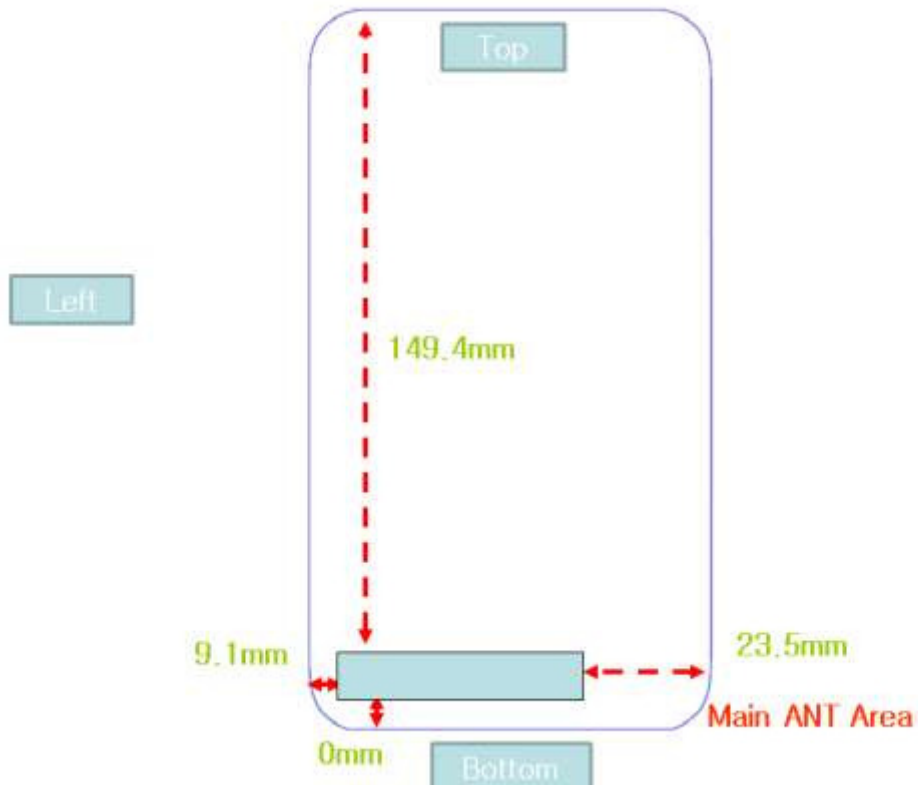

★ Distance between Bluetooth antenna and edge

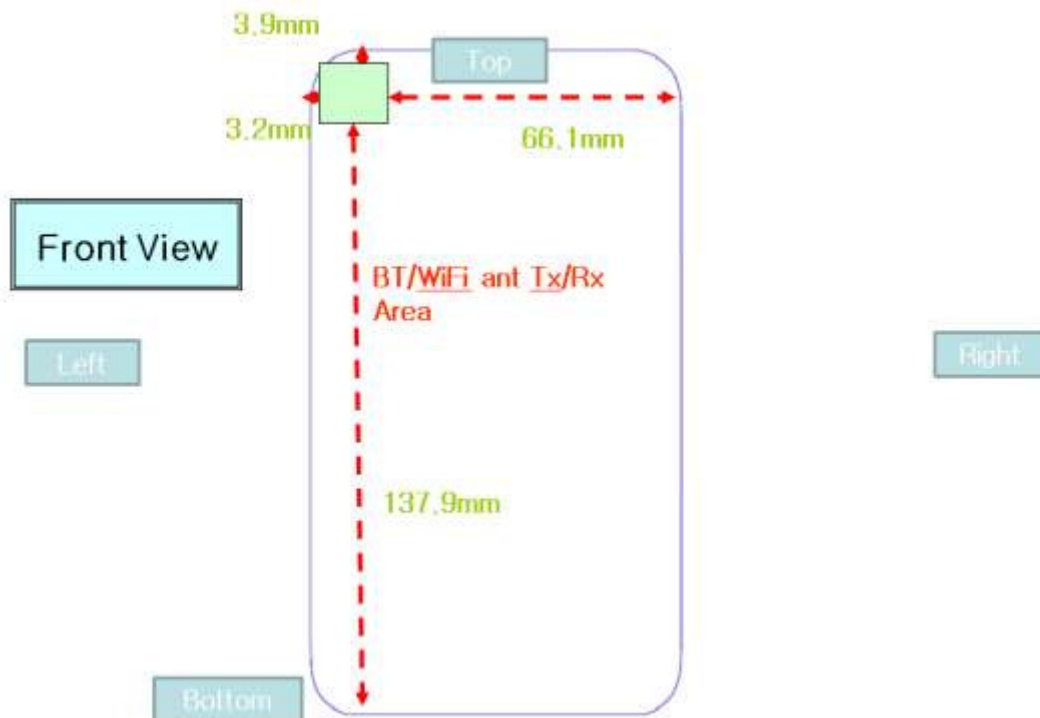

SAR Test Setup Photographs

■ Test Setup Photo (Left All)



■ Test Setup Photo(Left Touch/Tilt)



■ Test Setup Photo(Right All)



■ **Test Setup Photo (Right Touch/Tilt)**



■ **Test Setup Photo (Body All)**



■ **Test Setup Photo (Rear)**




[Distance of 1.0 cm from the EUT]

■ **Test Setup Photo (Front)**



[Distance of **1.0 cm** from the EUT]

■ Test Setup Photo (Left)

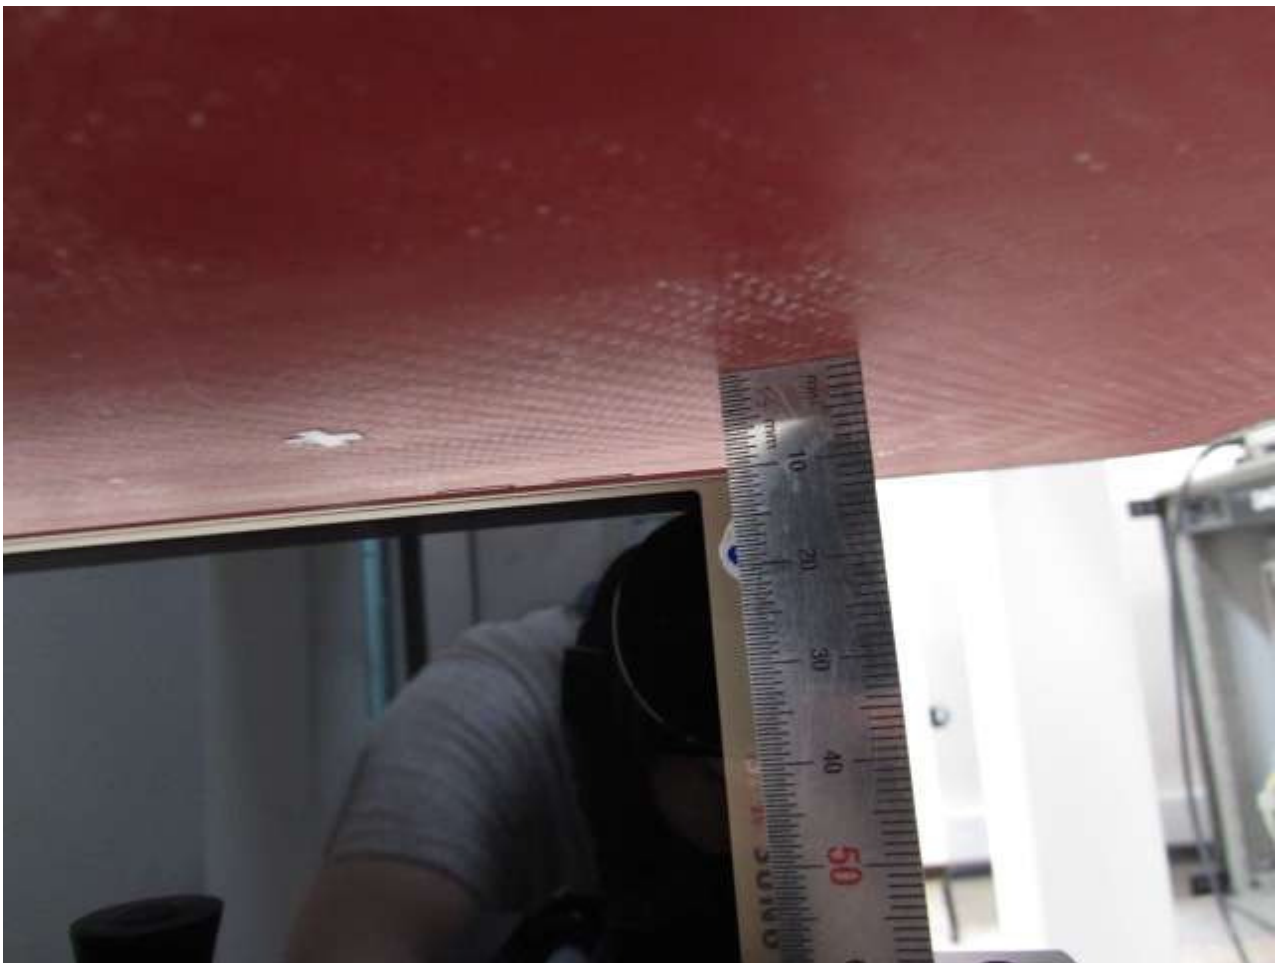


[Distance of 1.0 cm from the EUT]

■ **Test Setup Photo (Right)**




[Distance of 1.0 cm from the EUT]

■ **Test Setup Photo(Bottom)**

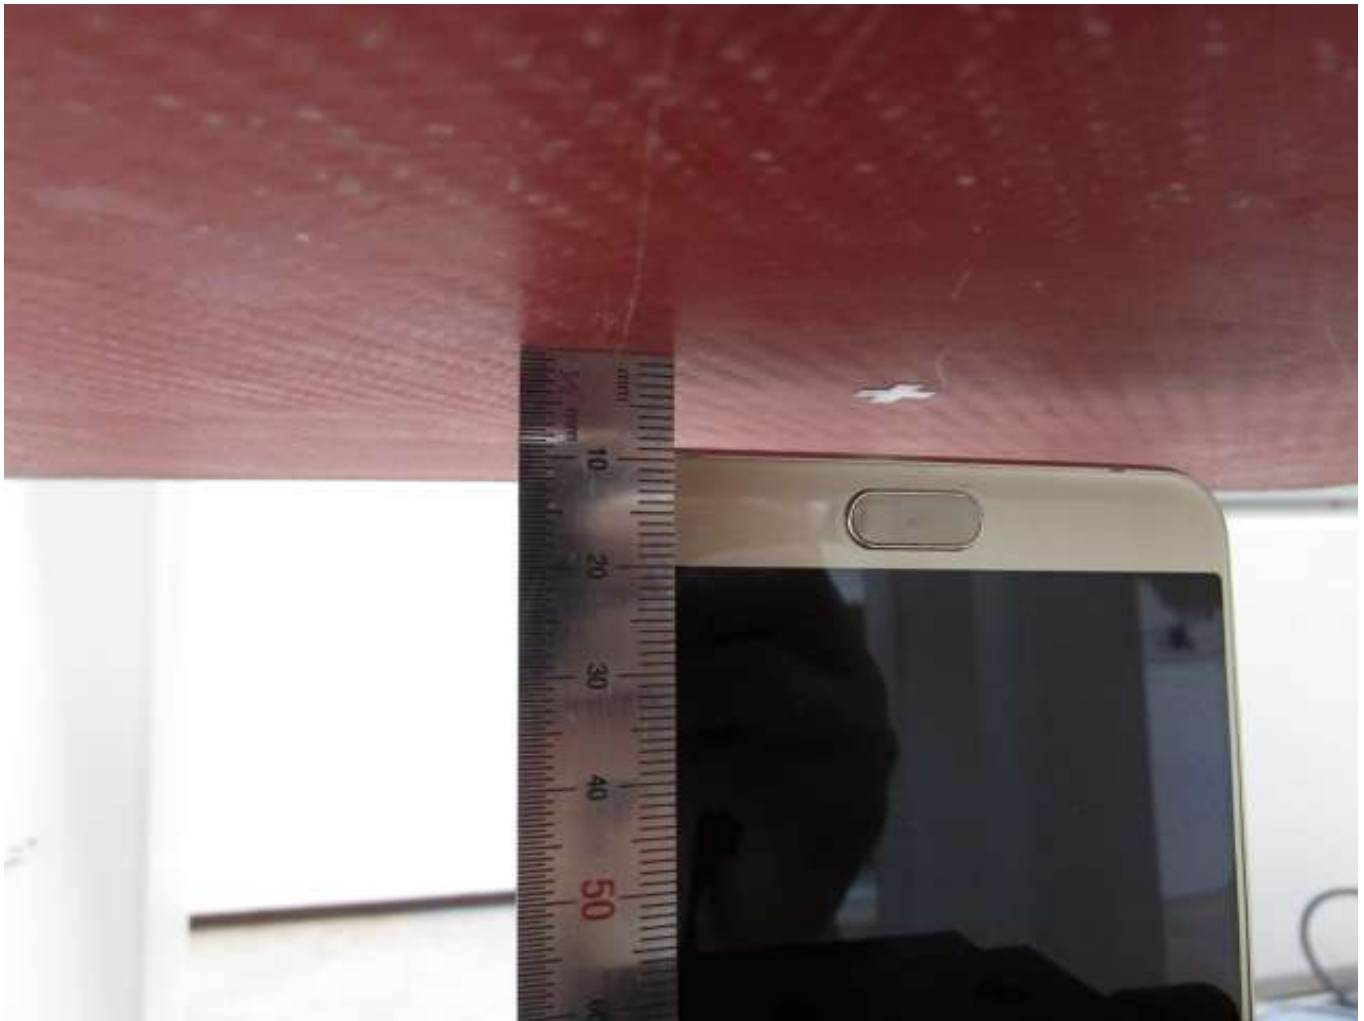

[Distance of 1.0 cm from the EUT]

■ **Test Setup Photo (Rear)**

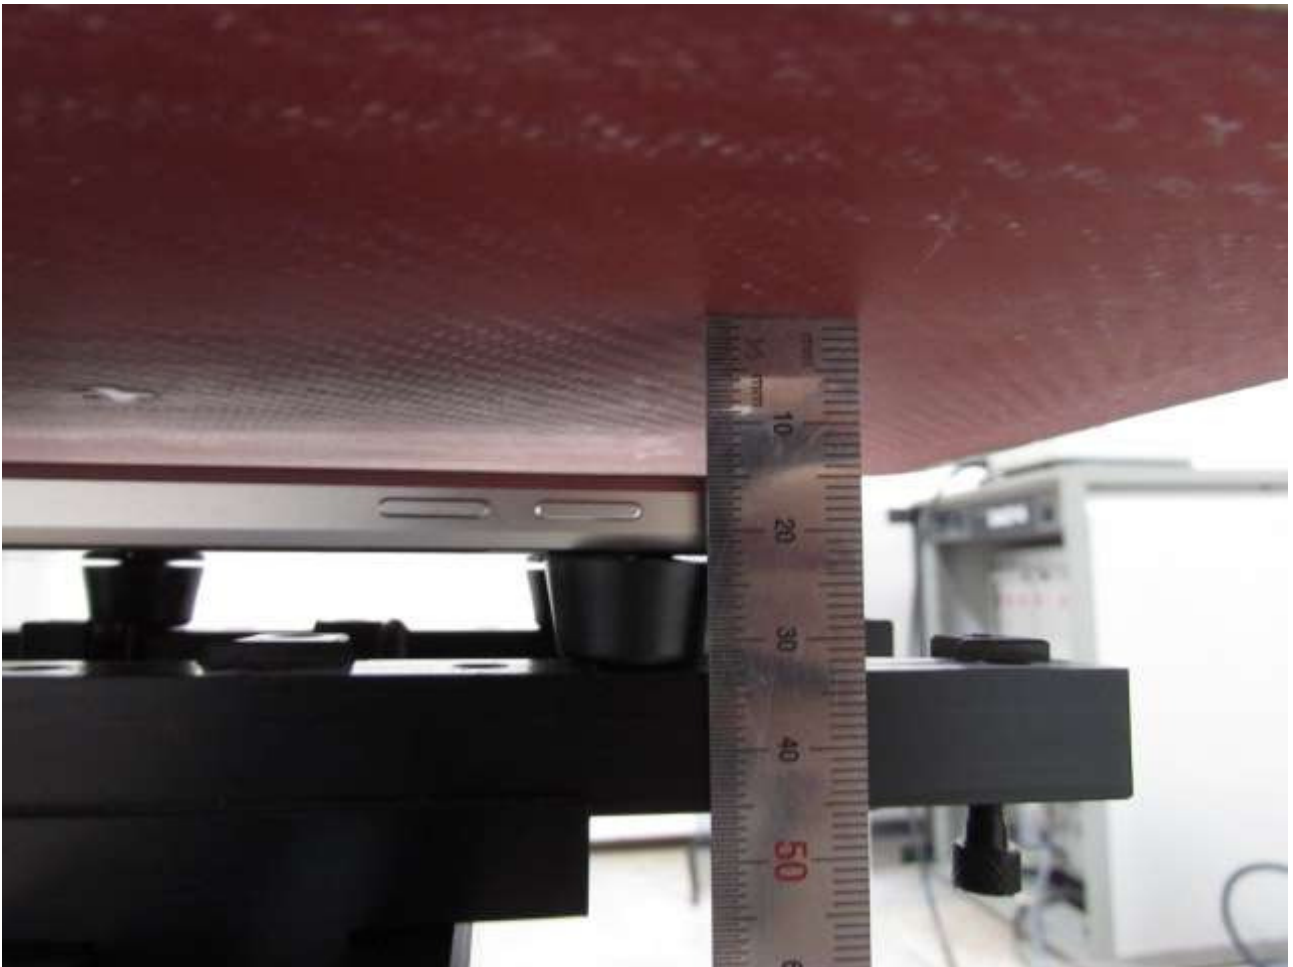

[Distance of 1.5 cm from the EUT]

■ Test Setup Photo (Front)



[Distance of **1.5 cm** from the EUT]

■ Test Setup Photo (Front for Extremity SAR)



[Distance of 0 cm from the EUT]

■ Test Setup Photo (Rear for Extremity SAR)



[Distance of **0 cm** from the EUT]

■ **Test Setup Photo (Left for Extremity SAR)**




[Distance of 0 cm from the EUT]

■ **Test Setup Photo(Right for Extremity SAR)**




[Distance of 0 mm from the EUT]

■ Test Setup Photo(Bottom for Extremity SAR)

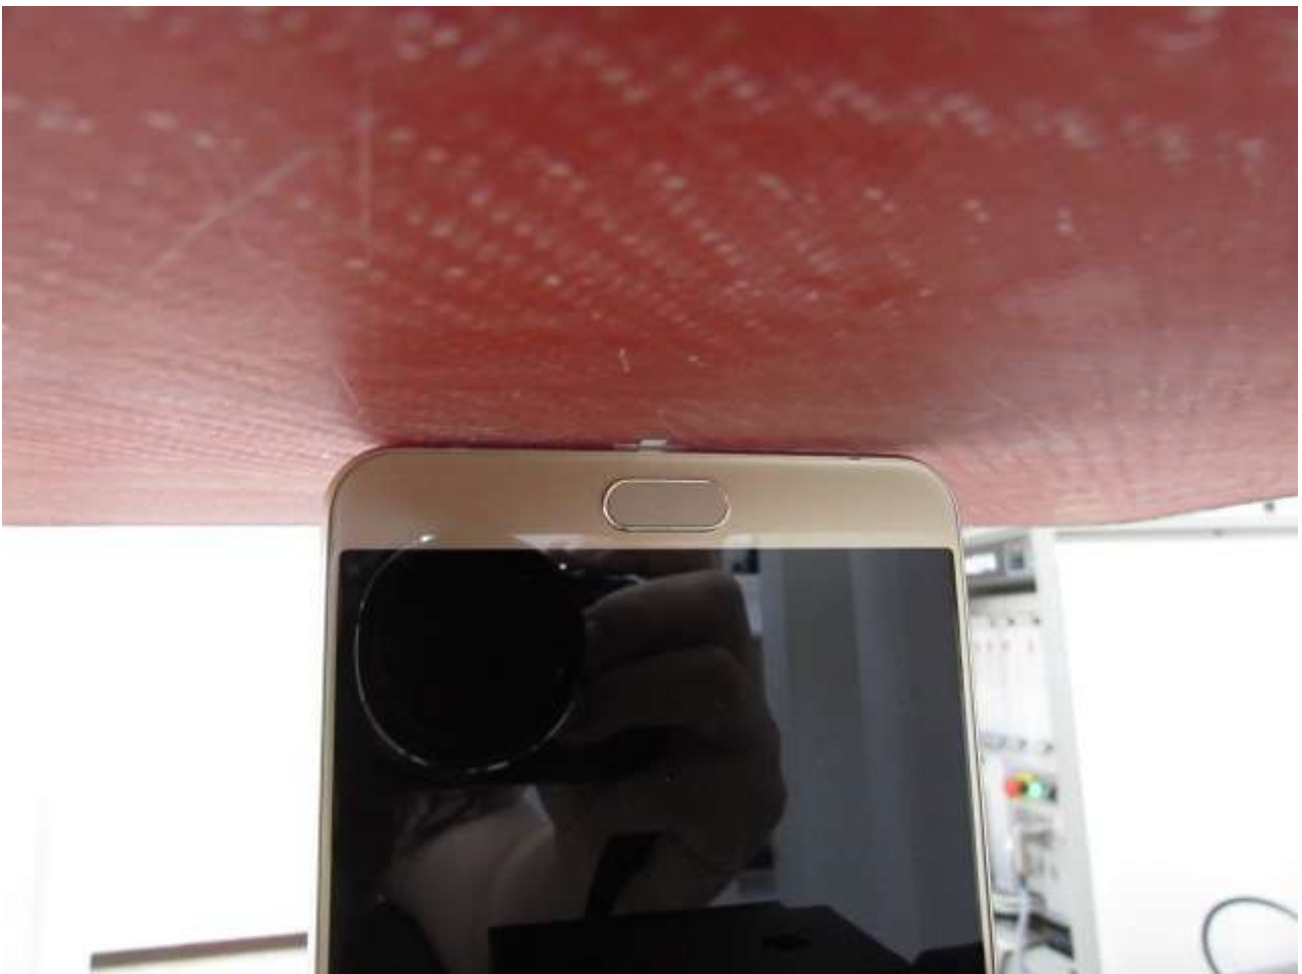

[Distance of 0 mm from the EUT]

■ **Test Setup Photo(Rear for Extremity SAR) – Sensor OFF**

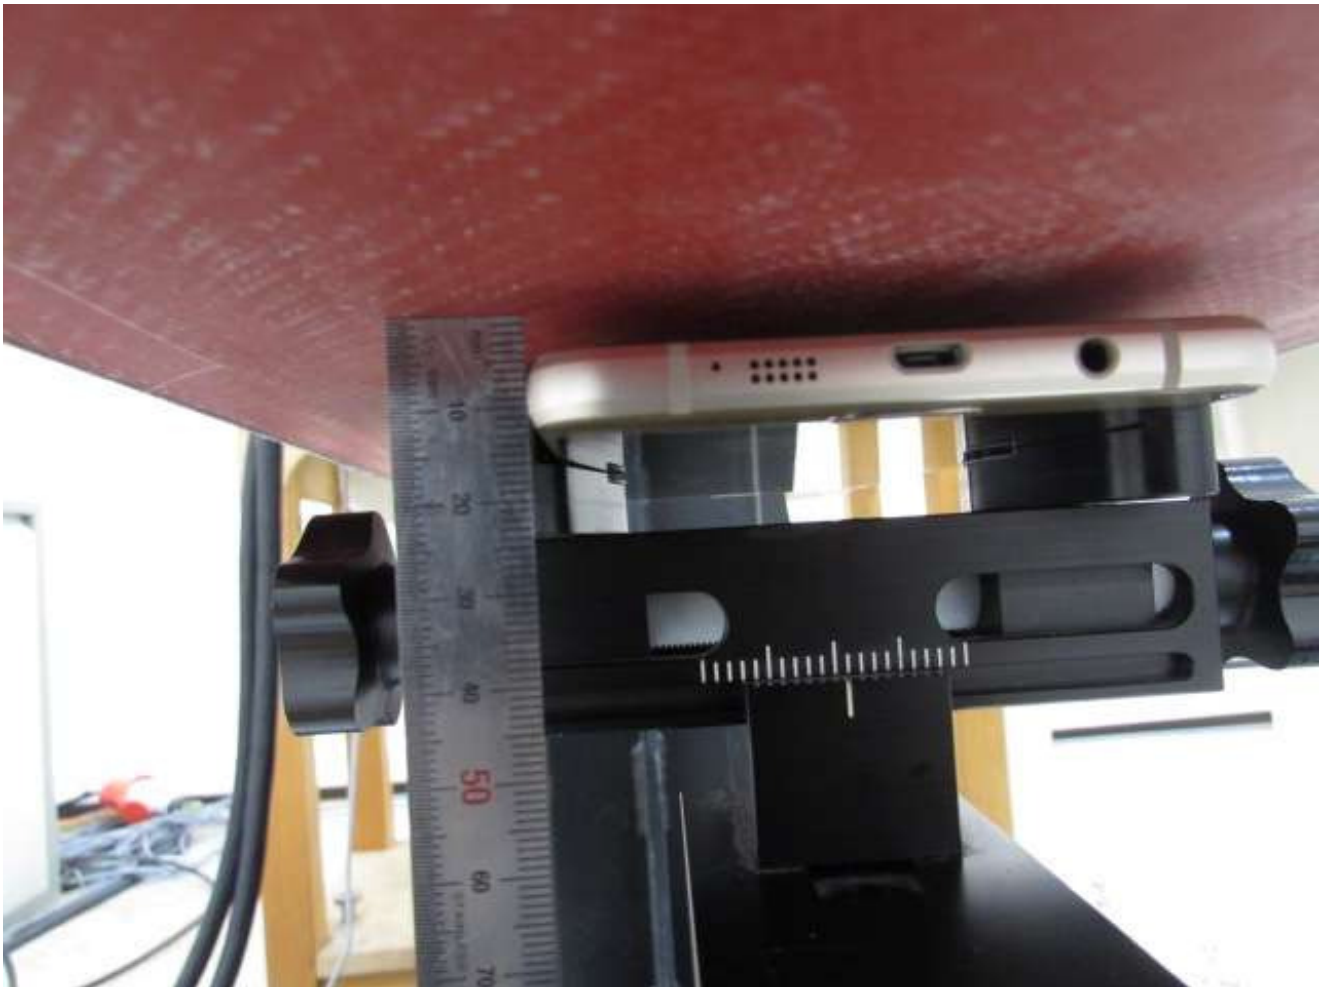


[Distance of 6 mm from the EUT]

■ **Test Setup Photo(Front for Extremity SAR) – Sensor OFF**



[Distance of 6 mm from the EUT]

■ **Test Setup Photo(Bottom for Extremity SAR) – Sensor OFF**

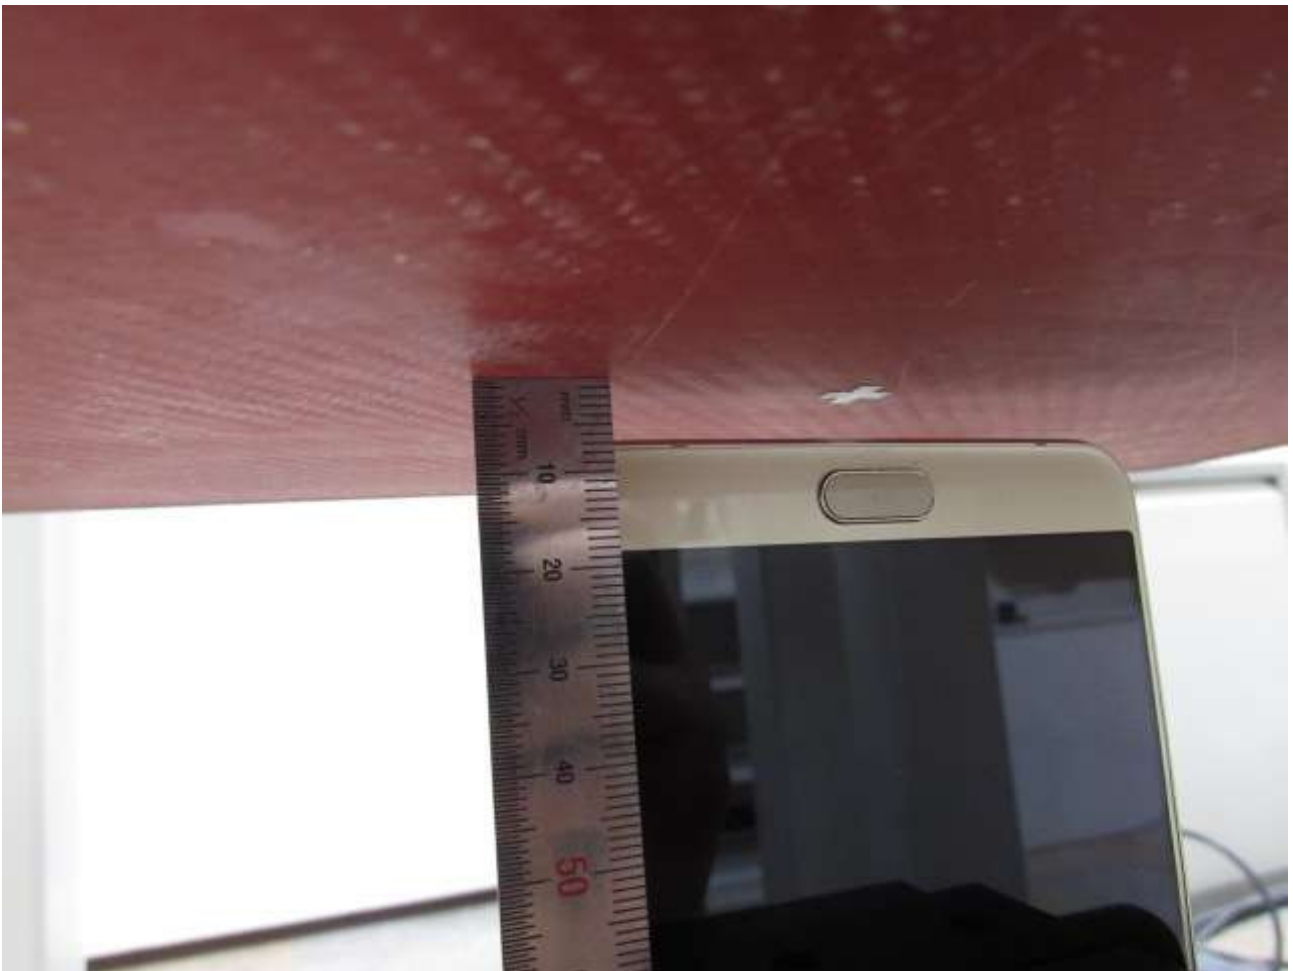

[Distance of 7 mm from the EUT]