


Attachment 8.


- DUT Antenna Information and SAR Test SETUP PHOTOGRAPHS


DUT Antenna Information

★ Distance between BT/WLAN antenna and Main antenna

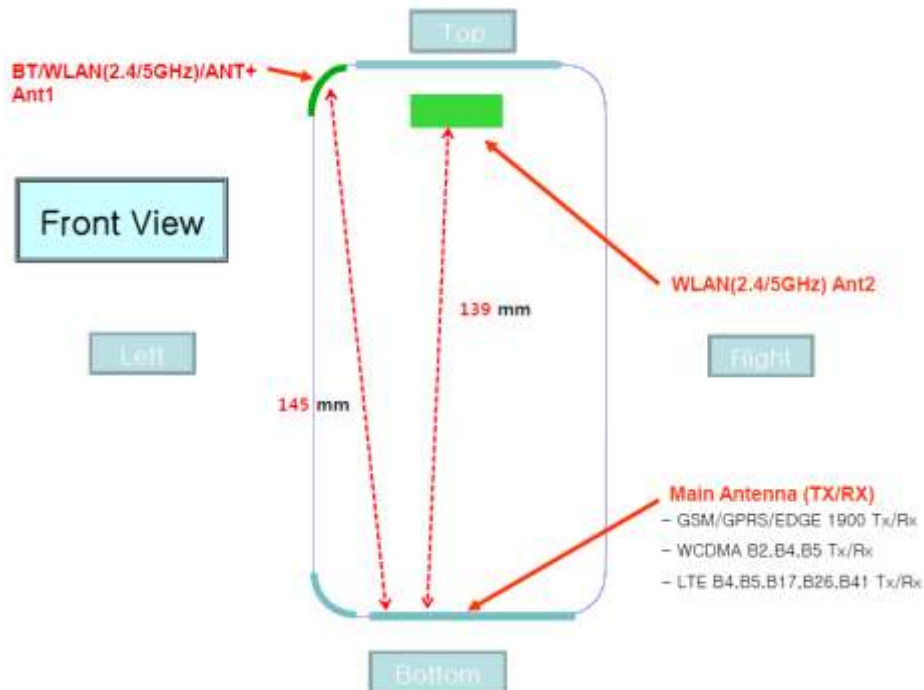

★ Distance between antenna and edge

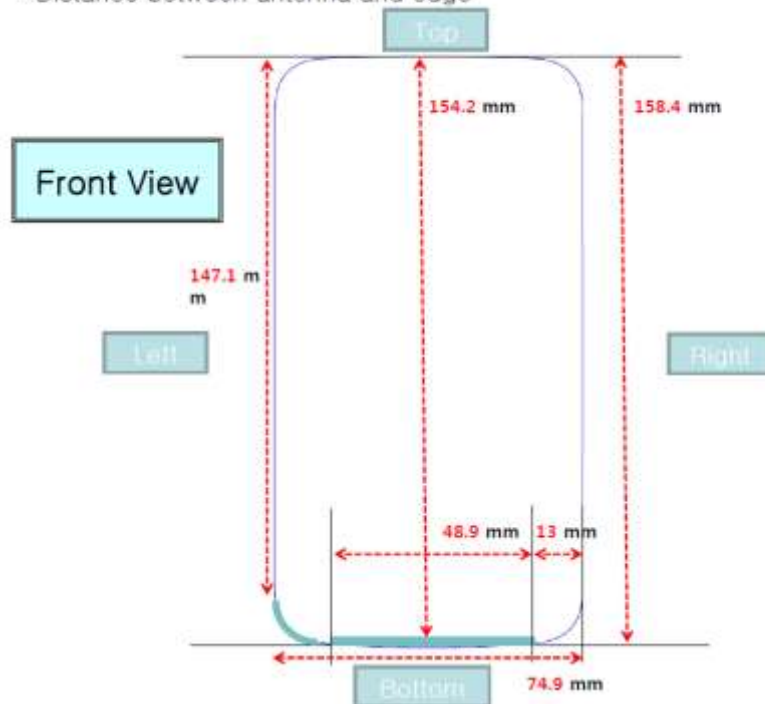

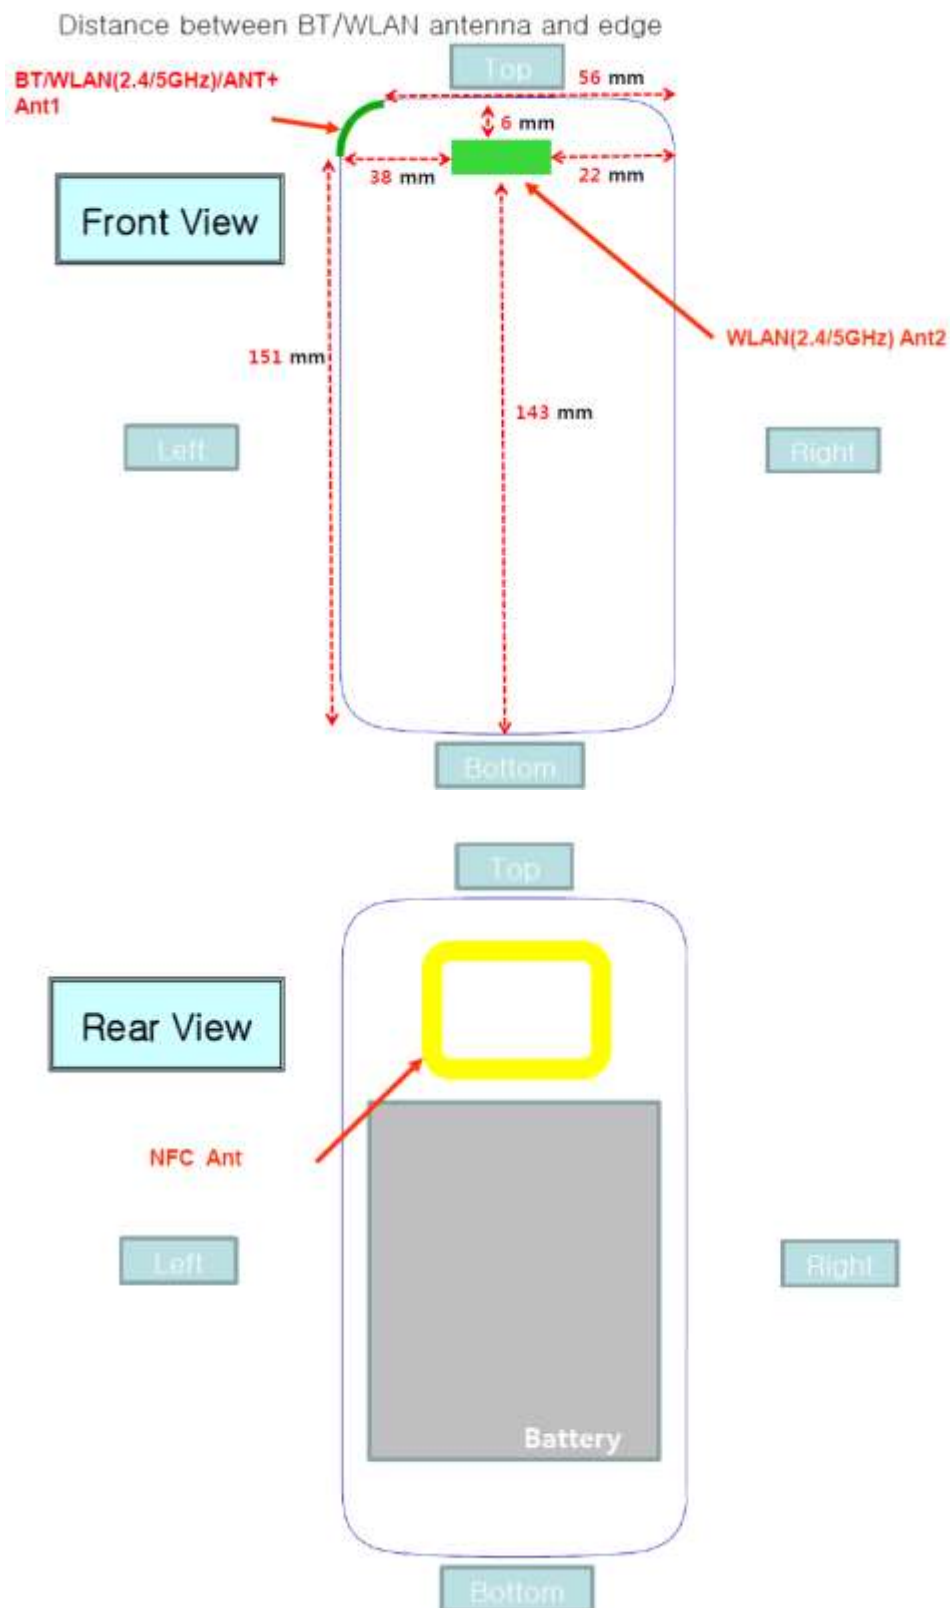

SAR Test Setup Photographs

■ **Test Setup Photo(Left All)**



■ Test Setup Photo(Left Touch/Tilt)




■ **Test Setup Photo(Right All)**




■ Test Setup Photo (Right Touch/Tilt)



■ Test Setup Photo (Body All)

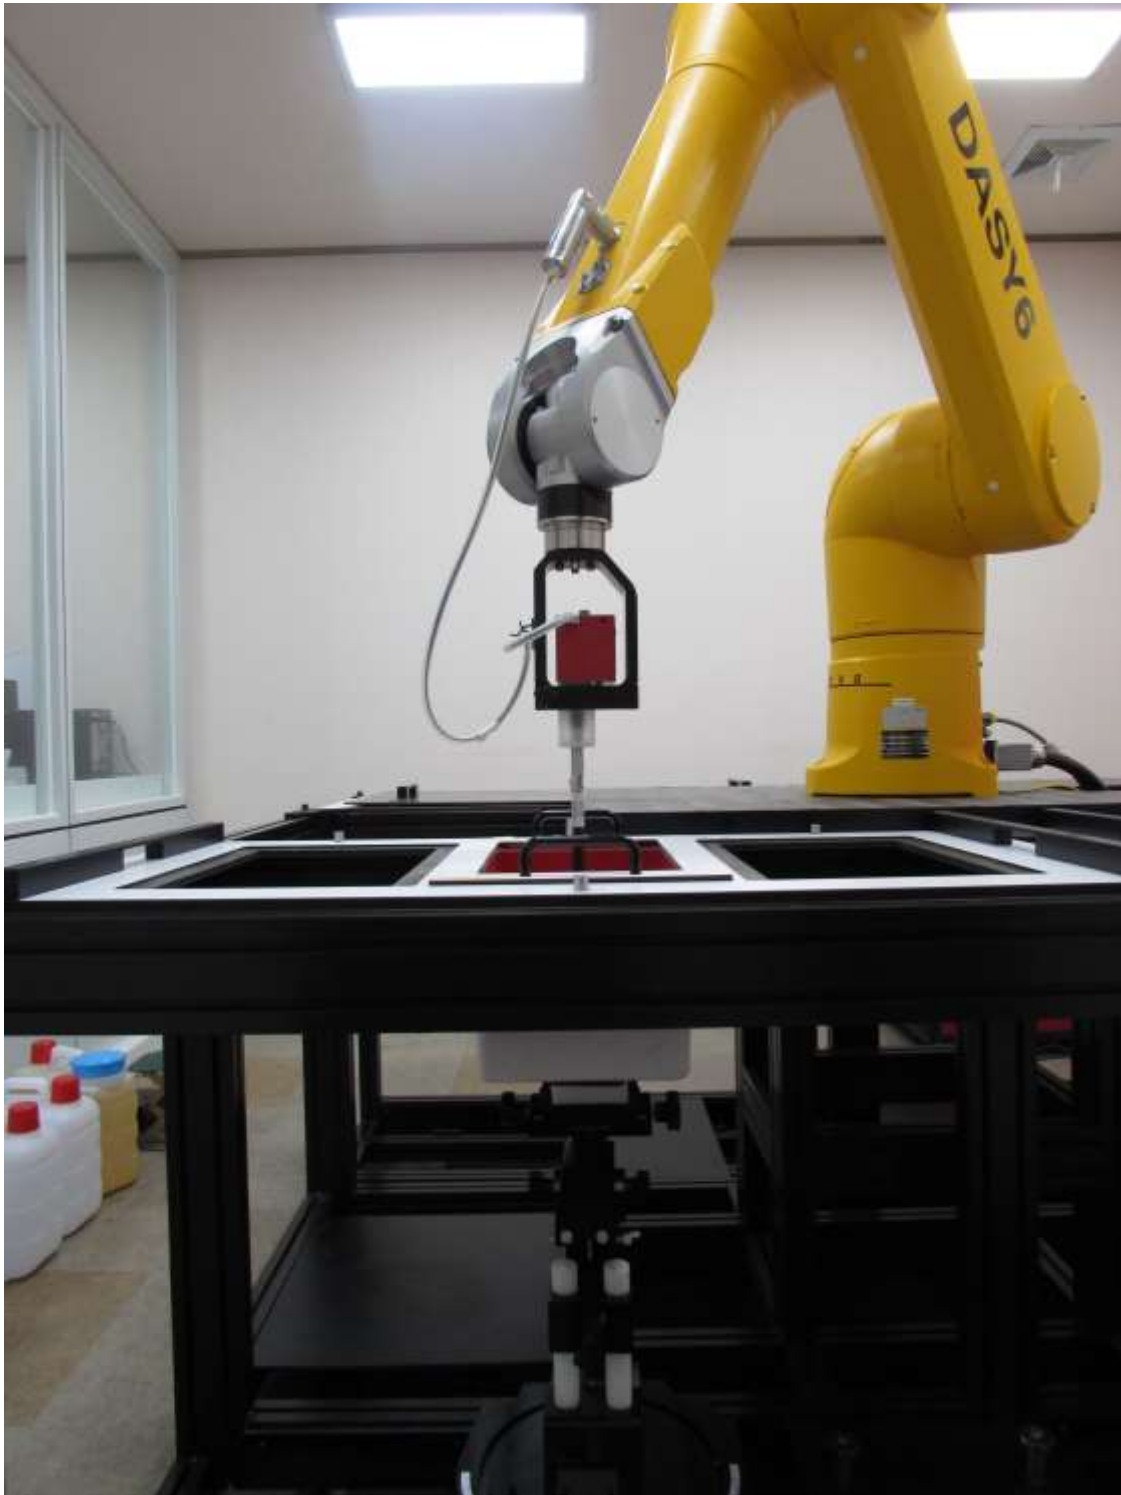

■ **Setup Photo (Rear)**

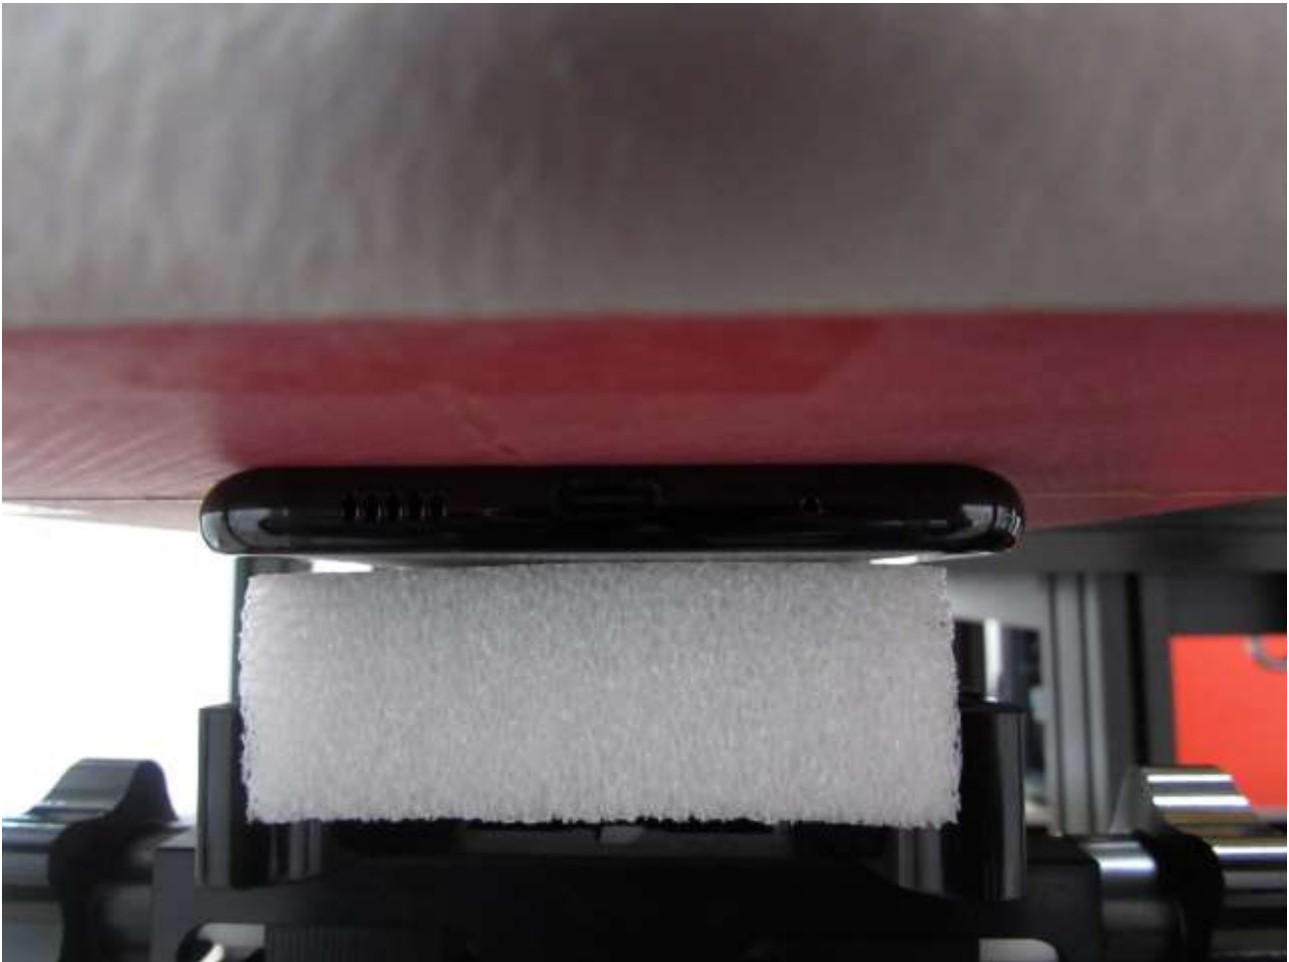

[Distance of 0 mm from the EUT]

■ Test Setup Photo (Rear)



[Distance of 5 mm from the EUT]

■ Test Setup Photo (Rear)




[Distance of 10 mm from the EUT]

■ **Test Setup Photo (Rear)**




[Distance of 15 mm from the EUT]

■ **Test Setup Photo (Front)**

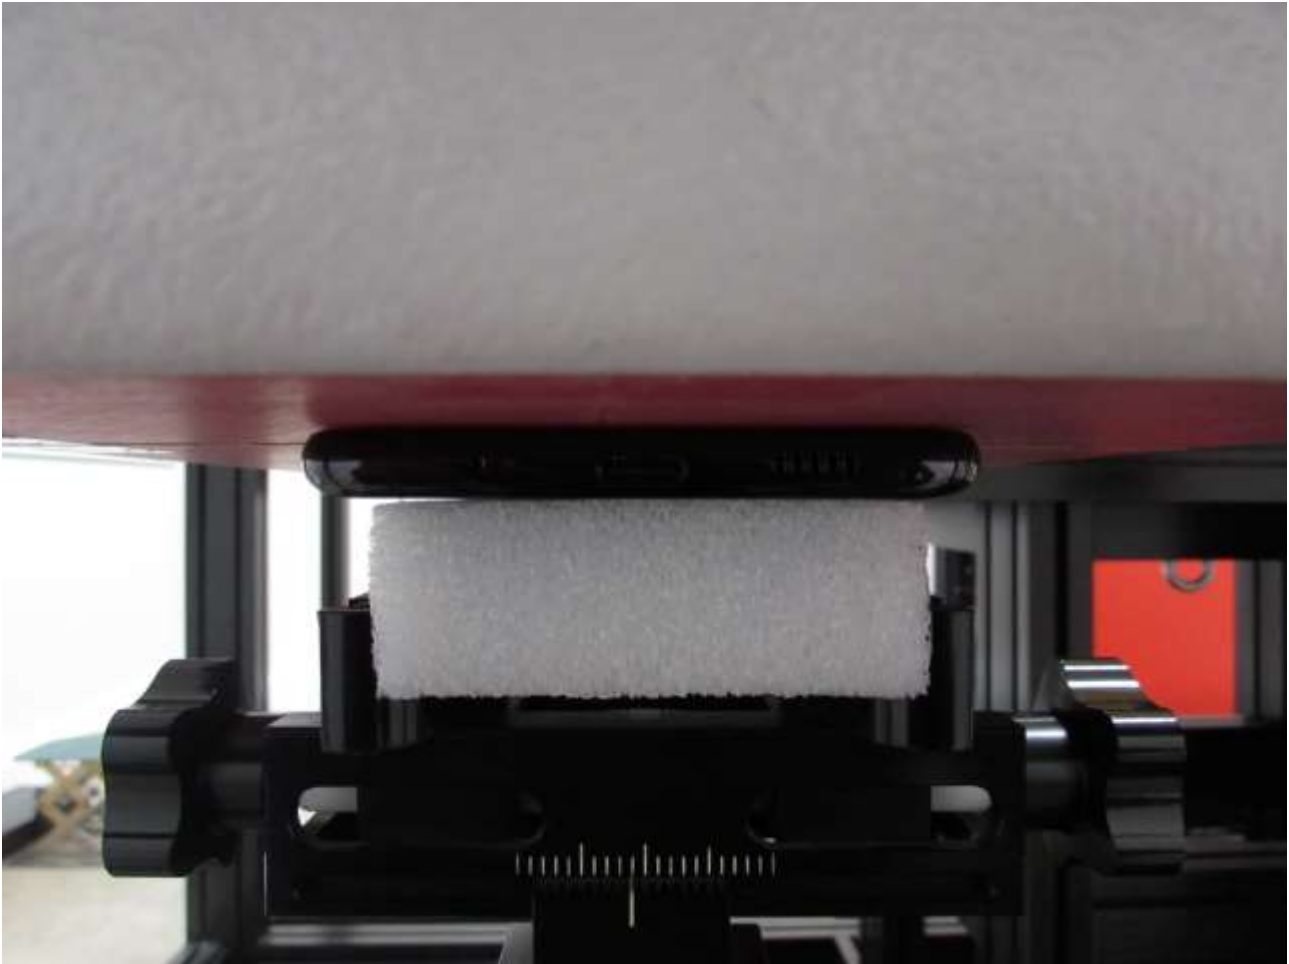


[Distance of 0 mm from the EUT]

■ **Test Setup Photo (Front)**

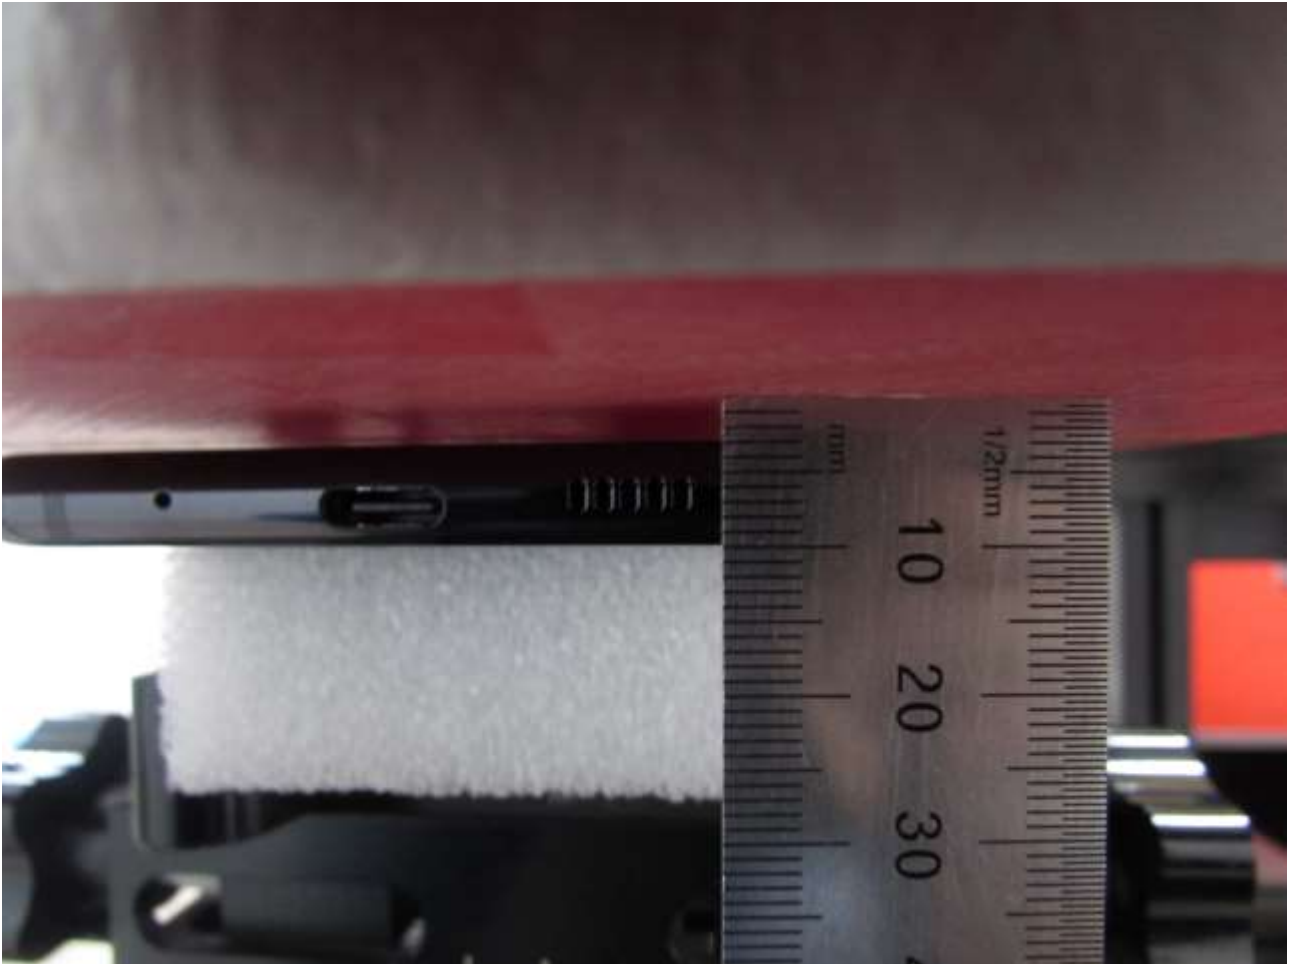

[Distance of 3 mm from the EUT]

■ **Test Setup Photo (Front)**

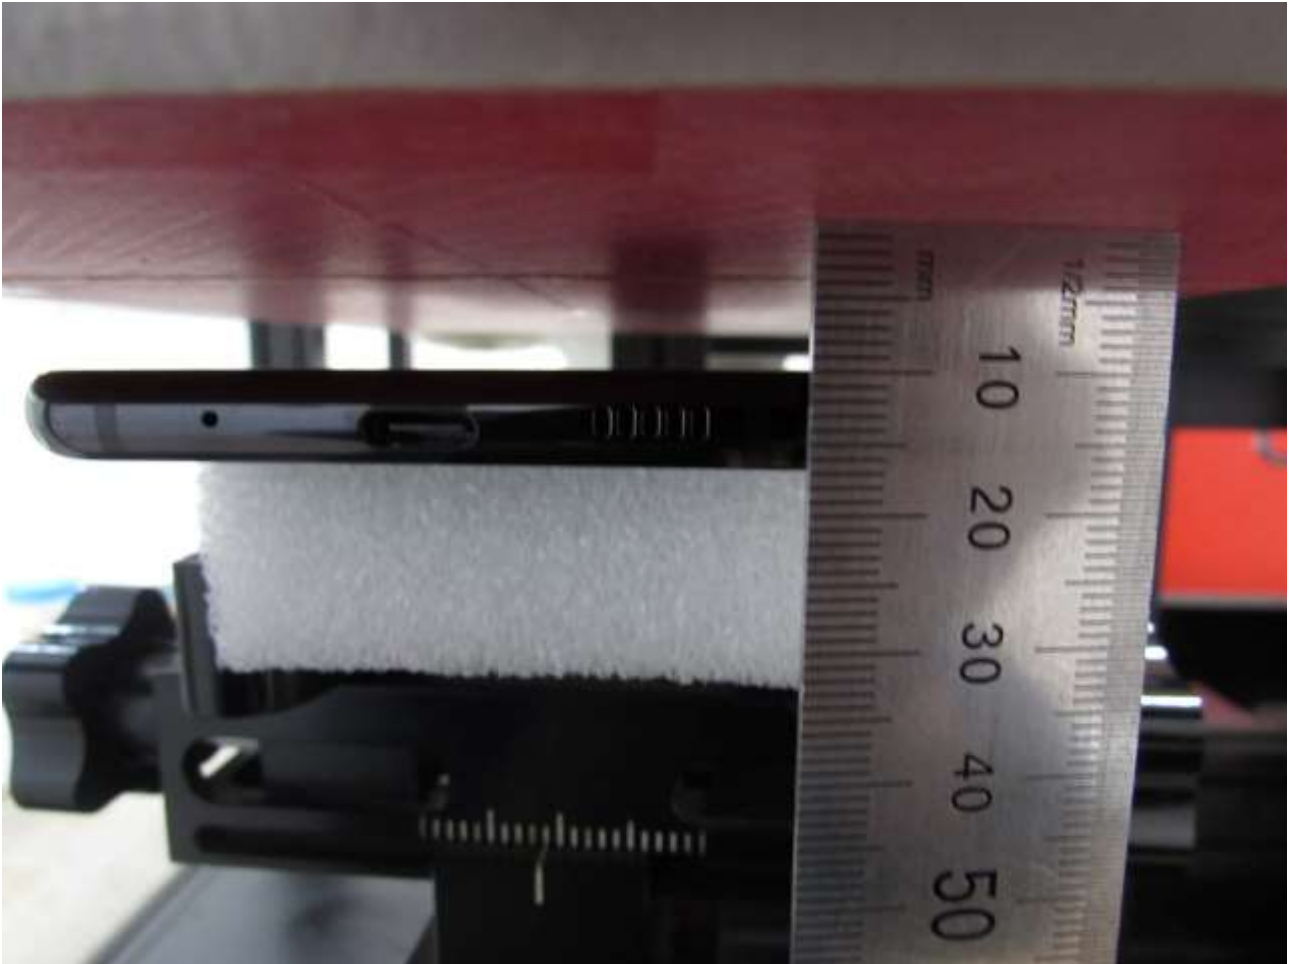

[Distance of 10 mm from the EUT]

■ Test Setup Photo (Front)



[Distance of 15 mm from the EUT]

■ Test Setup Photo (Left)



[Distance of 0 mm from the EUT]

■ **Test Setup Photo (Left)**



[Distance of 10 mm from the EUT]

■ Test Setup Photo (Right)



[Distance of 0 mm from the EUT]

■ Test Setup Photo (Right)



[Distance of 10 mm from the EUT]

■ **Test Setup Photo (Top)**



[Distance of 0 mm from the EUT]

■ **Test Setup Photo (Top)**



[Distance of 10 mm from the EUT]

■ **Test Setup Photo (Bottom)**



[Distance of 0 mm from the EUT]

■ **Test Setup Photo (Bottom)**



[Distance of 10 mm from the EUT]

■ **Test Setup Photo (Bottom)**



[Distance of 8 mm from the EUT]