



Attachment 8.

- DUT Antenna Information and SAR Test SETUP PHOTOGRAPHS


DUT Antenna Information

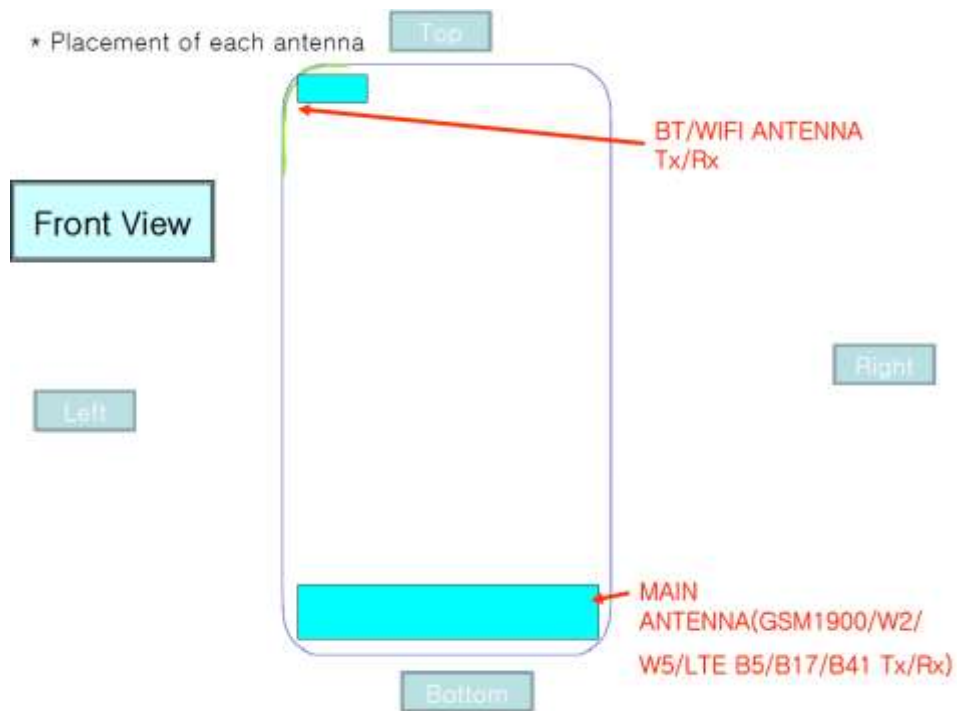


* Distance between Main antenna and edge

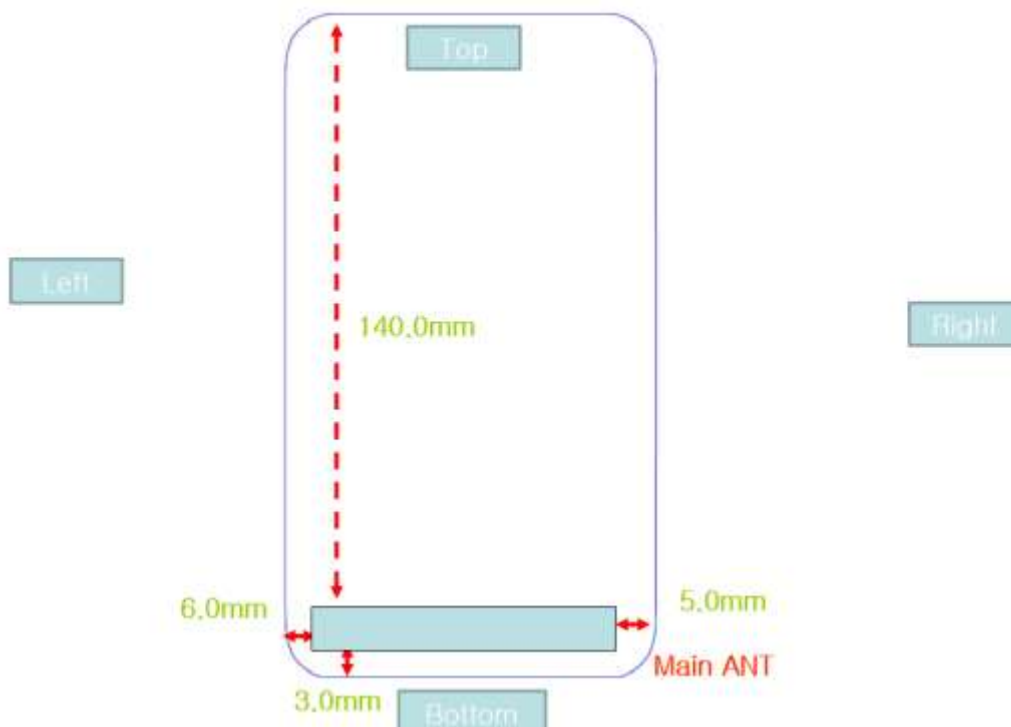


* Distance between Bluetooth antenna and edge

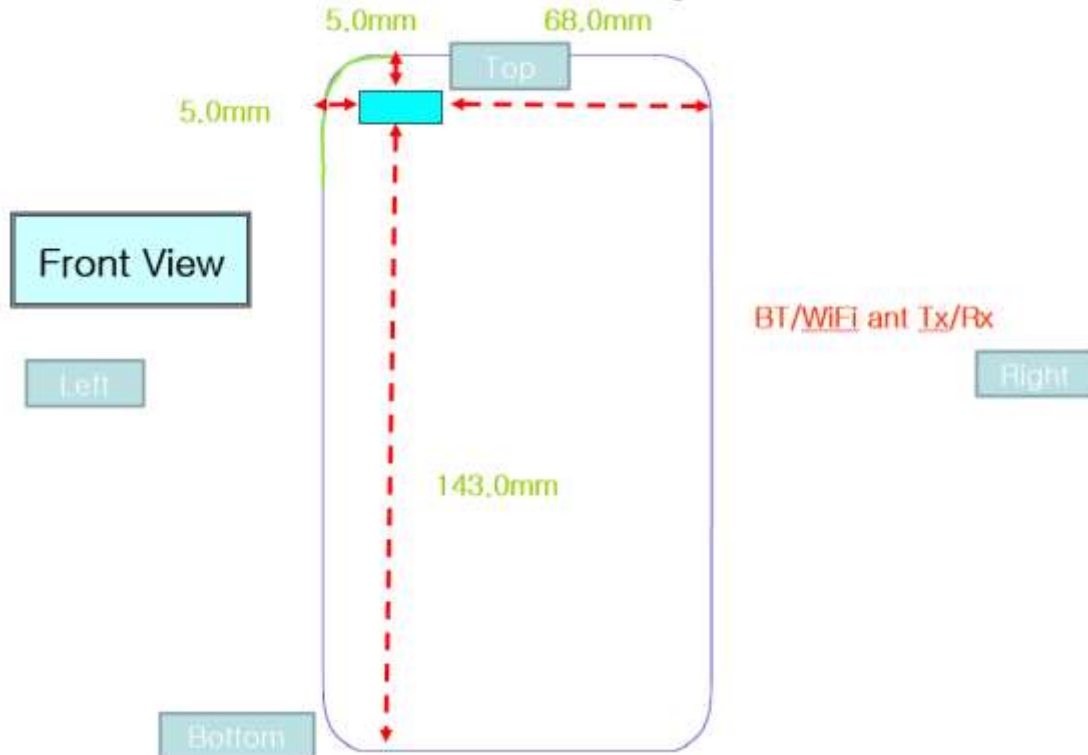

* Diagonal dimension of LCD and device

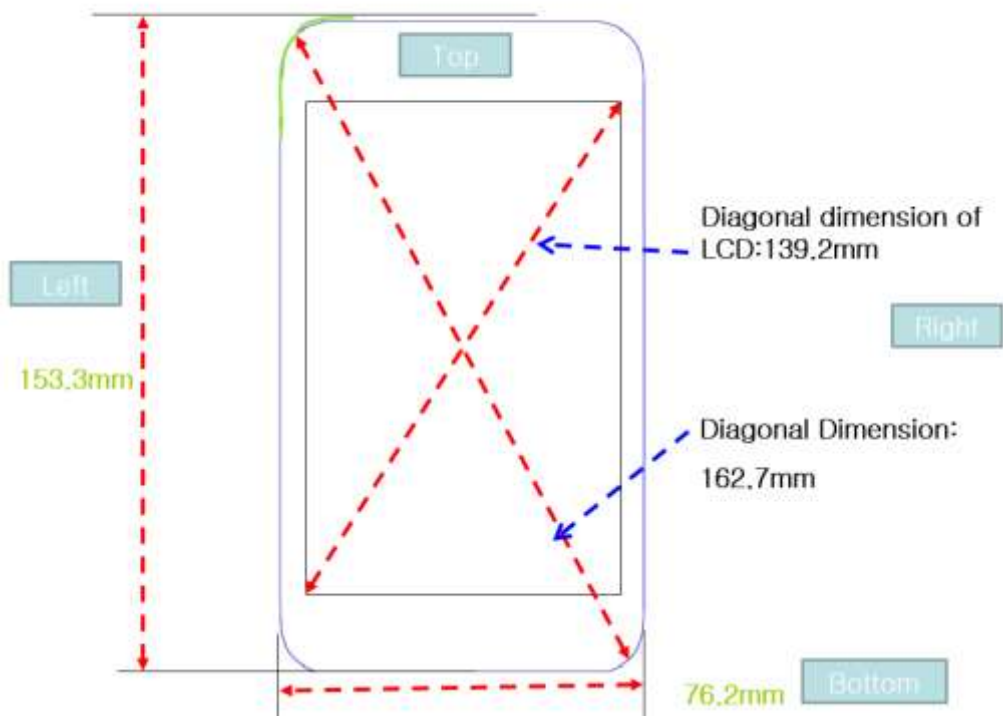

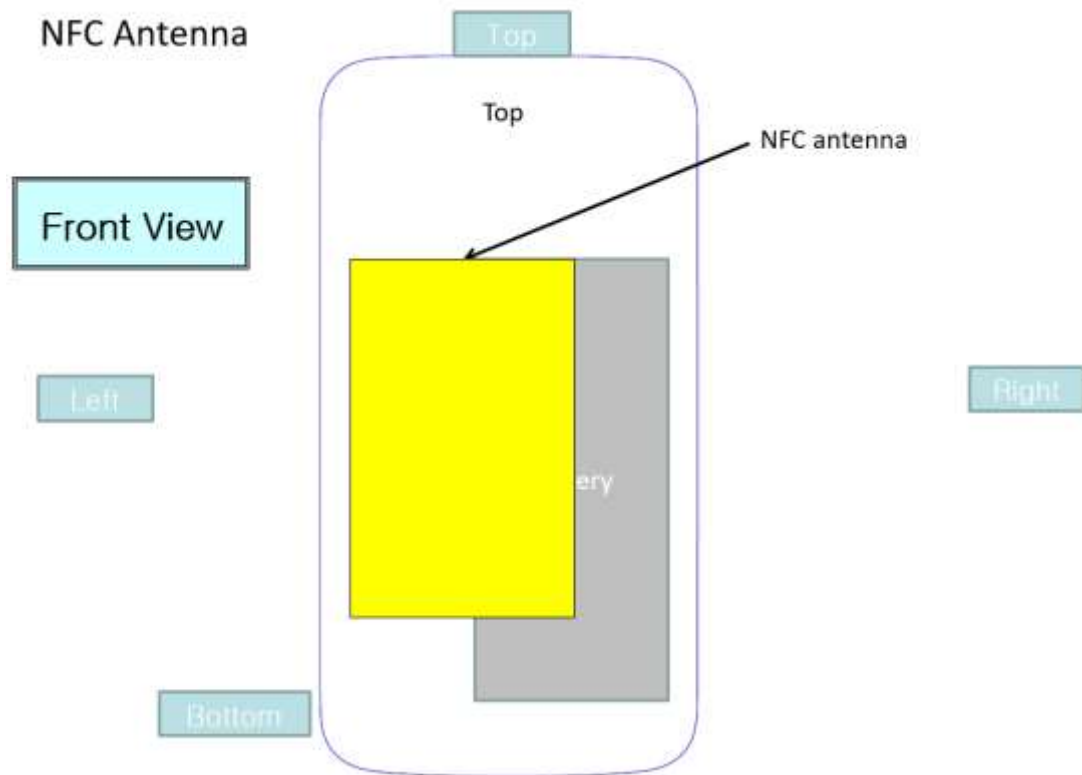


SAR Test Setup Photographs


■ Test Setup Photo(Left All)



■ Test Setup Photo(Left Touch/Tilt)

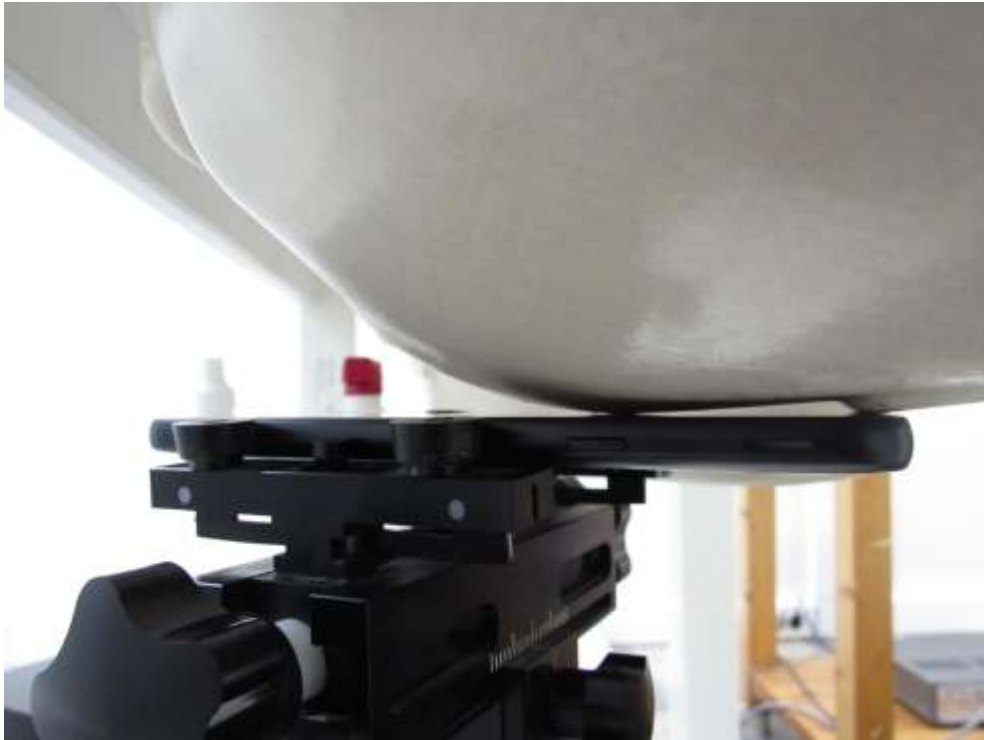

■ Test Setup Photo(Right All)

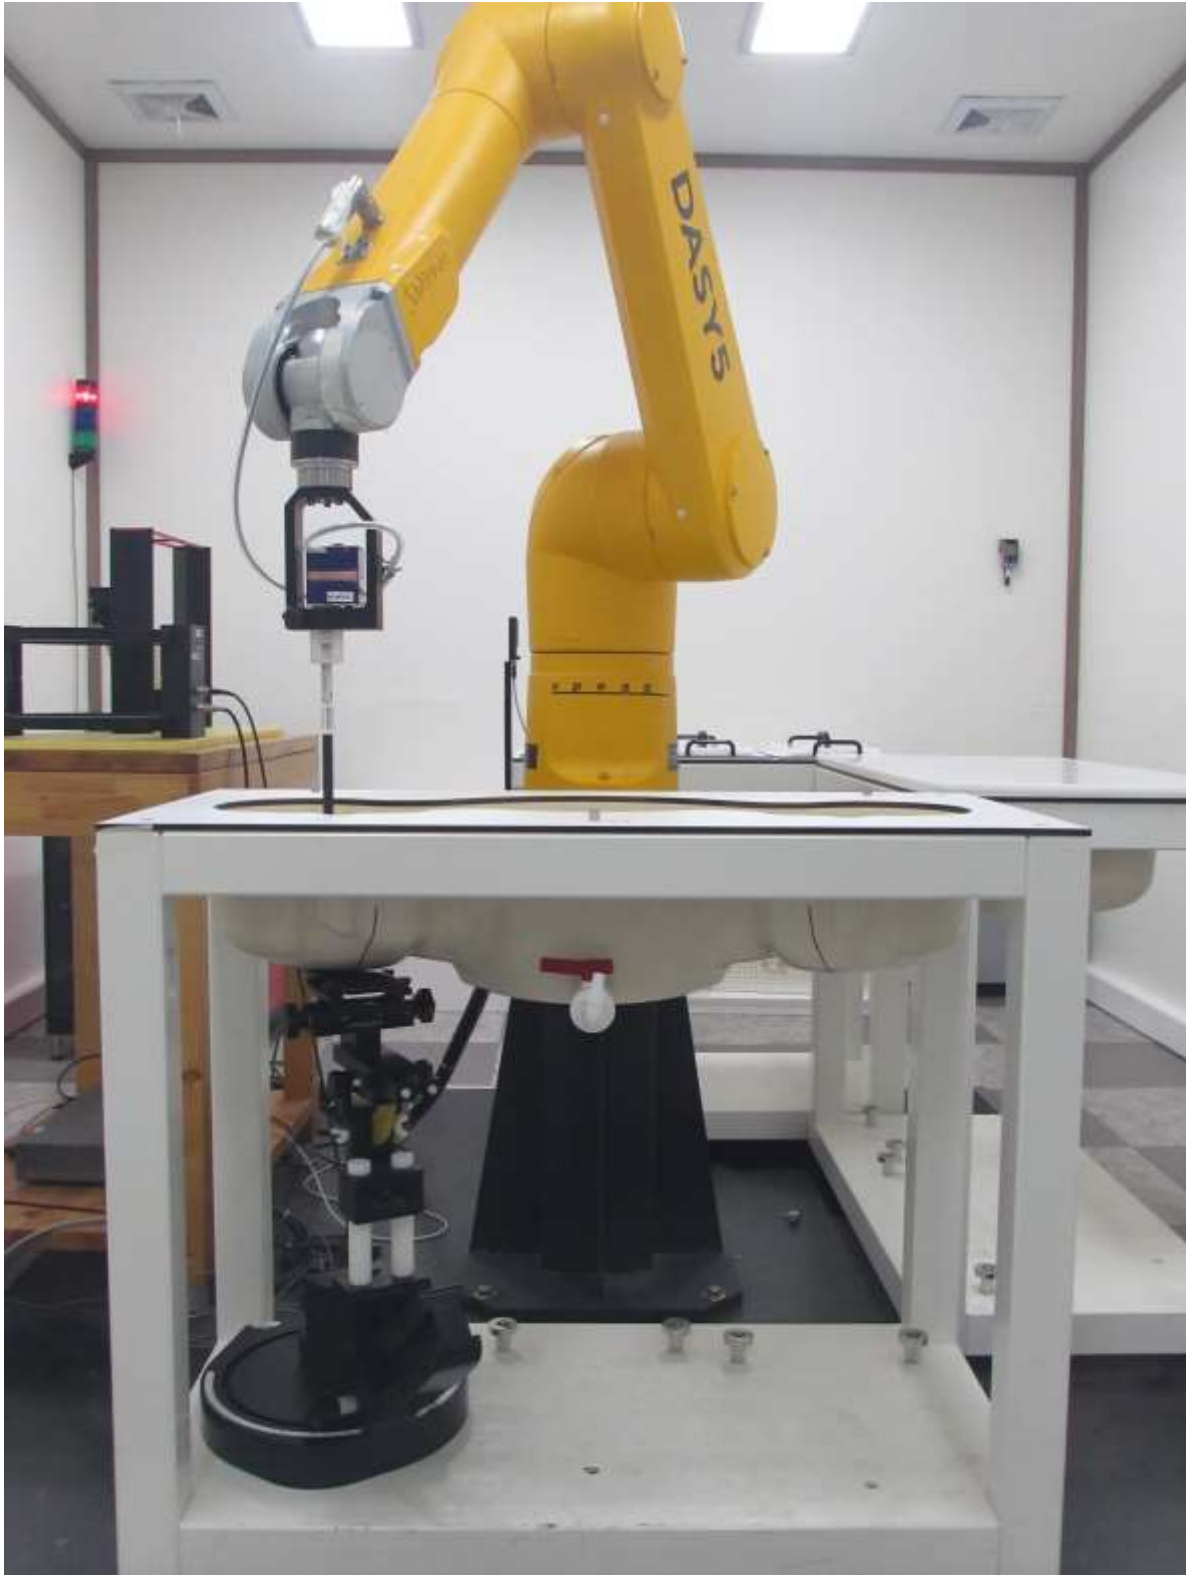

■ Test Setup Photo (Right Touch/Tilt)



■ **Test Setup Photo (Body All)**



■ **Test Setup Photo (Rear)**



[Distance of 1.0 cm from the EUT]

■ **Test Setup Photo (Front)**




[Distance of 1.0 cm from the EUT]

■ Test Setup Photo (Left)



[Distance of 1.0 cm from the EUT]

■ Test Setup Photo (Right)

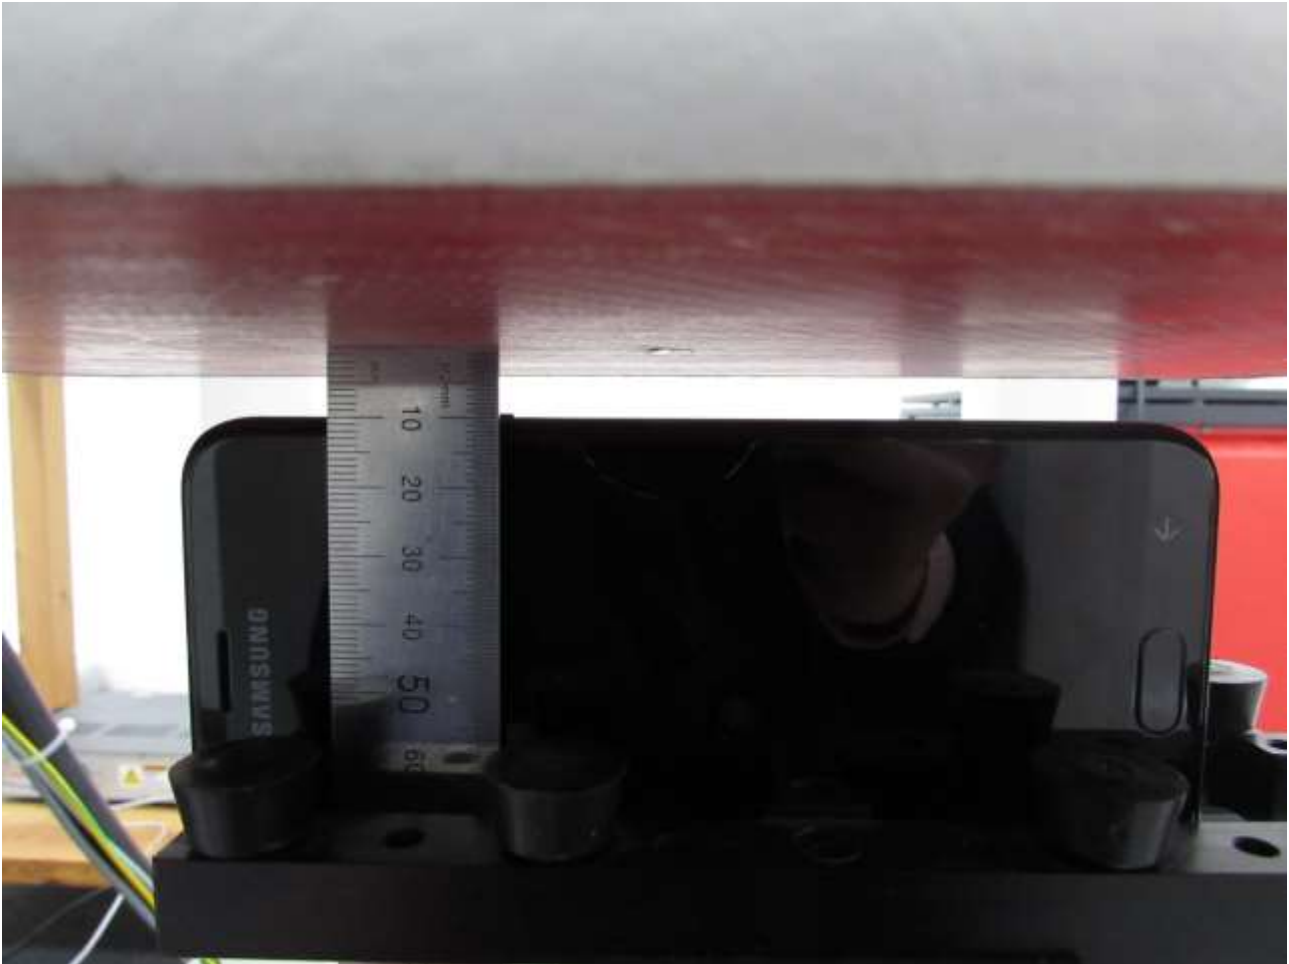

[Distance of 1.0 cm from the EUT]

■ Test Setup Photo (Top)



[Distance of 1.0 cm from the EUT]

■ **Test Setup Photo (Bottom)**




[Distance of 1.0 cm from the EUT]

■ **Test Setup Photo (Rear)**



[Distance of 1.5 cm from the EUT]

■ **Test Setup Photo (Front)**

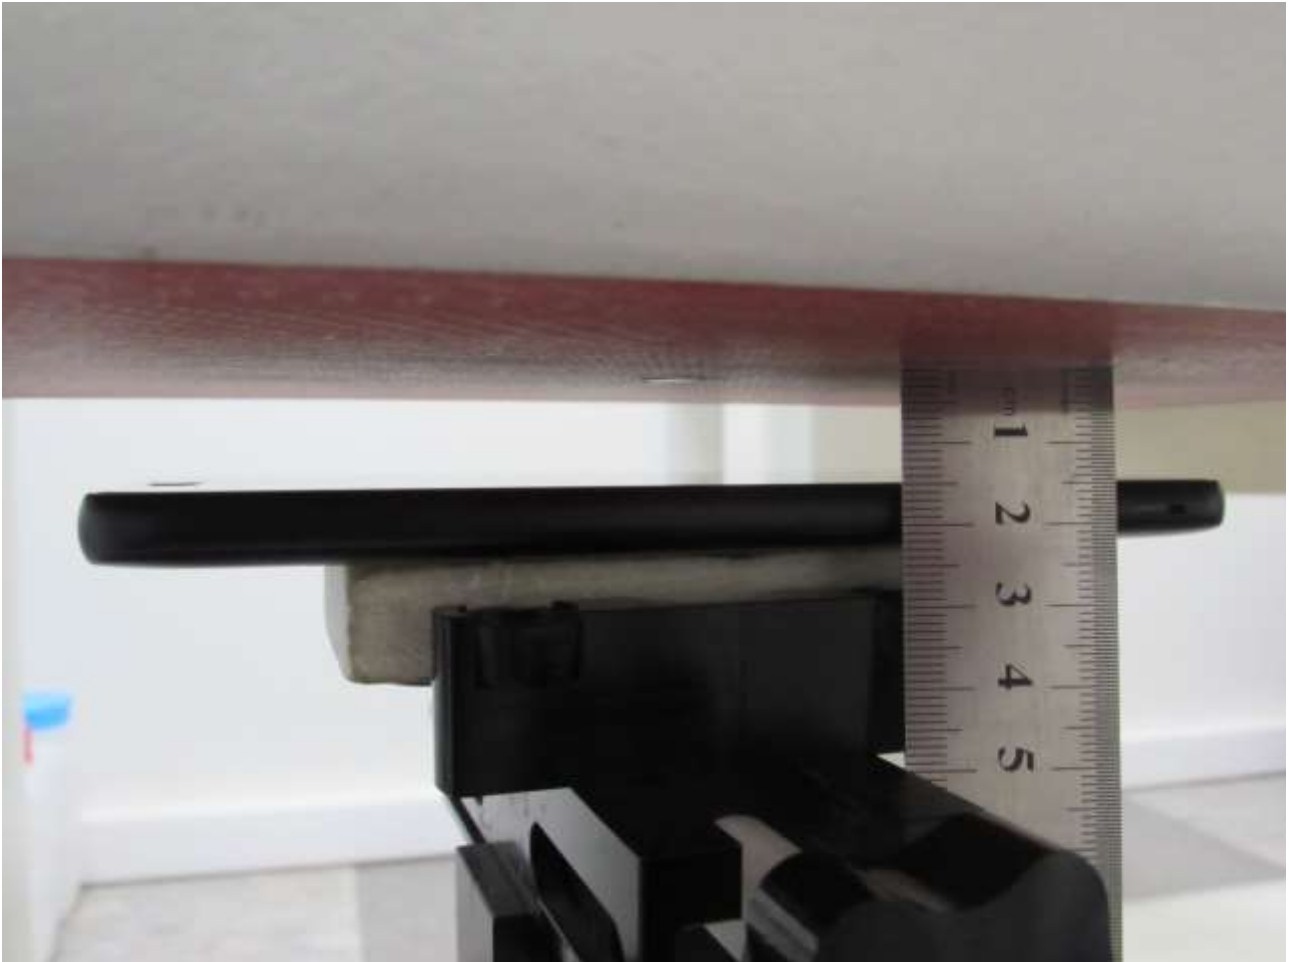

[Distance of 1.5 cm from the EUT]

■ **Test Setup Photo (Extremity All)**



■ **Extremity SAR Test Setup Rear**




[Distance of 0 cm from the EUT]

■ **Extremity SAR Test Setup Front**




[Distance of 0 cm from the EUT]

■ **Extremity SAR Test Setup Left side**

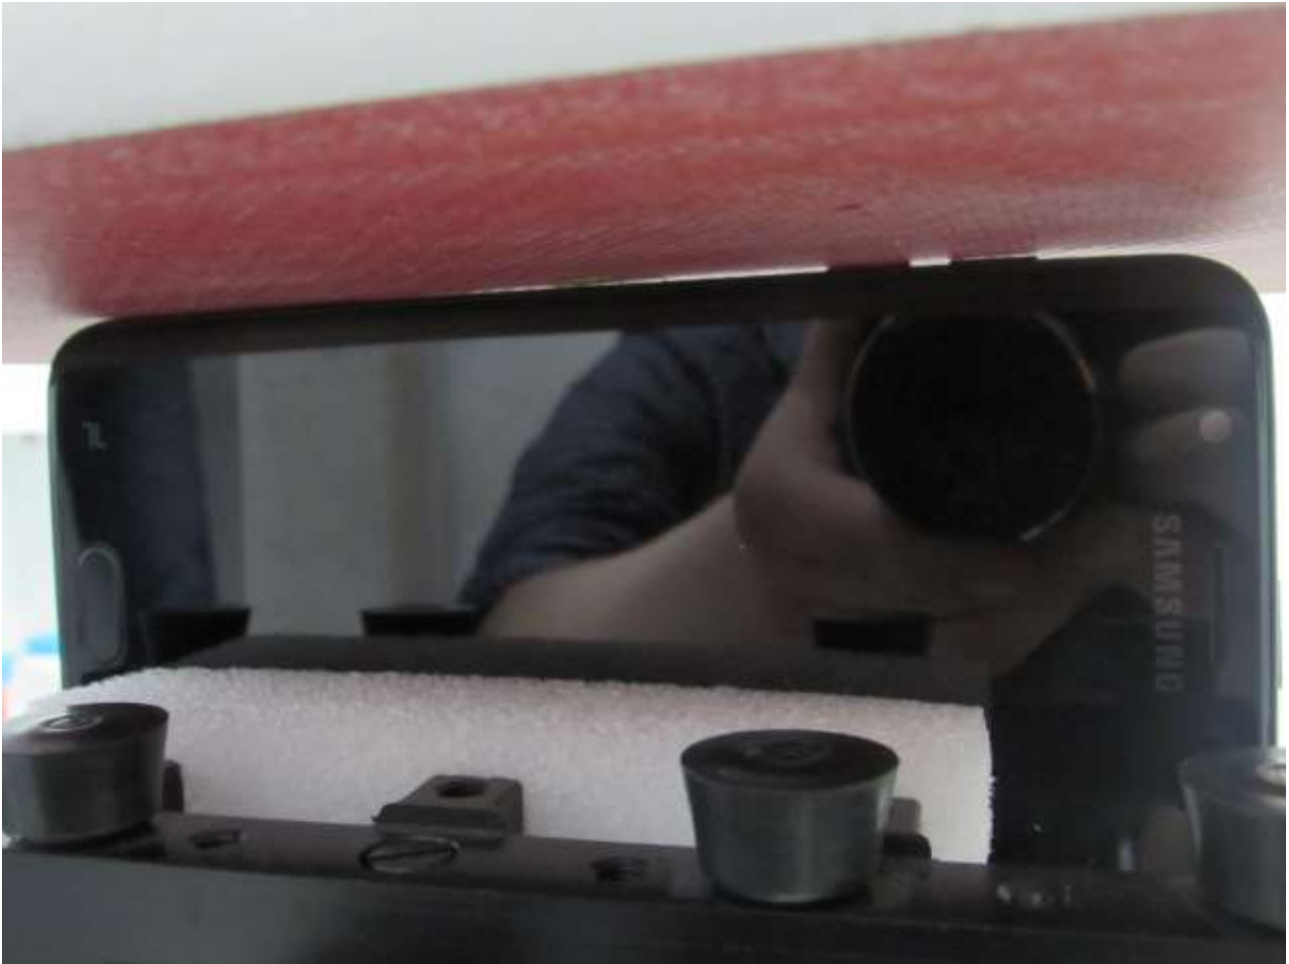

[Distance of 0 cm from the EUT]

■ **Extremity SAR Test Setup Top side**

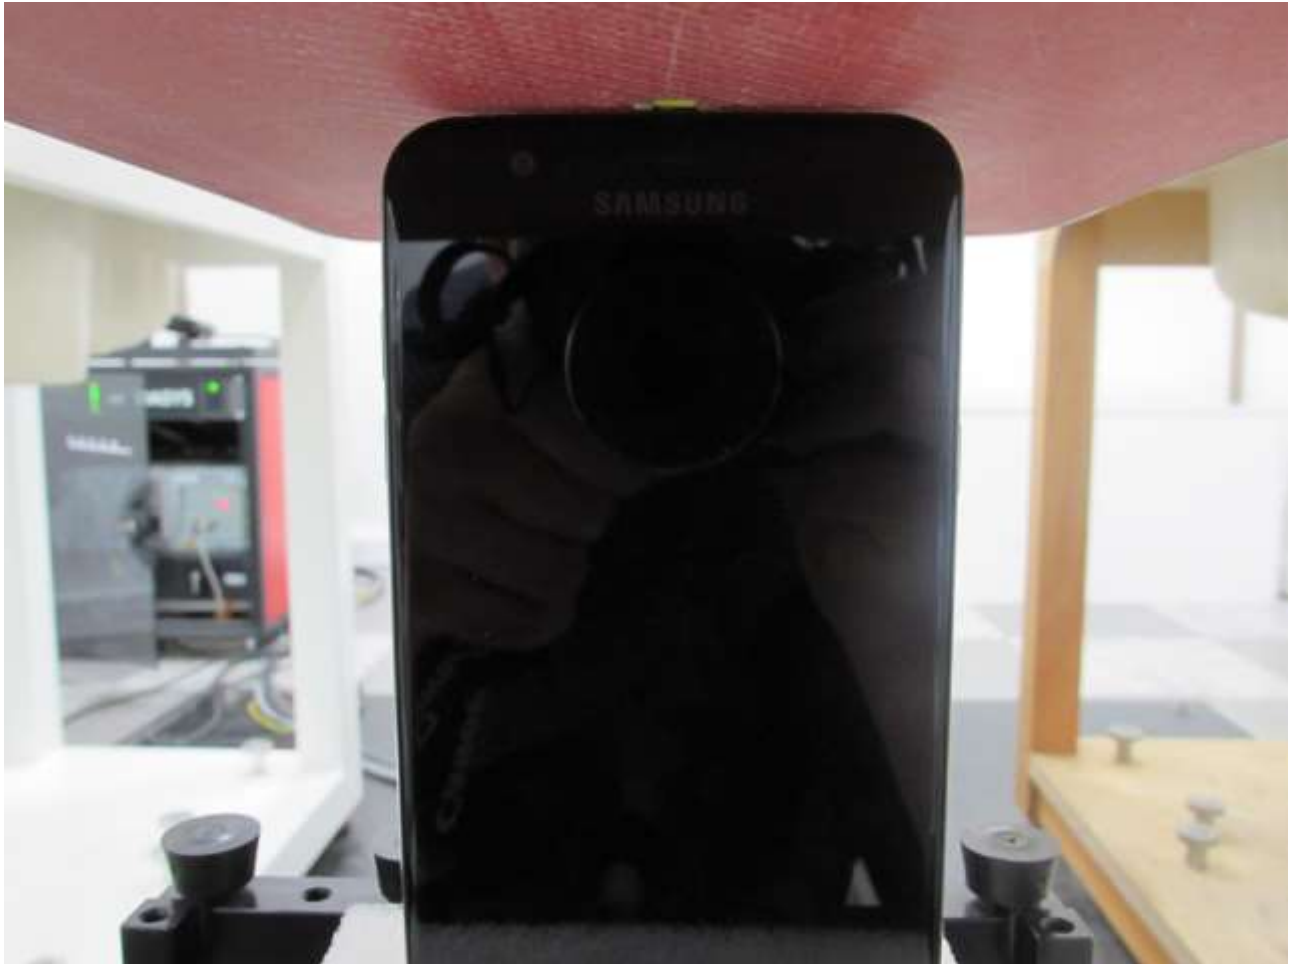

[Distance of 0 cm from the EUT]