



Attachment 8.

- DUT Antenna Information and SAR Test SETUP PHOTOGRAPHS


DUT Antenna Information

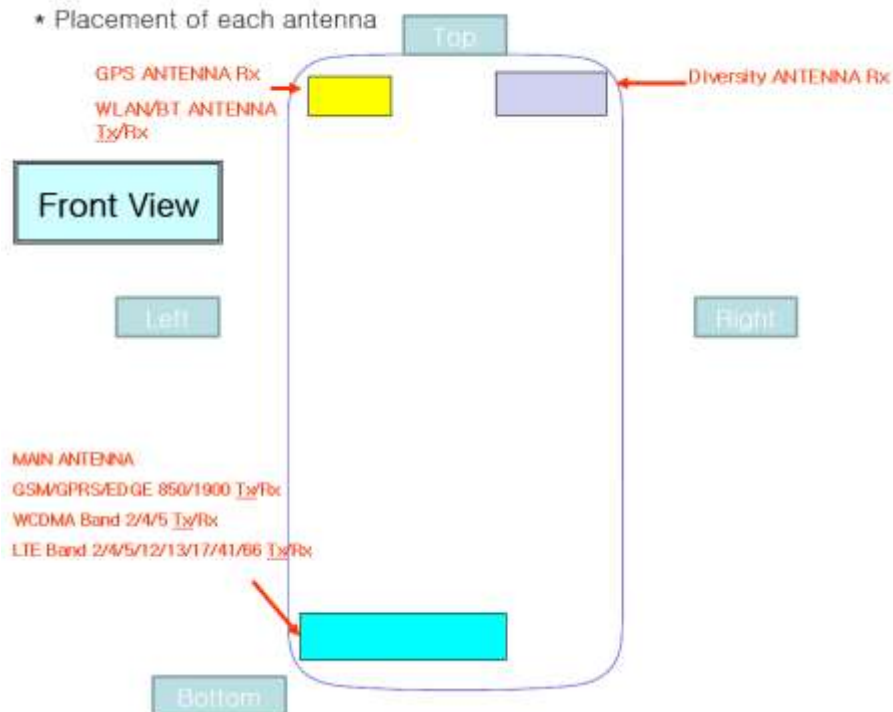


★ Diagonal dimension of display and device

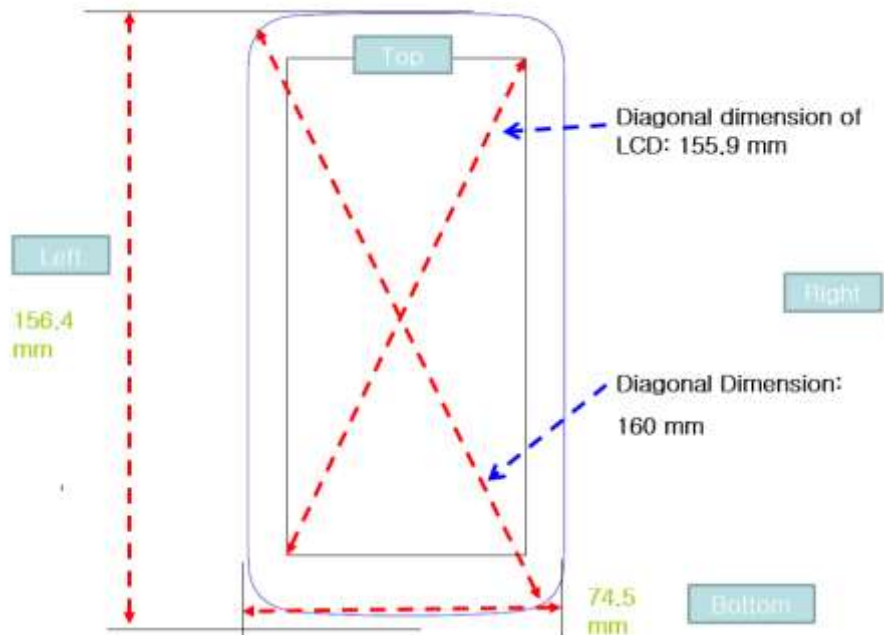

* Distance between Main antenna and edge

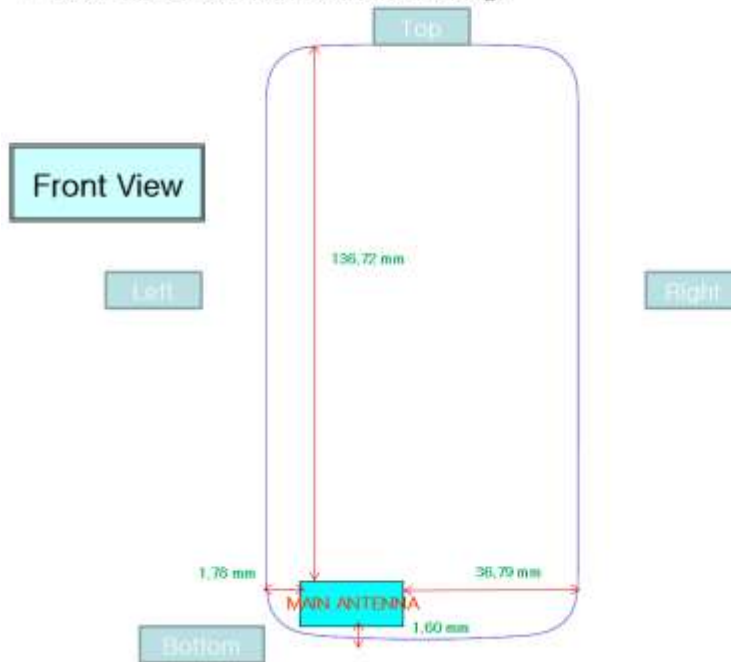


* Distance between BT/WLAN antenna and edge

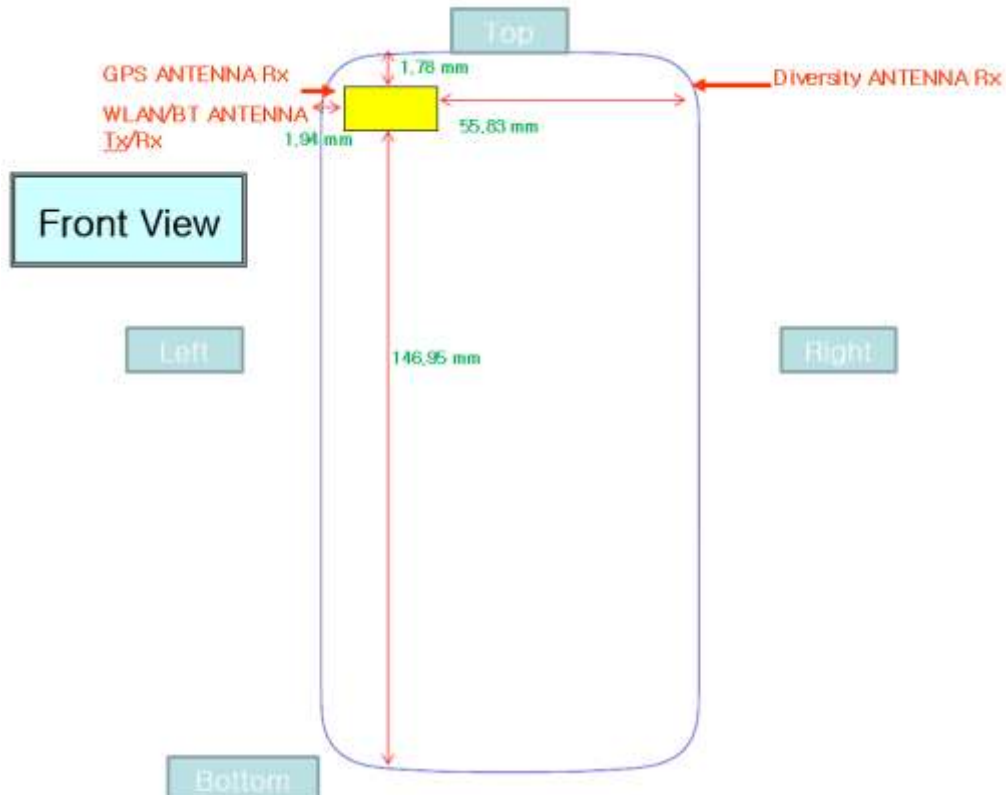


SAR Test Setup Photographs

■ Test Setup Photo(Left All)

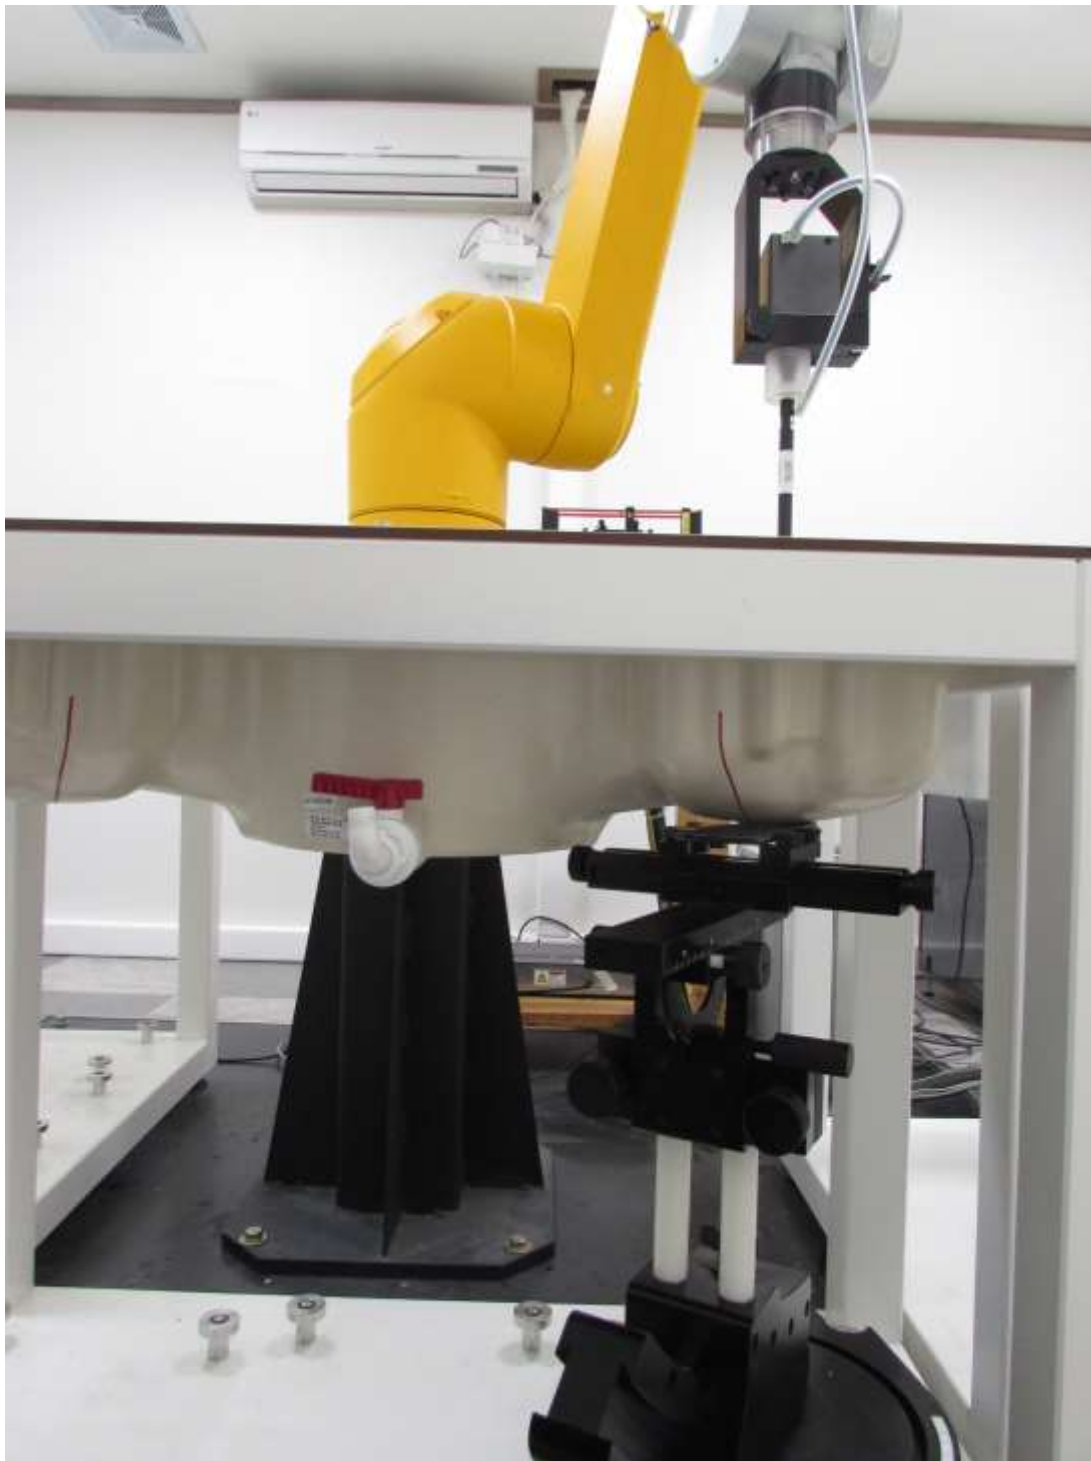



■ Test Setup Photo(Left Touch/Tilt)

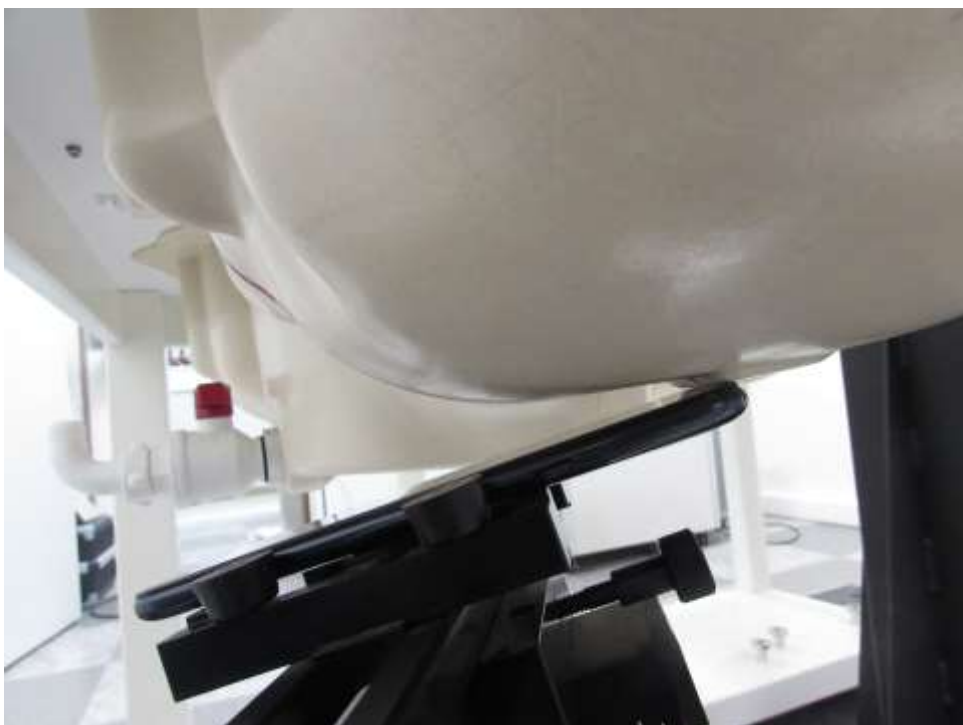

■ **Test Setup Photo(Right All)**




■ **Test Setup Photo (Right Touch/Tilt)**

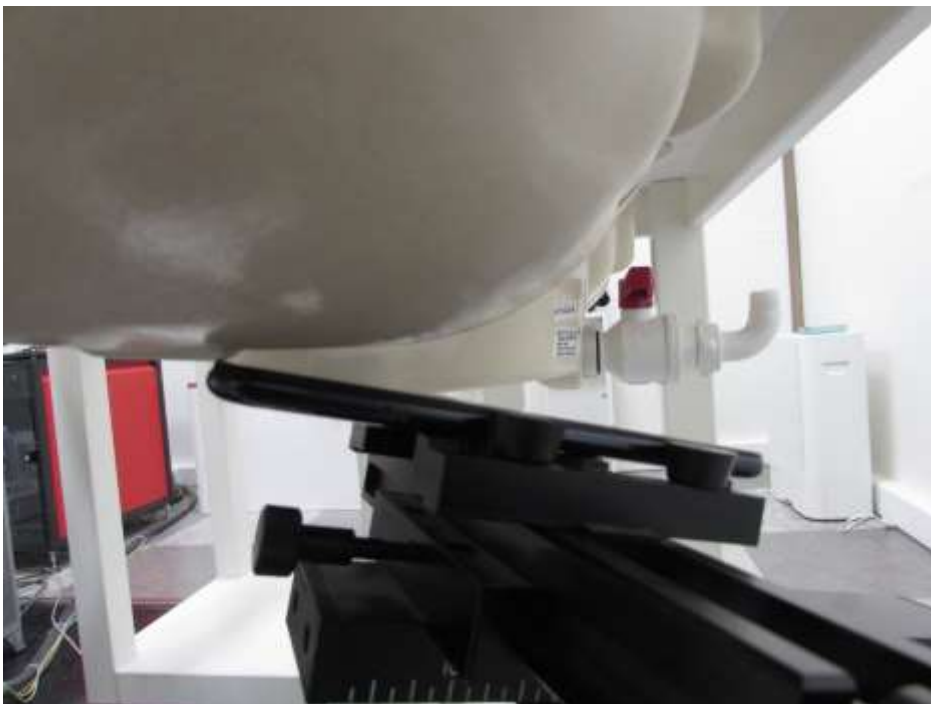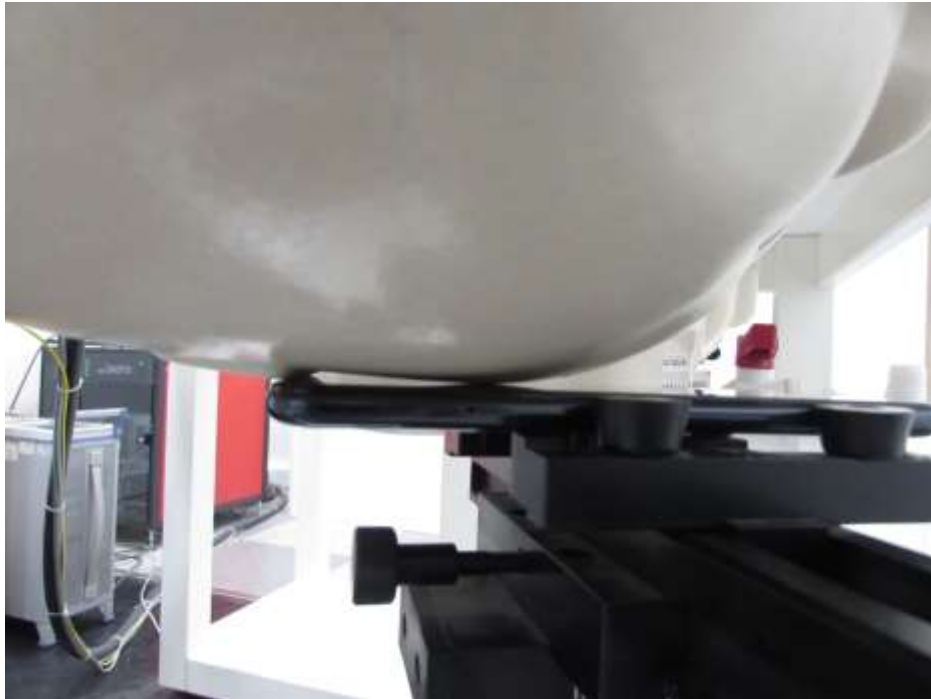

■ **Test Setup Photo (Body All)**



■ Test Setup Photo (Rear)

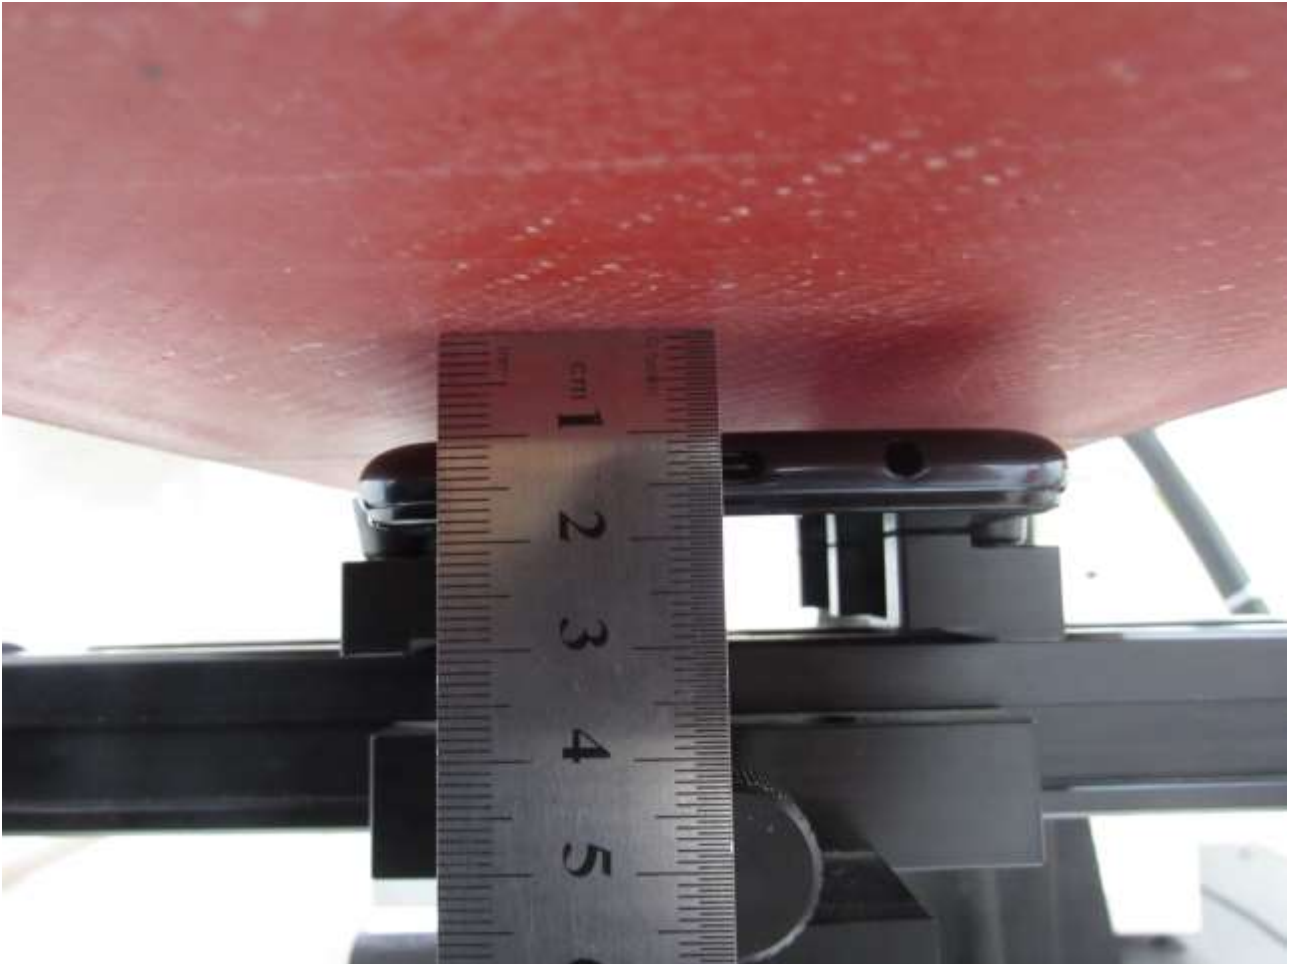


[Distance of 10 mm from the EUT]

■ **Test Setup Photo (Rear)**



[Distance of 15 mm from the EUT]

■ **Test Setup Photo (Front)**

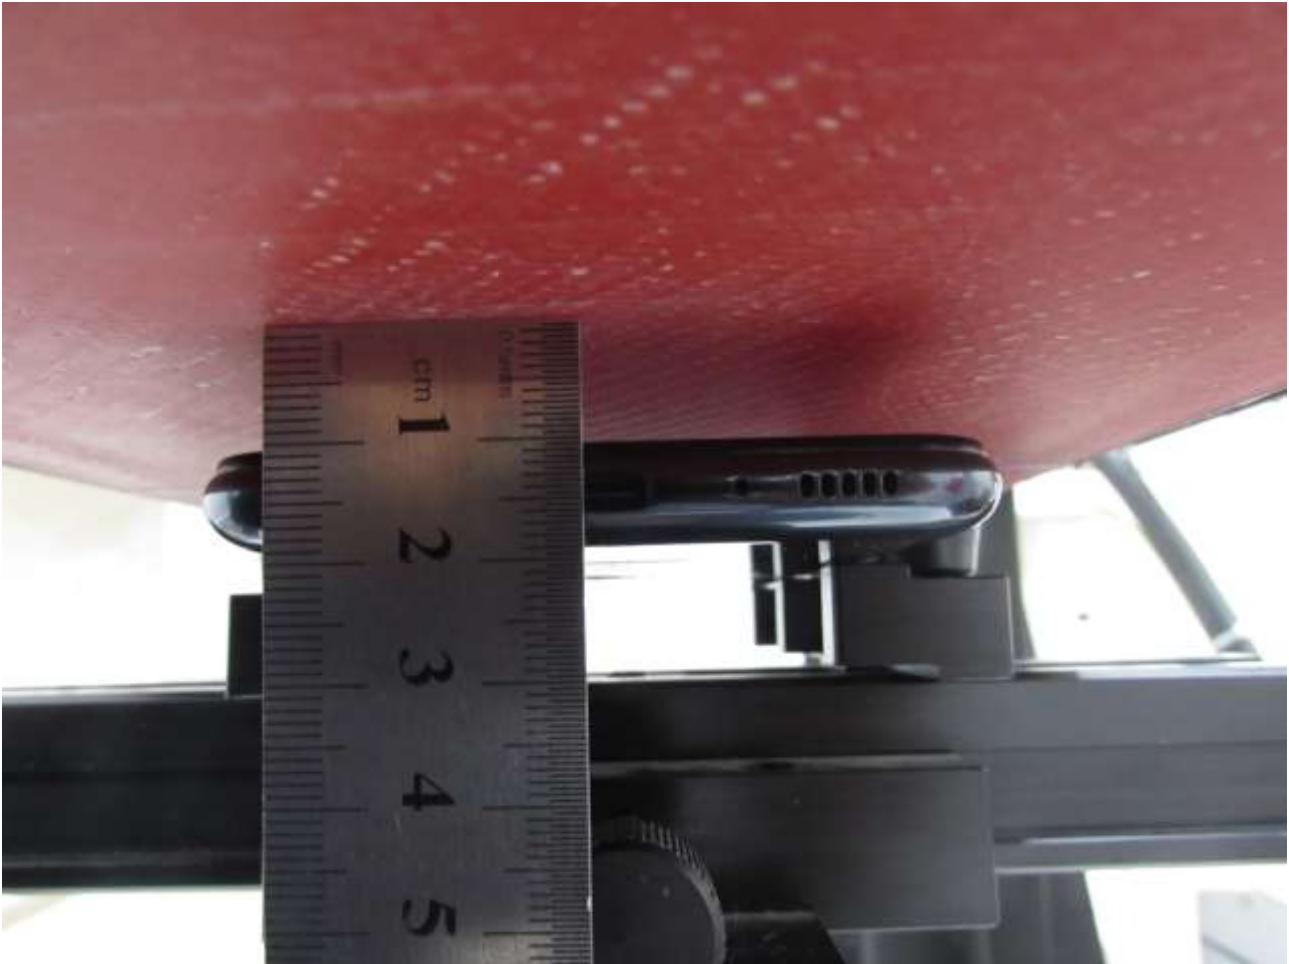

[Distance of 10 mm from the EUT]

■ **Test Setup Photo (Front)**




[Distance of 15 mm from the EUT]

■ Test Setup Photo (Left)



[Distance of 10 mm from the EUT]

■ **Test Setup Photo (Top)**

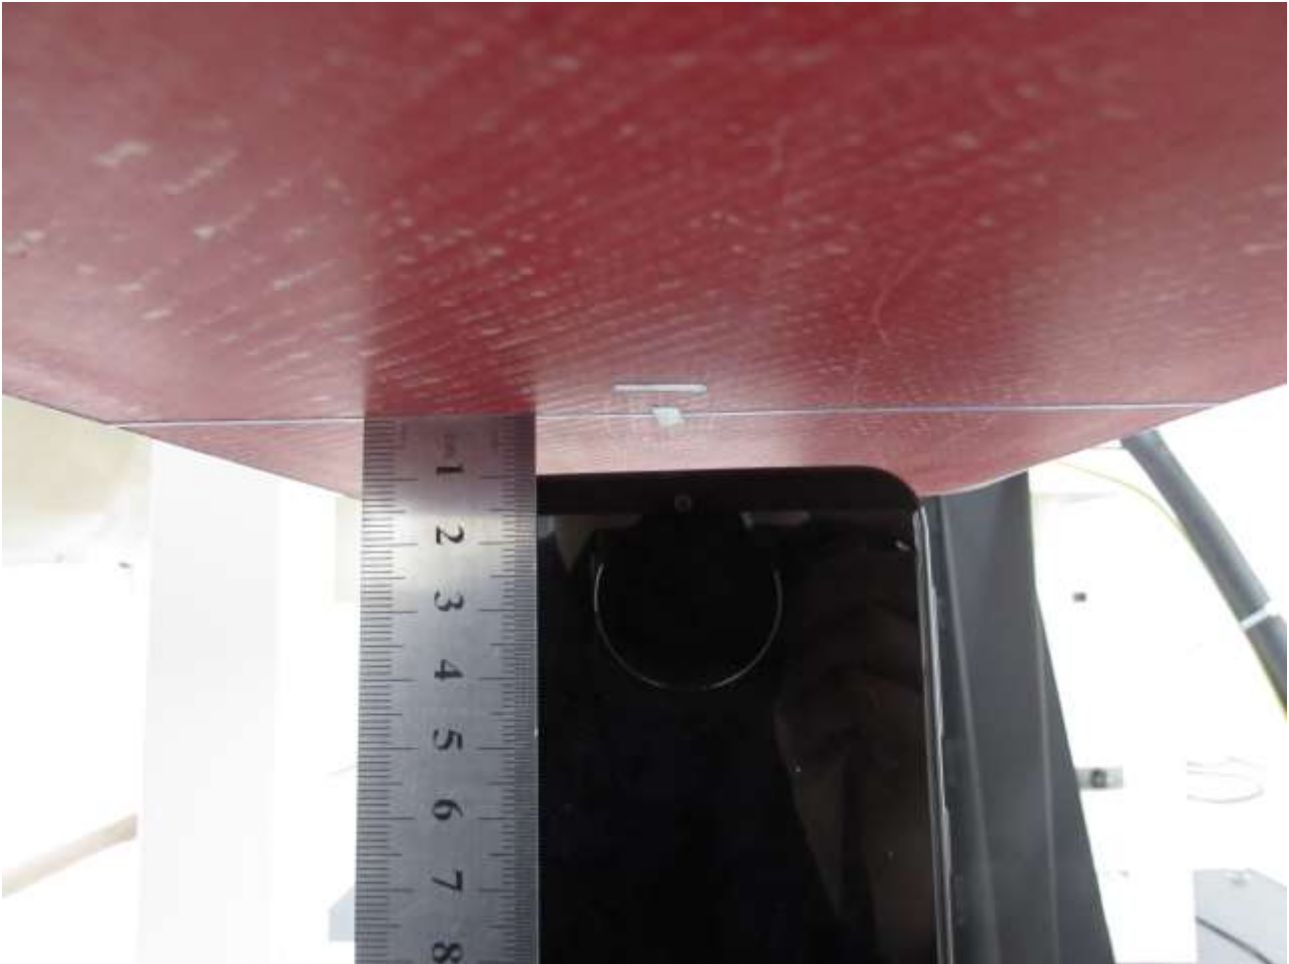

[Distance of 10 mm from the EUT]

■ **Test Setup Photo (Bottom)**



[Distance of 10 mm from the EUT]

■ Test Setup Photo (Rear)



[Distance of 0 mm from the EUT]

■ Test Setup Photo (Front)



[Distance of 0 mm from the EUT]

■ Test Setup Photo (Left)




[Distance of 0 mm from the EUT]

■ **Test Setup Photo (Bottom)**



[Distance of 0 mm from the EUT]

■ Test Setup Photo (Rear)

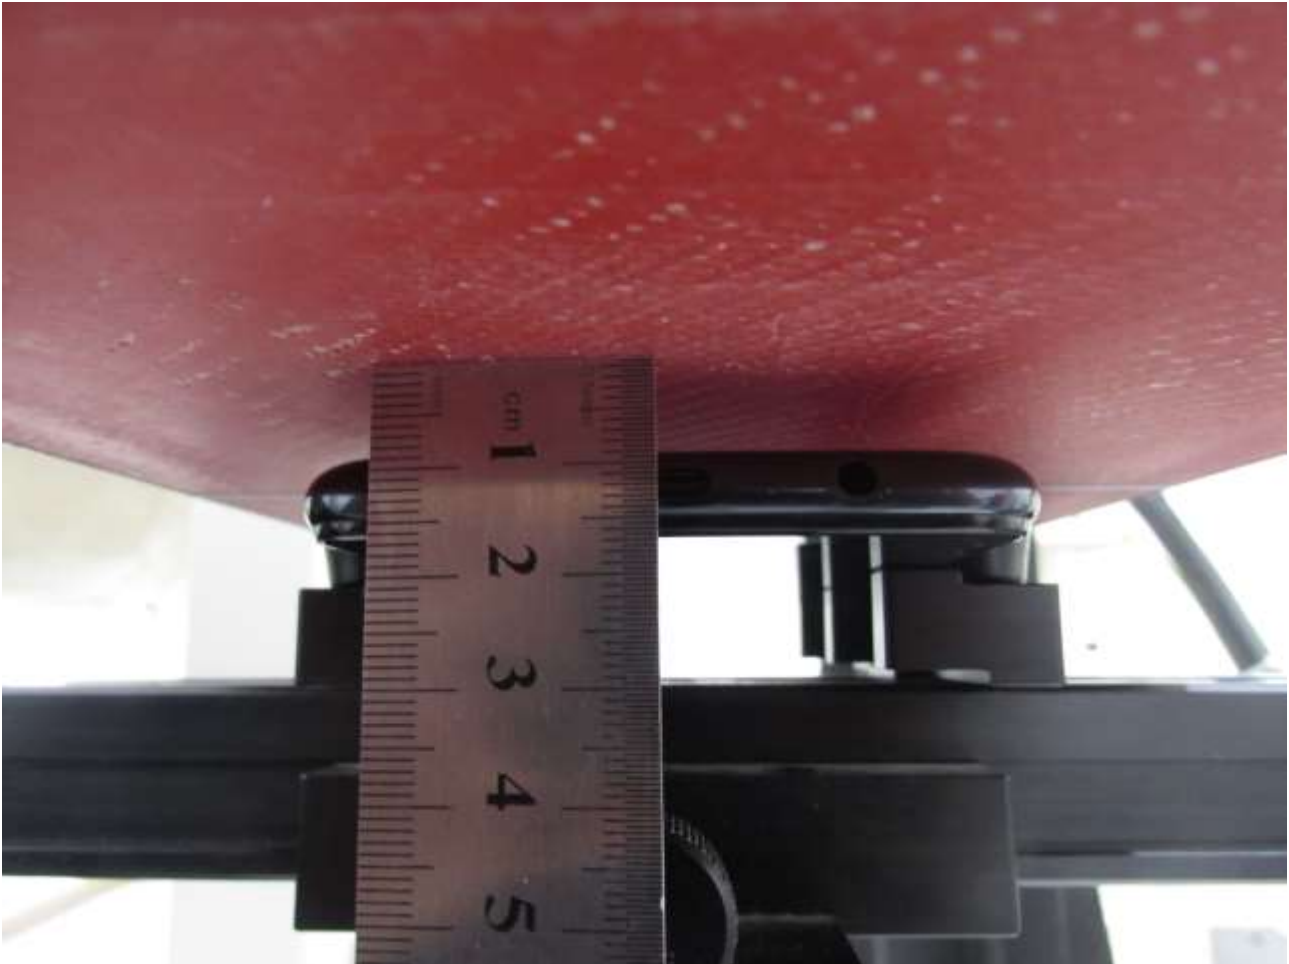

[Distance of 9 mm from the EUT]

■ **Test Setup Photo (Bottom)**



[Distance of 5 mm from the EUT]