

SM-T237P Galaxy Tab 4

User Guide



[Sprint UG template version 13a]
Sprint_T237P_UG_TE_052214_D1

DRAFT For Internal Use Only

Table of Contents

Get Started.....	1
Your Tablet at a Glance	1
Set Up Your Tablet.....	1
Turn Your Tablet On	2
Activate Your Tablet.....	3
Complete the Setup Screens	4
Tablet Basics.....	6
Your Tablet's Layout	6
Key Functions	6
Turn Your Tablet On and Off	7
Turn Your Screen On and Off.....	7
Touchscreen Navigation	8
Your Home Screen.....	14
Creating Shortcuts	14
Adding and Removing Primary Shortcuts.....	15
Adding and Removing Widgets.....	16
Extended Home Screens	16
Recent Apps.....	16
Wallpapers	17
Settings Menu	17
Status Bar	17
Notification Panel	19
Quick Settings.....	20
Multi Window.....	20
Enable Multi Window	21
Display Multi Window.....	21
Using Multi Window	21
Customizing the Multi Window Apps	22
Features	23
Assistant Menu	Error! Bookmark not defined.
Screen Capture.....	23
Smart Screen.....	23

DRAFT For Internal Use Only

Voice Control.....	23
Enter Text.....	24
Touchscreen Keyboards.....	24
Text Input Methods.....	24
Google Voice Typing.....	24
Samsung Keyboard.....	25
Swype.....	26
Editing Text.....	27
Contacts.....	29
Get Started with Contacts.....	29
Add a Contact.....	29
Edit a Contact.....	30
Add or Edit Information.....	30
Assign a Photo to a Contact.....	30
Link a Contact.....	31
Delete a Contact.....	31
Add Contacts to Your Favorites.....	31
Share a Contact.....	31
Groups.....	32
Create a New Group.....	32
Add a Contact to a Group.....	32
Send an Email or Gmail to Group Members.....	32
Accounts and Messaging.....	34
Google.....	34
Create a Google Account.....	34
Access Gmail.....	34
Send a Gmail Message.....	35
Read and Reply to Gmail Messages.....	35
Email.....	35
Add an Email Account.....	35
Add a Microsoft Exchange ActiveSync Account.....	36
Compose and Send Email.....	36
View and Reply to Email.....	37
Manage Your Email Inbox.....	37
Edit Email Settings.....	38

DRAFT For Internal Use Only

Delete an Email Account.....	39
Social Networking Accounts	39
Flipboard	39
Google+	40
Hangouts.....	40
Messenger	40
YouTube.....	40
Apps and Entertainment.....	41
DivX.....	41
DivX Legal Information.....	41
Locating Your VOD Registration Number.....	41
Register Your DivX Device for VOD Playback of Purchased Movies.....	41
Game Hub.....	42
Google Play Store	42
Find and Install an App	42
Create a Google Wallet Account	43
Open an Installed App	43
Uninstall an App.....	43
Google Play Books.....	43
Google Play Games.....	44
Google Play Newsstand.....	44
Google Play Movies & TV	44
Google Play Music	44
Group Play	44
Music Hub	45
Music Player.....	45
Google Maps.....	46
Story Album.....	46
TripAdvisor	46
WatchON.....	46
Smart Remote	47
World Clock.....	47
Web and Data	48
Internet	48
Chrome	48

DRAFT For Internal Use Only

Lumen Toolbar	48
Data Services (3G and 4G).....	48
Your Data Services User Name.....	48
4G Services.....	49
Wi-Fi.....	49
Turn Wi-Fi On and Connect to a Wi-Fi Network	49
Wi-Fi Settings.....	50
Wi-Fi Direct	50
Bluetooth	51
Turn Bluetooth On or Off.....	51
Pairing with a Bluetooth Device	51
Reconnect to a Bluetooth Device	52
Disconnect or Unpair from a Bluetooth Device.....	52
Send Information Using Bluetooth	52
Receive Information Using Bluetooth	53
Bluetooth Settings.....	54
Memory Card	54
Install a Memory Card.....	54
Remove a Memory Card.....	54
View the Memory Card's Available Memory	55
Format a Memory Card.....	55
Unmount a Memory Card.....	55
Kies via Wi-Fi	55
Virtual Private Networks (VPN).....	56
Prepare Your Tablet for VPN Connection.....	56
Add a VPN	56
Connect to a VPN	56
Camera and Video	58
Camera	58
Take Pictures	58
Record Videos	58
Camera Settings	60
Gallery.....	61
View Photos and Videos.....	62
Zoom In or Out on a Photo	63

DRAFT For Internal Use Only

Working with Photos	64
Share Photos and Videos	64
Video Player	66
Tools and Calendar	67
Alarm	67
Calculator	67
Calendar	67
Add an Event to the Calendar	67
Add a Task to the Calendar	68
View Events	69
Delete Events	69
Downloads	69
Dropbox	69
Manually Upload a Picture to Dropbox	70
Google Search	70
Google Settings	70
Polaris Office	70
Help	70
Memo	70
Create a New Memo	71
My Files	72
S Translator	72
S Voice	72
Voice Search	72
Samsung Apps	73
VPN Client	73
Settings	74
Wi-Fi Settings	74
Wi-Fi Direct	75
Hotspot	75
Bluetooth Settings	75
Data Usage Settings	76
More Settings	76
Airplane Mode	76
Mobile Networks	77

DRAFT For Internal Use Only

Printing	77
Tethering.....	78
VPN.....	79
Roaming.....	79
Nearby Devices.....	79
Blocking Mode.....	80
Hands-free Mode	80
Sound Settings.....	81
Volume	81
Notifications.....	81
Touch Sounds	81
Screen Lock Sound.....	81
Samsung Applications Settings	81
Samsung Keyboard Settings	82
Display Settings	82
Wallpaper	82
Notification Panel	82
Multi Window.....	83
Brightness	83
Screen Timeout.....	83
Daydream.....	83
Smart Screen	84
Font Style	84
Font Size	84
Increase Legibility	84
Show Battery Percentage	84
Storage.....	85
Power Saving Mode	85
Power Saving Tips	86
Battery Settings.....	86
Application Manager	87
Manage Applications.....	87
Running Services.....	87
Memory Use.....	87
Default Applications.....	87

DRAFT For Internal Use Only

Users	88
Location Settings.....	88
Lock Screen	89
Security Settings	91
Encryption	91
Make Passwords Visible	91
Device Administration	91
Security Update Service	92
Send Security Reports	93
Credential Storage	93
Language and Input Settings	93
Choose a Default Language	94
Default Input Method.....	94
Google Voice Typing.....	94
Samsung Keyboard	94
Swype	95
Voice Search.....	96
Text-to-Speech Options	97
Pointer Speed	97
Cloud	97
Back Up and Reset Settings	97
Accounts Settings	98
Add an Account.....	98
Voice Control.....	98
Accessory Settings.....	98
Date and Time Settings	99
Accessibility Settings.....	99
Activate This Device.....	100
System Update Settings	101
About Device.....	101
Copyright Information.....	103
Index.....	104

DRAFT For Internal Use Only

Get Started

The following topics give you all the information you need to set up your tablet the first time.

Your Tablet at a Glance

The following illustration outlines your tablet's primary external features and buttons.

FPO

Set Up Your Tablet

Prior to using the tablet, it is necessary charge the battery. An optional microSD memory card (not included) can also be installed at this time.

Install the Memory Card

Use the following procedure to install an optional memory card (not included) in your tablet. For more information, see [Memory Card](#).

1. Open the Memory Card Slot cover and turn to expose the slot.
2. With the gold contacts facing down, carefully slide the memory card into the slot, pushing gently until it clicks into place.

DRAFT For Internal Use Only



3. Replace the Memory Card Slot cover

Important: You can easily damage the memory card and card slot by improper operation. Please be careful when inserting, removing, or handling it. Do not over-insert the card as this can damage the contact pins.

Charge the Battery

You will need to charge the battery before using your tablet.

1. Plug the USB cable into the USB Charger/Accessory Port on the bottom of the tablet.

FPO

2. Plug the USB cable into the charging head, and then plug the charging head into an electrical outlet.

Turn Your Tablet On

Use the Power/Lock Key to turn your tablet on.

DRAFT For Internal Use Only

- Press and hold the ⓘ  **Power/Lock Key** to turn the tablet on.
 - If your tablet is activated, it will turn on, search for Sprint service, and begin the setup application.
 - If your tablet is not yet activated, see [Activate Your Tablet](#) for more information.

Activate Your Tablet

Follow the instructions below to activate your tablet if it has not already been activated. Depending on your account or how and where you purchased your tablet, it may be ready to use or you may need to activate it on your Sprint account.

- If you purchased your tablet at a Sprint Store, it is probably activated and ready to use.
- If you received your tablet in the mail and it is for a new Sprint account or a new line of service, it is designed to activate automatically.
 - When you turn the tablet on for the first time, you should see a **Hands Free Activation** screen, which may be followed by a **PRL Update** screen and a **Firmware Update** screen. Follow the onscreen instructions to continue.
- If you received your tablet in the mail and you are activating a new tablet for an existing number on your account, you can activate on your computer online or directly on your tablet.
 - **Activate on your computer:**
 - Go to sprint.com/activate and complete the online instructions to activate your tablet.
 - **Activate on your tablet:**
 - Turn on your new tablet. Your tablet will automatically attempt Hands-Free Activation.
 - Touch **Activate** to override auto-activation and start the manual activation wizard.
 - Follow the on-screen prompts to complete the activation process.

If your tablet is still not activated, visit sprint.com/support for assistance. If you do not have access to the Internet, call Sprint Customer Service at **1-888-211-4727**.

Tip: Do not press the **Power** button while the tablet is being activated. Pressing the **Power** button cancels the activation process.

Note: If you are having any difficulty with activation, visit sprint.com/support.

DRAFT For Internal Use Only

Complete the Setup Screens

The setup screens help you set up certain features and preferences on your tablet. Once your tablet has been turned on, you will see a Welcome message. You can then complete the setup process.

Note: You may be able to complete the setup screens before your tablet has been activated on your Sprint account.

Note: During or after setup, you may see a **Connections Optimizer** notice. Read the notice and touch **I Agree** to allow your tablet to connect automatically to the best available data network, including Wi-Fi. To turn Connections Optimizer off at any time, touch  >  > **Settings** > **More settings** > **Mobile networks** > **Connections optimizer** and uncheck the box.

1. From the Welcome screen, select a language (if prompted) and touch **Next** to get started.

- To skip any section, touch **Next** or **Skip**.
- To go back to the previous screen, press the  **Back** key.

Note: On the Welcome screen, there is also an **Accessibility** button. If you are visually impaired or hard of hearing, touch **Accessibility** to change the accessibility settings. For more information, see [Accessibility Settings](#).

2. Follow the onscreen instructions to complete each section. For each topic, you will have the option to skip it and continue to the next screen.

- **Wi-Fi** – If prompted, follow the prompts to sign in to an available Wi-Fi network. For secured Wi-Fi networks, you will need to enter a password. See [Wi-Fi](#) for more details.
- **Samsung Account** – Touch **Sign in** to sign in to your current Samsung Account, or touch **Create new account** and follow the instructions to set up a new Samsung Account.
 - Touch **variety of services** to learn more using your Samsung Account.
- **Got Google?** – Touch **Yes** to sign in to your current Google Account, or touch **No** and follow the instructions to set up a new Google Account.
- **Make it Google** – Touch **Get an account** and follow the instructions to create a new Google Account, or touch **Not now**.
 - Touch  to learn about Google Accounts.
 - This screen only displays if you did not previously sign in to your Google Account.
- **Entertainment** – Touch **Set up credit card** and follow the instructions to enter credit card information for your Google Play account, or touch **Not now**.
 - This screen only displays if you previously signed in to your Google Account.
- **Backup and Restore** – Read the backup and restore information. Then enable either or both options.

DRAFT For Internal Use Only

- This screen only displays if you previously signed in to your Google Account.
 - **Google & Location** – Read the information about location services. Then enable either or both location services.
 - **This tablet belongs to...** — Enter your first and last name. This information is used by the tablet to personalize certain apps.
 - This screen only displays if you did not previously sign in to your Google Account.
 - **Dropbox Account** — Touch **Create account** and follow the instructions to set up a new Dropbox Account, or touch **Sign in** to sign into your Drop Box Account.
 - **Learn about key features** – Touch each feature to see more details. Touch **ON/OFF** to enable/disable each feature.
 - **Device name** – Enter a name for the tablet. This name is used to identify the tablet when using Bluetooth, Wi-Fi Direct, etc.
3. Touch **Finish**. Your setup is now complete.

DRAFT For Internal Use Only

Tablet Basics

Your tablet is packed with features that simplify your life and expand your ability to stay connected to the people and information that are important to you. The following topics will introduce the basic functions and features of your tablet.

Your Tablet's Layout

The following illustration outlines your tablet's basic layout.

FPO

Key Functions

The following list defines the features listed in the above illustrations.

- **Light Sensor** detects the presence of objects near the tablet, and light conditions.
- **Front Camera** allows you to take pictures and videos of yourself.
- **Power/Lock Key** lets you turn the device on or off, turn the screen on or off, or lock the screen. Press and hold for a *Device options* menu, where you can turn the tablet off or restart it, or for easy access to Airplane mode, and to Mute and Sound modes.
- **Volume Key** adjusts the volume of your tablet's sounds. From the Home screen, press to adjust master volume.

DRAFT For Internal Use Only

- **Infrared Transmitter** controls external devices such as TVs.
- **Back Key** lets you return to the previous screen, or close a dialog box, options menu, the Notifications panel, or on-screen keyboard.
- **Speaker** plays notification tones and sounds.
- **Home Key** returns you to the Home screen. Press and hold to see recent apps, and access Task Manager and Google Now.
- **Menu Key** allows you to access a menu from most of your tablet's screens.
- **Display** provides a touch-sensitive interactive surface for your tablet.
- **Camera** lets you take pictures and record videos.
- **3.5 mm Headset Jack** allows you to plug in an optional headset.
- **Memory Card Slot** uses microSD to add additional storage to your tablet.
- **SIM Card Slot** stores the tablet's SIM Card.

CAUTION! The SIM Card should never be removed unless you are instructed to remove it by authorized service personnel.

- **USB Charger/Accessory Port** allows you to connect the charger/USB cable (included) and other optional accessories (not included).

CAUTION! Inserting an accessory into the incorrect jack may damage the tablet.

Turn Your Tablet On and Off

The instructions below explain how to turn your tablet on and off.

Turn Your Tablet On

- Press and hold the **Power/Lock Key** .

Turn Your Tablet Off

1. Press and hold the **Power/Lock Key**  to open the *Device options* menu.
2. Touch **Power off** to turn the tablet off. Your screen remains blank while your tablet is off (unless the battery is charging).

Turn Your Screen On and Off

Your tablet allows you to quickly turn the screen off when not in use and to turn it back on and unlock it when you need it.

Turn the Screen Off When Not in Use

- To quickly turn the screen off, press the **Power/Lock Key** .

To save battery power, the tablet automatically turns off the screen after a certain period of time when you leave it idle. You will still be able to receive messages while the tablet's screen is off.

Note: For information on how to adjust the time before the screen turns off, see [Screen Timeout](#).

Turn the Screen On and Unlock It

1. To turn the screen on, press the **Power/Lock Key** .
2. Swipe the screen in any direction to unlock the screen.
 - If you have set up a screen lock, you will be prompted to draw the pattern or enter the password or PIN. For more information, see [Lock Screen](#).

Touchscreen Navigation

Your tablet's touchscreen lets you control actions through a variety of touch gestures.

Touch

When you want to type using the on-screen keyboard, select items on-screen such as application and settings icons, or press on-screen buttons, simply touch them with your finger.

FPO

DRAFT For Internal Use Only

Touch and Hold

To open the available options for an item (for example, a contact or link in a Web page), touch and hold the item.

FPO

Swipe or Slide

To swipe or slide means to quickly drag your finger vertically or horizontally across the screen.

DRAFT For Internal Use Only

FPO

Drag

To drag, touch and hold your finger with some pressure before you start to move your finger. While dragging, do not release your finger until you have reached the target position.

DRAFT For Internal Use Only

FPO

DRAFT For Internal Use Only

Flick

Flicking the screen is similar to swiping, except that you need to swipe your finger in light, quick strokes. This finger gesture is always in a vertical direction, such as when flicking the contacts or message list.

FPO

DRAFT For Internal Use Only

Rotate

For most screens, you can automatically change the screen orientation from portrait to landscape by turning the tablet sideways. When entering text, you can turn the tablet sideways to bring up a bigger keyboard.

FPO

Note: Screen rotation needs to be enabled for the screen orientation to automatically change. Touch and drag down the Notification Panel, then touch **Screen rotation**.

DRAFT For Internal Use Only

Pinch and Spread

"Pinch" the screen using your thumb and forefinger to zoom out or "spread" the screen to zoom in when viewing a picture or a Web page. (Move fingers inward to zoom out and outward to zoom in.)

FPO

Tip: Pinching any Home screen will let you see thumbnails of all seven Home screens. Touch a thumbnail to go straight to another Home screen.

Your Home Screen

The home screen is the starting point for your tablet's applications, functions, and menus. You can customize your home screen by adding application icons, shortcuts, folders, widgets, and more. Your home screen extends beyond the initial screen. Swipe the screen left or right to display additional screens.

Note: You can keep swiping in one direction and make it back to the main Home screen. The small circles toward the bottom of the screen let you know your current screen position.

Tip: Press  to return to the main home screen from any other screen.

Creating Shortcuts

Learn how to add, move, or remove items from the home screen.

DRAFT For Internal Use Only

Adding Items from the Applications Menu

1. Press , and then touch **Apps** .
2. Touch and hold an application icon, and then drag it to a Home screen.
3. Release the screen to lock the new shortcut into its new position on the Home screen.

Adding Items from the Home Screen

1. Press  to display the Home screen.
2. Touch and hold an empty area of the Home screen, and then choose **Apps and widgets**.
3. Touch and hold the application icon, and then drag it to a Home screen. Release the icon to lock it on the screen.

Removing a Shortcut

1. Press  to display the Home screen.
2. Touch and hold the desired shortcut, and then drag it to the Remove icon and release it. As you place the shortcut into the Trash, both items turn red.

Note: This action does not delete the application; it simply removes the shortcut from the Home screen.

Adding and Removing Primary Shortcuts

You can change any of your primary shortcuts with the exception of the Apps shortcut. The primary shortcuts are the bottom row of app shortcuts that remain static on all home screens (by default Contacts, Internet, and Apps).

Note: Before replacing a primary shortcut, you must first add the replacement shortcut to the Home Screen. For more information, see [Creating Shortcuts](#).

1. Press  to display the Home screen.
2. Touch and hold the primary shortcut you want to replace and then drag it to an empty space on any Home screen.
3. Touch and hold a new shortcut on the Home screen, and then drag it to the empty space in the row of primary shortcuts. You can add up to 5 primary shortcuts in addition to the Apps shortcut.

DRAFT For Internal Use Only

Adding and Removing Widgets

Widgets are self-contained applications that reside either in your Widgets tab or on the main or extended Home screens. Unlike a shortcut, the Widget appears as an on-screen application. Widgets can include Contacts shortcuts, bookmarks, music playlists, Gmail and email accounts, and many other types of apps.

Adding a Widget

1. Press  to display the Home screen.
2. Touch and hold an empty area of the Home screen, and then choose **Apps and widgets > Widgets**.
3. Touch and hold a widget, and then drag it to a Home screen. Release the widget to lock it on the screen.

Removing a Widget

1. Press  to display the Home screen.
2. Touch and hold the desired widget, and then drag it to the Remove icon.

Note: This action does not delete the widget—it simply removes it from the current screen.

Extended Home Screens

In addition to the main Home screen, your tablet can have up to six extended Home screens to provide more space for adding icons, widgets, and more. Touch and hold the icon or widget and then drag across the screen to move from the main screen to an extended screen.

There can be up to six extended screens in addition to the main Home screen.

Note: You cannot add more screens, unless you have previously deleted any of the existing screens. The maximum number of home screens is seven.

To go directly to a particular screen:

1. From any home screen, pinch the screen to display thumbnail images of all screens.

- or -

Press  **Home**, and then touch  **Menu > Edit page**.

2. Touch the screen you want to open.

Recent Apps

You can access recently used applications through a display of shortcuts to the applications themselves.

1. Press and hold  from any screen to display Recent apps.
2. Touch an image to open the application.

DRAFT For Internal Use Only

Wallpapers

You can choose a picture to display on the Home Screen, Lock screen, or on both the Home and Lock screens. Choose from preloaded wallpaper images or select a photo you have downloaded or taken with the Camera.

1. From any Home screen, touch and hold on an empty area of the screen. The *Home screen* menu displays. Touch **Set wallpaper**.

– or –

Press , and then touch  > **Settings** > **Display** > **Wallpaper**.

2. Touch **Home screen**, **Lock screen**, or **Home and lock screens**.
3. Choose a source for wallpaper:
 - **Gallery**: Choose a picture from Gallery. Follow the prompts to crop the picture and save it as wallpaper.
 - **Live wallpapers**: Choose a moving scene for the background (Home screen only).
 - **ID wallpapers**: Select a wallpaper from the currently assigned ID pack (Home screen only).
 - **Travel wallpaper**: Display recommended destinations on your Lock screen (Lock screen only).
 - **Wallpapers**: Choose an image from the Wallpapers gallery.

Settings Menu

Access the Settings menu from any Home screen.

- Press , and then touch  > **Edit page**.

Status Bar

The status bar at the top of the Home screen provides device and service status information on the right side and notification alerts on the left. To view notification alerts, touch and hold the Status Bar and drag it down.

Status Icons

Icon	Description
	Bluetooth® active
	Connected to another Bluetooth device
	Wi-Fi® active

DRAFT For Internal Use Only

Icon	Description
	Mute
	Network (full signal)
	3G (data service)
	4G (data service)
	Airplane Mode
	Alarm Set
	Battery (full charge shown)

Notification Icons

Icon	Description
	New email
	New Gmail
	Event
	USB connection
	Updates available
	Downloading
	Kies air connected
	Keyboard active

DRAFT For Internal Use Only

Notification Panel

The Notification Panel displays information about connections, alerts, new messages, and more. It also has Quick settings—buttons which allow you to quickly access and change common system settings.

FPO

- **Settings:** Access System settings. For more information, see [Settings](#).
- **Quick Settings (Grid):** Display Quick setting buttons in a grid.
- **Quick Settings (Scrolling):** Display Quick setting buttons in a scrollable list.
- **Brightness Control:** Adjust the brightness of the display.
- **Ongoing Events:** Display ongoing events, such as USB connections.
- **Clear All Notifications:** Remove all notifications.
- **Notifications:** Display notifications, such as new email and software updates.

Access the Notifications Panel

1. Touch and slide downward from the top of the screen to display the Notification Panel. Slide the Notification Panel upward to close it.
2. Touch **Ongoing** events or Notifications to view details, or to launch the related app or feature.

DRAFT For Internal Use Only

Clearing Notifications

- Touch and slide an item left or right to clear it.

— or —

Touch **Clear** to remove all notifications.

Quick Settings

Quickly enable/disable common system settings for your tablet.

1. Touch and slide downward from the top of the screen to display the Notification Panel.
2. Touch a Quick setting button to enable (green) or disable (grey). (To view all Quick setting buttons, touch , or slide the Quick setting buttons to the left.)
 - **Wi-Fi:** Enable Wi-Fi connections. For more information, see [Wi-Fi Settings](#).
 - **Location:** Enable or disable location services. For more information, see [Location Settings](#).
 - **Sound/Mute:** Mute system sounds.
 - **Screen rotation:** Automatically rotate the screen from landscape to portrait and vice versa when the tablet is tilted.
 - **Bluetooth:** Activate Bluetooth. For more information, see [Bluetooth Settings](#).
 - **Blocking mode:** Disable notifications for selected features. For more information, see [Blocking Mode](#).
 - **Power saving:** Activate Power saving mode. For more information, see [Power Saving Mode](#).
 - **Multi window:** Enable the Multi window feature. For more information, see [Multi Window](#).
 - **Hands-free mode:** Read new notifications aloud. For more information, see [Hands-free Mode](#).
 - **Smart stay:** Set the screen to stay on as long as you are looking at it. For more information, see [Smart Screen](#).
 - **Sync:** Synchronize contacts, email, etc. with the network.
 - **Airplane mode:** Disable all wireless connections. For more information, see [Airplane Mode](#).

Multi Window

Multi Window allows you to use two apps on the same screen, in separate, resizable windows.

Note: Only applications found within the Apps tray can be active atop another current application on the screen. When launching applications that contain multimedia files (music or video), audio from both files will be played simultaneously.

DRAFT For Internal Use Only

FPO

Enable Multi Window

Enable Multi window in the Display settings.

1. Press  **Home**, and then touch  **Menu > Settings > Display**.
2. Tap the check box beside **Multi window** to enable or disable the option.

Display Multi Window

After you enable Multi window in Display settings, you can control whether Multi window displays on the screen, for easy access to its features.

When Multi Window is enabled, it displays on the right side of the screen by default.

- Touch and hold the  **Back Key**.

Using Multi Window

After enabling Multi Window, you can use it to run two apps at the same time. You can launch apps from Multi window, or drag an app to the screen to run multiple apps at the same time.

The apps display together on a split screen. You can switch between the apps, adjust the size of their display on the screen.

You can also use these Multi Window options:

DRAFT For Internal Use Only

- **Launch Multiple Apps:** When you drag an app from Multi window on top of an open app, both apps display in a split window.
 - While using one app, touch the tab to display Multi Window, and then touch and drag an app to the screen.
- **Adjust the Size of Apps in Multi Window:** While using Multi Window, you can adjust the size of the two apps on the screen.
 - Touch and drag  to a new position.
- **Drag content from one app to the other:** In selected apps, you can you can drag text or images between apps.
 - Tap  >  to select content and drag it to the other app.
- **Switch Multi Window App Positions:** While using Multi Window, you can switch the position of the app windows on the screen.
 - Tap  > .
- **Make a Multi Window App full-screen:** Expand one of the apps to display in the full screen.
 - Tap one of the apps, and then tap  >  to make the app display full-screen.
- **Close an app:** Close one app, and make the other full-screen.
 - Tap  > .

Customizing the Multi Window Apps

The apps on the Apps tray can be organized by either being rearranged or removed.

1. Activate Multi window.
2. Touch and hold the  **Back Key** to display the Multi window Apps tray.
3. In the Apps tray, you can use these options:
 - To change the order of apps in the tray, touch and hold an app until it detaches, and then drag it to a new location in the Apps tray.
 - Touch **Edit** to display a storage tray, and then use these options:
 - To remove an app, touch and hold an app icon until it detaches, and then carefully drag it off the Apps tray and onto the storage area.
 - To restore an app, touch and hold an app icon until it detaches from the storage tray, and then drag it onto the Apps tray.

DRAFT For Internal Use Only

Features

Discover new features for controlling and interacting with your tablet.

Screen Capture

Capture an image of the current screen at anytime time.

- Touch and hold the **Power/Lock Key**  and the **Home Key**  simultaneously to create an image of the current screen. A white border flashes briefly around the edge of the screen indicating a screen capture.
 - The screen capture is automatically saved to the Gallery in an Album labeled Screenshots.
 - A copy of the screen capture is also saved to the clipboard.

Smart Screen

Smart screen features allow you to have your tablet automatically detect when you are looking at the screen.

- **Smart stay:** The screen will not time out as long as you are looking at it. Smart screen uses the front camera to detect when you are facing the screen. Some factors that may affect the ability of the front camera to detect your face are:
 - When the tablet is not docked or held upright, for example when placed on a table.
 - When the front camera cannot detect your face and eyes.
 - When the front camera is being used for the current application.
 - When the source of light is behind you, or when using the tablet in the dark.

Configure Smart Stay

Enable Smart stay, and learn about using them.

- Press  and tap  > **Settings** > **Display** > **Smart screen**.
 - Touch **Smart stay** to set the screen to stay on as long as you are looking at it.
 - Touch  > **Help** for more information.

Voice Control

Use spoken commands to control and interact with your tablet, such as:

- **Alarm:** When enabled, you can stop or snooze alarms with the voice commands “Stop” and “Snooze”.
- **Camera:** When enabled, you can take pictures with the voice commands “Smile”, “Cheese”, “Capture” and “Shoot”.

DRAFT For Internal Use Only

- **Music:** When enabled, you can control the music player with the voice commands “Next”, “Previous”, “Pause”, “Play”, “Volume Up”, and “Volume Down”.

Configure Voice Control

- Press  and tap  > **Settings** > **Voice control**. For more information, see [Voice Control](#).

Enter Text

You can type on your tablet using the available touchscreen keyboards.

Touchscreen Keyboards

Touchscreen keyboard entry can be done in either Portrait or Landscape orientations. The Landscape orientation provides more space and results in slightly bigger on-screen keys. If you find that you prefer to enter text via the on-screen keyboard, and need bigger keys, use this orientation.

Text Input Methods

Your tablet offers several text input methods.

- **Google voice typing** allows you to speak your entries.
- **Samsung keyboard** allows you to enter text by touching keys on a virtual QWERTY keyboard. Samsung keyboard includes optional predictive text, which matches your key touches to common words so you can select a word to insert it into your text.
- **Swype** lets you enter words by swiping across the virtual QWERTY keyboard. Instead of touching each key, use your finger to trace over each letter of a word. You can also touch letters to enter words.

Select a Default Text Input Method

You can select a default Text Input Method from Settings, or choose one at any time while entering text.

From Settings:

- Press  and touch  **Menu** > **Settings** > **Language and input** > **Default** and then choose a text entry method.

While entering text:

1. From a screen where you can enter text, drag down from the top of the screen to open the Notifications panel.
2. Touch **Select input method**, and then choose a text entry method.

Google Voice Typing

This feature uses Google voice recognition to convert your spoken words into text.

DRAFT For Internal Use Only

Use Google Voice Typing to Enter Text

1. From a screen where you can enter text, drag down from the top of the screen to open the Notifications panel, and then touch **Select input method** > **Google voice typing**.
2. Speak into the microtablet and watch your text being entered on-screen.
3. If the text is incorrect, touch **DELETE**.
4. Once you have completed entering your text, touch . The on-screen keyboard will reappear.

Note: Select a language by touching the language displayed at the top of the **Listening** area. Touch **Add more languages** to assign a new language via the Google voice typing menu. Removing the check mark from the **Automatic** field allows you to select additional languages.

Configure Google Voice Typing

Set Google Voice Typing options.

- Press  and touch  > **Settings** > **Language and input**, and then touch  next to **Google voice typing**.

Samsung Keyboard

With Samsung Keyboard, it's easy to enter text, symbols, and numbers.

Use Samsung Keyboard to Enter Text

1. From a screen where you can enter text drag down from the top of the screen to open the Notifications panel, and then touch **Select input method** > **Samsung keyboard**.
2. Touch keys to enter text. While entering text, use these options:
 - If you make a mistake, touch  to delete incorrect characters. Touch and hold  to delete a whole word or field.
 - By default, Samsung Keyboard starts with a capital at the beginning of text. Touch  to change the case of the text. Touch  twice to switch to all capitals.
 - Touch  to switch to a symbols keyboard. There are two symbol keyboards.
 - Touch  to switch to Google Voice typing and to enter text by speaking.
 - Touch and hold  for additional options:
 -  Switch to Google Voice typing.

DRAFT For Internal Use Only

-  Display a handwriting pad. Use your finger tip to write out each character. As you write, suggestions are offered in the word options area in case the correct letters were not recognized. (To properly recognize the written characters, do not use script.)
-  View Samsung Keyboard settings.
-  Choose between the standard Qwerty keyboard, or a Floating keyboard which can be moved around the screen.

Using Predictive Text

By using Predictive text, you can have next-letter prediction and regional error correction, which compensates for touching the wrong keys on the QWERTY keyboard.

While entering characters, potential word matches display in the Predictive text area above the keyboard.

- Touch a word to insert it into your text. Touch  to display more words.

Configure Samsung Keyboard

You can configure options for Samsung keyboard. For more information, see [Samsung Keyboard](#).

- Press  and touch  > **Settings** > **Language and input**, and then touch  next to **Samsung keyboard**.

Swype

Swype lets you enter words by tracing over the letters on the virtual QWERTY keyboard. Instead of touching each key, use your finger to trace over each letter of a word. You can also touch letters to enter words.

Swype provides next-letter prediction and regional error correction, which can compensate for touching the wrong keys on the virtual QWERTY keyboards.

Use Swype to Enter Text

1. From a screen where you can enter text drag down from the top of the screen to open the Notifications panel, and then touch **Select input method** > **Swype**.
2. Swipe your finger continuously over the letters to form a word. As you swipe over letters, words matching your pattern display at the top of the Swype keyboard. To enter a word, lift your finger, or touch a word at the top of the keyboard.
3. While entering text, use these options:
 - If you make a mistake, touch  to delete a single character. Touch and hold  to delete an entire word or field.

DRAFT For Internal Use Only

- By default, Swype starts with a capital at the beginning of text. Touch  to start with a capital letter, or touch  twice to enter all capitals.
- Touch  to switch to a symbols keyboard, and then touch keys to enter symbols.

Configure Swype

Choose Swype options. For more information, see [Swype Settings](#).

- Press  and touch  > **Settings** > **Language and input**, and then touch  next to **Swype**.

Editing Text

Your tablet gives you many options to make entering text easier—including copying, cutting, and pasting text, using voice-to-text input, and more.

Note: Some apps do not support text editing, while others may offer their own way to select and edit text.

Edit Existing Text

1. Touch the text at the point you want to edit. The selection cursor  displays at the point you touched.
2. Touch and drag  to a better position, if necessary.
3. Enter additional text, or delete text by touching .

Copy, Delete, or Replace Text

1. Touch and hold the text or word you want to select. The selected text is highlighted between selection cursors .
2. Touch and drag either cursor to select more or less text.
3. On the pop-up menu, touch:
 - **Select all** to highlight all text in the field.
 - **Cut** to remove the selected text.
 - **Copy** to save the selected text to the clipboard.
 - **Paste** to paste previously copied text.
 - **Clipboard** to display the text saved to the clipboard.
 - **Translate** to translate the highlighted word. For more information, see [S Translator](#).
4. Enter text by typing or speaking to replace the selected text.

DRAFT For Internal Use Only

5. Touch  to delete the selected text.

Paste Text

1. Touch the text at the point you want to edit. The selection cursor  displays at the point you touched.
2. Touch and drag  to a better position, if necessary.
3. Touch . A pop-up menu displays.
 - Touch **Paste** or touch **Clipboard** to view items on the Clipboard.

DRAFT For Internal Use Only

Contacts

The Contacts application lets you store and manage contacts from a variety of sources, including contacts you enter and save directly in your tablet as well as contacts synchronized with your Google account, your PC, compatible email programs (including Exchange Server), and your Facebook friends.

Get Started with Contacts

Before using Contacts, it's best to learn a few basics.

- Your tablet automatically sorts the Contacts entries alphabetically.
- Contacts can be stored in device memory. You can also create contacts that sync with an account—such as a Google contact or a Corporate (Microsoft Exchange ActiveSync) contact.

When you create a new contact, you will be asked where you want to store the contact. Some options are:

- **Device** contacts are stored in device memory.

Note: If the tablet is ever reset to its factory default parameters, locally stored contacts (device contacts) can be lost.

- **Google** contacts are shared with your existing Google account and can also be imported to your tablet after you have created a Google Mail account.
- **Microsoft Exchange ActiveSync** contacts are shared with a Microsoft Exchange account.

Access Contacts

- Press  and touch  **Contacts**.

Add a Contact

You can add contacts directly into the Contacts application. Enter details such as name, tablet numbers, email addresses, mailing addresses, and more.

1. Press  and touch  **Contacts**.
2. Touch , and then choose a storage account, if you have multiple accounts set up on your tablet.
3. Touch contact fields to enter information. While entering information, touch  to add another field, and touch  to choose a label.
 - **Picture:** Touch the picture icon to assign a picture to the new entry.

DRAFT For Internal Use Only

- **Name:** Use the on-screen keyboard to enter the name. Touch  next to the Name field to display additional name fields.
- **Tablet:** Enter a tablet number.
- **Email:** Enter an email address.
- **Groups:** Assign the contact to a group.
- **Add another field:** Add new field(s) for the contact.

4. Touch **Save** to save the new contact.

Edit a Contact

Once you've added a contact, you can add or edit any of the information in the entry.

Add or Edit Information

You can modify existing contact information to keep your information up-to-date.

1. Press  and touch  **Contacts**.
2. Touch a contact to display it, and then touch  > **Edit**.
3. Touch any field you want to change or add.
4. Add or edit the information, and then touch **Save**.

Tip: You can also touch and hold the contact and then touch **Edit**.

Assign a Photo to a Contact

Adding a photo to a contact entry creates a more personal and easily recognized entry. For example, when receiving messages from one of your contacts, the associated picture will display.

1. Press  and touch  **Contacts**.
2. Touch a contact to display it, and then touch the picture icon.
3. Choose an image. Options are:
 - **Image:** Select a photo from the Gallery.
 - **Pictures by people:** Select photos from the Gallery which been tagged with people's names.
 - **Take picture:** Take a new photo of the contact.
4. Resize the photo by dragging the sides of the blue border, and then touch **Done**.

DRAFT For Internal Use Only

Link a Contact

When you have contacts from various sources (Gmail, device, Facebook, etc.), you may have multiple similar entries for a single contact. Your tablet's Contacts application lets you link multiple entries into a single contact.

1. Press  and touch  **Contacts**.
2. Touch a contact to display it, and then touch  > **Link contact**.
3. Touch another entry to link it to the original contact.

Note: You can link up to five contacts in a single entry.

Delete a Contact

You can delete a contact from the contacts details page.

1. Press  and touch  **Contacts**.
2. Touch a contact to display it, and then touch .
3. Touch **OK**.

Tip: You can also touch and hold the contact and then touch **Delete**.

Add Contacts to Your Favorites

The Favorites tab is a listing that can help you quickly access your most used or preferred Contacts entries.

1. Press  and touch  **Contacts**.
2. Touch and hold the entry name from the Contacts tab listing.
3. From the **Contacts Entry** context menu, touch **Add to favorites**.

Note: Another method to add or remove an entry from your favorites is to touch the star icon on the Contact's details page (upper right). Touch to add the entry to your favorites (star is lit), touch again to remove.

Share a Contact

You can quickly share contacts using Bluetooth, Email, Gmail, or Wi-Fi Direct.

1. Press  and touch  **Contacts**.
2. Touch a contact to display it, and then touch  > **Share namecard via**.
3. Touch **Selected contact** to send the currently displayed contact, or touch **Multiple contacts** to choose other contacts.

DRAFT For Internal Use Only

4. Touch to select one of the following sharing methods:
 - **Bluetooth:** Send the information via Bluetooth. See [Bluetooth](#) for information on pairing and sending via Bluetooth.
 - **Email:** Send the information as an email attachment. See [Compose and Send Email](#) for details on sending email.
 - **Gmail:** Send the information as a Gmail attachment. See [Send a Gmail Message](#) for details.
 - **Wi-Fi Direct:** Send the information via a device-to-device connection.

Groups

This feature allows you to add a new or existing contact to a group. This group can be one of the already present groups (Family, Friends, or Work) or a user-created group.

Create a New Group

You can create new groups and add members.

1. Press  and touch  **Contacts > Groups**.
2. Touch  > **Create**.
3. Enter information about the group:
 - Touch the **Group name** field and enter a name for the new group.
 - Touch **Add member** and select a member or members to add to the new Group list.
4. Touch **Done** when you are finished adding members, and then touch **Save**.

Add a Contact to a Group

You can add new members to a group from your Contacts.

1. Press  and touch  **Contacts > Groups**.
2. Touch a group to display it, and then touch .
3. From the list of contacts, touch the contact(s) you want to add.
4. Touch **Done** to add the contact to the group.

Send an Email or Gmail to Group Members

You can send an email or Gmail to all or selected members of a group.

1. Press  and touch  **Contacts > Groups**.
2. Touch an existing group and then touch  > **Send email**.
3. Select the recipients of the new message and then touch **Done**.

DRAFT For Internal Use Only

4. Touch **Email** or **Gmail**, then touch **Always** to use this as the default sending method, or **Just once** to be asked each time which service to use.
5. Compose and send your email. For more information, see [Compose and Send Email](#) or [Send a Gmail Message](#).

DRAFT For Internal Use Only

Accounts and Messaging

Set up accounts on your tablet, to synchronize information between your tablet and accounts.

Google

Many of your tablet's applications, such as Gmail, Google Maps, Google Talk, and the Google Play Store, require a Google account. To use these applications, you must set up your Google account on your tablet. Setting up your account on your tablet syncs your tablet and your online Google account.

Create a Google Account

If you do not already have a Google account, you can create one online or using your tablet.

Note: Although you need a Gmail account to use certain features of your tablet, such as Google Play Store, you do not need to use Gmail as the default account for your tablet.

Create a Google Account Online

1. From a computer, launch a Web browser and navigate to google.com.
2. On the main page, click **SIGN IN > SIGN UP**.
3. Follow the on-screen prompts to create your free account.

Create a Google Account Using Your Tablet

1. Press  and touch  > **Settings**.
2. Touch **Add account > Google > New**.
3. Follow the on-screen prompts to create your free account.

Access Gmail

Below are procedures for accessing your Gmail account.

1. Press  and touch  **Apps >  Gmail**.
2. Do any of the following:
 - **View more email messages:** If the Inbox is full, swipe your finger up the screen to view more messages and conversations.
 - **Read a new email message:** Touch the unread message or the conversation with an unread message (just-arrived items display in bold).
 - **Select messages and conversations:** Touch the box before the email or conversation.
 - **View the Inbox of another Gmail account:** Touch **Inbox** at the top of the screen and then touch the inbox of the Gmail account you want to view.

Send a Gmail Message

Below are procedures for sending a Gmail.

1. Press  and touch  **Apps** >  **Gmail**.
2. From the Inbox, touch .
3. Enter the message recipient's email address in the To field. You can add multiple recipients.

Note: To send a carbon copy (CC) or a blind carbon copy (BCC) of the email to other recipients, touch **+CC/BCC**.

4. Touch **Subject** and enter the email subject.
5. Touch **Compose email** and compose your message.
6. To add a picture attachment, touch +. To add a video attachment, touch  > **Attach video**.
7. To send the message, touch .
 - To save the current email as a draft, touch  > **Save draft**. To later view your draft email messages, from the Inbox, touch **Drafts**.
 - To delete the current email message, touch  > **Discard**.

Read and Reply to Gmail Messages

Below are procedures for reading and replying to Gmail messages.

1. Press  and touch  **Apps** >  **Gmail**.
2. Touch a message to display its contents.

Tip: You can also access new messages through the Notifications bar. When a new Gmail message arrives, you'll see the icon in the Notifications bar. Touch, hold, and drag the bar down to display notifications. Touch a message to display it.

3. From the menu at the top left of the screen, touch  **Reply**,  **Reply all**, or  **Forward**.
4. To send the message, touch .

Email

Use the Email application to send and receive email from your webmail or other accounts. You can also access your Exchange ActiveSync email on your tablet.

Add an Email Account

Email allows you to send and receive email using various email services. You can also receive text message alerts when you receive an important email.

DRAFT For Internal Use Only

1. Press  and touch  **Apps** >  **Email**.
– OR –
Press  and touch  **Menu** > **Settings** > **Add account** > **Email**.
2. Enter your email address in the **Email address** (account@example.com) field.
3. Enter your password in the **Password** field. To see your password as you enter it, touch **Show password**.
4. If necessary, touch **Send email from this account by default** to set this account as your default email.
5. Touch **Next** to start automatic email setup. If you need to configure custom settings, touch **Manual setup** and then enter your settings. These may include mail type, user name, password, server, security type, etc.
6. Follow the on-screen prompts to configure options for the account.

Add a Microsoft Exchange ActiveSync Account

The Email application also provides access to your Microsoft Exchange account from your tablet. If your company uses Microsoft Exchange Server 2003, 2007, or 2010 as the corporate email system, you can use this email application to wirelessly synchronize your email, Contacts, and Task information directly with your company's Exchange server.

Use the following procedure to synchronize your tablet with a corporate email account.

Note: You can set up multiple Microsoft Exchange ActiveSync accounts on your tablet.

1. Press  and touch  **Menu** > **Settings**.
2. Touch **Add account** > **Microsoft Exchange ActiveSync**.
3. Enter your email address in the **Email address** (account@example.com) field.
4. Enter your password in the **Password** field. To see your password as you enter it, touch **Show password**.
5. Touch **Next**, and follow the on-screen prompts to configure options for the account.

Note: Consult your network administrator for assistance in configuring your account.

Compose and Send Email

Compose and send email using any account you have set up on your tablet. Increase your productivity by attaching files such as pictures, videos, or documents to your email messages.

1. Press  and touch  **Apps** >  **Email**.
2. From the Inbox, touch 

DRAFT For Internal Use Only

- Touch the **To** field and enter the recipient's email address in the **To** field. You can add as many message recipients as you want.
 - To send a copy of the message to yourself, touch **+Me**. To send a carbon copy (Cc) or a blind carbon copy (Bcc) of the current email to other recipients, add their email addresses in the **Cc/Bcc** field.
 - Touch the **Subject** field and enter the email subject.
3. Touch the text area to compose your email.
 - To add an attachment, touch . Choose from the following: **My Files**, **Images**, **Take a picture**, **Video**, **Record video**, **Audio**, **Memo**, **Calendar**, **Contacts**, or **Location**.
 4. To send the message, touch .

View and Reply to Email

Reading and replying to email on your tablet is as simple as on your computer.

1. Press  and touch  **Apps** >  **Email**.
2. From the email account Inbox, touch a message to view it.
3. Touch  **Reply**,  **Reply All** to reply to the original recipient list, or touch  **Forward** to forward the message to new recipient(s) in the **To** field.
4. Enter a message (if desired) and then touch .

Manage Your Email Inbox

The following procedures allow you to view, refresh, sort, and delete your email messages.

View Your Email Inbox

1. Press  and touch  **Apps** >  **Email**.
2. If you have more than one account set up on your tablet, touch the list at the top of the screen and choose an account.

Refresh an Email Account

Whatever your automatic synchronization settings are, you can also synchronize your sent and received email messages manually at any time.

1. Press  and touch  **Apps** >  **Email**.
2. Select an email account.
 - If you are already in an email account, touch the account name field (top left corner) to list all of your email accounts.

DRAFT For Internal Use Only

- Select an available email account.

3. Touch  **Refresh**.

Sort Email Messages

1. Press  and touch  **Apps** >  **Email**.
2. From the email account Inbox, touch  > **Sort by**.
3. Select from the options to sort email messages by: date received (most recent or oldest), by sender, read/unread status, attachments, starred favorites, priority, subject, flag, request, meeting requests, or size. (Not all options are available for all email accounts.)

Delete an Email Message

1. Press  and touch  **Apps** >  **Email**.
2. From the email account Inbox, touch the check box next to each email you want to delete.
3. Touch  **Delete**.

Edit Email Settings

You can edit general preferences, which apply to all email accounts, or configure settings for specific email accounts, such as email address and password, name display and signature, frequency of retrieval, and more.

Note: Available settings depend on the type of email account.

Edit General Preferences

1. Press  and touch  **Apps** >  **Email**.
2. Touch  > **Settings** > **General settings** to configure settings. Available settings depend on the type of email account, and may include:
 - **Auto fit content:** Shrink email content to fit the screen.
 - **Auto advance:** Choose how the email list displays after you delete or move an email.
 - **Message preview line:** Choose the number of lines displayed in the email list to give you a preview of an email's contents.
 - **Title line in list:** Choose the title line (in bold for unread messages), to display the sender or the subject.
 - **Confirm deletions:** Choose whether the tablet prompts you to confirm the action when you mark emails for deletion.

DRAFT For Internal Use Only

- **Quick responses:** Create and edit text strings that you can add to an email to respond quickly.
- **Spam addresses:** Edit the list of senders and domains reported as spam.
- **Delay email sending:** Delay the sending of emails so that they can be canceled, if needed.
- **Rules for filtering:** Manage rules for sorting email based on sender and subject.
- **Default image size:** Set the default size for image attachments.
- **Priority senders:** Maintain a list of email addresses to ensure that emails from the addresses receive priority handling.
- **Set as the default folder:** Show the Priority Sender Inbox whenever you open Email.
- **Email notifications:** Choose whether notifications for new emails are displayed in the Status bar at the top of the screen.
- **Select ringtone:** Select a ringtone to use for email notifications.

Edit Account Settings

You can edit settings for your individual email accounts, such as email address and password, name display and signature, frequency of retrieval, and more.

Note: Available settings depend on the type of email account.

1. Press  and touch  **Apps** >  **Email**.
2. Touch  > **Settings**, and then touch an account to configure settings.

Delete an Email Account

If you no longer want an email account on your tablet, you can delete it through the email settings menu.

1. Press  and touch  **Apps** >  **Email**.
2. Touch  > **Settings** >  **Delete account**.
3. Touch the account(s) to delete.
4. Touch **Delete** to remove the account(s).

Social Networking Accounts

Stay in touch on the go with all your social networking accounts.

Flipboard

The Flipboard application creates a personalized digital magazine out of everything being shared with you. Access news stories, personal feeds and other related material. Flip through your Facebook newsfeed, tweets from your Twitter account, photos from friends and much more.

1. Press  and touch  **Apps** >  **Flipboard**.
2. Follow the on-screen instructions.

Google+

Google+ makes messaging and sharing with your friends a lot easier. You can set up Circles of friends, visit the Stream to get updates from your Circles, use Messenger for fast messaging with everyone in your Circles, or use Instant Upload to automatically upload videos and photos to your own private album on Google+. Visit google.com/mobile/+/ for more information.

Google+ uses your Google account. If you don't already have a Google account set up on your tablet, you can set one up.

- Press  and touch  **Apps** >  **Google+**.

Hangouts

Previously known as Google Talk, Hangouts is an online place to meet friends and family, share photos, and host video calls. Conversation logs are automatically saved to a Chats area in your Gmail account.

Note: You must be currently signed into your Google account to use Hangouts.

- Press  and touch  **Apps** >  **Hangouts**.

Messenger

Messenger allows you to bring groups of friends together into a simple group conversation. When you get a new conversation in Messenger, Google+ sends an update to your tablet.

Messenger uses your Google account. If you don't already have a Google account set up on your tablet, you can set one up.

- Press  and touch  **Apps** >  **Messenger**.

YouTube

YouTube™ is a video sharing website on which users can upload and share videos. The site is used to display a wide variety of user-generated video content, including movie clips, TV clips, and music videos, as well as video content such as video blogging, informational shorts, and other original videos.

YouTube is a data-intensive feature. Check your data plan to avoid additional data charges.

- Press  and touch  **Apps** >  **YouTube**.

Note: It is not necessary to sign in to the YouTube site to view content. However, if you wish to sign in to access additional options touch the **ACCOUNT** tab. Select an account (if available) or create a new account. (Even if you sign in to YouTube via the Web, you must separately sign in via your tablet.)

DRAFT For Internal Use Only

Apps and Entertainment

All your tablet's features are accessible through the Apps list.

DivX

DivX is a digital media format that provides your tablet with high-quality videos.

DivX Legal Information

DivX®, DivX Certified® and associated logos are trademarks of Rovi Corporation or its subsidiaries and are used under license.

DivX Certified® to play DivX® video up to HD 720p, including premium content.

ABOUT DIVX VIDEO: DivX® is a digital video format created by DivX, LLC, a subsidiary of Rovi Corporation. This is an official DivX Certified® device that has passed rigorous testing to verify that it plays DivX video. Visit divx.com for more information and software tools to convert your files into DivX videos.

ABOUT DIVX VIDEO-ON-DEMAND: This DivX Certified® device must be registered in order to play purchased DivX Video-on-Demand (VOD) movies. To obtain your registration code, locate the DivX VOD section in your device setup menu (touch **Apps** > **Settings** > **About device** > **Legal information** > **License settings** > **DivX® VOD** > **Register**). Go to vod.divx.com for more information on how to complete your registration.

Important! DivX VOD content is protected by a DivX DRM (Digital Rights Management) system that restricts playback to registered DivX Certified devices.

Locating Your VOD Registration Number

Follow these procedures to locate your VOD registration number.

- Press  and touch  > **Settings** > **About device** > **Legal information** > **License settings** > **DivX® VOD** > **Register**.

Register Your DivX Device for VOD Playback of Purchased Movies

To play purchased DivX movies on your device, you will first need to complete a one-time registration using both your device and your computer.

1. Locate your VOD Registration code. Press  and touch  > **Settings** > **About device** > **Legal information** > **License settings** > **DivX® VOD** > **Register**.
2. Open the DivX Player on your computer. To download the free player for your computer, visit divx.com.
3. From the DivX Player on your computer, choose the VOD menu and select **Register a DivX Certified Device**. Follow the prompts to log in, or create a DivX account if you don't already have one.

DRAFT For Internal Use Only

4. Follow the instructions in DivX Player to enter your device's VOD registration code and create a device nickname.
5. Choose a location on your computer to download the DivX registration video, then download the file.
6. Connect your device to the computer via USB and transfer the DivX registration video to your device. From the Registration screen (Transfer), select **USB** (the device) as the target destination for the DivX registration video and touch **Start**. Return to the DivX VOD Manager screen (in your computer's DivX Player) and confirm both your computer and your new device appears in the list of registered DivX devices.

Note: There is no special registration or configuration necessary to play back DRM-free DivX movies. Registration of your device is only required for playback of DivX material.

Game Hub

Game Hub provides a premium one-stop service center that lets you play, connect, and share games on compatible Samsung Android devices.

1. Press  and touch  **Apps** >  **Game Hub**.
2. Read the on-screen disclaimer and touch **Confirm**.
3. Follow the on-screen instructions and navigate to your favorite games and services.

Google Play Store

The Google Play Store is the place to go to find new Android apps, games, movies, music, and books for your tablet. Choose from a wide variety of free and paid apps ranging from productivity apps to games. When you find an app you want, you can easily download and install it on your tablet.

To access the Google Play Store you must have a Google Account set up on your tablet. See [Sign In to Your Google Account](#) for details.

Important! Third-party applications may access your personal information or require your service provider to disclose your customer information to the third-party application provider. To find out how a third-party application will collect, access, use, or disclose your personal information, check the application provider's policies, which can usually be found on their website. If you aren't comfortable with the third-party application's policies, don't use the application.

Find and Install an App

When you install apps from the Google Play Store app and use them on your tablet, they may require access to your personal information (such as your location, contact data, and more) or access to certain functions or settings of your tablet. Download and install only apps that you trust.

Note: You need a Google Wallet account to purchase items from the Google Play Store app.

1. Press  and touch  **Apps** >  **Play Store**.
2. Browse through the categories, find an app you're interested in, and touch the name.

3. Follow the prompts to download and install the app.

Warning! Read the notification carefully! Be especially cautious with apps that have access to many functions or a significant amount of your data. Once you touch **OK** on this screen, you are responsible for the results of using this item on your tablet.

Create a Google Wallet Account

You must have a Google Wallet account associated with your Google Account to purchase items from the Google Play Store app.

Do one of the following:

- On your computer, go to google.com/wallet.

- or -

The first time you use your tablet to buy an item from the Google Play Store app, follow the prompts to enter your billing information and set up a Google Wallet account.

Warning! When you've used Google Wallet once to purchase an item from the Google Play Store app, the tablet remembers your information, so you don't need to enter it the next time. For this reason, you should secure your tablet to prevent others from using it without your permission. (For more information, see [Security Settings](#).)

Open an Installed App

Open a newly installed app via the apps menu.

- Press  and touch  **Apps** and then touch the app icon.

Uninstall an App

You can uninstall any app that you have downloaded and installed from Google Play. You cannot uninstall apps that are preloaded on your tablet.

1. Press  and touch  > **Settings** > **Application manager** > **Downloaded**.
2. Touch the app you want to uninstall, and then touch **Uninstall**.
3. Follow the prompts to complete the uninstall.

Google Play Books

With Google Play Books, you can find more than 3 million free e-books and hundreds of thousands more to buy in the Google Play Store.

- Press  and touch  **Apps** >  **Play Books**.

DRAFT For Internal Use Only

Google Play Games

Google Play Games is the easiest way for you to discover new games, track achievements and scores, and play with friends around the world. It brings all your gaming on Google Play together in a unified Android experience.

- Press  and touch  **Apps** >  **Play Games**.

Google Play Newsstand

Formerly Google Play Magazines, Play Newsstand combines Play Magazines and Google Currents to bring you free and paid news, magazine subscriptions, and much more all in one place.

Visit play.google.com/store/newsstand to learn more.

- Press  and touch  **Apps** >  **Play Newsstand**.

Google Play Movies & TV

The Google Play Movies & TV application allows you to connect to the Google Play Store and download a movie or TV show to watch instantly. Choose from thousands of movies and TV shows, including new releases and HD titles in Google Play and stream them instantly on your Android tablet. Previously rented movies are automatically added to your My Movies library across your devices. Learn more about Google Play Movies at: play.google.com/about/movies.

- Press  and touch  **Apps** >  **Play Movies & TV**.

Google Play Music

Google Play Music lets you browse, shop, and play back songs purchased from the Google Play Store app, as well as songs you have loaded from your own music library. The music you choose is automatically stored in your Google Music library and instantly ready to play or download.

- Press  and touch  **Apps** >  **Play Music**.

Group Play

Use Group Play to share media from your tablet to other devices, via Wi-Fi, using your tablet as an AP (Access Point).

Many of your tablet's apps offer sharing via Group Play. Touch  to find sharing options, usually from the Share via list of options.

To use Group Play, all participants must be connected to the same Wi-Fi network.

Important: If you are using Group Play via an unsecured Wi-Fi network, your information may be vulnerable to unauthorized third parties while being transferred.

Use Group Play only for personal and non-profit purposes. Using Group Play for commercial use violates copyright law. The company is not responsible for copyright infringement by users.

Create a Group and Share

Note: To use Group Play, all participants must be connected to the same Wi-Fi network.

1. Press  and touch  **Apps** >  **Group Play**.
2. Read the disclaimer and touch **Agree**.
3. Touch **Join group** and follow the prompts to join an existing group.

– or –

Touch **Create group** and follow the prompts to create a new group. You'll need to set up a group password, which participants will use to join your Group Play session.

4. Your tablet will turn on the mobile AP (Access Point). Follow the onscreen directions to bring other devices back-to-back with your tablet to join the group.
5. Choose options for sharing:
 - **Share picture:** Select pictures stored on your tablet or on an optional installed memory card (not included).
 - **Share music:** Select music stored on your tablet or on an optional installed memory card (not included).
 - **Share document:** Select documents stored on your tablet or on an optional installed memory card (not included).
 - **Play games and more:** Select games and other media to share.

Note: For more information about using Group Play, touch  > **Help**.

Music Hub

Music Hub lets you upload your music collection to the cloud, stream, and purchase songs from an extensive catalog, and listen to personal radio.

Note: You must have the Samsung Account application to using Media Hub.

- Press  and touch  **Apps** >  **Music Hub**.

Music Player

The Music Player is an application that can play music files. Launching the Music Player allows you to navigate through your music library, play songs, and create playlists (music files bigger than 300 KB are displayed).

1. Press  and touch  **Apps** >  **Music Player**.
2. Touch a library category on the left side of the screen (**Songs**, **Playlists**, **Albums**, **Artists**, **Genres**, **Folders**, **Composers**, **Years**, or **Music Square**) to view the available music files.

3. Scroll through the list of songs and touch an entry to begin playback.

Google Maps

Use the Google Maps application to find directions, location information, business addresses, etc. Determine your current location with or without GPS, get driving and transit directions and get tablet numbers and addresses for local businesses.

Enable Location on Your Tablet

Google Maps may require you to turn on Location. For more information about location settings, see [Location Settings](#).

- Press  and touch  **Apps** >  **Maps**.

Story Album

Create albums containing your special moments and keep them in one place using your timeline.

- Press  and touch  **Apps** >  **Story Album**.

TripAdvisor

Get assistance finding hotels, restaurants, and attractions in any destination. See millions of reviews, opinions and candid photos from travelers just like you.

- Press  and touch  **Apps** >  **TripAdvisor**.

WatchON

Enjoy all of your favorite movies and TV shows with WatchON.

Important: Before you use WatchON, verify that you have an active Internet connection available. For more information, see [Wi-Fi](#).

Note: Before beginning your initial WatchON application setup, make sure that your TV is turned off.

You need an active Samsung account on your tablet to use WatchON. Sign into your Samsung account prior to using WatchON.

1. Press  and touch  **Apps** >  **WatchON**.
2. Follow the on-screen instructions to configure and use WatchON.

DRAFT For Internal Use Only

Smart Remote

Smart Remote you to locate and watch programming on your TV and control your entertainment system with gestures from the tablet.

For more information, visit peel.com.

1. Press  and touch  **Apps** >  **Smart Remote**.
2. Follow the on-screen instructions.

World Clock

View the date and time in any time zone.

1. Press  and touch  **Apps** >  **World Clock**. A map of the world displays with the locations you have added flagged.
2. Touch  to add a city:
 - Touch the **Search cities** field and enter the name of a city. Touch a city from the suggestions listed.
 - Touch and drag the screen to rotate the globe. Touch the toolbar to zoom in to display more cities. Then touch to select a city.
3. The current time for that city is displayed. To add this city to your list, touch .
4. Configure list options:
 - To change the order of the cities, touch . Touch and drag  on an entry to move it to a new position in the list. Touch **Done** to save changes.
 - Touch  to delete entries. Touch the check box next to the cities you want to delete, then touch **Delete**.
5. Touch and hold an entry for options:
 - **Delete**: Remove the city from the list.
 - **DST settings**: Set daylight savings time options for the city.

DRAFT For Internal Use Only

Web and Data

The following topics address your tablet's data connections and the built-in Web browser. Additional data-related features can be found in [Accounts and Social Networking](#), [Apps and Entertainment](#), and [Tools and Calendar](#).

Your tablet's data capabilities let you wirelessly access the Internet or your corporate network through a variety of connections, including:

Internet

Your tablet's Web browser gives you full access to both mobile and traditional websites on the go, using your tablet's 3G, 4G, or Wi-Fi data connections.

- Press  and touch  **Apps** >  **Internet**.

Chrome

Use Chrome for Mobile to browse fast and sign in to bring your Chrome experience from your computer, anywhere you go.

For more information, visit google.com/intl/en/chrome/browser/mobile.

- Press  and touch  **Apps** >  **Chrome**.

Lumen Toolbar

The Lumen Toolbar makes the mobile web more social and more useful than ever before. Extensions like Facebook, Twitter, Related Apps, Offers, Readability and many more allow you to stay connected, find deals, browse apps and save browsed content for later – all without leaving the page you're currently on.

- Press  and touch  **Apps** >  **Lumen Toolbar**.

Data Services (3G and 4G)

With your tablet and its wireless features, you are ready to start enjoying the advantages of data services. The following topics will help you learn the basics of using data services, including managing your user name, launching a data connection, and navigating the Web with your tablet.

Important: Certain data services requests may require additional time to process. While your tablet is loading the requested service, the touchscreen keyboard may appear unresponsive when in fact it is functioning properly. Allow the tablet some time to process your data usage request.

Your Data Services User Name

When you buy your tablet and sign up for service, you're automatically assigned a user name, which is typically based on your name and a number.

DRAFT For Internal Use Only

Find Your User Name

1. Press  and touch  > **Settings** > **About device**.
2. Touch **Status**, and then find your user name.

4G Services

Your tablet supports 4G LTE. 4G is a service that must be included in your service plan and also available in your area. 4G coverage is currently available in only certain markets.

Note: If 4G service is not available in your location, the 4G icon will not appear in the Notifications area.

Not all services are available on 4G and coverage may default to 3G/separate network where 4G unavailable.

Depending on which icons appear in the Notifications area, your services and features will change. The following table indicates what functions and features are available when combinations of these service icons appear:

Icon	Description
	3G Coverage: The tablet is connected to a 3G network. When data is being transferred, the arrows are colored.
	4G Coverage: The tablet is connected to a 4G network. When data is being transferred, the arrows are colored.

Wi-Fi

Wi-Fi provides wireless Internet access over distances of up to 300 feet. To use your tablet's Wi-Fi features, you need access to a wireless access point or "hotspot."

The availability and range of the Wi-Fi signal depends on a number of factors, including infrastructure and other objects through which the signal passes.

Turn Wi-Fi On and Connect to a Wi-Fi Network

Turning on Wi-Fi allows your tablet to discover and connect to compatible in-range Wi-Fi networks (or WAPs - wireless access points).

When Wi-Fi is turned On, your tablet will notify you of available Wi-Fi networks, and you can connect to the Wi-Fi networks. Turn Wi-Fi Off when not in use, to conserve battery power.

Turn Wi-Fi On or Off

1. Press  and then touch  > **Settings**.
2. Touch the **Wi-Fi ON/OFF** switch to turn Wi-Fi On or Off.

Note: You can also turn Wi-Fi On or Off from Notifications. Drag down from the top of the screen, then touch the **Wi-Fi** button.

DRAFT For Internal Use Only

Scan and Connect to a Wi-Fi Network

1. Press  and then touch  > **Settings**.
2. Touch the **Wi-Fi ON/OFF** switch to turn Wi-Fi On.
3. Wi-Fi automatically begins scanning for available networks. **Scan** to begin a new scan.
4. The network names and security settings (Open network or Secured with xxx) of detected Wi-Fi networks are displayed.
 - When you select an open network, you will be automatically connected to the network.
 - When you select a secured network, you will need to enter the wireless password to connect to the network. Enter the password and touch **Connect**. You can use the **show password** option to display the password as you enter it.

Manually Add a New Wi-Fi Connection

1. Press  and then touch  > **Settings**.
2. Touch the **Wi-Fi ON/OFF** switch to turn Wi-Fi On.
3. Touch **Add Wi-Fi network**.
4. Enter the Network SSID. This is the name of your Wi-Fi network.
5. Touch the **Security** field and select a security option. This must match the current security setting on your target network.
6. Touch **Connect** to store the new information and connect to the Wi-Fi network.

Note: The next time your tablet detects a known Wi-Fi network, it will connect automatically. You won't need to enter the details again unless you reset your tablet's settings.

Wi-Fi Settings

For information about configuring Wi-Fi settings, see [Wi-Fi Settings](#).

Wi-Fi Direct

Wi-Fi Direct allows devices to connect to each other directly via Wi-Fi, without a Wi-Fi network or hotspot, and without having to set up the connection. For example, your tablet can use Wi-Fi Direct to share photos, contacts and other content with other Wi-Fi Direct devices.

1. Press  and then touch  > **Settings**.
2. Touch the **Wi-Fi ON/OFF** switch to turn Wi-Fi On. Wi-Fi must be On to configure Wi-Fi Direct settings.
3. Touch **Wi-Fi Direct**. Your tablet automatically scans for nearby Wi-Fi Direct devices, or you can touch **Scan** to begin a new scan.
4. After scanning for devices, select a device, then follow the prompts to complete the connection.

DRAFT For Internal Use Only

– or –

Touch **Multi-connect** to create a connection to devices that support multi-connect. Touch **Scan** to search for available multi-connect devices, then select the devices and follow the prompts to complete the connection.

Note: Touch  > to **Help to get additional information about Wi-Fi Direct.**

Bluetooth

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, printers, and wireless devices. The Bluetooth communication range is usually approximately 30 feet.

Turn Bluetooth On or Off

The following procedures will guide you through turning on and turning off Bluetooth.

1. Press  and touch  > **Settings**.
2. Touch the **Bluetooth ON/OFF** slider to turn Bluetooth on.

Tip: You can also turn Bluetooth on and off through the Notifications panel. Drag the Notifications panel down and touch **Bluetooth** to enable or disable Bluetooth.

Note: Turn off Bluetooth when not in use to conserve battery power, or in places where using a wireless device is prohibited, such as aboard an aircraft and in hospitals.

Pairing with a Bluetooth Device

Pairing initiates a connection between your tablet and the target device, usually by using a passcode or PIN. After pairing, your tablet and the target device recognize each other and exchange information without having to enter a passcode or PIN.

1. Press  and touch  > **Settings** > **Bluetooth**.
2. Touch the **Bluetooth ON/OFF** slider to turn Bluetooth on.
3. Make sure that the target device is discoverable, so that your tablet can find it. Refer to the instructions that came with the target device to find out how to set it to discoverable mode.
4. Touch **Scan**. Your tablet will start to scan for Bluetooth devices within range.
5. When you see the name of the target device displayed in the Bluetooth devices section, touch the name. Your tablet then automatically tries to pair with the target device.
 - If automatic pairing fails, enter the passcode supplied with the target device.

The pairing and connection status is displayed below the target device in the Bluetooth devices section.

When you are connected to the target device,  (Bluetooth connected) displays in the status bar.

DRAFT For Internal Use Only

Note: Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth-compatible devices.

Reconnect to a Bluetooth Device

When you have paired your tablet with another device, you should be able to reconnect it automatically by turning on Bluetooth on your tablet.

1. Press  and touch  > **Settings** > **Bluetooth**.
2. Touch the **Bluetooth ON/OFF** slider to turn Bluetooth on.
3. Make sure that the target device is discoverable.
4. Touch the target device's name in the Bluetooth devices section.
5. If prompted to enter a passcode, try 0000 or 1234, or consult the target device's documentation to find the passcode.
 - If you still cannot reconnect, follow the instructions in [Disconnect or Unpair from a Bluetooth Device](#), and then follow the instructions in [Pairing with a Bluetooth Device](#).

Disconnect or Unpair from a Bluetooth Device

Follow these instructions to disconnect or unpair your tablet from a Bluetooth device.

Disconnect from a Bluetooth Device

1. Press  and touch  > **Settings** > **Bluetooth**.
2. Touch the **Bluetooth ON/OFF** slider to turn Bluetooth on.
3. Touch the connected device, and then touch **OK to disconnect**.

Unpair from a Bluetooth Device

You can make your tablet forget its pairing connection with another Bluetooth device. To connect to the other device again, you may need to enter or confirm a passcode again.

1. Press  and touch  > **Settings** > **Bluetooth**.
2. Touch the **Bluetooth ON/OFF** slider to turn Bluetooth on.
3. In the Bluetooth devices section, touch  next to the device, and then touch **Unpair**.

Send Information Using Bluetooth

You can use Bluetooth to transfer information between your tablet and another Bluetooth-enabled device such as a tablet or notebook computer. The first time you transfer information between your tablet and another device, you need to enter or confirm a security passcode. After that, your tablet and the other device are paired, and you will not need to exchange passcodes to transfer information in the future.

You can send the following types of information, depending on the device you are sending to:

- Images and videos
- Calendar events
- Contacts
- Audio files

The location where the information is saved depends on the type of information and the receiving device.

1. Set the receiving device to discoverable mode. You may also need to set it to “Receive Beams” or “Receive Files”. Refer to the device’s documentation for instructions on receiving information over Bluetooth.
2. On the tablet, open the application that contains the information or file you want to send. For example, if you want to send a photo, press  and touch  >  **Gallery**.
3. Follow the steps for the type of item you want to send:
 - **Photo or video** (in Camera). After capturing a photo, on the preview screen, touch  > **Bluetooth**.
 - **Photos and videos** (in Gallery). On the **Albums** tab, touch an album, touch an item, and then touch  > **Bluetooth**.
 - **Calendar event**: In the Calendar’s Day view, Agenda view, or Week view, touch the event and then touch  > **Share via** > **Bluetooth**.
 - **Music track**: This feature is available through the **Music Player**. With the track displayed on the Now playing screen, touch  > **Via Bluetooth**.
4. Touch the name of the receiving device.
5. If prompted, accept the connection on the receiving device, and enter the same passcode on both your tablet and the other device, or confirm the auto-generated passcode.

Receive Information Using Bluetooth

Your tablet is capable of receiving a wide variety of file types with Bluetooth, including photos, music tracks, and documents such as PDFs.

1. Press  and touch  > **Settings** > **Bluetooth**.
2. Touch the **Bluetooth ON/OFF** slider to turn Bluetooth on.
3. Touch the check box next to your tablet's Bluetooth name to make it discoverable.
4. On the sending device, send one or more files to your tablet. Refer to the device’s documentation for instructions on sending information over Bluetooth.
5. If prompted, enter the same passcode on both your tablet and the other device, or confirm the auto-generated passcode. A Bluetooth authorization request is displayed on your tablet.

6. If you want to automatically receive files from the sending device in future, select the **Always allow this device** check box.

When a file is transferred, a notification is displayed. Touch **Accept**. To open the file immediately, slide down the notifications panel, and then touch the relevant notification.

When you open a received file, what happens next depends on the file type.

Bluetooth Settings

For information about configuring Bluetooth settings, see [Bluetooth Settings](#).

Memory Card

You can install an optional microSD™ memory card (not included), to add storage for images, videos, music, documents, and other files on your tablet. This tablet supports microSD™, microSDHC™, and microSDXC™ cards of up to 64GB capacity.

Install a Memory Card

Use the following procedures to install an optional memory card (not included) in your tablet.

1. Open the Memory Card Slot cover and turn to expose the slot.
2. With the gold contacts facing down, carefully slide the memory card into the slot, pushing gently until it clicks into place.



3. Replace the Memory Card Slot cover

Important! You can easily damage the memory card and card slot by improper operation. Please be careful when inserting, removing, or handling it.

Do not over-insert the card as this can damage the contact pins.

Remove a Memory Card

Use the following procedures to remove an optional installed memory card (not included) from your tablet.

Important! When you need to remove an optional installed memory card, you must unmount the card first to prevent corrupting the data stored on it or damaging the card.

1. Press  and touch  > **Settings** > **Storage**.
2. Touch **Unmount SD card**, then touch **OK**.
3. Open the Memory Card Slot cover and turn to expose the slot.

DRAFT For Internal Use Only

4. Gently press in on the memory card so that it pops out from the slot, then carefully pull the card out.



5. Replace the Memory Card Slot cover.

Important! You can easily damage the memory card and card slot by improper operation. Please be careful when inserting, removing, or handling it.

View the Memory Card's Available Memory

Use the following procedure to view used and available memory on an optional installed memory card (not included).

See for more information.

- Press  and touch  > **Settings** > **Storage**.

Format a Memory Card

Formatting permanently removes all files stored on an optional installed memory card (not included).

Note: The formatting procedure erases all the data on an installed card, after which the files cannot be retrieved. To prevent the loss of important data, please check the contents before you format a card.

1. Press  and touch  > **Settings** > **Storage**.
2. Touch **Format SD card** > **Format SD card** > **Delete all**.

Unmount a Memory Card

When you need to remove an optional installed memory card, you must unmount the card first to prevent corrupting the data stored on it or damaging the card.

1. Press  and touch  > **Settings** > **Storage**.
2. Touch **Unmount SD card**, then touch **OK**.

Kies via Wi-Fi

Kies via Wi-Fi allows you to sync your Windows PC wirelessly with your tablet provided they are both on the same Wi-Fi network. You can view and share videos, photos, music, bookmarks, ringtones, and even send SMS messages from your PC.

Note: To sync your tablet to your PC it is highly recommended that you install Samsung Kies, which is available at samsung.com/kies (for Windows/Mac).

DRAFT For Internal Use Only

1. Install and run Samsung Kies software on your PC.
2. Press  and touch  > **Settings** > **More settings** > **Kies via Wi-Fi**.
3. Follow the on-screen instructions.

Virtual Private Networks (VPN)

From your tablet, you can add, set up, and manage virtual private networks (VPNs) that allow you to connect and access resources inside a secured local network, such as your corporate network.

Prepare Your Tablet for VPN Connection

Depending on the type of VPN, you may be required to enter your login credentials or install security certificates before you can connect to your company's local network. You can get this information from your network administrator.

To connect to a VPN, you must have Mobile data enabled, or your tablet must be connected to a Wi-Fi network. For information about setting up and using these connections on your tablet, see [Mobile networks](#) and [Turn Wi-Fi On and Connect to a Wireless Network](#).

Set a Screen Lock

Before setting up a VPN, you must set a screen lock to prevent access to your tablet by unauthorized users. PIN or password screen locks provide sufficient security to set up trusted credential storage.

1. Press  and touch  > **Settings**.
2. Touch **Lock screen** > **Screen lock**.
3. Choose a screen lock, from PIN or Password.
4. Follow the prompts to configure the screen lock. For more information, see [Screen lock](#).

Add a VPN

The following procedures outline the method to use when adding a VPN connection.

1. Press  and touch  > **Settings** > **More settings** > **VPN**.
2. Touch **Add**, and then enter the information for the VPN you want to add. The information you may need to enter includes **Name**, **Type**, **Server address**, and other information for your VPN network. Consult your network administrator for more details.
3. When finished, touch **Save**.

Connect to a VPN

The following describes how to connect to a VPN.

1. Press  and touch  > **Settings** > **More settings** > **VPN**.
2. In the VPNs section, touch a VPN.

DRAFT For Internal Use Only

3. Follow the prompts to enter your login credentials and connect. When you are connected, the VPN connected icon appears in the Status bar.

DRAFT For Internal Use Only

Camera and Video

Camera

Use the Camera to take and share pictures and videos.

Take Pictures

Launch the Camera app to take pictures.


Important

Do not take photos of people without their permission.

Do not take photos in places where cameras are not allowed.

Do not take photos in places where you may interfere with another person's privacy.

1. Press  and touch  **Apps** >  **Camera**.
2. Slide the **Camera Mode** button to .

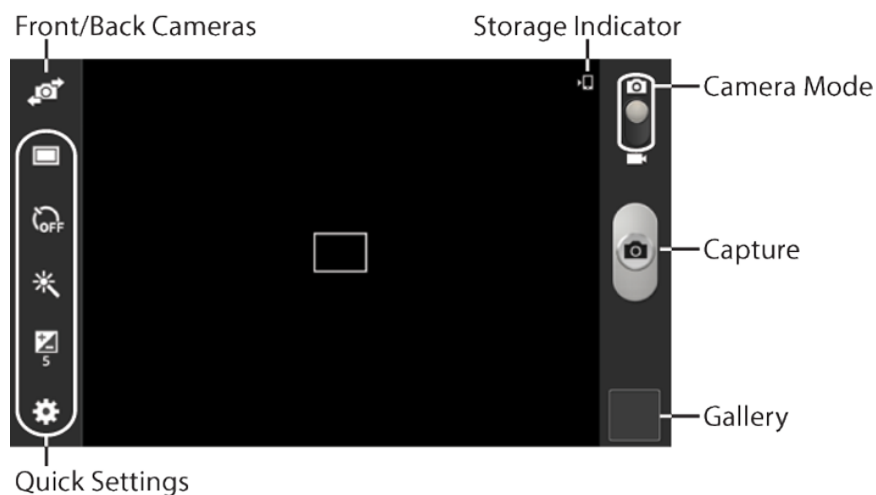

3. Using the display as a viewfinder, compose your picture by aiming the lens at the subject. You can rotate the tablet to any position, and the screen controls rotate to make taking pictures easy.
4. As you compose a picture, you can:
 - “Pinch” or “stretch” the screen, or press the **Volume Key**, to zoom in or out.
 - Configure Camera options. For more information, see [Camera Settings](#).
5. To take the picture, touch the **Capture button**.

Record Videos

Use the Camera to record video.

DRAFT For Internal Use Only

Important

Do not take videos of people without their permission.

Do not take videos in places where cameras are not allowed.

Do not take videos in places where you may interfere with another person's privacy.

1. Press  and touch  **Apps** >  **Camera**.
2. Slide the **Camera Mode** button to .

FPO

3. Using the display as a viewfinder, compose your video by aiming the lens at the subject. You can rotate the tablet to any position, and the screen controls rotate to make video recording easy.
4. Touch  **Record** to begin recording.

DRAFT For Internal Use Only

FPO

While recording, you can use these options:

- “Pinch” or “spread” the screen to zoom in or out.
- Touch the **Pause** button to temporarily stop recording.
- Touch the **Stop** button to stop recording.

Camera Settings

Set options for the Camera.

1. Press  and touch  **Apps** >  **Camera**.
2. Touch  **Settings** to configure options:
 - **Edit shortcuts:** Customize your settings shortcuts.
 - **GPS tag:** Set the GPS tag on or off.
 - **Self-portrait:** Switch to the front-facing camera and take a photo of yourself (Camera mode only).
 - **Self-recording:** Switch to the front-facing camera and record a video of yourself (Video camera mode only).
 - **Shooting mode:** Choose a shooting mode (Camera mode only).

DRAFT For Internal Use Only

- **Recording mode:** Choose a Recording mode (Video camera mode only).
- **Effects:** Apply an effect to photos.
- **Scene mode:** Choose a mode to match the kind of pictures you want to take.
- **Brightness:** Use the slider to set the brightness value.
- **Timer:** Set a delay time to wait between touching the Camera button and taking a photo.
- **Resolution:** Choose a size for the photo.
- **White balance:** Set the light source.
- **Metering:** Select a method for measuring light.
- **Guidelines:** Enable or disable an on-screen grid to aid in photo composition.
- **Contextual filename:** When enabled, filenames include GPS information. GPS tag must be enabled to use contextual filenames.
- **Voice control:** Touch to access voice control settings, for using voice commands to take pictures and record video.
- **Storage:** Set whether to store your photos on your tablet or on your memory card, if one is installed.
- **Reset:** Set all Camera settings to the defaults.

Gallery

Using the Gallery application, you can view pictures and watch videos that you've taken with your tablet's camera, downloaded, or copied to an optional memory card (not included).

For pictures stored on an optional memory card, you can do basic editing such as rotating and cropping. You can also set a picture as your contact picture or wallpaper and share pictures with your friends.

While viewing pictures in the Gallery, scroll up the screen to view more albums. Simply touch an album to view the photos or videos in that album.

If you have pictures or videos stored on an optional memory card (not included), they will be displayed in the folders they are stored in, and folders are treated as albums. The folder names will be used as the album names. If you have downloaded any photos and videos, these will be placed in the **All downloads** album.

1. Press  and touch  **Apps** >  **Gallery**.
2. Browse files stored in your tablet's memory, or on an optional installed memory card (not included). From the main Gallery screen, you have these options:
 - Touch a picture or video to display it in full screen view.

DRAFT For Internal Use Only

- Touch the menu in the toolbar to display files by **Albums**, **All**, **Time**, **Locations**, **People**, **Favorites**, or **Spiral**.
- Touch  to create a new album to organize photos and videos.
- Touch  to launch the Camera.
- Touch  for options (options vary depending on the view):
 - **Select album/Select item:** Depending on the view, touch albums or items to select them. After selection, you can touch  again for options you can use with the selected item.
 - **Slideshow:** Choose options to create a slideshow for viewing your pictures and videos.
 - **Sort by oldest/latest:** Sort items by date.
 - **Content to display: Select which content to display.** Options are **All content**, **Content in device**, **Content in Dropbox**, **Content in Facebook**, and **Content in Picasa**.
 - **Scan for nearby devices: Scan for Wi-Fi devices to share photos and videos with.**
 - **Settings:** Configure Gallery settings.
 - **Help: Get help using Gallery.**

View Photos and Videos

You can browse the photos and videos, and then touch a photo or video to view it in full screen.

1. Press  and touch  **Apps** >  **Gallery**.
2. Touch a thumbnail to view the photo or video. While viewing, you can use these options:
 -  **Select device:** Send the photo or video to a nearby device (photos only).
 -  **Share via:** Choose an option for sharing the photo or video. Options include Group Play, Add to Dropbox, Bluetooth, Email, Flipboard, Gmail, Google+, Hangouts, Picasa, or Wi-Fi Direct, or YouTube
 -  **Edit the photo using Photo Editor (available for download from Samsung Apps).**
 -  **Trim:** Remove the beginning and ending frames of a video.
 -  **Delete:** Delete the photo or video.
 -  **Favorite:** Mark the video as a Favorite (videos only)
3. Touch  for more options:
 - **Edit:** Edit the photo using Photo Editor (available for download from Samsung Apps).

- **Favorites:** Mark the photo or video as a favorite.
- **Slideshow:** View a slideshow of your photos and videos.
- **Photo frame:** Add a decorative frame to the photo.
- **Photo note:** Write a note on the 'back' of the photo.
- **Copy to clipboard:** Place the photo on the clipboard for pasting into other apps.
- **Print:** Print the photo to any Samsung printer (not included).
- **Rename:** Rename the photo or video.
- **Buddy photo share:** Share the photo with people tagged in the photo.
- **Rotate left:** Rotate the photo 90 degree to the left.
- **Rotate right:** Rotate the photo 90 degree to the right.
- **Crop:** Crop the photo.
- **Set as:** Set the photo as a Contact photo, or as wallpaper for the Home screen and Lock screen.
- **Details:** View file details about the photo or video.
- **Settings:** Configure Gallery settings:
 - **Accounts:** Manage your Google account information.
 - **SNS data management:** Enable **Sync only via Wi-Fi** to only sync photos and videos when connected to a Wi-Fi network.
 - **Tags:** Enable **Tag buddy** and **Face tag**. Tag buddy identifies each photo with information such as the weather, location, people in the photo, or date created. Face tag scans each photo to detect people's faces, which you can then tag with their name.
 - **Sound & shot:** Play the recorded sound when viewing pictures taken in Sound and & shot mode.

Zoom In or Out on a Photo

There are two ways you can zoom in or out of a photo.

- Touch the screen twice quickly to zoom in and then touch the screen twice quickly again to zoom out.
- or -

You can also use pinch and spread to zoom in or out. See [Pinch and Spread](#).

DRAFT For Internal Use Only

Working with Photos

You can touch and hold on a photo to open a selection menu and choose what to do with it. You can choose to delete the photo, rotate or crop it, and more.

Rotate and Save a Photo

To rotate or save your photo, follow the below procedures.

1. Press  and touch  **Apps** >  **Gallery**.
2. Touch an image to display the picture.
3. Touch  > **Rotate left** or **Rotate right**.

Crop a Photo

To crop your photos, follow the below procedures.

1. Press  and touch  **Apps** >  **Gallery**.
2. Touch an image to view your picture.
3. Touch  > **Crop**.
4. To adjust the crop box size, touch and hold the edge of the box. When directional arrows appear, drag your finger inward to or outward to resize the crop box.
5. To move the crop box to the part of the photo that you want to crop, drag the crop box to the desired position.
6. Touch **Done** to apply the changes to the picture.

The cropped picture is saved along with the original copy in your default storage location.

Share Photos and Videos

The Gallery application lets you send photos and videos using Gmail or email. You can share photos on your social networks (such as Facebook, Picasa, and Twitter) and share videos on YouTube. You can also send them to another device or your computer using Bluetooth.

Send Photos or Videos by Gmail or Email

You can send several photos, videos, or both in an Gmail or email message. They are added as file attachments in your email.

1. Press  and touch  **Apps** >  **Gallery**.
2. Touch the album that contains the photos or videos you want to share.
3. Touch the photos or videos you want to send.
4. Touch the screen and then touch  > **Gmail or Email**.

DRAFT For Internal Use Only

5. Compose your email. For more information, see [Compose and Send Email](#) or [Send a Gmail Message](#).

Note: If you selected **Email** and you have multiple email accounts, the default email account will be used.

Send Photos or Videos Using Bluetooth

You can select several photos, videos, or both and send them to someone's device or your computer using Bluetooth.

1. Press  and touch  **Apps** >  **Gallery**.
2. Touch the album that contains the photos or videos you want to send.
3. Select the photos or videos you want to send.
4. Touch the screen and then touch  > **Bluetooth**.

In the next few steps, you'll be asked to turn on Bluetooth on your tablet and connect to the receiving Bluetooth device so the files can be sent. For more information, see [Bluetooth](#).

Share Photos or Videos on Google+

1. Press  and touch  **Apps** >  **Gallery**.
2. Touch the album that contains the photos or videos you want to send.
3. Touch the photo or video you want to send.
4. Touch the screen and then touch  > **Google+**.
5. Follow the prompts to share the photo or video.

Share Photos on Picasa

You need to be signed in to a Google Account to upload pictures to the Picasa photo organizing service.

1. Press  and touch  **Apps** >  **Gallery**.
2. Touch the album that contains the photos or videos you want to share.
3. Select the photos you want to share.
4. Touch the screen and then touch  > **Picasa**.
5. Select the online album where you want to upload the pictures.
6. Touch **Upload**. You can view the photos online at picasaweb.google.com.

DRAFT For Internal Use Only

Share Videos on YouTube

You can share your videos by uploading them to YouTube. Before you do this, you must create a YouTube account and sign in to that account on your tablet.

1. Press  and touch  **Apps** >  **Gallery**.
2. Touch the album that contains the videos you want to share.
3. Select the video you want to share.
4. Touch the screen and then touch  > **YouTube**.
5. Enter the prompted information, such as description and tags, and select a privacy option.
6. Touch **Upload**.

Video Player

The Video Player application plays video files stored on your tablet, or on an optional installed memory card (not included).

- Press  and touch  **Apps** >  **Video Player**.

DRAFT For Internal Use Only

Tools and Calendar

Learn how to use many of your tablet's productivity-enhancing features.

Alarm

Use Alarm to remind yourself of important events.

Create an Alarm

1. Press  and touch  **Apps** >  **Alarm**.
2. Touch , and then enter information for the alarm.
3. Touch **Save** to store the new alarm event.

Delete an Alarm

1. Press  and touch  **Apps** >  **Alarm**.
2. Touch and hold an alarm, and then touch **Delete**.

Calculator

Your tablet comes with a built-in calculator.

1. Press  and touch  **Apps** >  **Calculator**.
2. Enter numbers by touching the on-screen keyboard. Touch **C** to clear all numbers.

Calendar

Use Calendar to create and manage events, meetings, and appointments. Your Calendar helps organize your time and reminds you of important events. Depending on your synchronization settings, your tablet's Calendar stays in sync with your Calendar on the Web, Exchange ActiveSync calendar, and Outlook calendar.

Add an Event to the Calendar

Add events to your Calendar to help you organize your time and remind you of important events.

Note: To synchronize calendar events among your Google and Corporate accounts, make sure they are being managed by your tablet. See [Accounts and Social Networking](#) for more information.

1. Press  and touch  **Apps** >  **Calendar**.
2. Double-touch a day on the calendar. Touch **Add event**.
3. Touch **Tap to enter title** and enter a title for the event.

DRAFT For Internal Use Only

4. Touch the **Calendar field** to assign the new event to an account, or save it to the tablet.
5. Touch **Save** to save the event now, or touch **Edit event details** to enter more information:
 - **From/To:** Select a time for the event by touching the corresponding fields and adjusting the month, day, and year.
 - If the event lasts all day, touch the **All day** check box.
 - **View in Calendar:** View the event in your calendar.
 - **Repeat:** Select a recurrence schedule for the event.
 - **Reminder:** Select an alarm time.
 - **Location:** Enter a location for the event, or touch  to select the location on a map.
 - **Description:** Enter a description for the event.
 - **Images:** Add an image from the Gallery or take a new picture.
6. Touch **Save** to save the new event.

Add a Task to the Calendar

Add tasks to your Calendar to help you organize your time and remind you of important activities.

Note: To synchronize calendar tasks among your Google and Corporate accounts, make sure they are being managed by your tablet. See [Accounts and Social Networking](#) for more information.

1. Press  and touch  **Apps** >  **Calendar**.
2. Double-touch a day on the calendar. Touch **Add task**.
3. Touch **Tap to enter title** and enter a name for the task.
4. Touch the **Calendar field** to assign the new task to an account, or save it to the tablet.
5. Touch **Save** to save the task now, or touch **Edit task details** to enter more information:
 - **Due Date:** Select a due date for the task by touching the corresponding fields and adjusting the month, day, and year.
 - If the task is ongoing, touch the **No due date** check box.
 - **Reminder:** Select an alarm time.
 - **Priority:** Set the task's priority to High, Medium, or Low.
 - **Description:** Enter a description for the task.
 - **Images:** Add an image from the Gallery or take a new picture.
6. Touch **Save** to save the new task.

DRAFT For Internal Use Only

View Events

The following procedure helps you view your calendar events.

1. Press  and touch  **Apps** >  **Calendar**.
2. If desired, change the calendar view by touching  and selecting a view.
3. Touch the day for which you would like to view events. (Your tablet lists events in chronological order.)
4. To display an event's details, touch it from the current screen.

Delete Events

The following procedures show you how to delete your calendar events.

1. Press  and touch  **Apps** >  **Calendar**.
2. In any Calendar view, touch and hold the event, then touch **Delete event**
– or –

While viewing the event, touch  > **Delete**.

Downloads

The Downloads application allows you to manage files you download to your tablet.

- Press  and touch  **Apps** >  **Downloads**.

Note: Apps you download from Google Play Store are managed with the Play Store application, and do not display in Downloads.

Dropbox

Dropbox works to provide access to your desktop files directly from your tablet. This app allows you to bring your files with you when you're on the go, edit files in your Dropbox from your tablet, upload photos and videos to Dropbox, and share your selected files freely with family and friends.

The app works in conjunction with a partner program placed on a target computer using an active Internet connection.

Dropbox creates a folder that automatically synchronizes its contents across all of your connected devices on your account. Update a file to your Dropbox on your computer, and it's automatically updated to the same folder on your other devices.

1. Press  and touch  **Apps** >  **Dropbox**.
2. Follow the prompts to set up and use Dropbox.

DRAFT For Internal Use Only

Manually Upload a Picture to Dropbox

Follow the below procedures to manually upload pictures to the Dropbox app.

1. Press  and touch  **Apps** >  **Camera**.
2. After the image is taken, touch the Image Viewer box at the bottom right. This previews the current image.
3. Touch the image to reveal the image options at the top of the screen.
4. Touch  > **Add to Dropbox**, select a folder location, and touch **Add**.

Note: If your share folder is located on your computer, you will momentarily receive an on-screen popup notifying you that a new image was uploaded to your shared Dropbox folder.

Google Search

Use Google Search to search the Internet.

- Press  and touch  **Apps** >  **Google**.

Google Settings

Use Google Settings to manage your Google apps and account settings.

- Press  and touch  **Apps** >  **Google Settings**.

Polaris Office

Polaris Office is a Microsoft Office compatible office suite. The application provides a central place for managing your documents online or offline. The application can also open Adobe PDF (Portable Document Format) files.

1. Press  and touch  **Apps** >  **Polaris Office**.
2. Follow the prompts to set up and use Polaris Office.

Tip: For information on using Polaris Office, touch  **Menu** > **Help**.

Help

Help provides online information to help with your questions.

- Press  and touch  **Apps** >  **Help**.

Memo

The Memo application allows you to create and share text memos.

1. Press  and touch  **Apps** >  **Memo**.

2. Touch an memo to view or edit it. For more information on editing memos, see [Create a New Memo](#).
3. Touch  **List** to view your memos as a list. Touch  **Thumbnails** to view your memos as thumbnails.
4. To delete one or more memos, touch  **Delete**, select one or all memos, and touch **Delete**.
5. From the S Memo screen, touch  to access the following options:
 - **Sort by:** Display memos by date (most recent or oldest).
 - **Share text via:** Send memos' texts to others using Dropbox, Bluetooth, Email, Flipboard, Gmail, Google, Google+, Hangouts, or Wi-Fi Direct.
 - **Share via:** Send memo files to others as Text files (.vnt) or Memo files (.snb).
 - **Print:** Print memo(s) via Wi-Fi to a compatible Samsung printer (not included).
 - **Import:** Import memo(s) from Google Docs.
 - **Export:** Export a memo to Google Docs or to My Files.
 - **Settings:** Manage your Samsung account and Google Docs account.

Create a New Memo

Follow the steps below to create a new memo or expand or reply to an existing memo.

1. Press  and touch  **Apps** >  **Memo**.
2. Touch  to create a new memo.
3. Touch  to access the following options:
 - **Color:** Change the background color of the memo.
 - **Lock:** Make the memo private by adding password protection.
 - **Print:** Print memo(s) via Wi-Fi to a compatible Samsung printer (not included).
 - **Share text via:** Send the memo's text to others using Dropbox, Bluetooth, Email, Flipboard, Gmail, Google, Google+, Hangouts, or Wi-Fi Direct.
 - **Share via:** Send the memo file to others as a Text file (.vnt) or Memo file (.snb).
4. When you are finished creating your memo, touch **Save**.

DRAFT For Internal Use Only

My Files

My files allows you to manage your manage sounds, images, videos, Bluetooth files, Android files, and files stored on your tablet, or on an optional installed memory card (not included). You can open a file if the associated app is already on your tablet.

1. Press  and touch  **Apps** >  **My Files**.
2. The following folders display:
 - **Device storage:** View the files saved in your tablet's internal memory.
 - **SD memory card:** View all of the files saved to an optional installed memory card (not included).

Note: Different folders may appear depending on how your tablet is configured.

S Translator

Easily translate words and phrases, either spoken or in text.

Note: Access to this feature requires that you already be logged in to your Samsung account application.

- Press  and touch  **Apps** >  **S Translator**.

S Voice

Your tablet's S Voice is a voice recognition application used to activate a wide variety of functions on your tablet. This is a natural language recognition application.

This goes beyond the Google Search Voice Actions feature that simply recognizes Google commands and search terms. You can ask it questions (Is it raining in Dallas?) or give it commands (Show me where to find cheap gas).

1. Press  and touch  **Apps** >  **S Voice**.
2. Navigate through the following on-screen tutorial screens by reading the information and touching **Next**, or touch **Skip** to continue without reading the information.
3. Wake up the application by repeating the phrase "**Hi Galaxy**."

Note: The wake-up command/phrase can be changed from "Hi Galaxy" to anything else.

4. Touch the **Speak** button if the tablet does not hear you or to give it a command.

Voice Search

Perform a Google search by speaking your search criteria.

1. Press  and touch  **Apps** >  **Voice Search**.
2. Follow the prompts to use Voice Search.

DRAFT For Internal Use Only

3. To configure settings, see [Voice Search Settings](#).

Samsung Apps

Connect to Samsung Apps and make your tablet even smarter. Simply and easily download an abundance of applications to your tablet such as games, news, reference, social networking, navigation, and more.

Note: Access to this feature requires that you already be logged in to your Samsung account application.

1. Press  and touch  **Apps** >  **Samsung Apps**.
2. Follow the on-screen download and installation instructions.

VPN Client

VPN Client provides support for accessing VPN gateways.

- Press  and touch  **Apps** >  **VPN Client**.

DRAFT For Internal Use Only

Settings

The following topics provide an overview of items you can change using your tablet's Settings menus.

Wi-Fi Settings

Wi-Fi provides wireless Internet access over distances of up to 300 feet. To use your tablet's Wi-Fi, you need access to a wireless access point or "hotspot."

For more information about using Wi-Fi, see [Wi-Fi](#).

1. Press  and then touch  > **Settings**.
2. Touch the **Wi-Fi ON/OFF** switch to turn Wi-Fi On. Wi-Fi must be On to configure settings.
 - **Touch Add Wi-Fi network** to connect to a new Wi-Fi network.
 - **Touch Scan** to begin searching for available Wi-Fi networks.
 - **Touch Wi-Fi Direct** to connect to other Wi-Fi Direct devices.
3. Touch  to configure these settings:
 - **Advanced:**
 - **Network notification:** Send a notification when an open Wi-Fi network is available.
 - **Keep Wi-Fi on during sleep:** Specify when to switch from Wi-Fi to mobile data for data communications, when the tablet goes to sleep (when the backlight goes out). This setting can affect data usage, since the data connection will remain active even when the tablet screen is off.
 - **Auto network switch:** Auto switch between Wi-Fi networks and mobile networks.
 - **Wi-Fi timer:** Automatically connect or disconnect from a Wi-Fi network, using the Starting time and Ending times you set.
 - **MAC address:** View your tablet's MAC address, needed for connecting to some secured networks. (Not configurable)
 - **IP address:** View your tablet's IP address. (Not configurable)
 - **WPS push button:** Set up a connection to a WPS (Wi-Fi Protected Setup) router or other equipment.
 - **WPN PIN entry:** (Not configurable) View the PIN used by your tablet to set up a PIN-secured connection to a Wi-Fi router or other equipment.
 - **Help: Get help using Wi-Fi.**

DRAFT For Internal Use Only

Wi-Fi Direct

Wi-Fi Direct allows devices to connect to each other directly via Wi-Fi, without a Wi-Fi network or hotspot, and without having to set up the connection.

For information about using Wi-Fi Direct, see [Wi-Fi Direct](#).

Hotspot

Use your tablet as an Internet Access Point (AP) using Hotspot. This allows other devices (maximum of 8) to connect to the AP via a Wi-Fi network—giving the connected devices access to the Internet.

Connect a Device

1. Press  and then touch  > **Settings** > **Hotspot**.
2. Touch the **ON/OFF** switch to enable Hotspot.
3. On the target device, activate Wi-Fi. Then scan for Wi-Fi hotspots. Select the name of your table to connect.
4. On your tablet, follow the prompts to connect the target device.

Bluetooth Settings

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, printers, and wireless devices.

For more information about using Bluetooth, see [Bluetooth](#).

1. Press  and then touch  > **Settings**.
2. Touch the **ON/OFF switch** to turn Bluetooth On. Bluetooth must be On to configure settings.
3. From the Bluetooth screen, configure these settings:
 - Touch your tablet's name to enable or disable visibility to other Bluetooth devices. When your tablet is visible, other devices can find your tablet during a scan. Your tablet remains visible for the period of time set in the Visibility timeout setting.
 - Touch a paired device to connect to it, or touch  beside a device to change its settings.
 - Touch **Scan** to search for visible Bluetooth devices. After searching, touch a device to pair with it.
4. Touch  for more settings:
 - **Visibility timeout:** Set the length of time your tablet is visible to other devices when you turn on visibility.
 - **Received files:** View files transferred to your tablet via Bluetooth.

DRAFT For Internal Use Only

- **Help:** View information about using Bluetooth.

Data Usage Settings

Monitor data usage, and control your tablet's connection to mobile data service.

Note: Data is measured by your tablet. Your service provider may account for data usage differently.

1. Press  and then touch  > **Settings**.
2. Touch **Data usage** to configure options:
 - **Mobile data:** Enable or disable Mobile data. You can also control Mobile Data via the Notification Panel.
 - **Limit mobile data usage:** When enabled, your mobile data connection will be disabled when the specified limit is reached. After enabling the setting, drag the red limit line on the graph below to set the data usage limit.
 - **Alert me about data usage:** When enabled, your tablet will alert you when mobile data usage reaches the warning limit you set. After enabling the setting, drag the orange warning line on the graph below to set the data usage warning limit.
 - **Data usage cycle:** Touch the menu, and then choose a time period for data usage. Data usage for the period displays on the graph, along with usage by application below.
3. Touch  to set other options:
 - **Data roaming: Allow your tablet to use mobile data when roaming. Additional charges may apply. See your service plan for details.**
 - **Restrict background data:** Your tablet is capable of connecting to the network in the background, for synchronization or other services. When enabled, background connections will not occur.
 - **Auto sync data:** When enabled, your tablet will synchronize with accounts automatically, at any time.
 - **Show Wi-Fi usage:** When turned On, a separate tab displays data usage while connected to Wi-Fi.
 - **Mobile hotspots:** Select Wi-Fi networks that are mobile hotspots. You can restrict apps from using these networks, and you can configure apps to warn you before using these networks for large downloads.

More Settings

The More settings menu provides additional wireless and network options.

Airplane Mode

Enabling Airplane mode turns off data network features. It also turns off other connectivity features—such as Wi-Fi and Bluetooth.

DRAFT For Internal Use Only

While in airplane mode, you can use other features of your tablet, such as playing music, watching videos, or other applications.

To use Wi-Fi and Bluetooth when Airplane mode is enabled, turn them on in Settings or on the Notifications panel. While in Airplane mode, the  icon displays in the Status bar.

1. Press  and then touch  > **Settings** > **More settings**.
2. Touch the check box next to **Airplane mode** to enable or disable the option.

Mobile Networks

Control your tablet's access to networks, including mobile data service.

1. Press  and then touch  > **Settings** > **More settings** > **Mobile networks**.
2. Configure options:
 - **Mobile data:** When enabled, your tablet connects to the mobile data network.
 - **Network mode:** Choose a preferred network mode.
 - **Connections optimizer:** When enabled, helps you manage and enhance your data experience by finding and connecting to remembered Wi-Fi networks on your tablet, and, if applicable, to 4G network service.

Printing

You can print from your device, via Wi-Fi, to an optional compatible printer (not included). Your device and the optional printer must be connected to the same Wi-Fi network.

Turn Print Services On or Off

Before you can print from your device, a print service must be turned on. The print service communicates with the printer when you select something to print.

1. Press  and then touch  > **Settings**.
2. Tap **More networks** > **Printing**, and then choose a print service from the list. The Samsung Print Service Plugin is available by default.
3. Tap the **ON/OFF** switch to turn the service on or off. The service must be on to configure settings or print.

Add a Printer

Before you can print to a printer, you must set it up on your device. You'll need to know the IP address of the printer; consult the printer's documentation for this information.

1. Press  and then touch  > **Settings**.
2. Tap **More networks** > **Printing**.

DRAFT For Internal Use Only

3. Choose a print service from the list, and then tap the **ON/OFF** switch to turn the service on or off. The service must be on to add a printer.
4. Tap  > **Add printer** > , and then enter a name and the IP address of the printer.

Configure Print Settings

Choose options for printing from your device.

Note: These settings are examples only. Available settings will differ depending on the type of print service and printer you are using.

1. Press  and then touch  > **Settings**.
2. Tap **More networks** > **Printing**.
3. Choose a print service from the list, and then tap the **ON/OFF** switch to turn the service on or off. The service must be on to add a printer.
4. Tap  > **Settings** to configure options. Available options may vary depending on the type of printer, and not all printers support all options.
 - **2-Sided printing for documents:** Choose Simplex to print one page per piece of paper, or choose Long edge or Short edge to print on both sides. Short edge and Long edge refer to how the pages flip when moving through multiple pages.
 - **Secure Release:** If the optional printer supports secure release, and it is enabled, you must enter a User ID to retrieve your printouts. Tap **Secure release**, and then enter a User ID.
 - **Confidential Print:** If the optional printer supports confidential printing, and it is enabled, you must enter a User ID and Password to retrieve your printouts. Tap **Confidential Print**, and then enter a **User ID** and **Password**.
 - **Job Accounting:** If the optional printer supports job accounting, and it is enabled, you must enter a User ID and Password when printing, to track printing by group or other set.
 - **Version:** View the version of the print service software.
 - **Open source licenses:** View licenses related to the print service software.

Tethering

Share your tablet's mobile data connection via USB or Bluetooth.

1. Press  and then touch  > **Settings** > **More settings** > **Tethering**.
2. Configure options:
 - Touch **USB tethering** to share your mobile data connection via USB.
 - Touch **Bluetooth tethering** to share your mobile data connection via Bluetooth.
 - Touch **Help** for more information about tethering.

DRAFT For Internal Use Only

VPN

Set up and manage Virtual Private Networks (VPN).

Note: VPN settings include storage of login credentials on your tablet. You must configure a PIN or password screen lock before setting up a VPN.

1. Press  and then touch  > **Settings** > **More settings**.
2. Touch **VPN** > **Add**.
3. Enter information about the VPN:
 - Enter a name for the VPN network in the **Name** field.
 - Select a VPN type from the **Type** drop-down menu.
 - Enter the **Server address** and any other required fields that are dependent upon the Type you entered previously.
 - Check **PPP encryption (MPPE)** if required.
 - Touch the **Show advanced options** to access additional VPN options.
4. Touch **Save** to save your VPN settings.

Roaming

Set options for roaming, network, and APNs.

1. Press  and then touch  > **Settings** > **More settings**.
2. Touch **Roaming** for options:
 - Touch **Roaming network** to select a roaming network (Home or Automatic).
 - Touch **Roaming settings** to enable data roaming (domestic and international). **Additional charges may apply. See your service plan for details.**
 - Touch **Roaming guard** to restrict data roaming (domestic and international).

Nearby Devices

Share files with devices using DLNA (Digital Living Network Alliance) standards, over Wi-Fi.

To use Nearby devices, you must connect to the same Wi-Fi network as the devices you wish to share with, and the other devices must support DLNA.

Note: Use care when enabling file sharing. When enabled, other devices can access data on your tablet.

1. Press  and then touch  > **Settings** > **More settings**.
2. Touch **Nearby devices** to configure these options:
 - Touch **File sharing** to enable or disable file sharing.

DRAFT For Internal Use Only

- Under Advanced, touch options to control how content is shared from your tablet:
 - **Shared contents:** Choose the type of content to share, from Videos, Photos, or Music.
 - **Allowed devices list:** View and manage a list of devices allowed to connect to your tablet.
 - **Denied devices list:** View and manage a list of devices restricted from connecting to your tablet.
 - **Download to:** Choose a location to save downloaded content.
 - **Download from other devices:** Choose how to handle incoming files from other devices.

Blocking Mode

When Blocking mode is enabled, notifications for selected features are blocked, and you only receive the notifications you choose. You can choose to block notifications by feature or contact, and choose blocking all the time, or during a specific time period.

1. Press  and then touch  > **Settings** > **Blocking mode**.
2. Touch the **ON/OFF** switch next to **Blocking mode** to enable or disable the setting. Blocking mode must be enabled to configure options.
3. When Blocking mode is enabled, choose features to block:
 - **Turn off notifications:** Notifications for new messages will not display.
 - **Turn off alarm:** Notifications for alarms will not display.
4. Set a time period for Blocking mode:
 - Touch the check box next to **Always**, to block notifications at all times.
 - To set a specific time period to block notifications each day, disable the **Always** option, and then set a starting time (**From** field) and ending time (**To** field). Touch the time fields and then set the time.

Hands-free Mode

When enabled, alarm and scheduled alarm information is read aloud.

1. Press  and then touch  > **Settings** > **Hands-free mode**.
2. Touch the **ON/OFF** switch next to **Hands-free mode** to enable or disable the setting. The option must be enabled to configure options.
3. Touch the checkbox next to **Alarm** to have alarm information read aloud when the alarm sounds.
4. Touch the checkbox next to **Calendar event** to have event information read aloud when an event notification sounds.

DRAFT For Internal Use Only

Sound Settings

Use Sound settings to control your tablet's audio, from ringtones and alerts to touch tones and notifications.

Volume

You can adjust the volume settings to suit your needs and your environment.

Note: You can quickly adjust the system volume or the earpiece volume by pressing the **Volume Key**.

1. Press  and then touch  > **Settings** > **Sound** > **Volume**.
2. Touch and drag the on-screen sliders to assign volume level settings for:
 - **Music, video, games, and other media**
 - **Notifications**
 - **System**
3. Touch **OK** to assign the volume levels.

Notifications

Choose a sound for notifications, such as for new messages and event reminders.

1. Press  and then touch  > **Settings** > **Sound** > **Notifications**.
2. Touch a ringtone to select it. When you touch ringtones, a sample plays.
3. Touch **OK** to assign the ringtone.

Touch Sounds

When Touch sounds is enabled, tones play when you touch or touch the screen to make selections.

1. Press  and then touch  > **Settings** > **Sound**.
2. Touch the checkbox next to **Touch sounds** to enable or disable the option.

Screen Lock Sound

When Screen lock sound is enabled, tones play when you touch the screen to lock or unlock it.

1. Press  and then touch  > **Settings** > **Sound**.
2. Touch the checkbox next to **Screen lock sound** to enable or disable the option.

Samsung Applications Settings

Configure options for featured apps on your device.

1. Press  and then touch  > **Settings** > **Sound**.
2. Tap an option, and then configure settings.

DRAFT For Internal Use Only

- **Email:** Configure email sounds.
- **Calendar:** Configure calendar sounds.

Samsung Keyboard Settings

You can choose whether sounds and vibrations play when you tap keys on the Samsung Keyboard while entering text.

1. Press  and then touch  > **Settings** > **Sound**.
2. Tap the checkbox beside **Sound when tapped** to enable or disable the option.

Display Settings

Configure settings for your tablet's display.

Wallpaper

Customize the background of the Home and Lock screens. Choose from preloaded wallpapers or select a photo you have downloaded or taken with the Camera.

1. Press  and then touch  > **Settings** > **Display** > **Wallpaper**.
2. Touch a screen to customize: **Home screen**, **Lock screen**, or **Home and lock screens**.
3. Choose a source for wallpaper:
 - **Gallery:** Select a picture from Gallery. Follow the prompts to crop the picture and save it as wallpaper.
 - **Live wallpapers:** Select a moving scene for the background (Home screen only).
 - **ID wallpapers:** Select a wallpaper from the currently assigned ID pack (Home screen only).
 - **Travel wallpaper:** Display recommended destinations on your Lock screen (Lock screen only).
 - **Wallpapers:** Choose an image from the Wallpapers gallery.

Notification Panel

Customize the Notification panel.

1. Press  and then touch  > **Settings** > **Display** > **Notification panel**.
2. Touch the check box next to **Brightness adjustment** to allow adjusting the screen brightness via the Notification panel.
3. To set the quick setting buttons, touch and drag buttons from the Available buttons area to the Notifications panel area. Touch **Reset** to revert back to the default layout.

DRAFT For Internal Use Only

Multi Window

Multi window allows you to use two apps on the same screen, in separate, resizable windows.

You can enable Multi window in Settings, and then control whether it displays on the screen by touching and holding on the  **Back Key**.

1. Press  and then touch  > **Settings** > **Display**.
2. Touch the check box next to **Multi window** to enable or disable the option.

Brightness

Adjust your screen's brightness to suit your surroundings.

1. Press  and then touch  > **Settings** > **Display**.
2. Touch **Brightness** to configure options:
 - Touch the check box next to **Automatic brightness** to allow the tablet to adjust brightness automatically.
 - To set a custom brightness level, clear the Automatic brightness checkmark and then touch and drag the **Brightness level** slider.
3. Touch **OK** to save the settings.

Screen Timeout

Screen timeout lets you select how long the display screen remains lit after you press any key.

1. Press  and then touch  > **Settings** > **Display**.
2. Touch **Screen timeout**, and then touch a time setting.

Daydream

Use Daydream to control what the screen displays when the tablet is docked or charging. Choose to display Colors, Flipboard, or photos.

1. Press  and then touch  > **Settings** > **Display**.
2. Touch the **ON/OFF** switch next to Daydream to enable/disable the feature.
3. Touch **Daydream** for options:
 - **Colors**: Display colorful screens.
 - **Flipboard**: Display content from Flipboard. Touch  to choose options.
 - **Google Photos**: Display pictures from Photos. Touch  to choose pictures.
 - **Photo frame**: Display pictures in a photo frame. Touch  to choose pictures.

DRAFT For Internal Use Only

- **Photo table:** Display pictures in a grid. Touch  to choose pictures.
4. Touch  for options:
 - **Start now:** Enter Daydream mode.
 - **Select dream time:** Set when Daydream mode occurs. Select from **While docked**, **While charging**, or **All**.

Smart Screen

Customize your screen settings to make the screen more responsive and easier to use.

1. Press  and then touch  > **Settings** > **Display** > **Smart screen**.
2. Touch **Smart stay** to set the screen to stay on as long as you are looking at it.
3. Touch  > **Help** for more information.

Font Style

You can set the font for all text that displays on the screen.

1. Press  and then touch  > **Settings** > **Display**.
2. Touch **Font style**, and then choose a font.

Tip: To acquire additional font options, touch **Download** to access new fonts in the Google Play Store.

Font Size

This option allows you to select the size of fonts for your tablet's screens.

1. Press  and then touch  > **Settings** > **Display**.
2. Touch **Font size**, and then choose a size.

Increase Legibility

Increase legibility and clarity of text.

1. Press  and then touch  > **Settings** > **Display**.
2. Touch **Increase legibility** to enable or disable the option.

Show Battery Percentage

When Display battery percentage is enabled, the percentage of remaining battery power displays beside the battery icon in the Status bar.

1. Press  and then touch  > **Settings** > **Display**.
2. Touch **Show battery percentage** to enable the option.

DRAFT For Internal Use Only

Storage

Manage the use of memory resources in your tablet's memory, and on an optional installed memory card (not included).

1. Press  and then touch  > **Settings** > **Storage**.
2. View information about memory usage, and for other options:
 - **Device memory:** View memory usage for the different types of information stored on your tablet's memory. Touch an item for more information.
 - **SD card:** View memory usage for the different types of information stored on an optional installed memory card (not included).
 - **Total space:** Display the total amount of usable space on the memory card. This option is only available if an optional memory card is installed and mounted.
 - **Available space:** Display the amount of free space on the memory card. This option is only available if an optional memory card is installed and mounted.
 - **Mount SD card:** Prepare the memory card for use as storage in the tablet. This option is only available if an memory card is installed, and is not already mounted. Normally, your tablet mounts a memory card as soon as you install it.
 - **Unmount SD card:** Prepare an installed memory card for safe removal or formatting.
 - **Format SD card:** Permanently remove all content from an installed memory card. After formatting, the content cannot be retrieved.

Power Saving Mode

Configure Power saving mode settings to conserve battery power.

1. Press  and then touch  > **Settings**.
2. Touch **Power saving mode** to configure options:
 - Touch **ON/OFF** to turn Power saving mode On or Off. Power saving mode must be turned On to configure settings.
 - **CPU performance:** When enabled, the maximum performance of the tablet's CPU (Central Processing Unit) is disabled to conserve battery power. Touch the check box next to the option to enable or disable it.
 - **Screen output:** When enabled, the frame refresh rate and brightness level are reduced to conserve power. Touch the check box next to the option to enable or disable it.

Note: Touch [Learn about Power saving](#) to view information about these settings.

DRAFT For Internal Use Only

Power Saving Tips

Active applications, light levels, Bluetooth usage, and GPS functionality all act to drain your battery. The following is a list of helpful tips that can help conserve your battery power:

- Reduce your backlight time.
- Turn Bluetooth off when not in use.
- Turn Wi-Fi off when not in use.
- Turn 4G data service off when not in use
- Turn off GPS location services when not needed. Most applications using this function will periodically query the GPS satellites for your current location; each query drains your battery.
- Do not wait until your battery is completely depleted before charging your tablet. Repeating this process of a complete discharge and recharge can over time reduce the storage capacity of any battery.
- Turn off Automatic application sync.
- Check the Battery settings to review features or functions that have been consuming your battery power.
- Check the Running Services and close any unnecessary applications.
- Animated wallpapers use an increased amount of power and memory. Change your Live Wallpaper to a non-animated Wallpaper gallery or Gallery image.

Battery Settings

Your tablet is equipped with a Lithium Ion (Li-Ion) battery. It allows you to recharge your battery before it is fully drained. The battery provides up to 8.7 hours of continuous digital talk time.

When the battery level becomes critically low, the tablet plays a tone, displays a critical charge icon  in the Status bar. If you continue using the tablet without charging, the tablet will turn off automatically when the charge level becomes too low to continue operating.

Use the battery settings menu to view apps or processes that are using battery power.

1. Press  and then touch  > **Settings** > **Battery**.
2. Configure options:
 - Touch **Show battery percentage** to display the percentage of total battery power available on the battery icon in the Status bar.
 - Touch an item for more information, or to configure options for managing power use

DRAFT For Internal Use Only

Application Manager

You can download and install applications from the Google Play Store or Samsung Apps and install them on your tablet. Use Application manager to manage applications on your tablet.

Warning! Because this tablet can be configured with system software not provided by or supported by Google or any other company, end-users operate these devices at their own risk.

Manage Applications

Use the Application manager menu to quickly erase selected content and uninstall third-party applications stored in your tablet.

Clear an application's cache

1. Press  and then touch  > **Settings** > **Application manager**.
2. Touch the **Downloaded tab**, **SD Card tab**, **Running tab**, or **All tab** to view the status of apps and services. Touch an app or service for more information, and for app options such as stopping and uninstalling.

Running Services

This service efficiently manages power consumption and processor/memory resources. Processes can be stopped until the tablet is restarted.

Stop a currently running service

1. Press  and then touch  > **Settings** > **Application manager**.
2. Touch the **Running** tab, touch a running service, and then touch **Stop**.
3. Read the **Stop system service?** dialog and touch **OK**.
 - These stopped processes restart once the tablet is restarted.
 - Third-party Task Manager applications are also available from the Google Play Store.

Note: You can also access Task manager by pressing and holding , then touch .

Memory Use

View storage used by currently running applications.

- Press  and then touch  > **Settings** > **Application manager**. The bottom of the screen displays the amount of RAM used by all running services.

Default Applications

If you have installed multiple apps that perform the same kind of task, you can choose the app you want to use as the default.

1. Press  and then touch  > **Settings**.

DRAFT For Internal Use Only

2. Tap **Default applications** to configure options:

- **Home:** Choose a default home screen mode. This option is available if you have more than one home screen configuration installed.

Users

You can share this tablet with multiple people by creating User accounts. Users have their own space, which they can customize with their own apps, wallpaper, and so on. Users can also adjust tablet settings like Wi-Fi that affect everyone.

Add a New User

- Press  and then touch  > **Settings** > **Users**.
- Touch **Add user**.
- If the new User is able to set up their space now, touch **Set up now**. (Touching **Not now** will create an empty User space which can be modified later.)
- Follow the prompts to set up the tablet with the new User's preferences. For more information, see [Set Up Device](#).

Location Settings

Control apps' access to your location, and configure location sources. Some apps may require one or more location services be turned On for full app functionality. GPS signals may be affected by your surroundings, including:

- Buildings
- Tunnels or underground structures
- Weather conditions
- High-voltage or electromagnetic fields
- Tinted windows

1. Press  and then touch  > **Settings** > **Location**.

2. Configure options:

- Tap the **ON/OFF** switch to turn location services On or Off. When on, you are allowing Google's location service to collect anonymous location data. Some data may be stored on your device, and collection may occur even when no apps are running. After you turn Location on, you can configure settings:
- **Mode:** Choose the method your device uses to determine your location.
 - **High accuracy:** When enabled, your device uses GPS information, Wi-Fi, and mobile networks to estimate your location.

DRAFT For Internal Use Only

- **Power saving:** When enabled, your device uses Wi-Fi and mobile networks to estimate your location.
- **GPS only:** When enabled, your only device uses GPS information to estimate your location.
- **Recent location requests:** View services or apps that have recently accessed your location information.
- **Location services:** View the current location service. Tap a service to configure options, if available.
- **Location sources:** Tap **My places** to save your favorite locations, to allow your device to provide relevant information by recognizing saved locations.
 - Tap **Home**, **Office**, or **Car**, and then follow the prompts to configure options for identifying the location.
- Tap  to set up a new location

Lock Screen

Configure settings for locking the screen to improve security.

1. Press  and then touch  > **Settings** > **Lock screen** > **Screen lock**.
2. Touch **Screen lock** to select a new screen lock. Then configure the options for that screen lock.
 - **Swipe:** When enabled, you unlock the tablet by swiping your finger across the screen. This is the default screen lock, and offers no security.
 - **Multiple widgets:** Display multiple widgets on your Lock screen.
 - **Lock screen widgets:** Customize your clock and personal message.
 - **Shortcuts:** Add app shortcuts to the lock screen.
 - **Unlock effect:** Show a ripple effect on the lock screen when you slide your finger over the screen.
 - **Help text:** Show help information on the Lock screen.
 - **Wake up in lock screen:** Allows you to wake up the screen by speaking a command.
 - **Set wake-up command:** Allows you to set a command to wake up the screen.
 - **Face unlock:** When enabled, you unlock the tablet by looking at the screen. This option offers low security, because someone who looks similar to you could unlock your tablet. Touch the option for more information, and to set up Face unlock.
 - **Lock screen widgets:** Customize your clock and personal message.
 - **Improve facial recognition:** Have your face captured in different conditions.

DRAFT For Internal Use Only

- **Presence check:** Require a blink to unlock your tablet.
 - **Make pattern visible:** Display the security pattern.
 - **Lock automatically:** Screen will automatically lock 5 seconds after the screen turns off.
 - **Lock instantly with power key:** Instantly lock the tablet by pressing the **Power/Lock Key**.
- **Face and voice:** When enabled, you unlock the tablet by looking at the screen and speaking. This option offers low security, because someone who looks and/or sounds similar to you could unlock your tablet. Touch the option for more information, and to set up Face and voice unlock.
 - **Lock screen widgets:** Customize your clock and personal message.
 - **Improve facial recognition:** Have your face captured in different conditions.
 - **Presence check:** Require a blink to unlock your tablet.
 - **Make pattern visible:** Display the security pattern.
 - **Lock automatically:** Screen will automatically lock 5 seconds after the screen turns off.
 - **Lock instantly with power key:** Instantly lock the tablet by pressing the **Power/Lock Key**.
 - **Pattern:** When enabled, you draw a pattern, which you create, on the screen to unlock the tablet. Touch the option, then follow the prompts to create or change your screen unlock pattern.
 - **Lock screen widgets:** Customize your clock and personal message.
 - **Make pattern visible:** Display the security pattern.
 - **Lock automatically:** Screen will automatically lock 5 seconds after the screen turns off.
 - **Lock instantly with power key:** Instantly lock the tablet by pressing the **Power/Lock Key**.
 - **PIN:** When enabled, you enter a numeric PIN (Personal Identification Number), which you create, to unlock the tablet. With PIN screen lock, you can also set the With swipe lock and Lock screen options.
 - **Lock screen widgets:** Customize your clock and personal message.
 - **Lock automatically:** Screen will automatically lock 5 seconds after the screen turns off.
 - **Lock instantly with power key:** Instantly lock the tablet by pressing the **Power/Lock Key**.
 - **Password:** When enabled, you enter an alphanumeric password, which you create, to unlock the tablet.

DRAFT For Internal Use Only

- **Lock screen widgets:** Customize your clock and personal message.
 - **Lock automatically:** Screen will automatically lock 5 seconds after the screen turns off.
 - **Lock instantly with power key:** Instantly lock the tablet by pressing the **Power/Lock Key**.
- **None:** Disable all screen lock settings.

Security Settings

This menu contains features that allow you to configure the tablet's security parameters.

Encryption

After encryption, you must enter the PIN or password you set each time you turn on your tablet. You can also encrypt information stored on an optional installed memory card (not included).

Encryption may take an hour or more to complete. Do not turn off the tablet during encryption. Interrupting the encryption process may result in the loss of some or all data.

Before Encrypting Your Tablet

Important: Charge the battery to at least 80%, and plug the tablet into the charger to ensure that the battery remains charged.

Note: Set a Screen lock password of at least 6 characters, including at least one number.

1. Press  and then touch  > **Settings** > **Security**.
2. Touch **Encrypt device** to encrypt data stored in your tablet's internal memory.

Make Passwords Visible

When enabled, password characters display briefly as you enter them.

1. Press  and then touch  > **Settings** > **Security**.
2. Touch the check box next to **Make passwords visible** to enable or disable the option.

Device Administration

Some applications, such as Corporate email, may require you allow access to your tablet by device administrators in certain circumstances, such as if your tablet is lost or stolen.

These applications enforce remote or local device security policies. Some of the features a device administration application might control are:

- Setting the number of failed password attempts before the device is restored to factory settings.
- Automatically locking the device.
- Restoring factory settings on the device.

DRAFT For Internal Use Only

Device Administrators

1. Press  and then touch  > **Settings** > **Security**.
2. Touch **Device administrators** and then perform these steps:
 - Touch an account.
 - Review the device administration details for the account.
 - To remove administration from the account, touch **Deactivate**.

Unknown Sources

By default, you can only install apps from the Google Play Store. When Unknown sources is enabled, you can install apps from other sources.

1. Press  and then touch  > **Settings** > **Security**.
2. Touch the check box next to **Unknown sources** to enable or disable the option.

Verify Apps

When enabled, apps are examined before they are installed for any potential harm they might pose to your tablet.

1. Press  and then touch  > **Settings** > **Security**.
2. Touch the check box next to **Verify apps** to enable or disable the option.

Change Security Level

Set the security level for your device's security policy.

1. Press  and then touch  > **Settings** > **Security**.
2. Choose an option:
 - **High**: Blocks known and potential threats.
 - **Normal**: Blocks known threats.

Security Update Service

Your device's security policies provide protection against potential threats.

Security Policy Updates

You can keep your security policies up to date by updating security policies often. You can set options for automatic updates, to ensure your device always receives the latest updates.

1. Press  and then touch  > **Settings** > **Security**.
2. Tap **Security policy updates** to configure options:

DRAFT For Internal Use Only

- **Automatic updates:** When enabled, your device will automatically update security policies when it is connected to preferred networks. Use the Preferred networks setting to specify networks your device will consider as preferred.
- **Preferred networks:** Choose **Wi-Fi networks only** to restrict your device to only updating security policies when it's connected to a Wi-Fi network. Choose **Wi-Fi or mobile networks** to allow your device to update security policies any time it's connected to Wi-Fi, or to the wireless network. Depending on your service plan, updating the security policies over the wireless network may result in additional charges for downloading the policy data.

Check for Security Updates Manually

You can use the Check for updates option to check for security policy updates at any time.

1. Press  and then touch  > **Settings** > **Security**.
2. Tap **Security policy updates** > **Check for updates**, and then follow the prompts to check for updates and install them, if desired.

Send Security Reports

Your device can send security reports to Samsung, to assist in keeping security policies up to date. If you enable this option, security reports are only sent when your device is connected to a Wi-Fi network.

1. Press  and then touch  > **Settings** > **Security**.
2. Tap **Send security reports** to enable or disable the option. When enabled, your device will automatically send security reports to Samsung when it's connected to Wi-Fi.

Credential Storage

You can install credentials from an optional installed memory card (not included), and use the Credential storage settings to allow applications to access the security certificates and other credentials.

1. Press  and then touch  > **Settings** > **Security**.
2. Touch an option:
 - **Trusted credentials:** Display a list of credentials you've installed.
 - **Install from device storage:** Install encrypted certificates from an optional installed memory card (not included).
 - **Clear credentials:** Remove stored credentials and reset the password (only available when credentials are installed).

Language and Input Settings

Use Language and input settings to choose a default language for your tablet's operations, plus settings for text entry and other inputs.

DRAFT For Internal Use Only

Choose a Default Language

Choose the language for operating your tablet.

1. Press  and touch > **Settings** > **Language and input**.
2. Touch **Language** to select a language.

Default Input Method

The following procedure allows you to select and set the default method to use when entering text.

1. Press  and then touch  > **Settings** > **Language and input**.
2. Touch **Default** to select a text entry method.

Note: You can change the input method while you're entering text. Swipe your finger down from the status bar to display Notifications, and then touch **Select input method**.

Google Voice Typing

Google voice typing allows you to speak your entries. When you enable Google voice typing, it's available for use when you touch a field to enter text.

1. Press  and then touch  > **Settings** > **Language and input**.
2. Touch  beside **Google voice typing** to configure options:
 - **Choose input languages:** Select language(s) to use for voice input, or choose Automatic to let Google decide.
 - **Block offensive words:** Hide recognized offensive words.
 - **Download offline speech recognition:** Download and install speech recognition engines, to allow you to use voice input while not connected to the network, such as during Airplane mode.

Samsung Keyboard

The Samsung Keyboard is an on-screen QWERTY keyboard, so you can enter text by “typing” on the keyboard. Samsung keyboard is enabled by default, and you can choose options for using it.

1. Press  and then touch  > **Settings** > **Language and input**.
2. Touch  next to **Samsung keyboard** to configure these options:
 - **Input languages:** Choose language(s) for use with Samsung keyboard. When you have more than one language enabled, you can slide your finger on the space bar while entering text to switch languages.
 - **Predictive text:** Touch the **ON/OFF** switch to turn predictive text On or Off. Predictive text suggests words matching your text entries, and optionally, complete common words automatically. Touch **Predictive text** to configure options:

DRAFT For Internal Use Only

- **Live word update:** When enabled, Samsung keyboard automatically updates with popular new words every day.
- **Personalized data:** When enabled, predictive text uses personal language data you have entered to make better predictions.
- **Learn from Facebook:** Log into Facebook to allow your tablet to learn your Facebook style.
- **Learn from Gmail:** Log into Gmail to allow your tablet to learn from your Gmail email.
- **Learn from Twitter:** Log into Twitter to allow your tablet to learn from your Twitter postings.
- **Learn from Contacts:** Allow your tablet to learn from your Contacts entries.
- **Clear remote data:** Remove all anonymous data stored on the personalization server.
- **Clear personalized data:** Remove all personalized data you have entered.
- **Privacy policy:** View information about privacy policies for personalization.
- **Keyboard swipe:** Configure options for entering text by swiping your finger over the letters, instead of tapping each letter individually.
 - **None:** When enabled, the keyboard won't recognize swipes on the keyboard as text.
 - **Continuous input:** When enabled, you can enter text by sliding your finger across the keys on the keyboard.
 - **Cursor control:** When enabled, you can slide your finger across the keyboard to move the cursor to begin entering text.
- **Key-tap feedback: Choose options for the keyboard to indicate your entries.**
 - **Sound:** When enabled, the keyboard plays a sound for your key taps.
 - **Character preview:** When enabled, the character displays in a bubble as you tap each key.
- **More settings:**
 - **Help:** Learn about Samsung Keyboard.
 - **Reset settings:** Return settings to the defaults.

Swype

Swype is a new way to enter text on touch screens. Instead of touching each key individually, use your finger to trace over the letters of a word. For each word, place your finger on the first letter and glide to the subsequent letters, lifting on the last letter.

1. Press  and then touch  > Settings > Language and input.

2. Touch  next to **Swype** to configure these options:

- **Settings:** Set Swype options.
 - **Sound on keypress:** Play sounds for your Swype touches.
 - **Show complete trace:** Display the trace of each word until you start the next word.
 - **Auto-correction:** Automatically correct typing mistakes.
 - **Auto-capitalization:** Automatically capitalize the first word of sentences.
 - **Auto-spacing:** Automatically insert spaces between words as you complete them.
 - **Next word prediction:** Swype predicts the next word based on the previous word.
 - **Show Voice key:** The Voice key is displayed on the Swype keyboard.
- **My Words: Manage your personal dictionary and data usage.**
- **Languages:** Choose the current language for Swype, and download new languages.
- **Gestures:** Learn about shortcuts you can use on the keyboard to quickly accomplish common tasks.
- **Help: Get additional information about using Swype.**
- **Updates:** Check for updates to Swype, and install them if desired.

Voice Search

The Voice Search feature is a voice-activated application that allows you to tell the tablet what to search for and then the tablet activates a Google search based on what you said.

1. Press  and then touch  > **Settings** > **Language and input**.
2. Touch **Voice search** for these options:
 - **Language:** Choose a language for voice searching.
 - **Speech output:** Choose options for speech output.
 - **Block offensive words:** Words many people find offensive are not shown in results of Google voice searches. Offensive words are replaced in results with a placeholder (#####).
 - **Hotword detection:** Say “Google” to launch voice search.
 - **Download offline speech recognition:** Download speech recognition to enable voice input while offline.
 - **Personalized recognition:** Google uses your personalized information to improve speech recognition (available when signed in to your Google account).

DRAFT For Internal Use Only

- **Google Account dashboard:** Manage your collected data (available when signed in to your Google account).
- **Bluetooth headset: Record audio through a Bluetooth headset (not included).**

Text-to-Speech Options

Text-to-speech (TTS) provides audible readout of text.

1. Press  and then touch  > **Settings** > **Language and input**.
2. Touch **Text-to-speech options** to configure:
 - **Preferred TTS engine:** Select **Samsung text-to-speech engine**, or **Google Text-to-speech Engine**. Touch  to configure options.
 - **Speech rate:** Choose a rate for text readouts.
 - **Listen to an example:** Play an example of speech used for readouts.

Pointer Speed

Adjust the speed of the pointer, when you use your finger to enter text.

1. Press  and then touch  > **Settings** > **Language and input**.
2. Touch **Pointer speed**, and then drag the slider to set the pointer speed. Touch **OK** to save your selection.

Cloud

Back up your personal data using Dropbox to sync your tablet's content.

1. Press  and touch  > **Settings** > **Cloud**.
2. Follow the prompts to create or sign into your Dropbox Account, and to backup your personal data.

Back Up and Reset Settings

Set up a backup account on your tablet to save information from your tablet to the account, and choose options for restoring data or resetting your tablet to the factory defaults.

1. Press  and then touch  > **Settings** > **Backup and reset**.
2. Configure options:
 - Touch **Back up my data** to create a backup of your app data, Wi-Fi passwords, and other settings to Google servers.
 - Touch **Backup account** to choose a Google account for backups.

DRAFT For Internal Use Only

- Touch **Automatic restore** to allow your tablet to restore information from your backup account when you reinstall an app.
- Touch **Factory data reset** to reset your tablet and sound settings to the factory default settings.

Accounts Settings

When you set up accounts on your tablet, such as your Google or Samsung accounts, email or social networking accounts, you can synchronize account information between your tablet and the account. Types of information you can synchronize include contacts, pictures, videos, and other types of files.

Add an Account

Add an account to your tablet to share information between your tablet and the account.

1. Press  and then touch  > **Settings** > **Add account**.
2. Choose a type of account, and then follow the prompts to enter your account credentials and complete the account set up.

Voice Control

Use voice commands to control the Alarm, the Camera, and the Music Player.

1. Press  and then touch  > **Settings** > **Voice control**.
2. Touch the **ON/OFF** switch to enable this option.
3. Touch **Alarm** to stop or snooze alarms with the voice commands Stop and Snooze.
4. Touch **Camera** to take pictures with voice commands such as Capture, Shoot, Smile, or Cheese.
5. Touch **Music** to control the Music Player with the voice commands Next, Previous, Play, Pause, Volume up, and Volume down.

Accessory Settings

Configure your tablet's behavior when it is connected to an optional dock (not included).

1. Press  and then touch  > **Settings** > **Accessory**.
2. Configure these settings:
 - **Dock sound:** When enabled, a sound plays when you insert and remove the tablet from the dock.
 - **Audio output mode:** When enabled, audio plays through the dock speakers when the tablet is docked.

DRAFT For Internal Use Only

Date and Time Settings

Your tablet obtains its time and date information by using the network-provided date, time, and time zone. These values can be manually altered.

1. Press  and then touch  > **Settings** > **Date and time**.
2. Touch **Automatic date and time** to disable the feature.
 - If enabled, you cannot alter the date, time zone or time values.
3. Touch **Set date**. Adjust the date, month, and year. Touch **Set** when finished.
4. Touch **Set time**. Adjust the hour and minute. Touch **Set** when finished.
5. Touch **Automatic time zone** to disable the feature.
 - If enabled, you cannot alter the time zone values.
6. Touch **Select time zone**, and then select a time zone from the on-screen list. Scroll down the list to view additional time zones.
7. Touch **Use 24-hour format** to toggle between using a 12-hour or a 24-hour format.
8. Touch **Select date format** to select how the date information is displayed on your tablet. The selected date format is also applied to the date displayed in the tablet's Alarm Clock.

Accessibility Settings

Your tablet offers features to make using the tablet easier for those with certain physical disabilities. Use Accessibility settings to configure these features.

1. Press  and then touch  > **Settings** > **Accessibility**.
2. Configure these options:
 - **Auto rotate screen**: Enable automatic rotation of the screen when you rotate the tablet.
 - **Screen timeout**: Set a period of time for the screen to remain lit—after which it will dim and lock.
 - **Lock automatically**: Lock the screen in 5 seconds after screen automatically turns off. (This option appears only when a screen lock is enabled.)
 - **Speak passwords**: Read aloud password information.
 - Touch **Show shortcut** to display a shortcut to the *Device options* menu. The *Device options* menu displays when you press and hold the  **Power/Lock Key**.
 - Touch **Manage accessibility** to save your accessibility settings to a file, import settings from a file, or share your settings with another device.
 - Touch **TalkBack** to activate the TalkBack feature and configure options.

DRAFT For Internal Use Only

- Touch **Font size** to change the size of the fonts used on the screen.
- Touch **Magnification gestures** to control whether your tablet recognizes gestures to pan, and zoom in or out.
- Touch **Negative colors** to reverse the display of on-screen colors from White text on a Black background to Black text on a White background.
- Touch **Accessibility shortcut** to control whether your tablet recognizes a gesture to quickly enable accessibility features. To use the gesture, press and hold the **Power/Lock Key** until you hear a sound or feel a vibration, then touch and hold two fingers on the screen until you hear an audio confirmation.
- Touch **Text-to-speech options** to configure options for converting text to speech. For more information, see [Text-to-speech options](#).
- Touch **Enhance web accessibility** to choose whether to allow apps to install scripts from Google that make their Web content more accessible.
- Touch **Sound Balance** to control the signal sent to the left and right when using eartables.
- Touch **Mono audio** to enable stereo audio to be compressed into a single mono audio stream for use with a single eartablet.
- Touch **Turn off all sounds** to mute every sound made by the tablet during touches, selections, notifications, etc.
- Touch **Assistant Menu** to configure:
 - **Dominant hand:** Select **Left hand** or **Right hand** to optimize the tablet for one-handed use.
 - **Edit:** Reorder or remove menu items from the Navigation panel.
- Touch **Press and hold delay** choose how long your tablet waits during a touch and hold gesture on the screen, before continuing with the touch and hold action.
- Touch the **ON/OFF** switch next to enable **Interaction control**. Enabling **Interaction control** allows you to turn motions and screen timeout on or off, block areas of the screen from touch interaction, turn auto-rotate and hard key functions off, and show notifications only on the Notifications panel and Status bar.

Activate This Device

Connect to the network and activate your tablet. If your tablet is already activated, use this option to view information about your plan and usage.

1. Press  and then touch  > **Settings**.
2. Touch **Activate this device**, and then follow the prompts to activate your tablet on the network.

DRAFT For Internal Use Only

System Update Settings

Use System update options to update your tablet's internal software.

1. Press  and then touch  > **Settings**.
2. Touch **System Update** to use these options:
 - **Update now:** Manually check for software update.
 - **Auto update:** Check for updates automatically.
 - **Wi-Fi only:** Download software updates only when connected via Wi-Fi.
 - **Update PRL:** Download and the latest Preferred Roaming List (PRL), used by your tablet to access the network.
 - **Update Profile:** Update the user profile related to your wireless service account. If you choose to change your user name online, use this option to update the user name on your tablet.
 - **UICC Unlock:** Unlock your tablet's Universal Integrated Circuit Card.

About Device

The *About device* menu lets you access important information about your tablet.

1. Press  and then touch  > **Settings**.
2. Touch **About device**, and then touch items for more details:
 - **Software version:** View the tablet's software version.
 - **Hardware version:** View the tablet's hardware version.
 - **Status:** View information about your tablet's current status.
 - **Legal information:** Display open source licenses, configure license settings, including your DivX® VOD registration, and Google info.
 - **Device name:** View or edit your tablet's name.
 - **Model number:** View your tablet's model number.
 - **Android version:** View the firmware version of your tablet.
 - **Baseband version:** View the baseband version of your tablet.
 - **Kernel version:** View the kernel version of your tablet.
 - **Build number:** View the build number of your tablet.

DRAFT For Internal Use Only

- **SE for Android status:** Security Enhanced for Android policies enhance security for your device. View information about your device's security software, including the version and status.
- **Secure boot status:** View the type of the tablet's secure boot.

DRAFT For Internal Use Only

Copyright Information

©2014 Samsung Telecommunications America, LLC.

©2014 Sprint. Sprint and the logo are trademarks of Sprint. Other marks are trademarks of their respective owners.

Other marks are trademarks of their respective owners.

The actual available capacity of the internal memory is less than the specified capacity because the operating system and default applications occupy part of the memory. The available capacity may change when you upgrade the device

DRAFT For Internal Use Only

Index

- 4G Services, 51
- About Device, 107
- Accessibility Settings, 105
- Accounts, 34
 - Email, 36
 - Gmail, 34
 - Google, 34
 - Social Network, 40
- Accounts and Sync, 104
- Activation, 3, 107
- Airplane Mode, 80
- Alarm and Timer, 70
- Application Manager, 91
- Apps, 42
- Assistant Menu, 21
- Back Key, 6
- Backup and Reset, 103
- Battery
 - Charging, 2
 - Settings, 91
- Blocking Mode, 84
- Bluetooth, 53, 68
 - Disconnect, 55
 - Pairing with a Bluetooth Device, 54
 - Receive Information, 56
 - Send Information, 55
 - Settings, 78
 - Turn On or Off, 53
 - Unpair, 55
- Brightness, 87
- Browser
 - Chrome, 50
 - Internet Browser (App), 50
 - Lumen Toolbar, 50
- Calculator, 70
- Calendar, 70
- Camera, 7, 61
 - Settings, 63
 - Viewing Pictures, 64
- Chrome, 50
- Clock, 70
- Cloud, 103
- Contacts, 29
 - Accessing, 29
 - Add, 29
 - Add to Your Favorites, 31
 - Assign a Photo, 30
 - Basics, 29
 - Delete, 31
 - Edit, 30
 - Link, 31
 - Share, 32
- Contacts Groups, 32
 - Add Members, 33
 - Create a New Group, 32
 - Send Email or Gmail to Group, 33
- Corporate Email
 - Creation, 36
- Data Services, 50
- Data Usage, 79
- Date and Time, 105
- Daydream, 88
- Default Notification Sounds, 85
- Device
 - Turning Off and On, 2
- Display, 7
- Display Settings, 86
- DivX, 42
- DLNA (Digital Living Network Alliance), 83
- Dock, 104
- Downloads, 72
- Drag, 10
- Dropbox, 72
- Email, 36
 - Add Account, 36
 - Compose and Send, 37
 - Delete Account, 40
 - Manage Inbox, 38
 - Microsoft Exchange Accounts, 36
 - Settings, 39
 - View and Reply, 37
- Encryption, 96
- Enter Text, 24
- Extended Home Screen, 14
- Flick, 10
- Flipboard, 40
- Front camera, 6
- Gallery, 64
 - Edit Photos, 66
 - Sharing Photos and Videos, 67

DRAFT For Internal Use Only

- View Photos and Videos, 65
- Zooming, 66
- Game Hub, 43
- Gestures, 8
- Gmail, 34
 - Read and Reply to Messages, 35
- Google
 - Gmail, 34
 - Google+, 41
 - Hangouts, 41
 - Maps, 47
 - Messenger, 41
 - Play Books, 45
 - Play Movies &TV, 45
 - Play Music, 46
 - Play Newsstand, 45
 - Search, 73
 - Settings, 73
 - YouTube, 41
- Google Play Store, 43
 - Install an App, 44
 - Wallet Account, 44
- Google Voice Typing
 - Settings, 99
 - Using, 25
- Google+, 41, 68
- Group Play, 46
- Hands-free Mode, 84
- Hangouts, 41
- Headset Jack, 7
- Help, 74
- Home Key, 7
- Home Screen, 12
 - Extended, 14
 - Primary Shortcuts, 13
 - Shortcuts, 12
 - Wallpapers, 15
 - Widgets, 14
- Infrared Transmitter, 6
- Internet, 50
- Key Functions, 6
- Keyboard
 - Samsung, 100
 - Swype, 101
 - Touchscreen, 24
- Kies via Wi-Fi, 59
- Language and Input
 - Settings, 99
- Light Sensor, 6

- Location Settings, 93
- Lumen Toolbar, 50
- Maps, 47
- Memo, 74
- Memory Card, 57
 - Format, 58
 - Insert, 57
 - Remove, 57
 - Slot Location, 7
 - Unmount, 58
 - View Memory, 58
- Menu Key, 7
- Messenger, 41
- microSD Card, 57
- Microsoft Exchange Accounts, 36
- Mobile Networks, 80
- Multi Window, 19
 - Settings, 87
- Music
 - Google Play Music, 46
 - Music Hub, 47
 - Music Player, 47
- Music Hub, 47
- Music Player, 47
- My Files (App), 75
- Navigation
 - Maps, 47
- Nearby Devices, 83
- Notification Icons, 16
- Notification Panel, 17
 - Settings, 87
- Passwords
 - Make Visible, 96
- Photos
 - Edit, 66
- Photos and Videos
 - Sharing, 67
 - View, 65
- Picasa, 68
- Pinch and Spread, 12
- Play Books, 45
- Play Movies & TV, 45
- Play Music, 46
- Play Newsstand, 45
- Pointer Speed, 103
- Polaris Office, 73
- Power Off, 7
- Power On, 7
- Power Saving Mode, 90

DRAFT For Internal Use Only

- Power/Lock Key, 6
- Predictive Text, 26
- Primary Shortcuts, 13
- Quick Settings, 18
- Recent Apps
 - Accesssing, 15
- Roaming, 83
- Rotate, 11
- S Translator, 75
- S Voice, 75
- Samsung Apps, 76
- Samsung Keyboard
 - Predictive Text, 26
 - Settings, 100
 - Using, 25
- Screen Lock Settings, 94
- Screen Lock Sound, 85
- Screen Timeout, 87
- Search (Google), 73
- Security
 - Screen Lock, 94
 - Settings, 96
- Set Up Your Tablet, 1
- Settings, 77
 - About Device, 107
 - Accessibility, 105
 - Accounts and Sync, 104
 - Activate This Device, 107
 - Airplane Mode, 80
 - Application Manager, 91
 - Backup and Reset, 103
 - Battery, 91
 - Blocking Mode, 84
 - Bluetooth, 78
 - Brightness, 87
 - Choose a Default Language, 99
 - Cloud, 103
 - Data Usage, 79
 - Date and Time, 105
 - Daydream, 88
 - Default Input Method, 99
 - Default Notification Sounds, 85
 - Display, 86
 - Dock, 104
 - Font Size, 89
 - Font Style, 88
 - Google Voice Typing, 99
 - Hands-free Mode, 84
 - Increase Legibility, 89

- Language and Input, 99
- Location, 93
- Mobile Networks, 80
- More Settings, 80
- Multi Window, 87
- Nearby Devices, 83
- Notification Panel, 87
- Pointer Speed, 103
- Power Saving Mode, 90
- Samsung Keyboard, 100
- Screen Lock, 94
- Screen Lock Sound, 85
- Screen Timeout, 87
- Security, 96
- Show Battery Percentage, 89
- Smart Screen, 88
- Sound, 85
- Storage, 89
- Swype, 101
- System Update, 107
- Text-to-Speech, 102
- Touch Sounds, 85
- Users, 92
- Voice Control, 104
- Voice Search, 102
- Volume, 85
- VPN, 82
- Wallpaper, 86
- Wi-Fi, 77
- Setup Screens, 4
- Shortcuts, 12
- SIM Card
 - Slot Location, 7
- Slide, 9
- Smart Remote, 48
- Smart Screen, 23
 - Settings, 88
- Social Network Accounts, 40
- Social Networking, 34
- Sound
 - Settings, 85
- Speaker, 6
- Spread and Pinch, 12
- Status Icons, 16
- Storage
 - Settings, 89
- Story Album, 48
- Swipe, 9
- Swype

DRAFT For Internal Use Only

- Settings, 101
- Using, 26
- System Update, 107
- Tablet
 - Layout, 6
- Tethering, 82
- Text Entry, 24
- Text Input
 - Methods, 24
- Text-to-Speech, 102
- Tools, 70
- Touch, 8
- Touch and Hold, 9
- Touch Sounds, 85
- Touchscreen
 - Drag, 10
 - Flick, 10
 - Keyboard, 24
 - Pinch and Spread, 12
 - Rotate, 11
 - Slide, 9
 - Swipe, 9
 - Touch, 8
 - Touch and Hold, 9
 - Turn Off, 7
 - Turn On, 8
 - Zooming, 12
- Touchscreen Navigation, 8
- TripAdvisor, 48
- Turn Device On and Off, 2
- Turn Tablet Off, 7
- Turn Tablet On, 7
- Typing, 24
- USB Charger/Accessory Port, 7
- Users
 - Settings, 92
- Video
 - Record, 62
 - Sharing, 67
- Video Player, 69
- Voice Control, 23, 104
- Voice Search
 - Settings, 102
- Voice Typing
 - Using, 25
- Volume, 85
- Volume Key, 6
- VPN, 59
 - Settings, 82
- VPN Client, 76
- Wallpaper
 - Settings, 86
- Wallpapers, 15
- WatchON, 48
- Web, 50
- Wi-Fi, 51
 - Connect to Wi-Fi Network, 51
 - Settings, 77
- Wi-Fi Direct, 53
- World Clock, 48
- YouTube, 41, 69
- Zoom, 12

DRAFT For Internal Use Only