



Antenna and Device Information


* Placement of each antenna

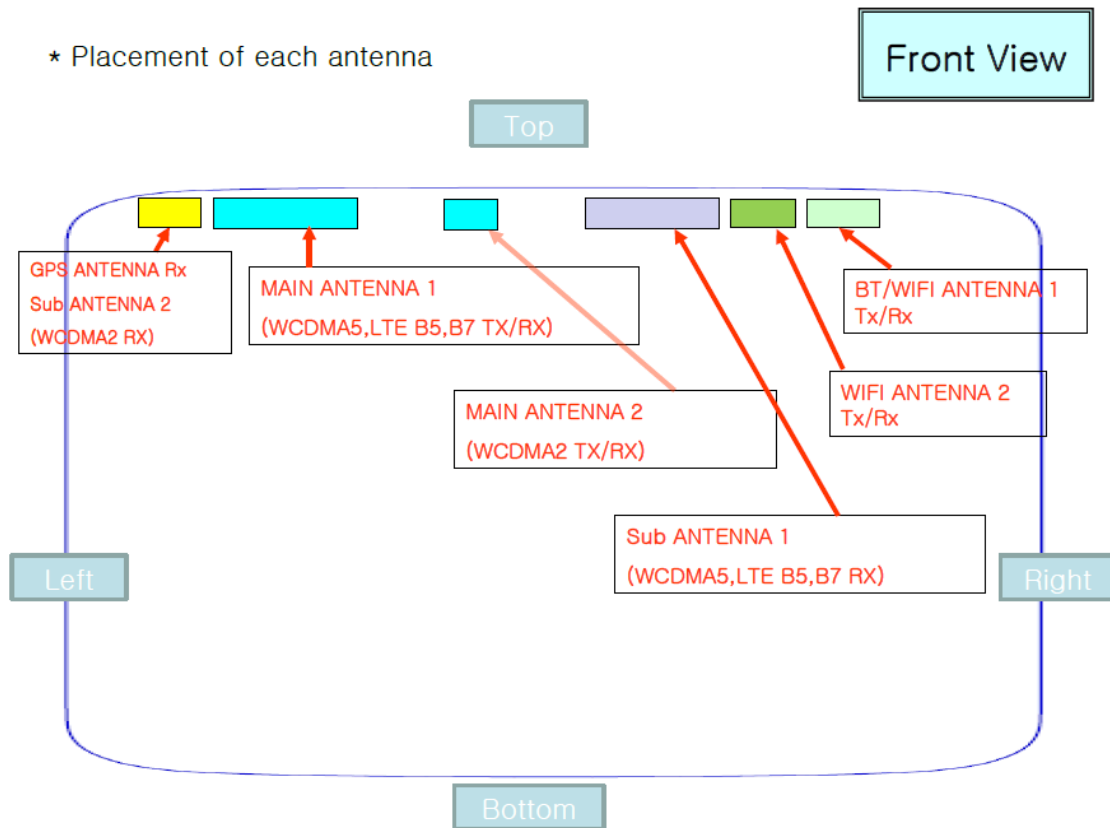


* Distance between Main antenna and edge

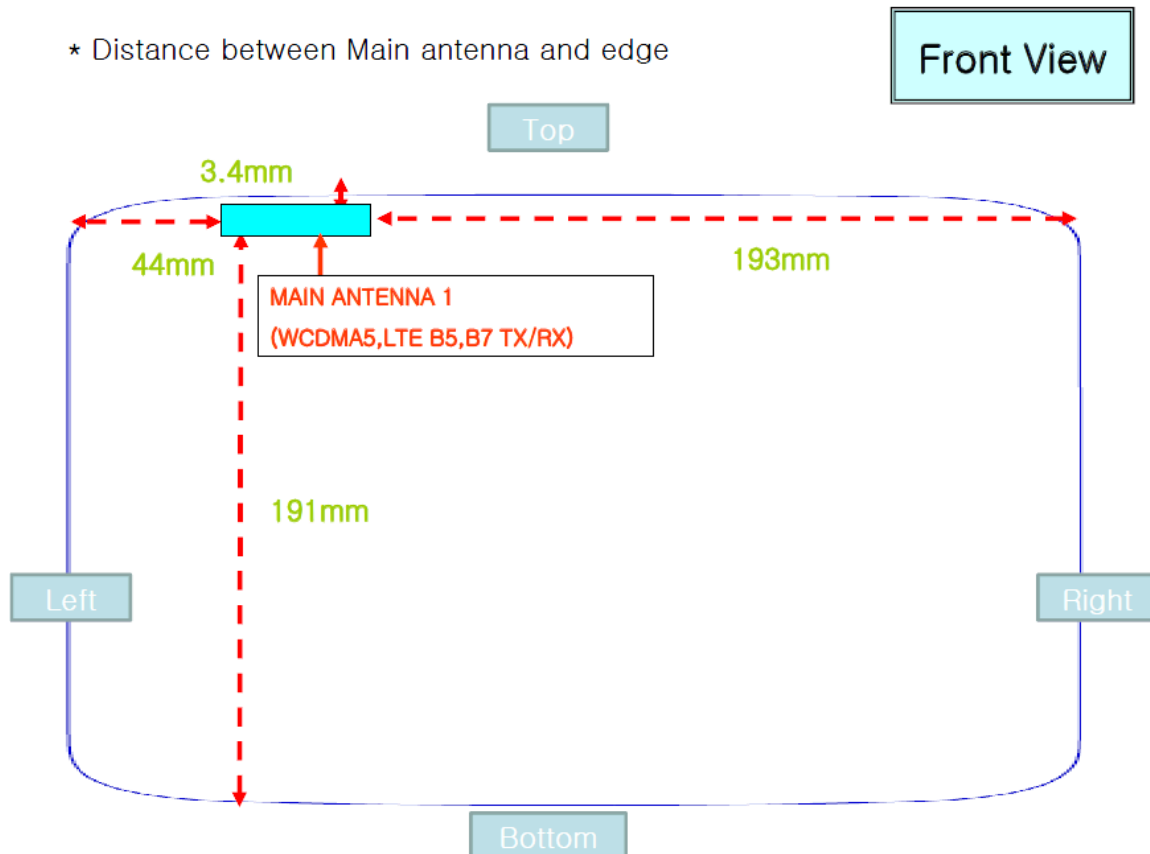

* Distance between Main antenna and edge

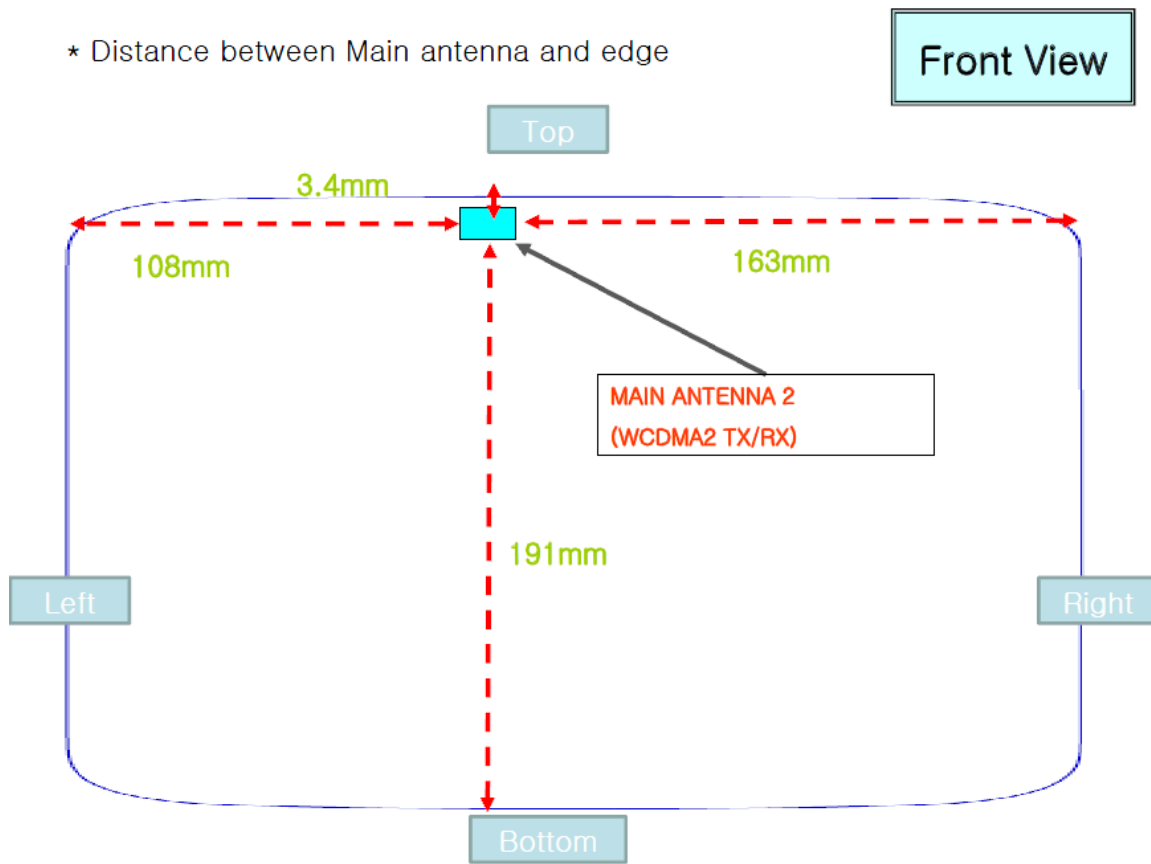


* Distance between Bluetooth & WLAN antenna and edge

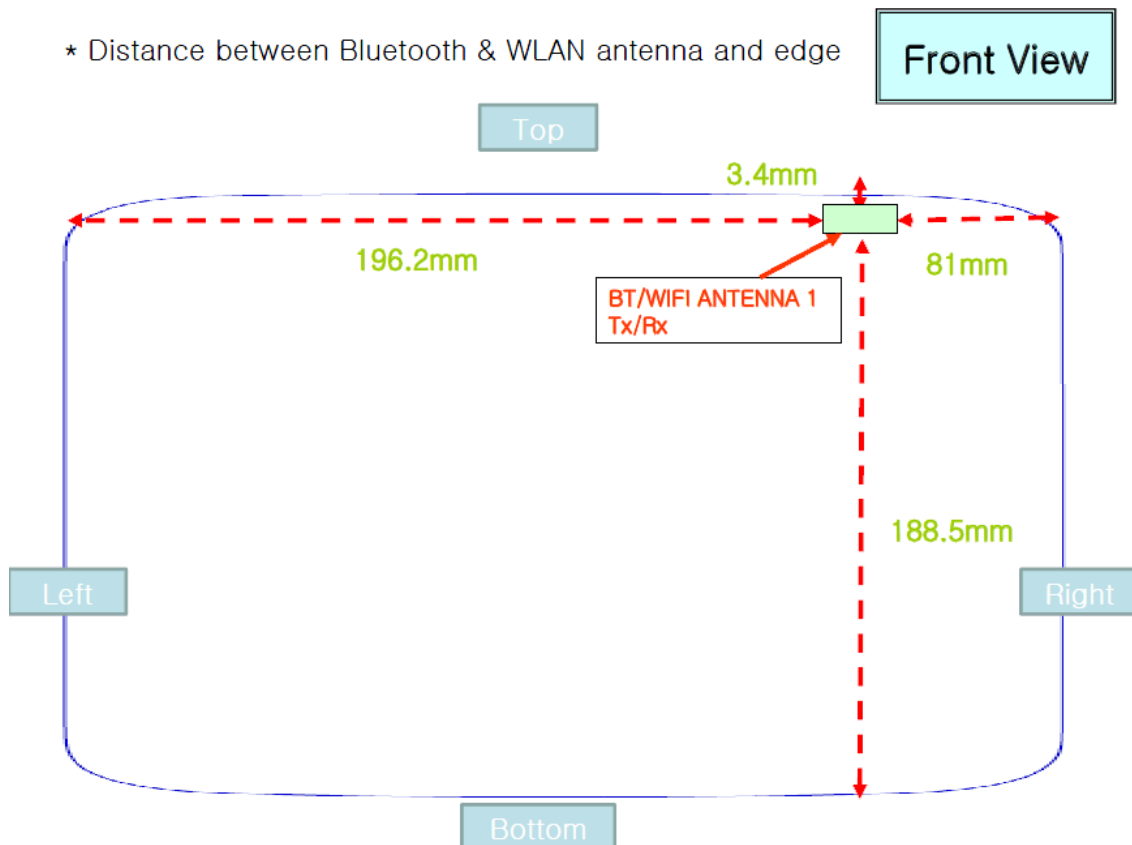


* Distance between Bluetooth & WLAN antenna and edge

Front View

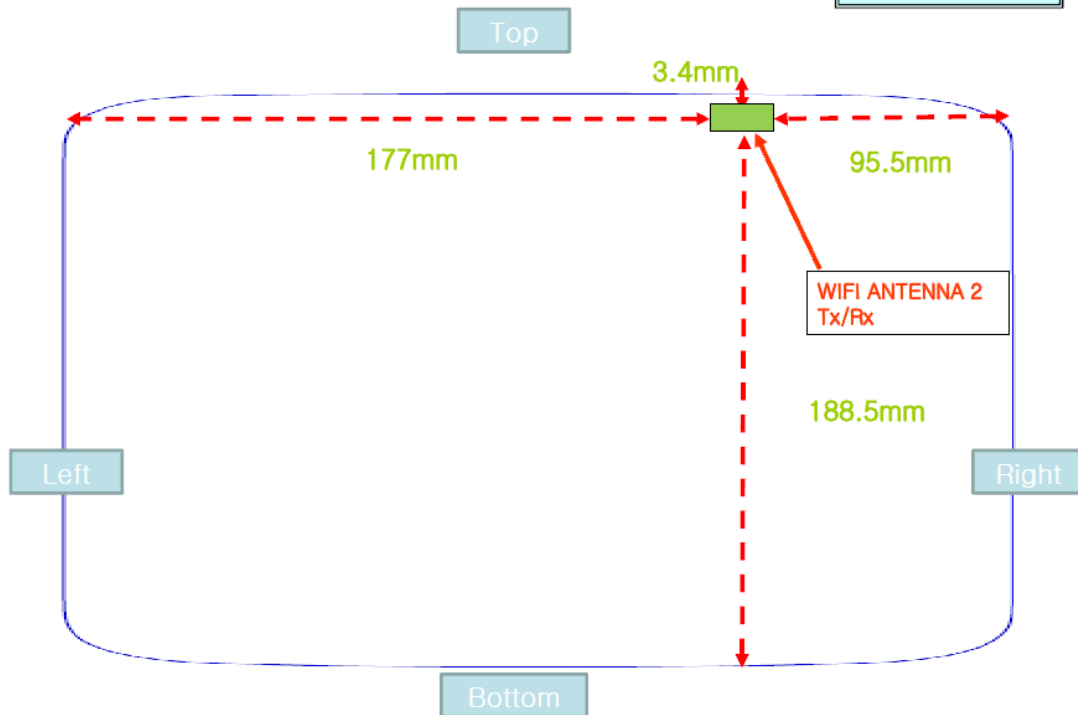

* Diagonal dimension of LCD and device

Front View

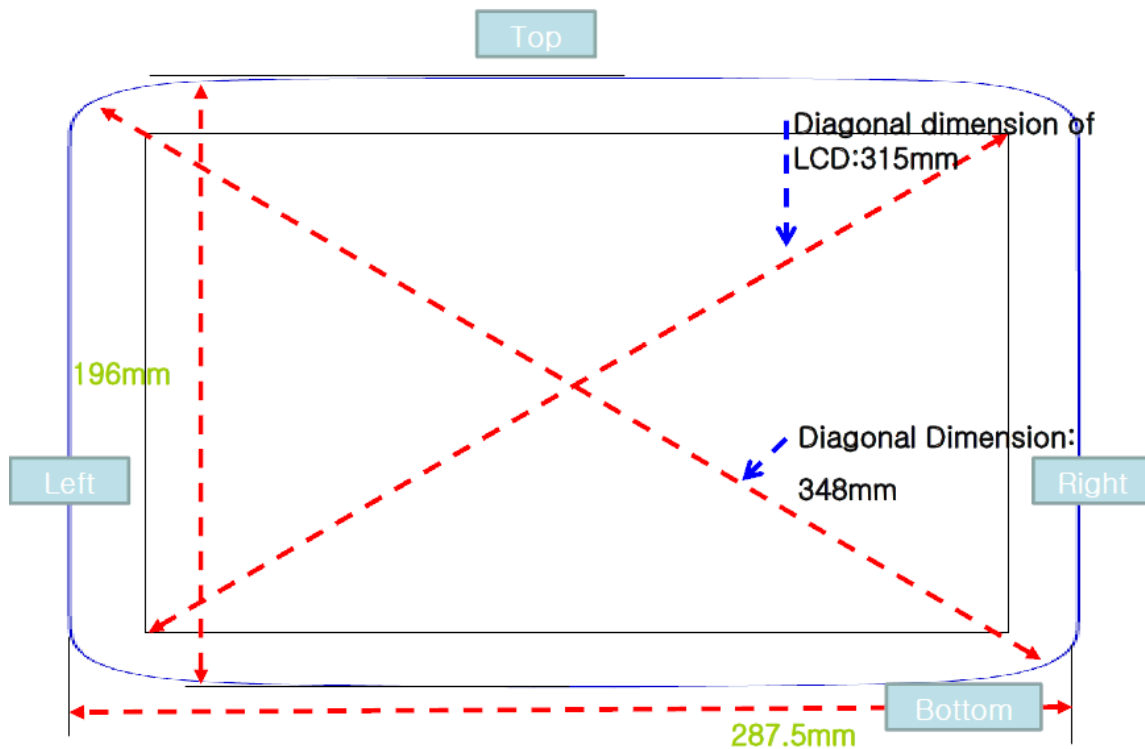


SAR Test Setup Photographs

■ Test Setup Photo (Body All)



■ Test Setup Photo (Rear)

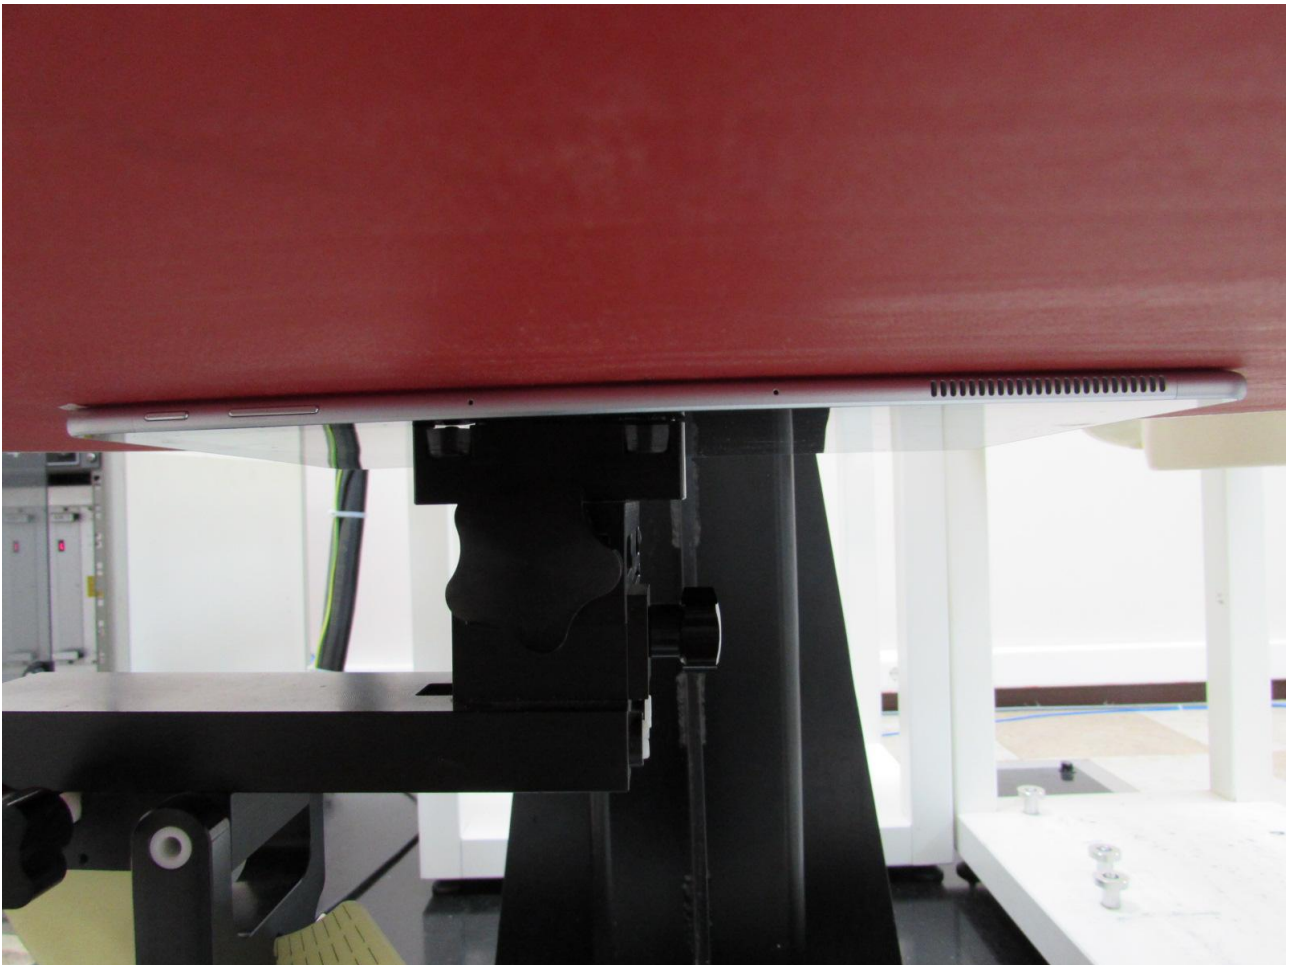

[Distance of 0 mm from the EUT]

■ **Test Setup Photo (Top)**




[Distance of 0 mm from the EUT]

■ Test Setup Photo (Left)




[Distance of 0 mm from the EUT]

■ Test Setup Photo (Rear) (Keyboard cover)

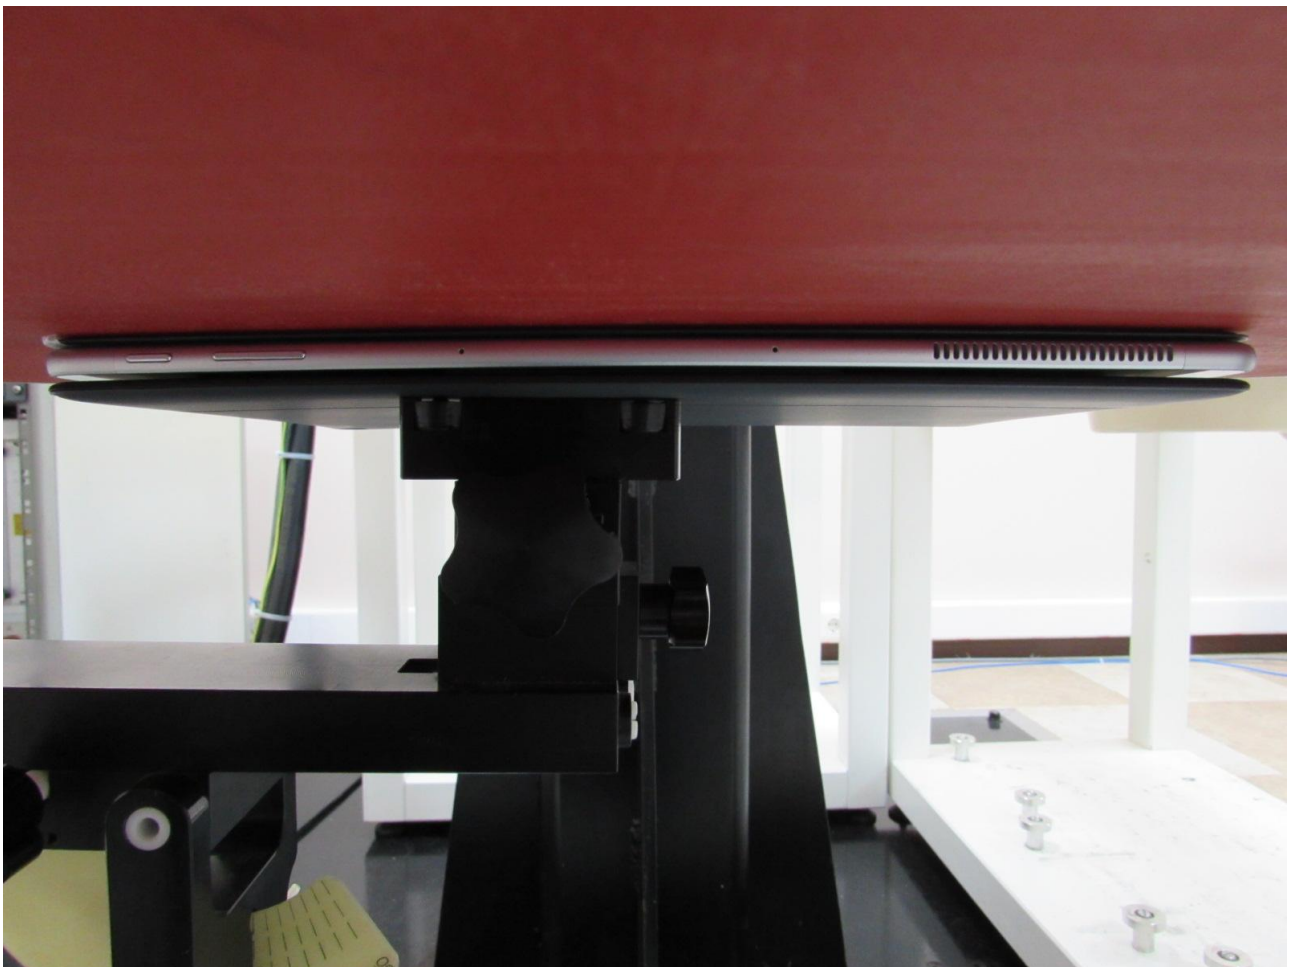

[Distance of 0 mm from the EUT]

■ **Test Setup Photo (Rear)**

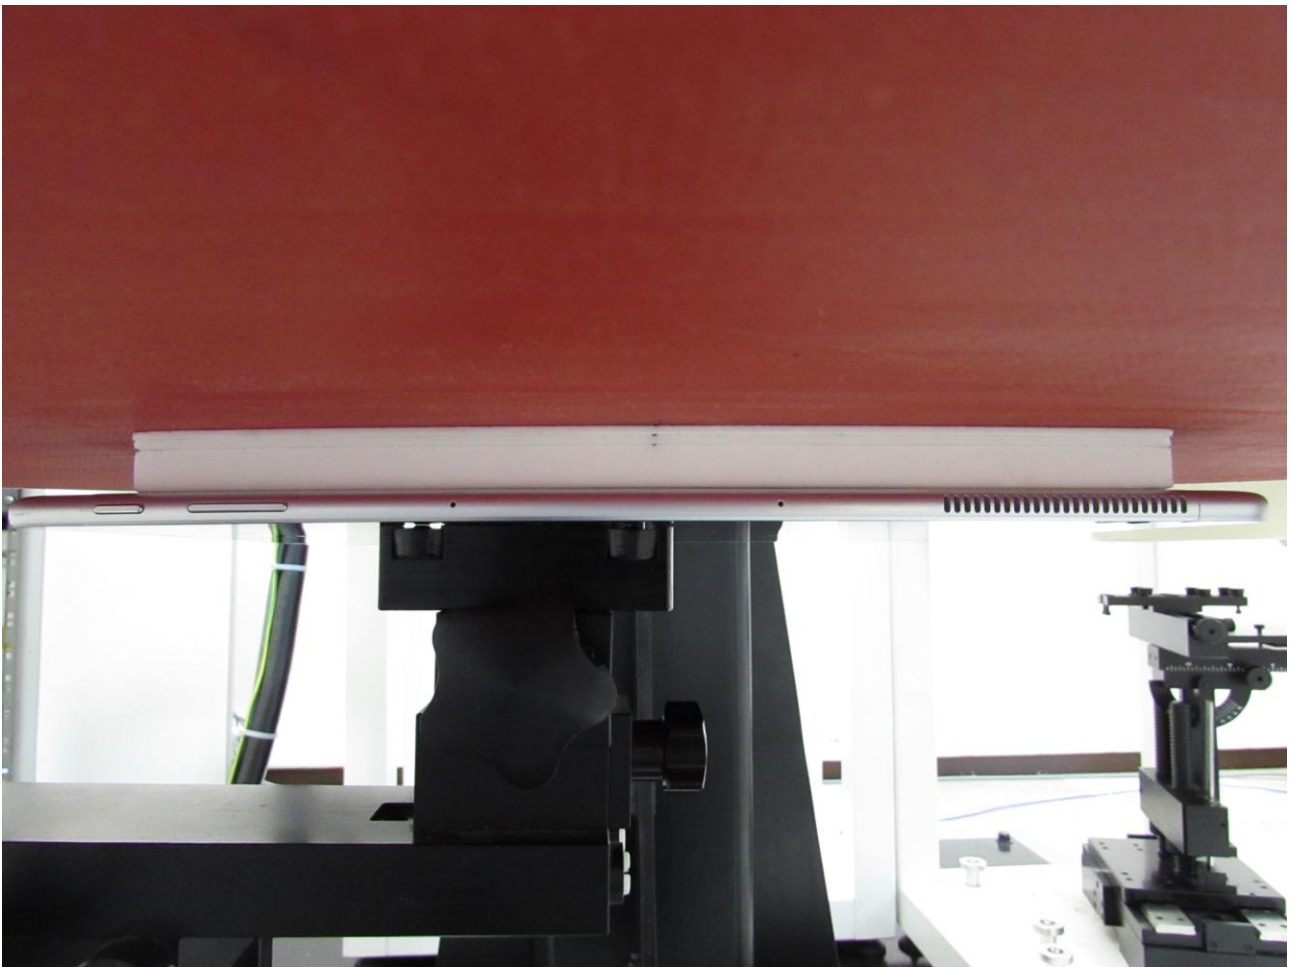

[Distance of 14 mm from the EUT]

■ **Test Setup Photo (Top)**



[Distance of 20 mm from the EUT]

■ Test Setup Photo (Rear) (Keyboard cover)



[Distance of 14 mm from the EUT]

■ Test Setup Photo (Rear)




[Distance of 6 mm from the EUT]

■ Test Setup Photo (Top)




[Distance of 6 mm from the EUT]

■ Test Setup Photo (Rear) (Keyboard cover)

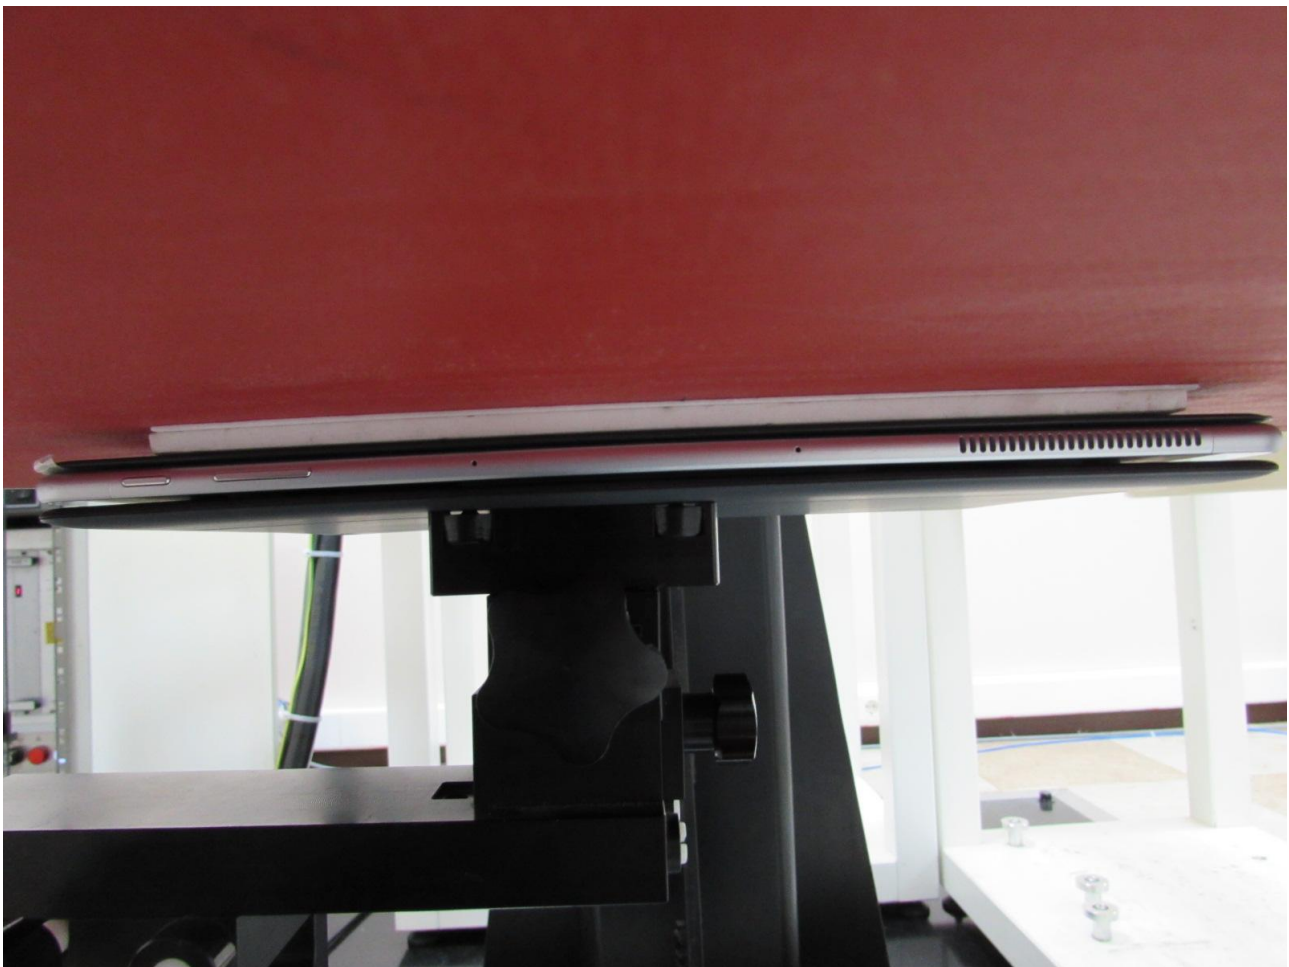

[Distance of 6 mm from the EUT]

■ **Test Setup Photo (Top) (Keyboard cover)**

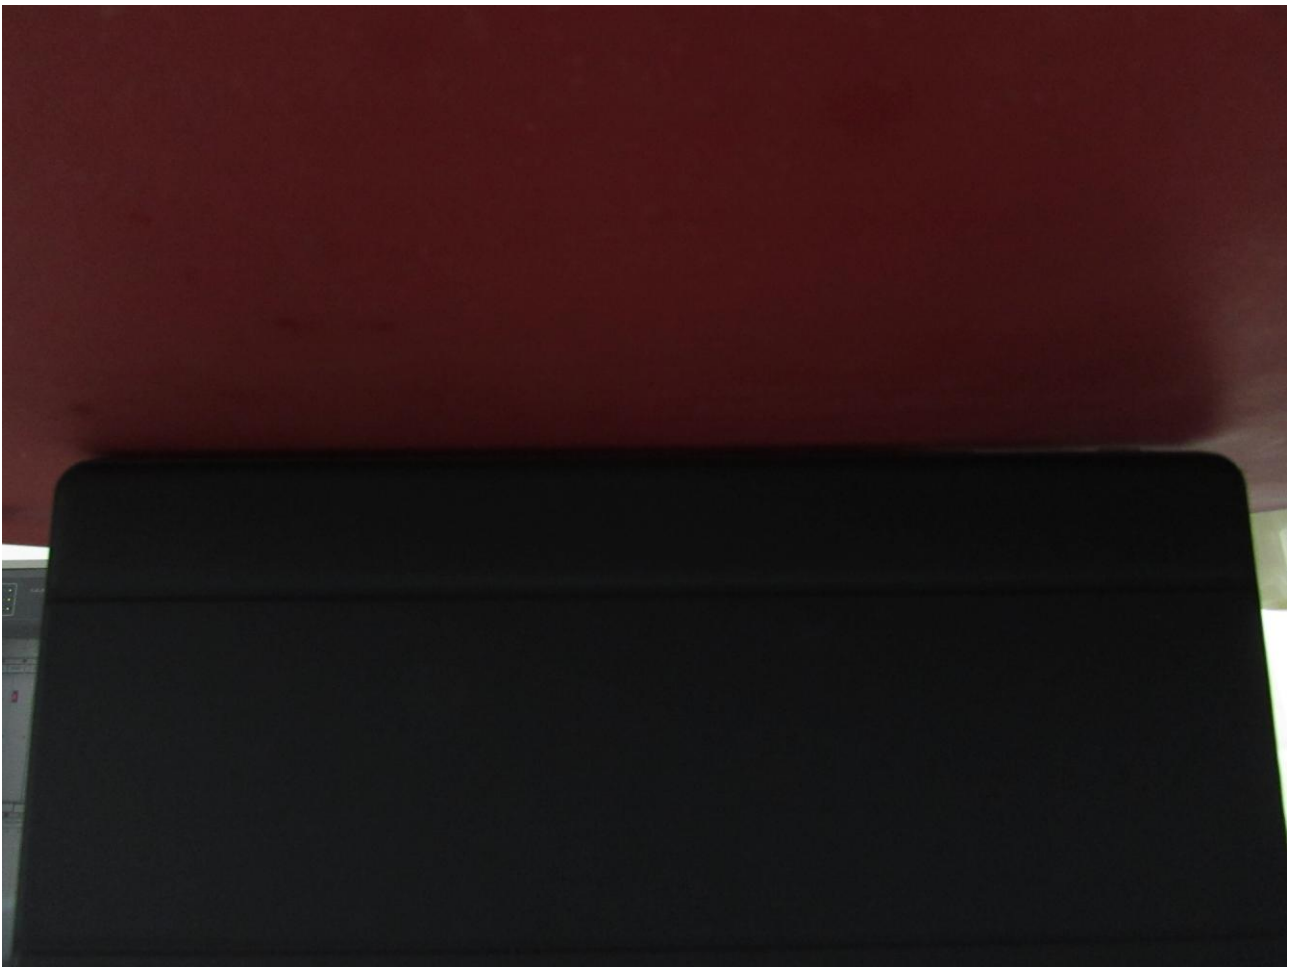

[Distance of 0 mm from the EUT]

■ Spacer

