

 
Non DFS EUT Setup

1. PC network IP Setting

IP : 192.168.1.X

Netmask : 255.255.255.0

Gateway : 192.168.1.100

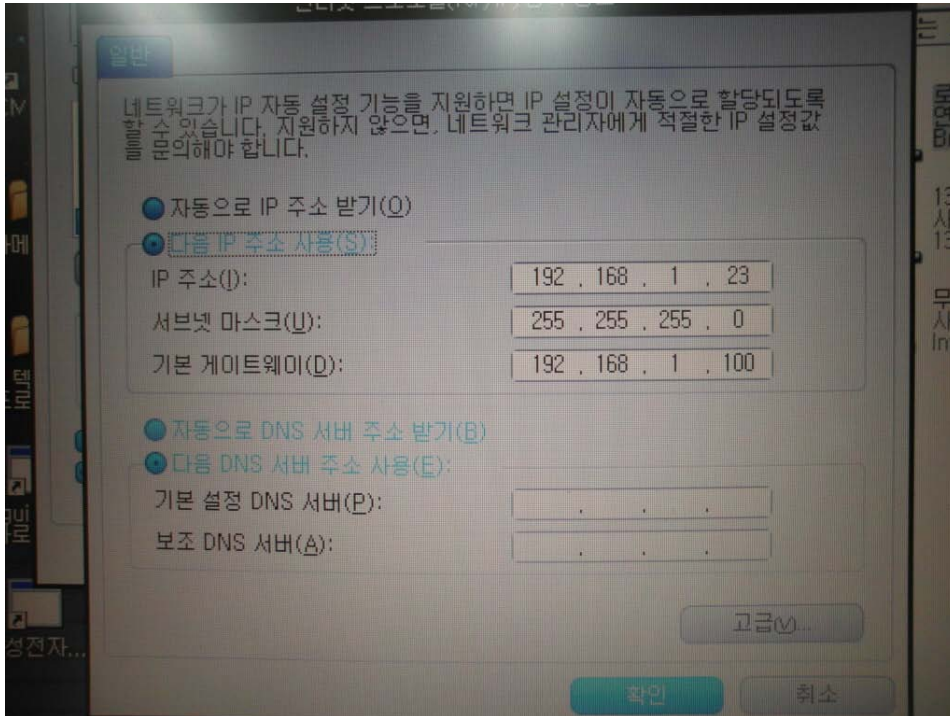

2. Connect console cable to the CONSOLE port in the AP

3. Connect USB cable to the USB port in the AP. (Driver : \art2_ver_2_61BIN\art_usb_driver)



 
4. Console program(ex: tera term, PuTTY) setting as follow.



5. Apply the power (Using AC/DC adaptor or PoE Lan cable)

* PoE : IEEE802.3af compliance

6. After booting is finished, please "ENTER" key 2 or 3 times.

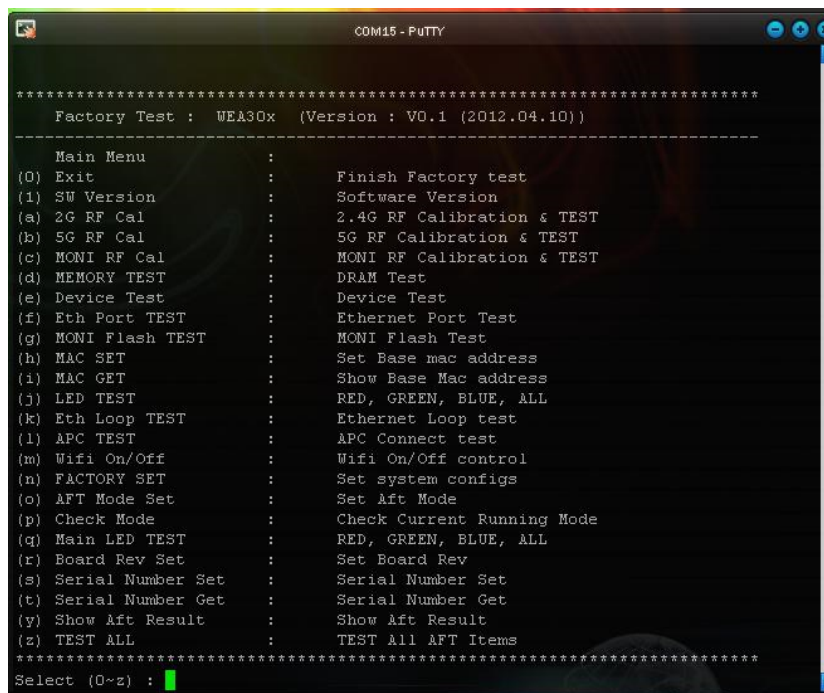

```
(a) 2G RF Cal      :      2.4G RF Calibration & TEST
(b) 5G RF Cal      :      5G RF Calibration & TEST
(c) MONI RF Cal    :      MONI RF Calibration & TEST
```

 
 
b or c select

b : ANT port A1 ~ A4


c : ANT port Monitoring M1, M2

7. art2_ver_2_27_3BIN\bin\artgui.exe <- run (ANT port A1 ~ A4)

DUT(0) : 192.168.1.2:2390

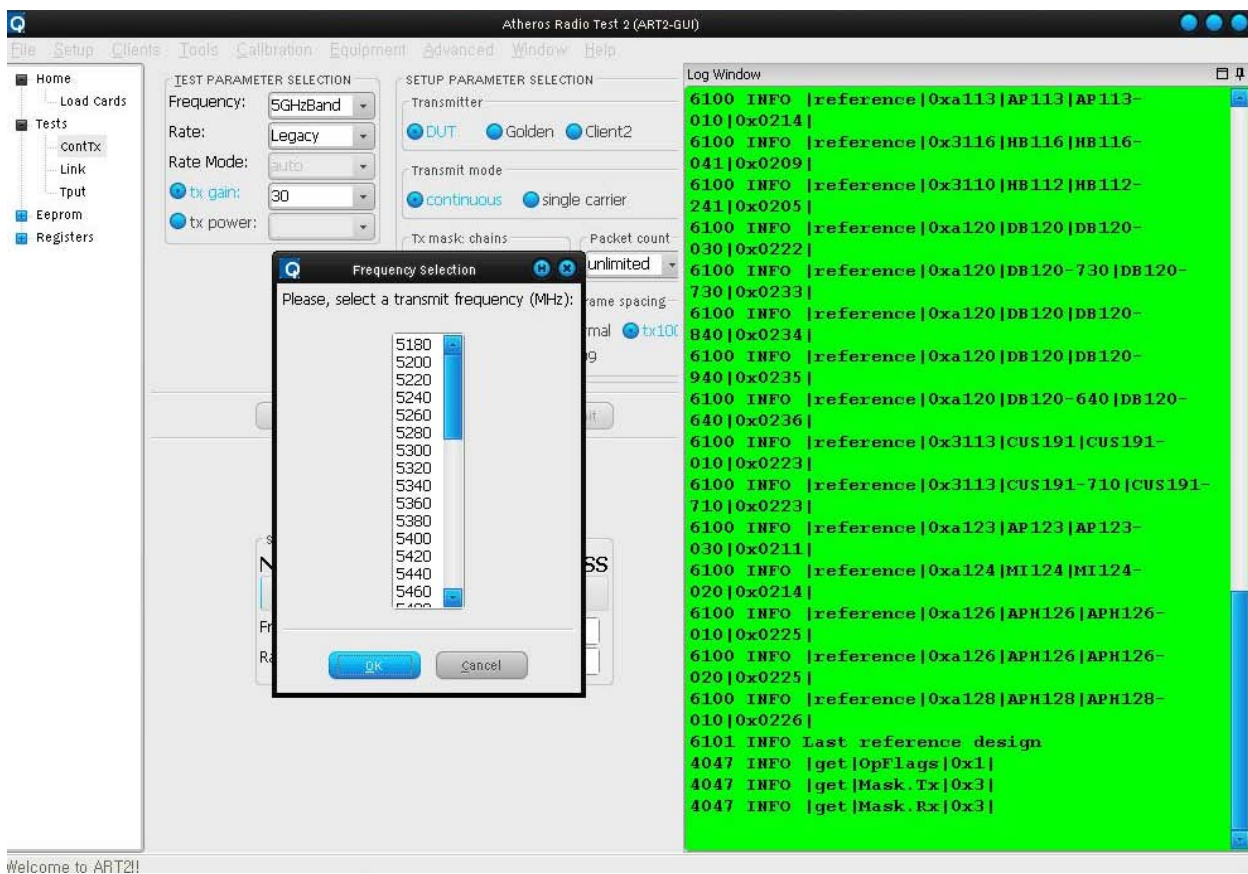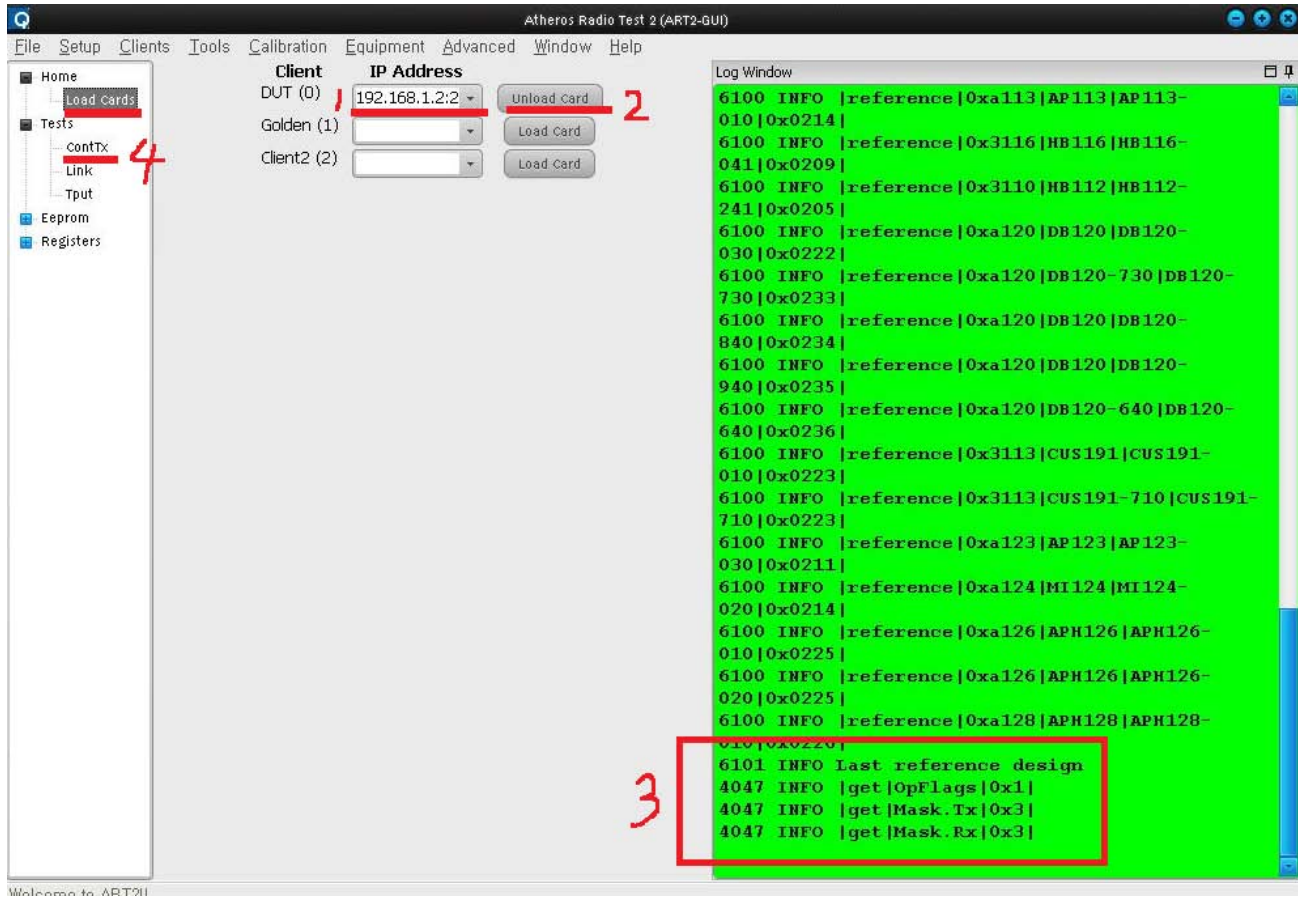

 8. art2_ver_2_61BIN\bin\artgui.exe <- run (ANT port Monitoring M1, M2)

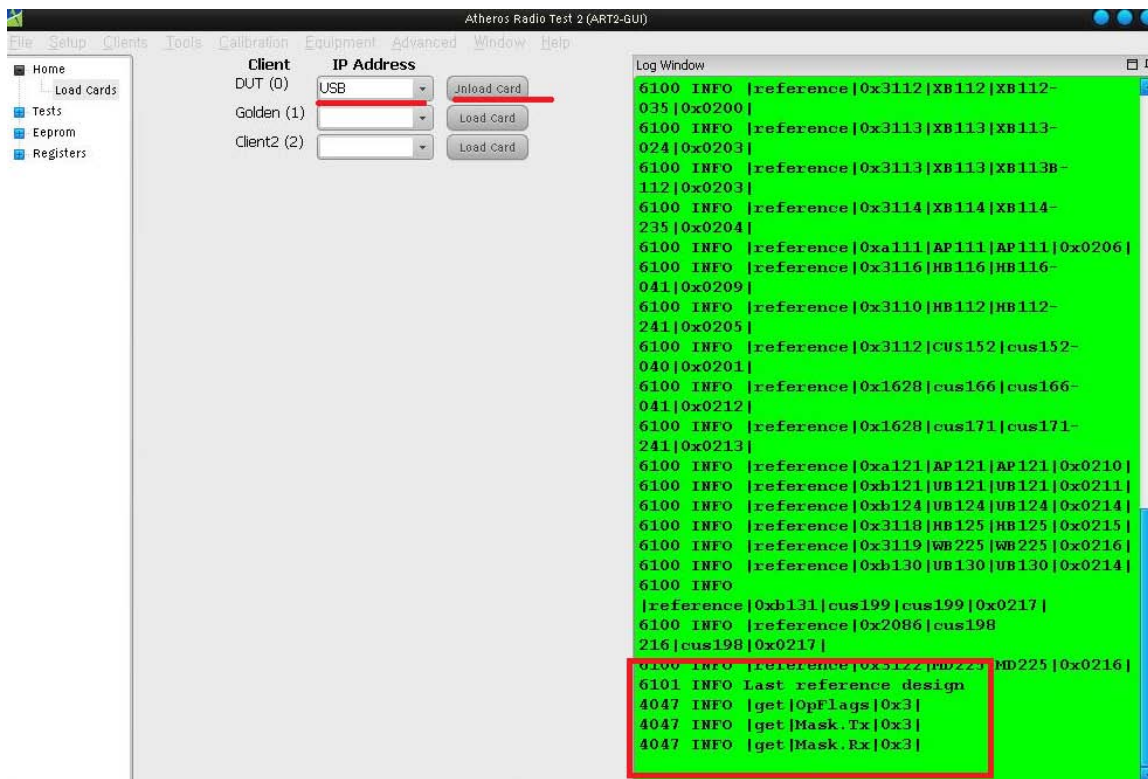

DUT(0) : USB

