 
 



OBW NVNT ac20 5260MHz Ant1

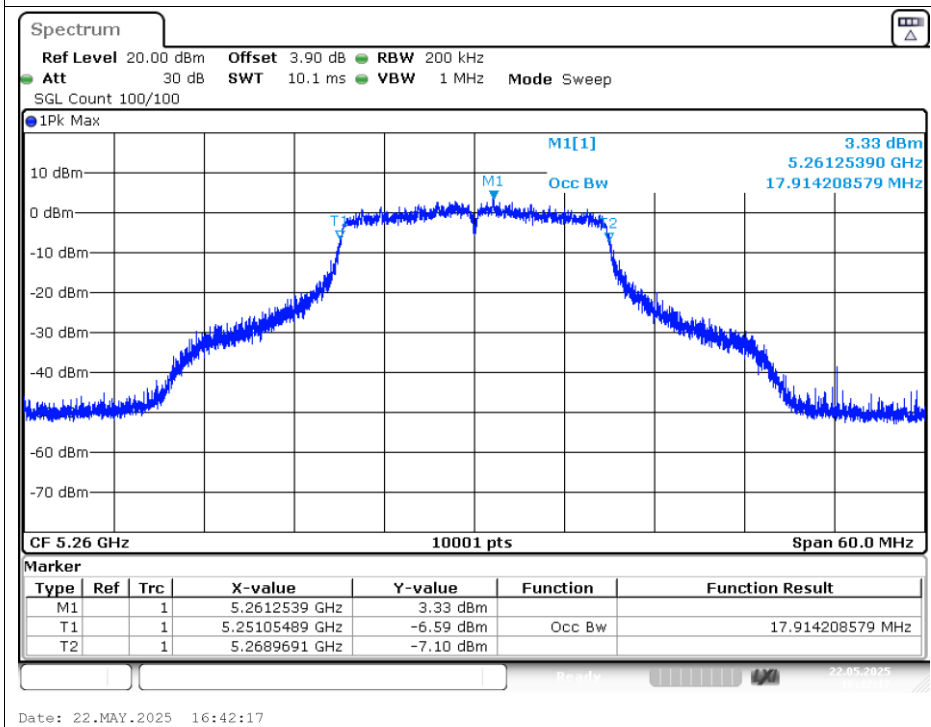


OBW NVNT ac20 5260MHz Ant2

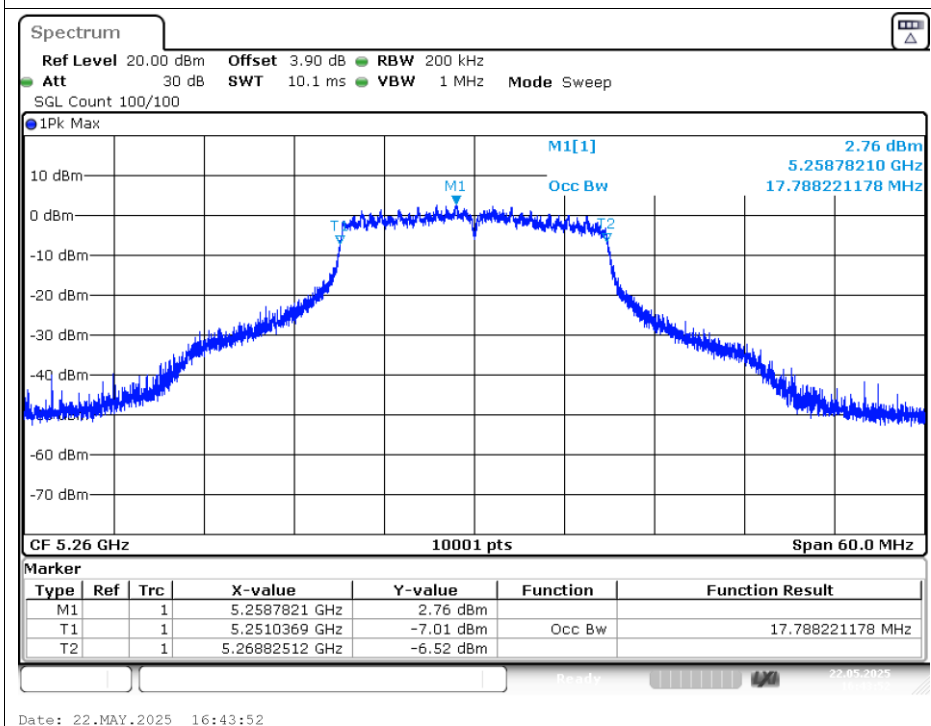

 
OBW NVNT ac20 5280MHz Ant1

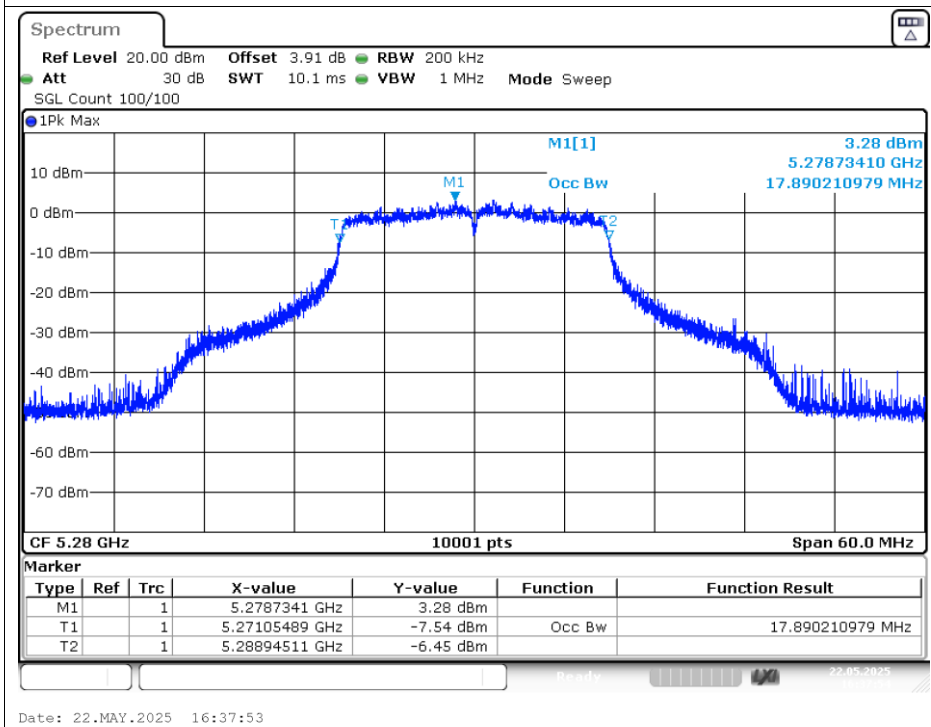


OBW NVNT ac20 5280MHz Ant2

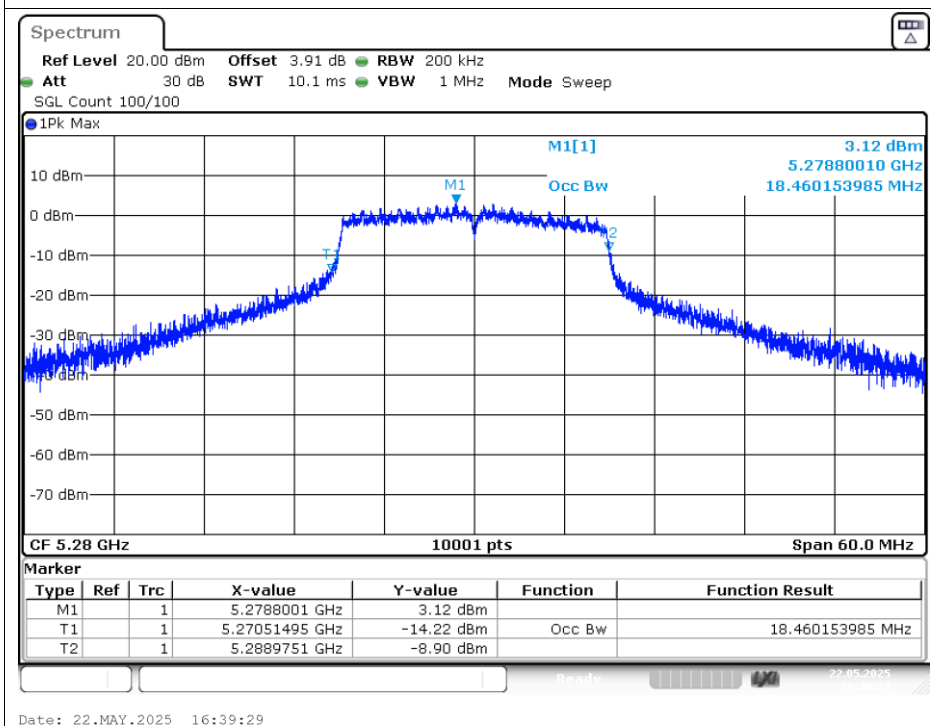 


OBW NVNT ac20 5320MHz Ant1

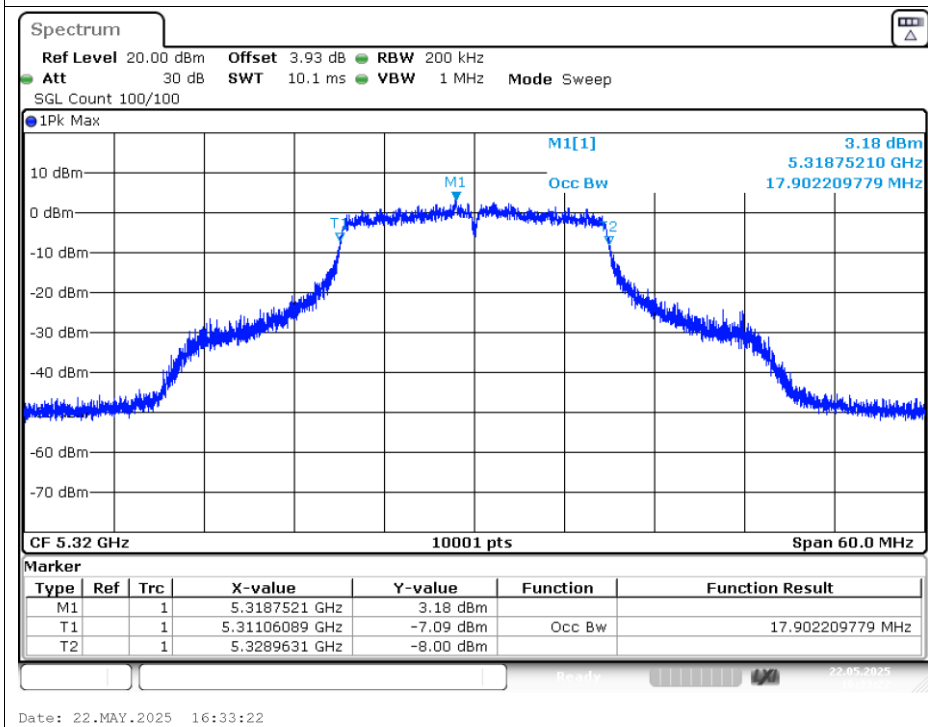 


OBW NVNT ac20 5320MHz Ant2

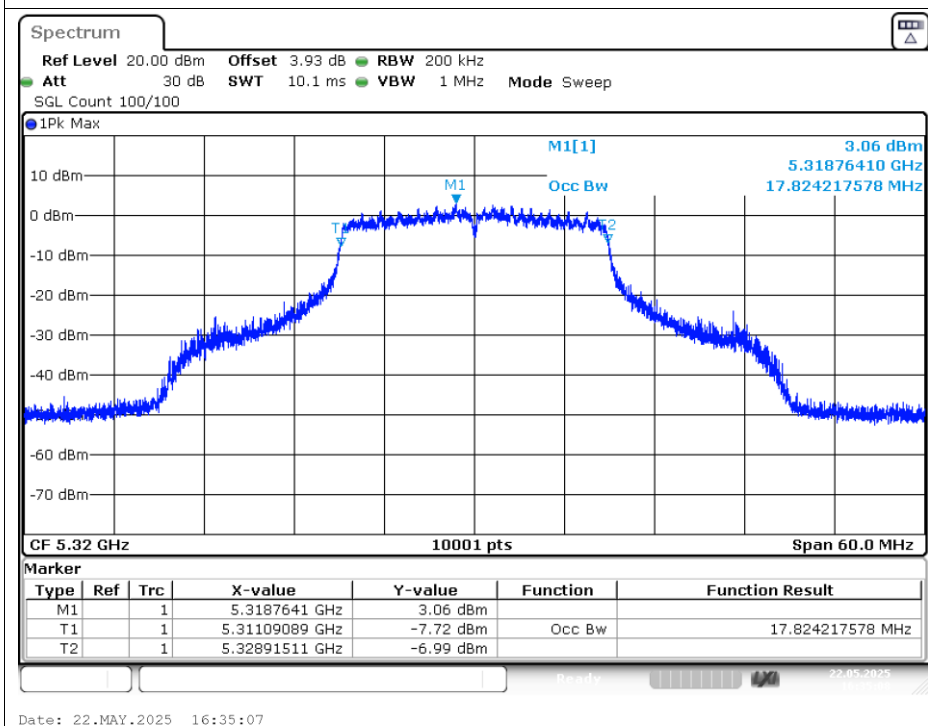 


OBW NVNT ac20 5500MHz Ant1

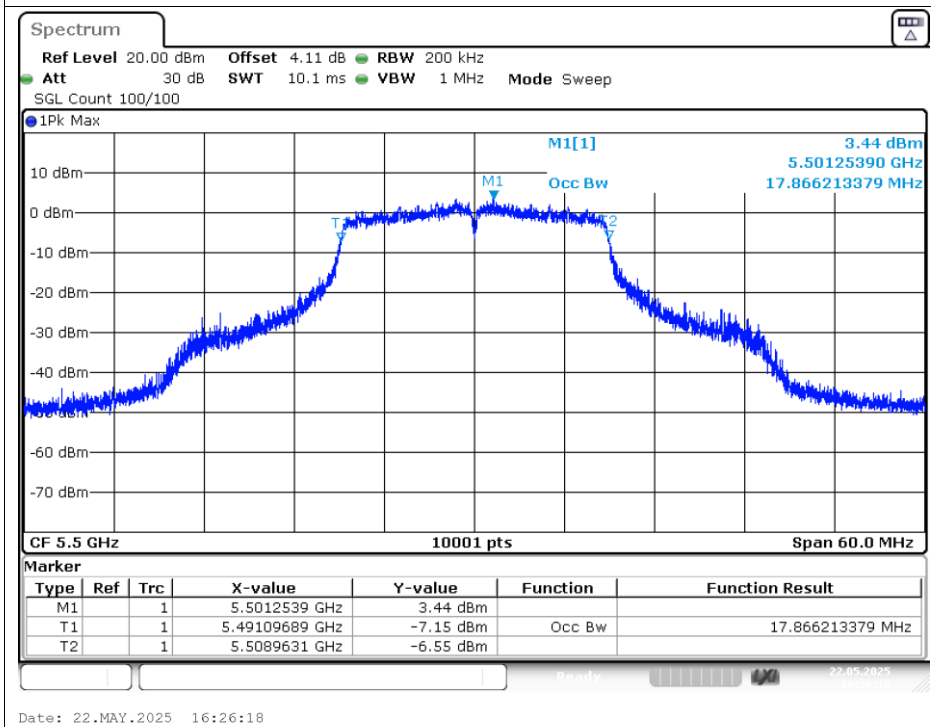 


OBW NVNT ac20 5500MHz Ant2

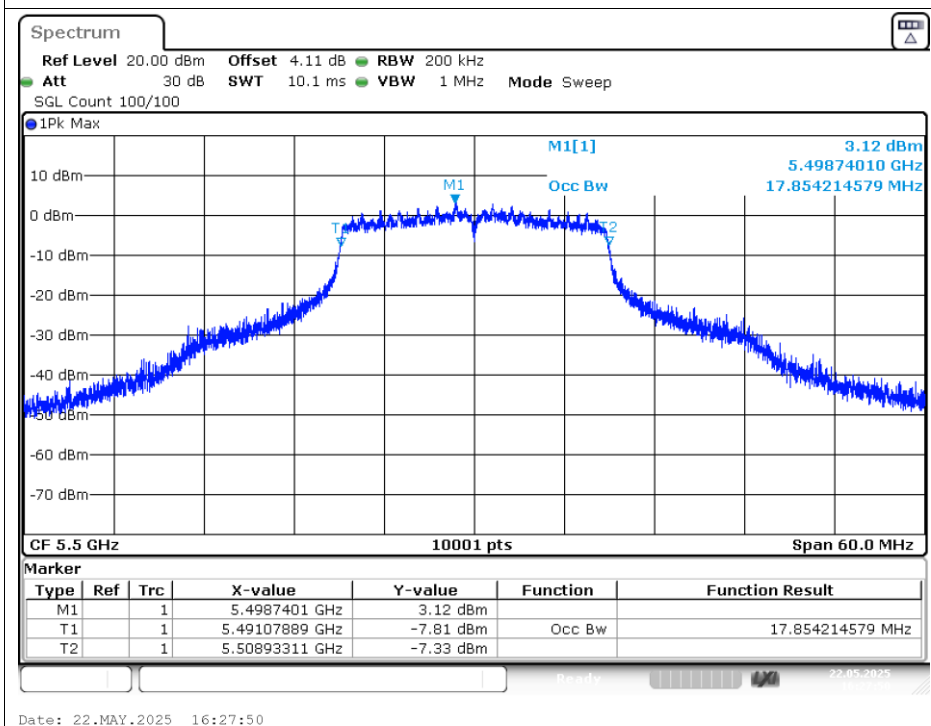 


OBW NVNT ac20 5600MHz Ant1

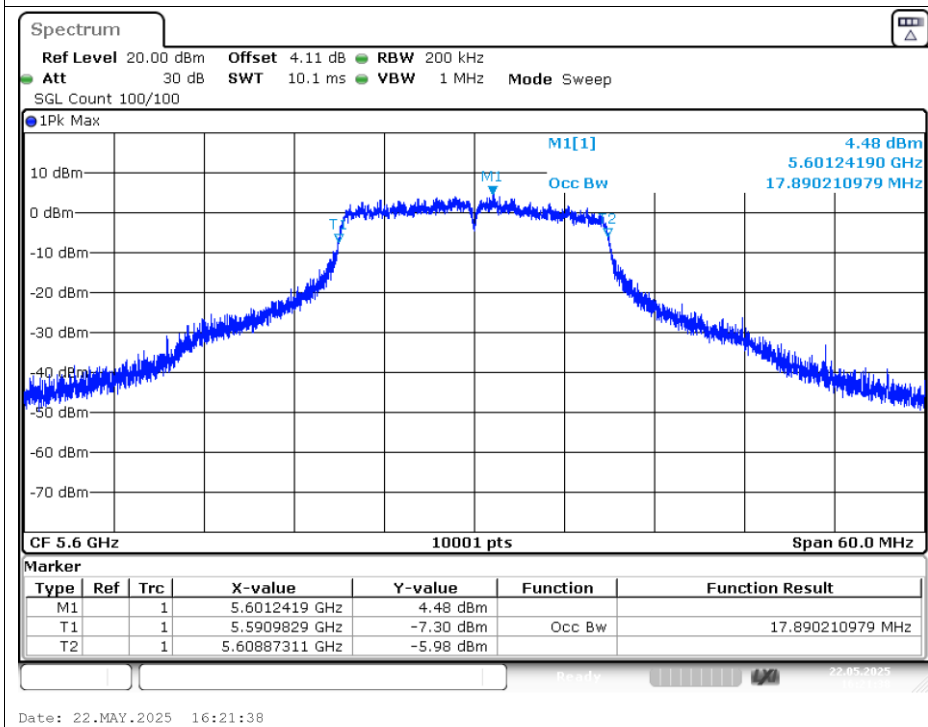 


OBW NVNT ac20 5600MHz Ant2

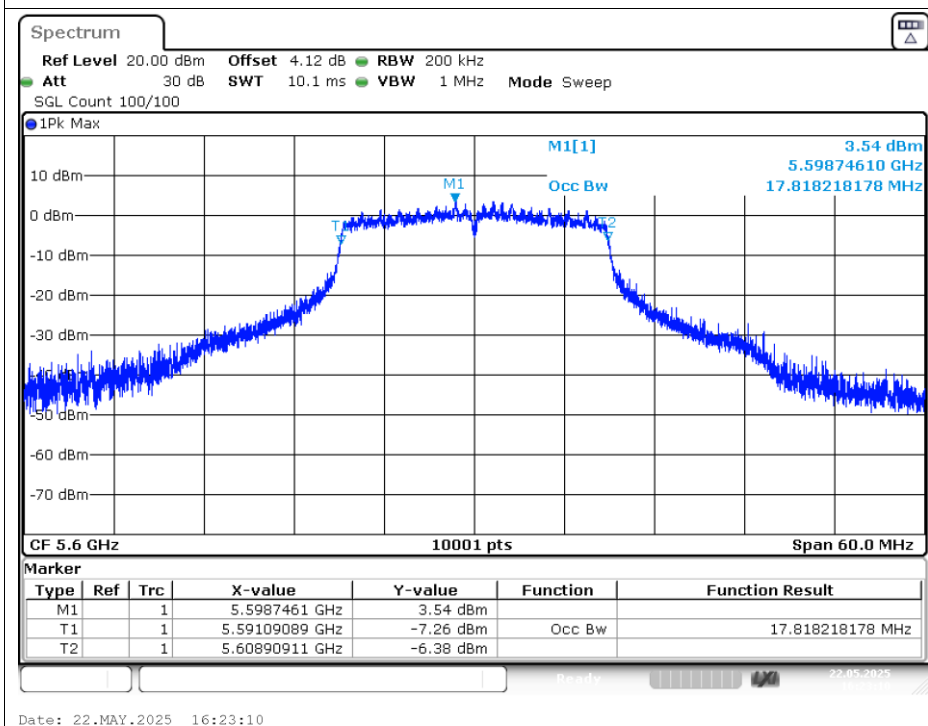 


OBW NVNT ac20 5700MHz Ant1

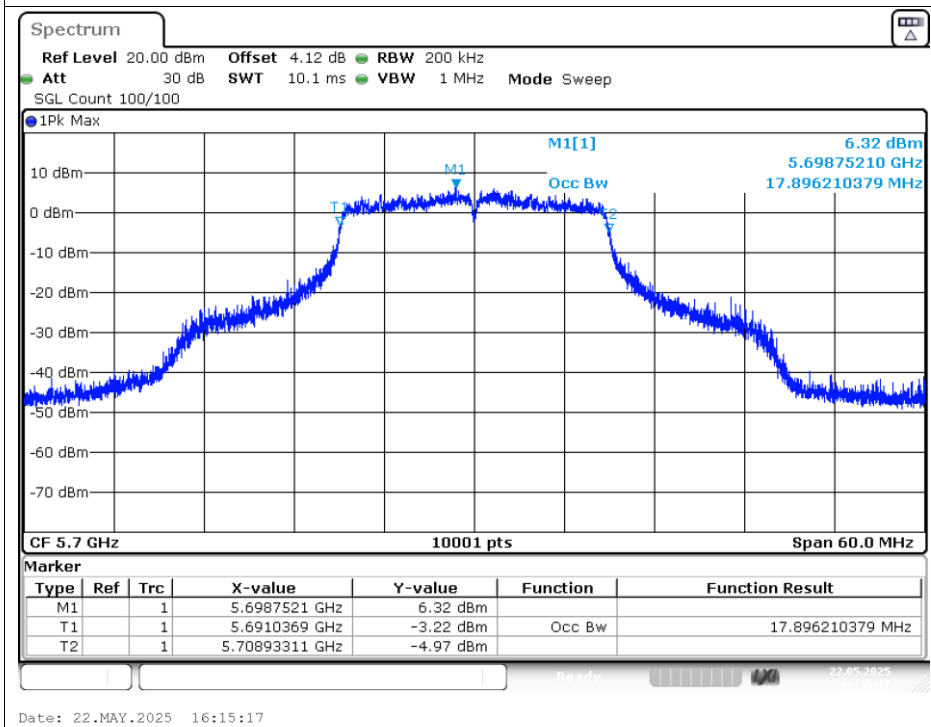 


OBW NVNT ac20 5700MHz Ant2

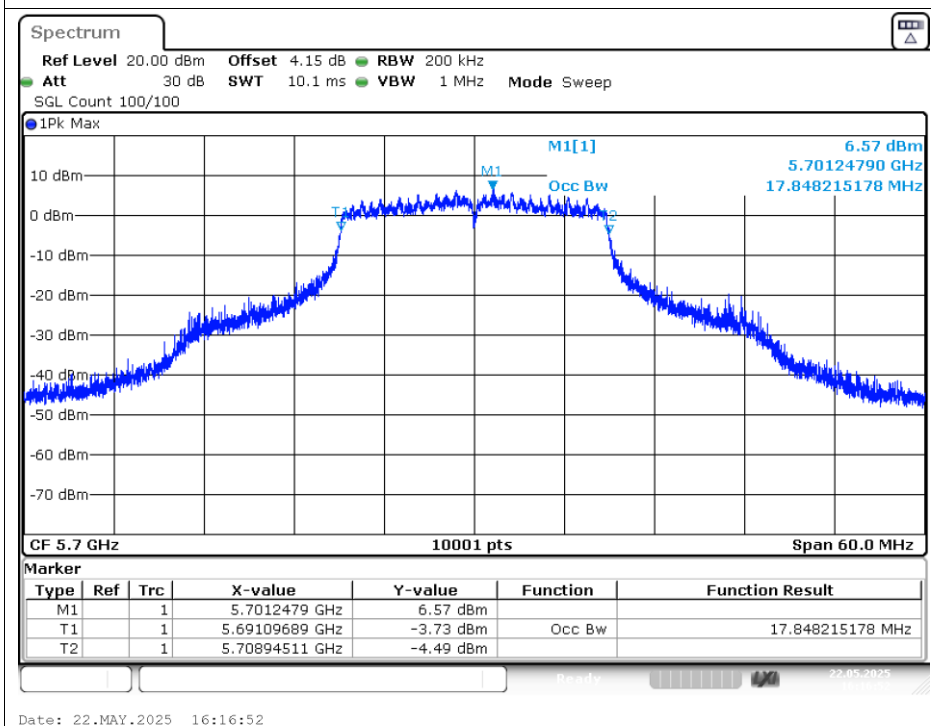 


OBW NVNT ac40 5190MHz Ant1

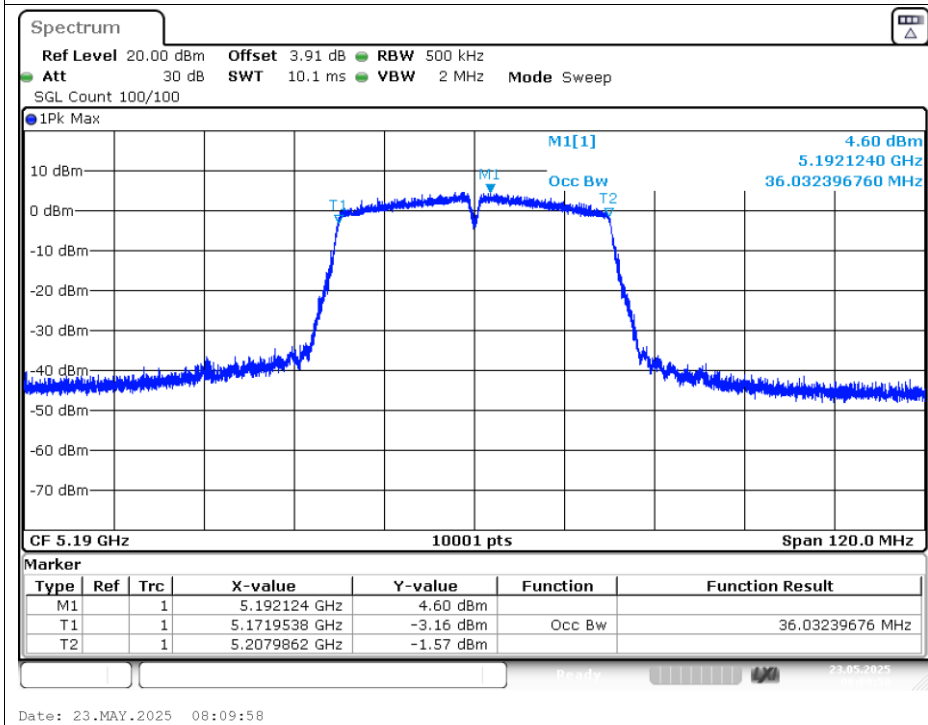 


OBW NVNT ac40 5190MHz Ant2


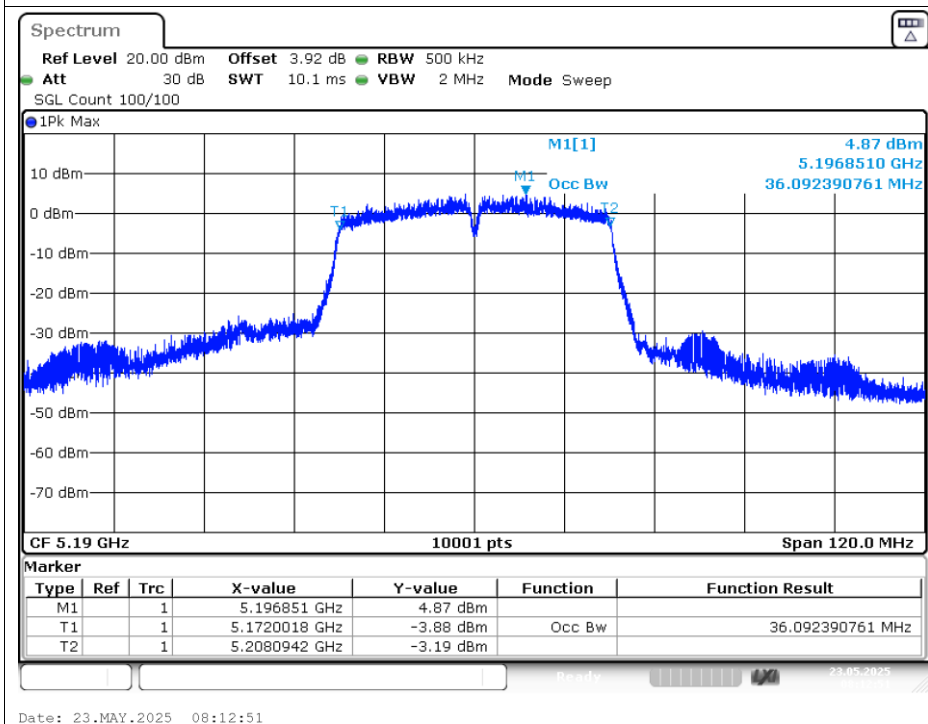 


OBW NVNT ac40 5230MHz Ant1

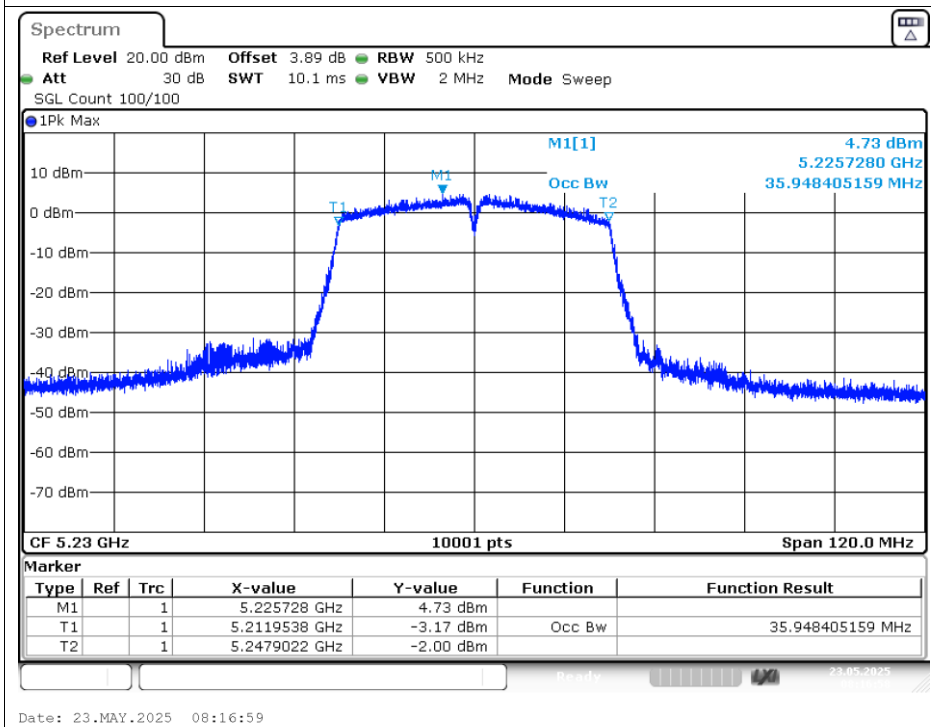 


OBW NVNT ac40 5230MHz Ant2

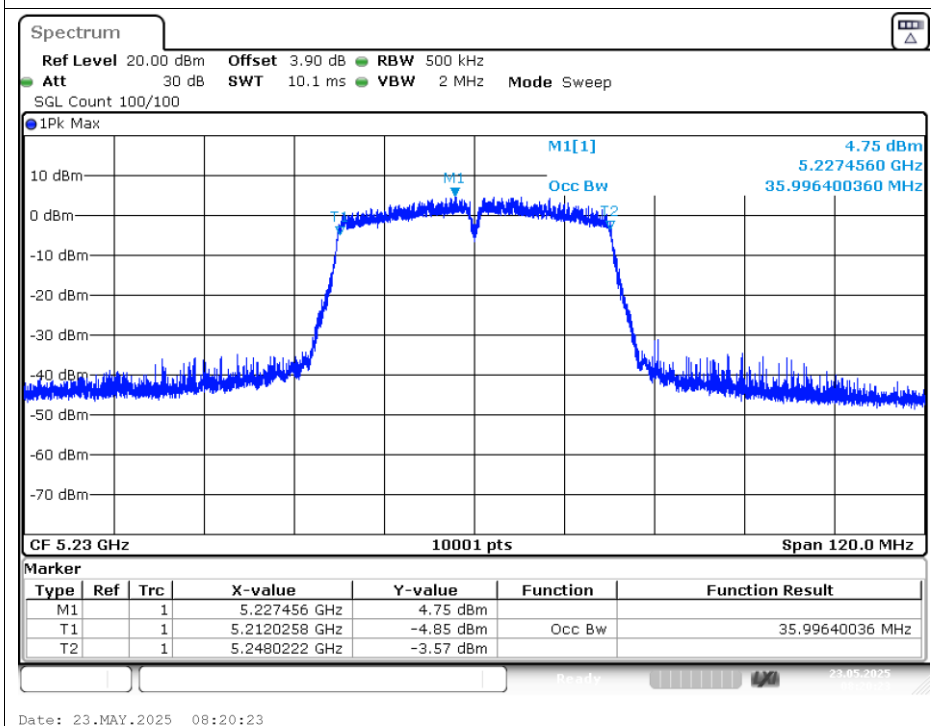 


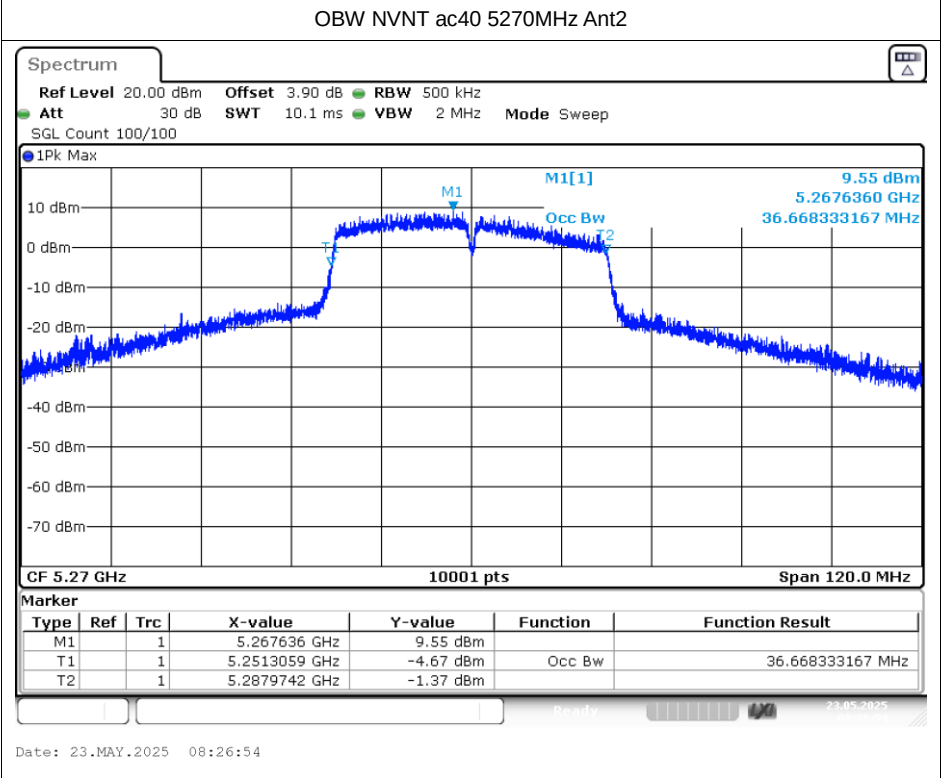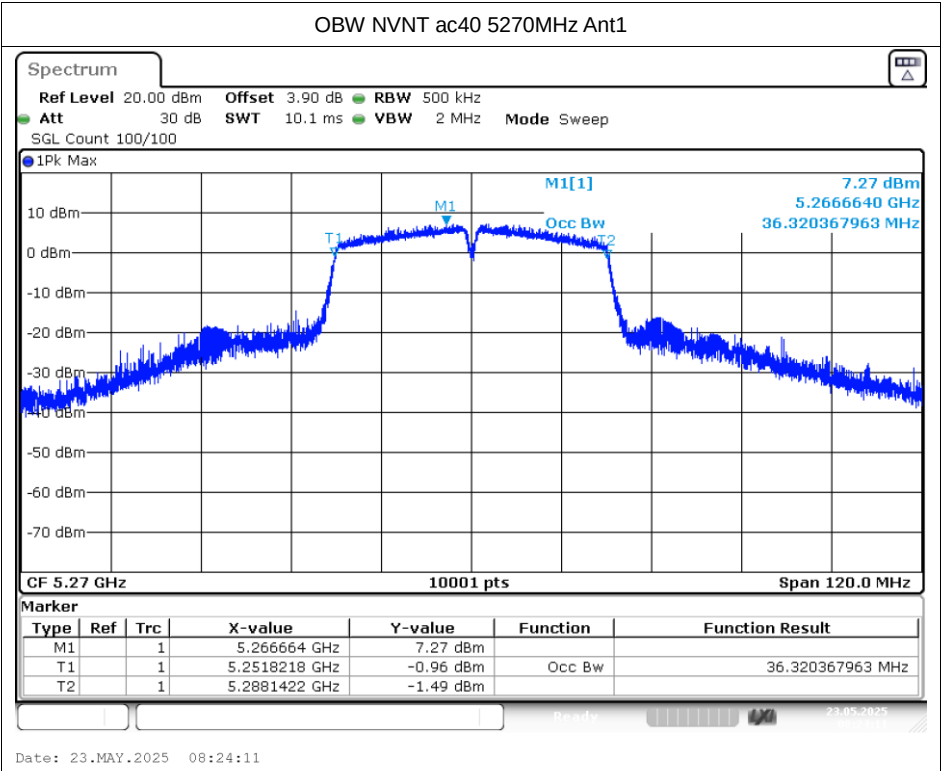  


OBW NVNT ac40 5310MHz Ant1

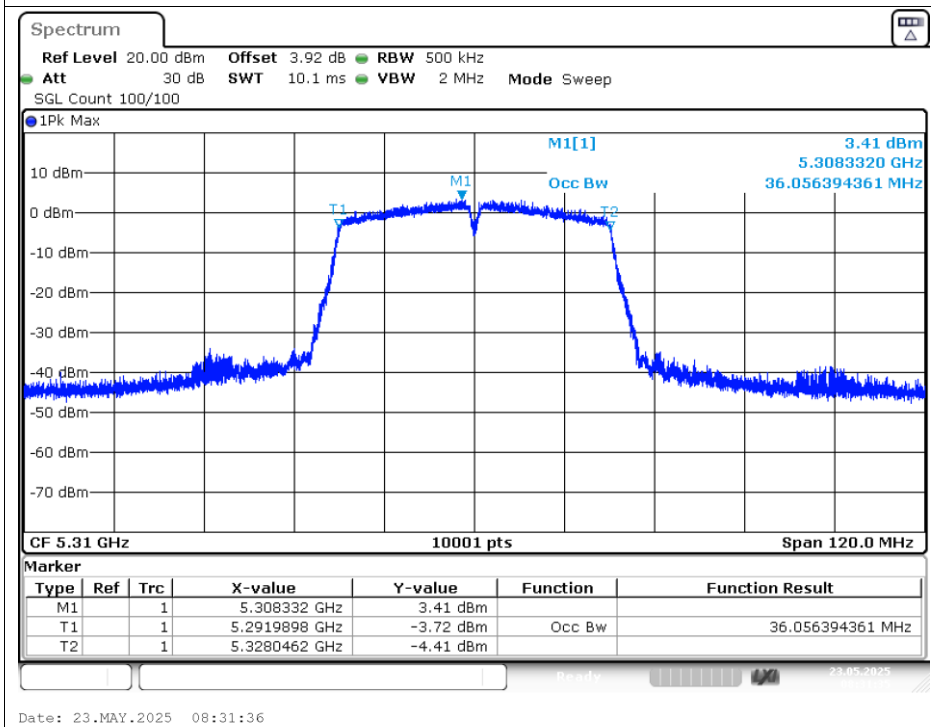 


OBW NVNT ac40 5310MHz Ant2

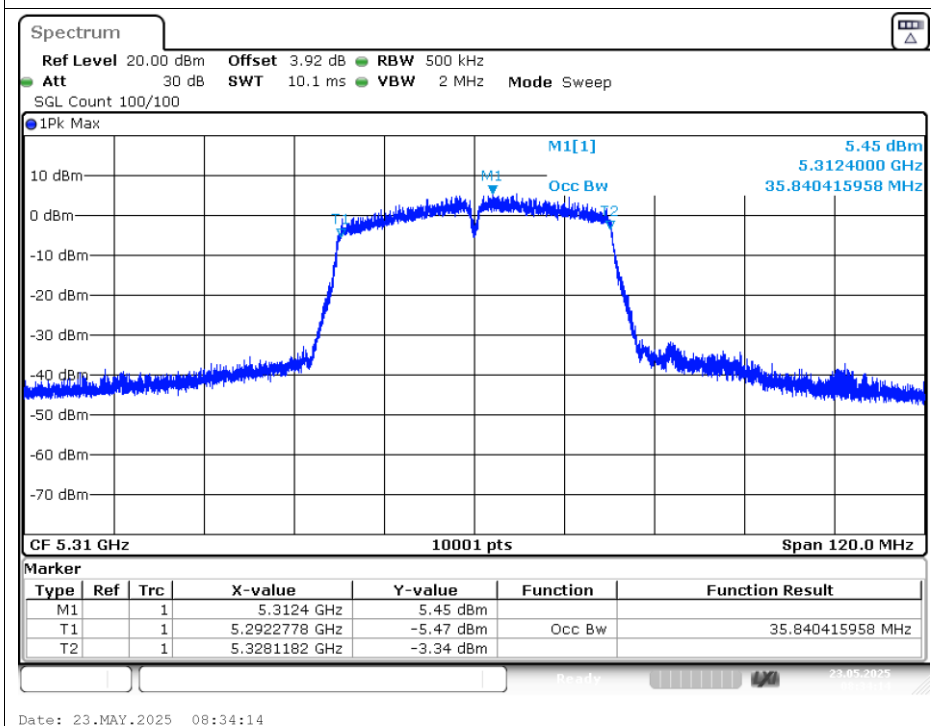 


OBW NVNT ac40 5510MHz Ant1

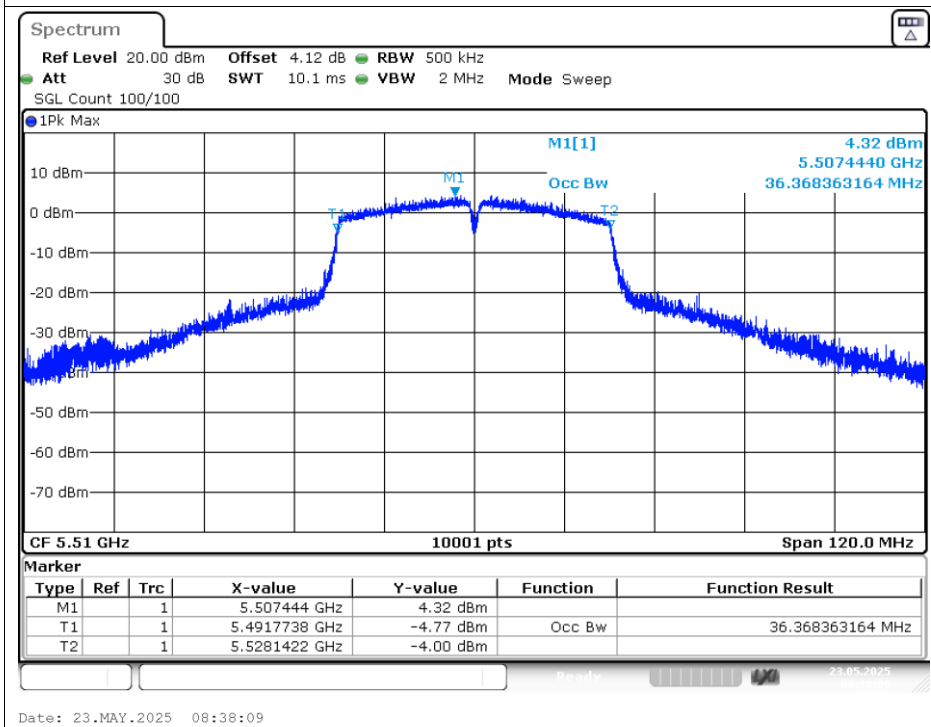 


OBW NVNT ac40 5510MHz Ant2

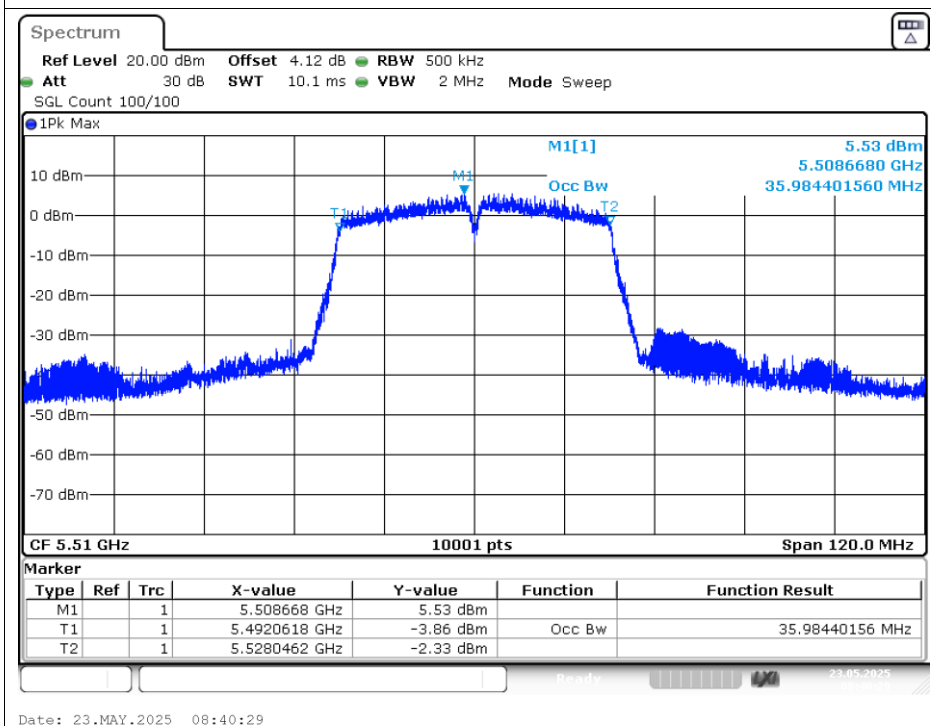 


OBW NVNT ac40 5590MHz Ant1

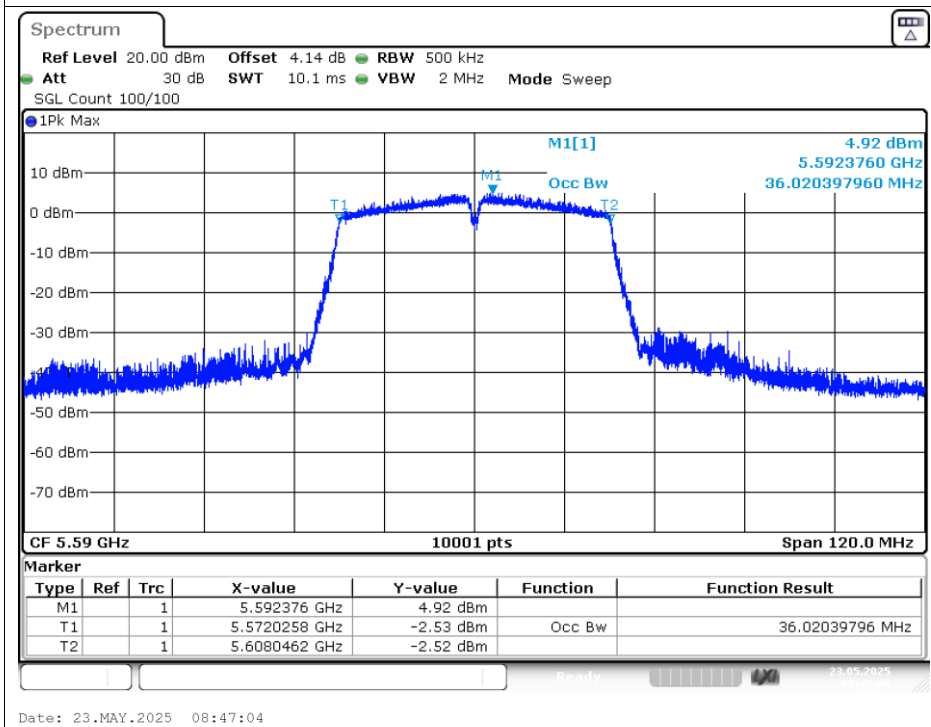 


OBW NVNT ac40 5590MHz Ant2

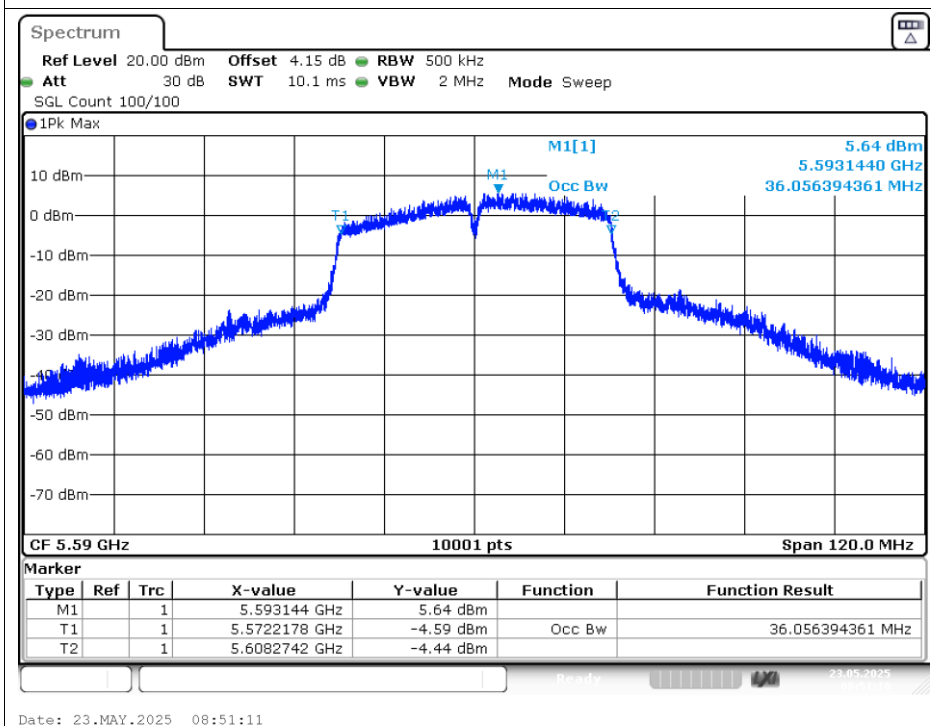 


OBW NVNT ac40 5670MHz Ant1

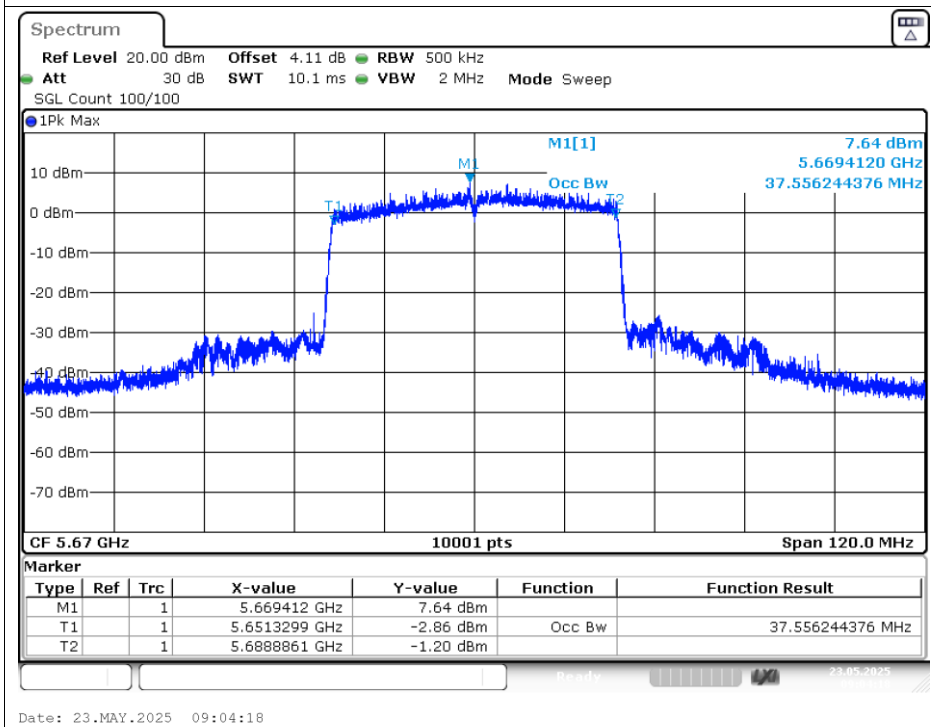 


OBW NVNT ac40 5670MHz Ant2


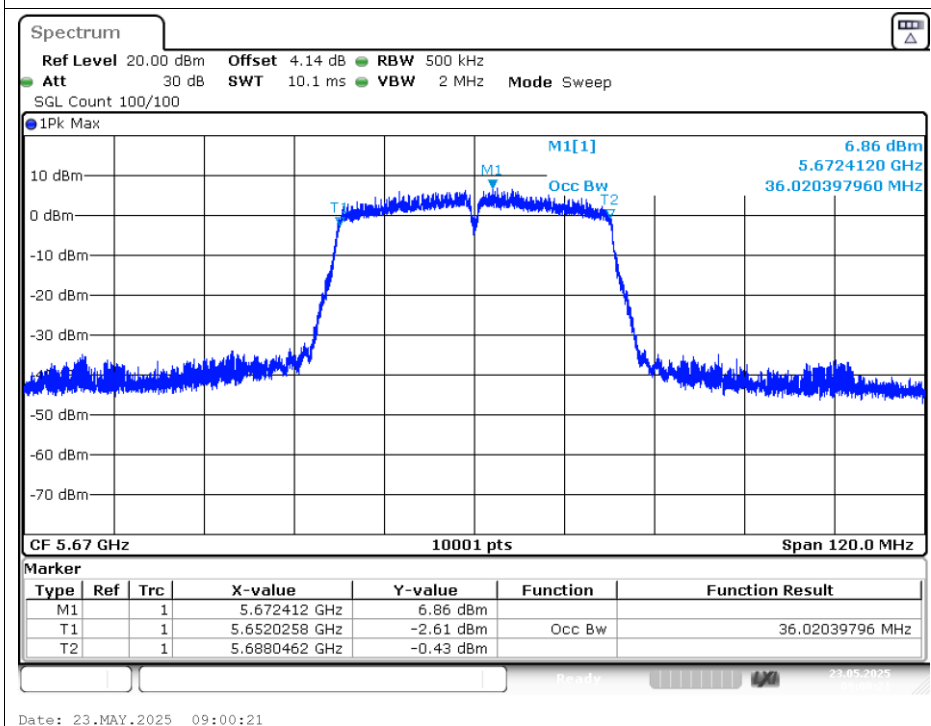 




OBW NVNT ac80 5210MHz Ant1


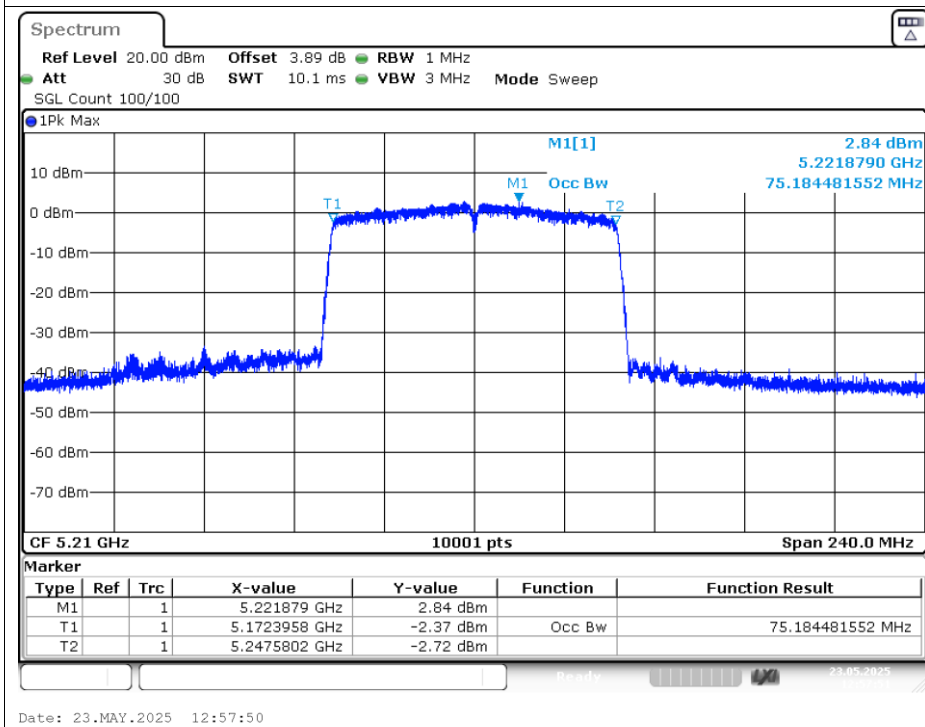 


OBW NVNT ac80 5210MHz Ant2

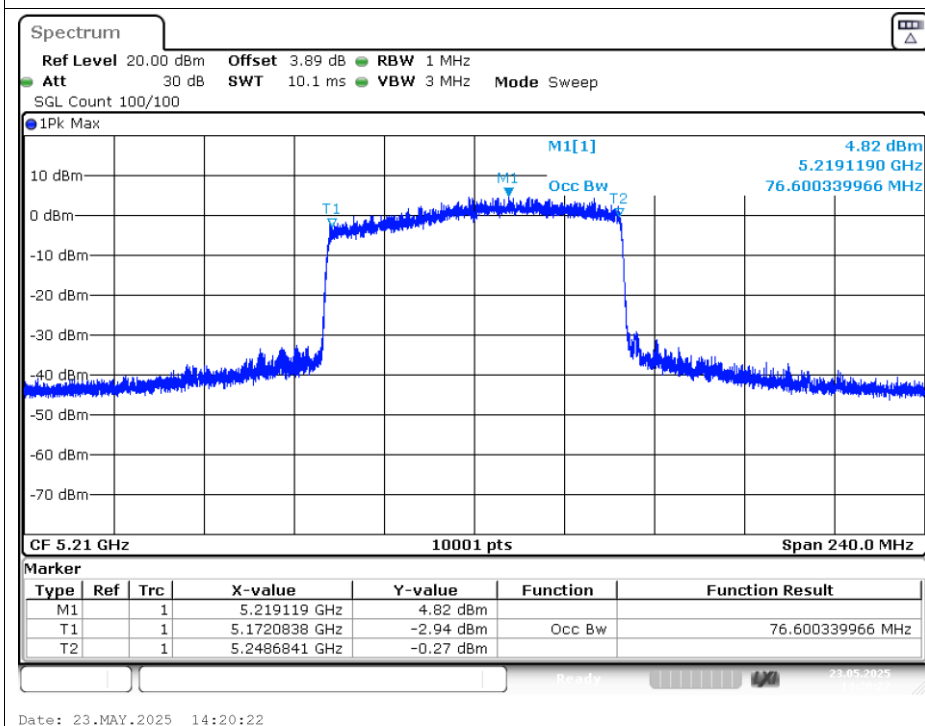 


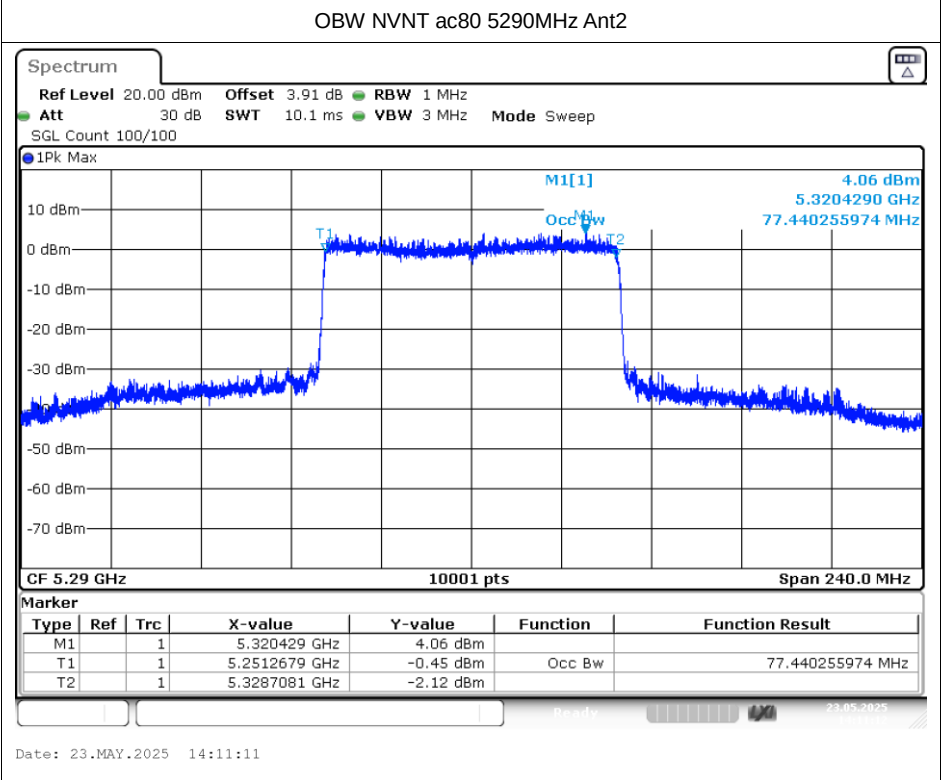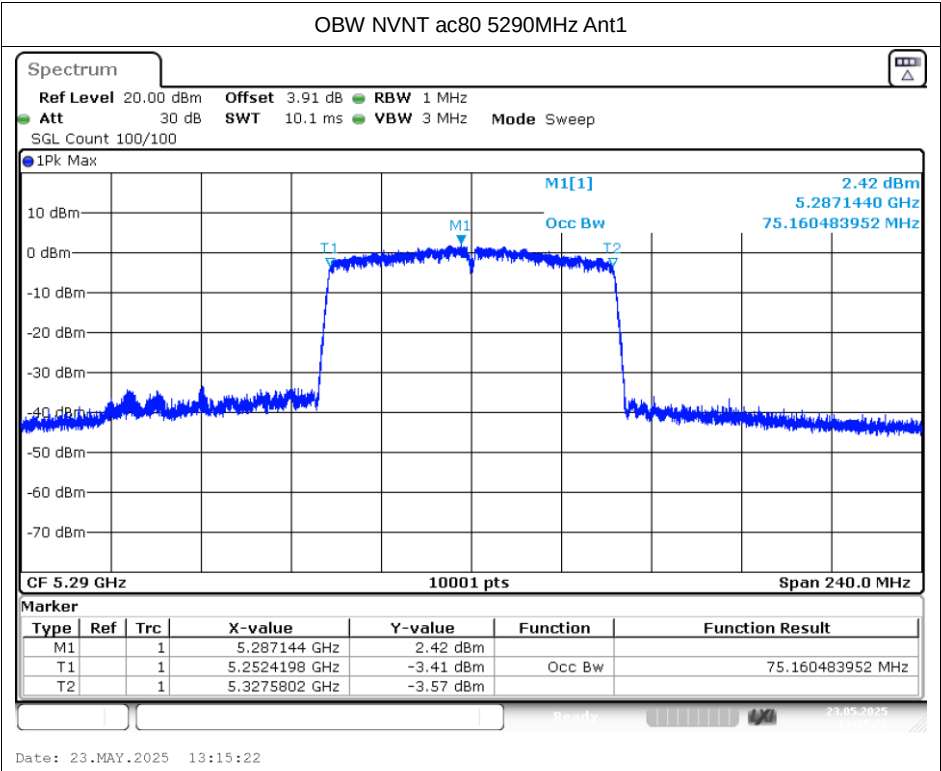  

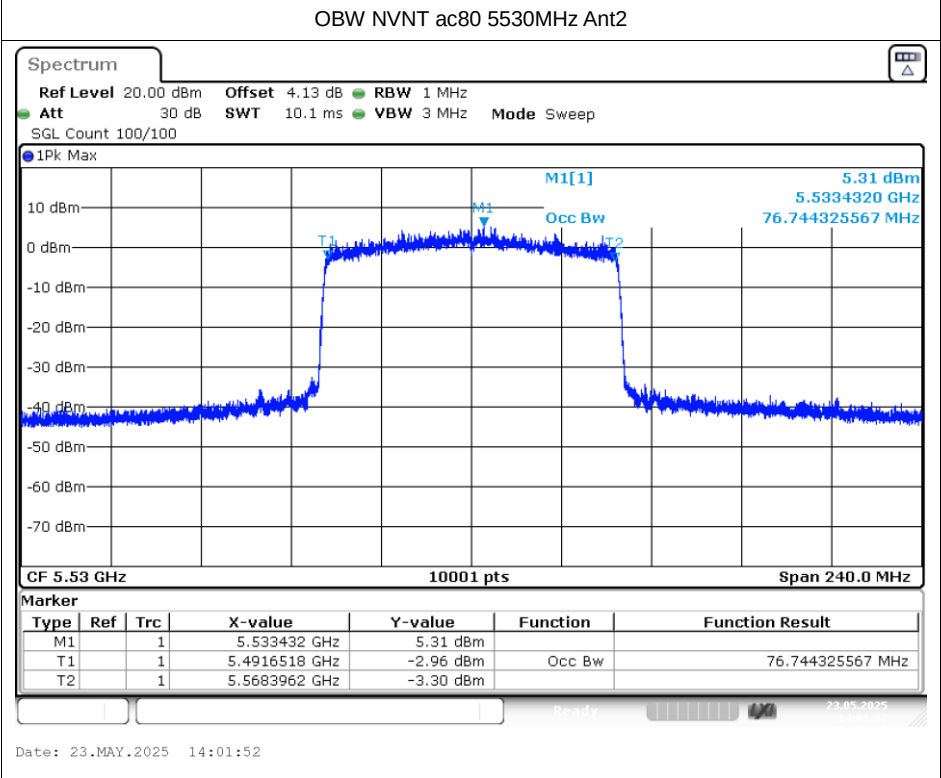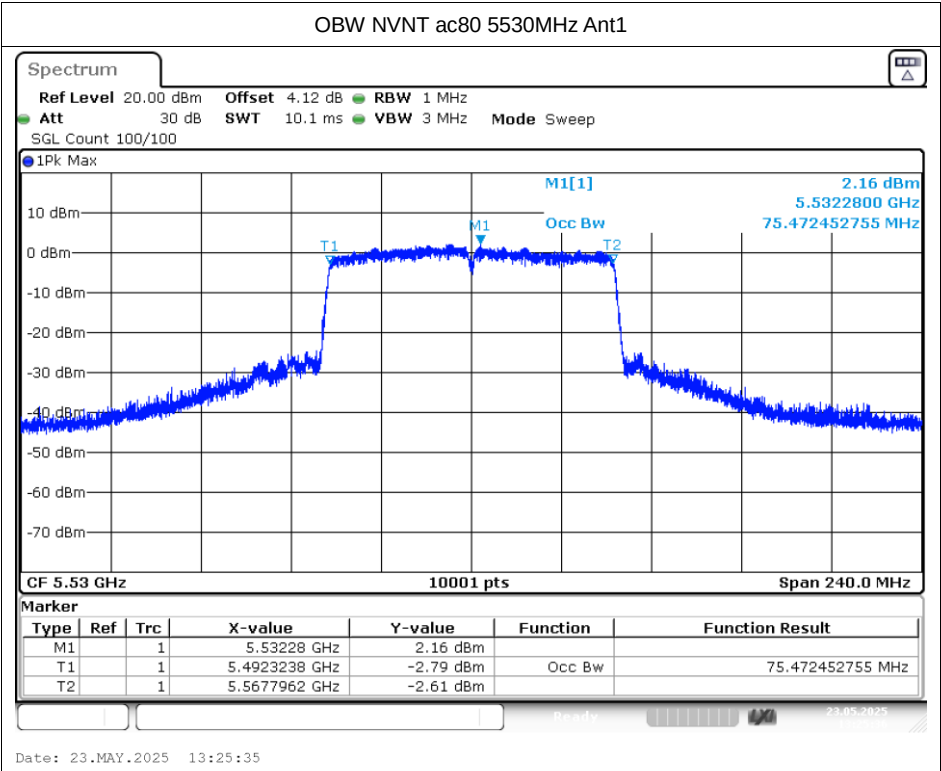  


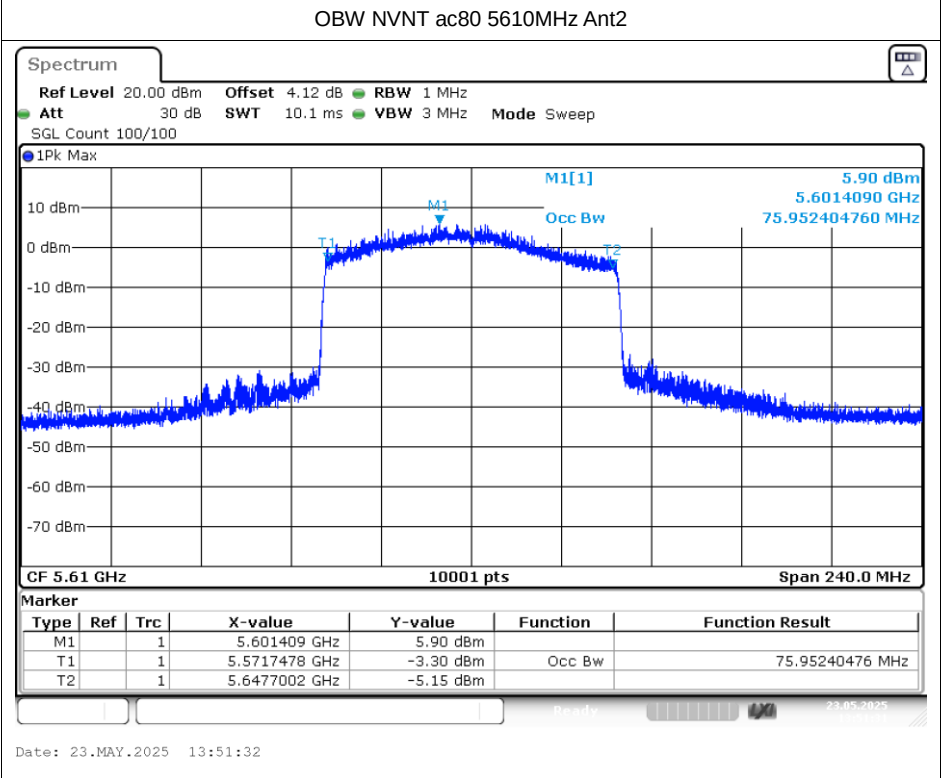 
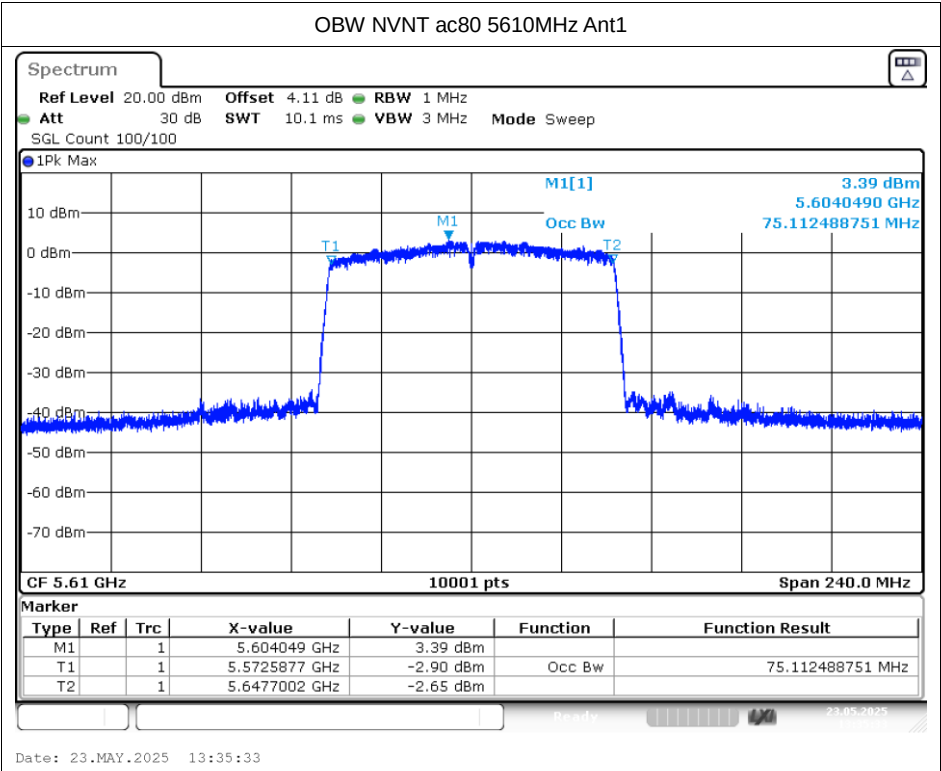 


OBW NVNT ax20 5180MHz Ant1

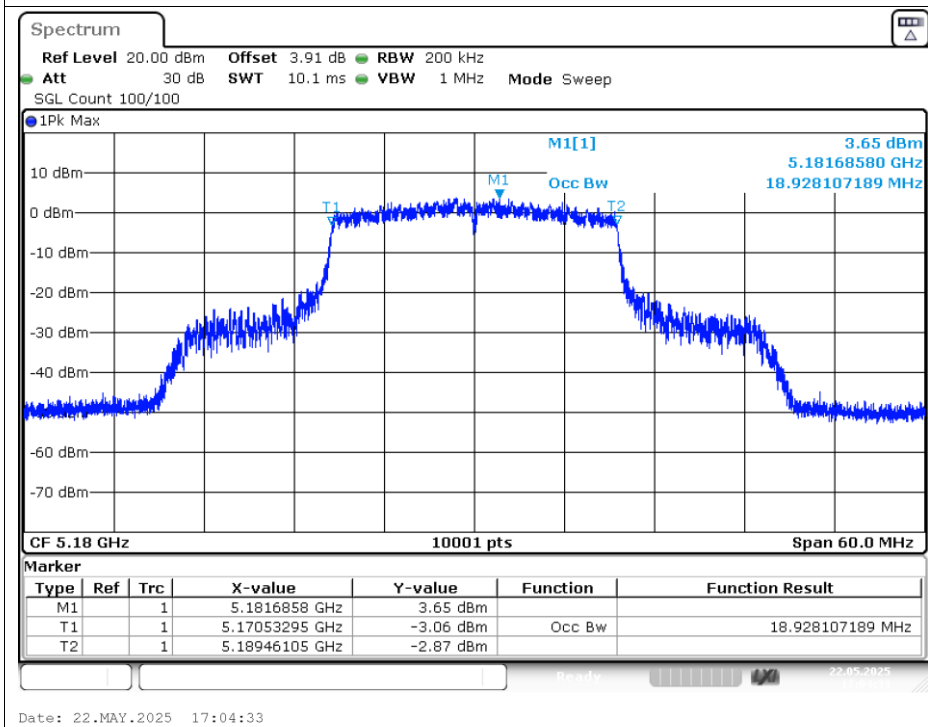 


OBW NVNT ax20 5180MHz Ant2

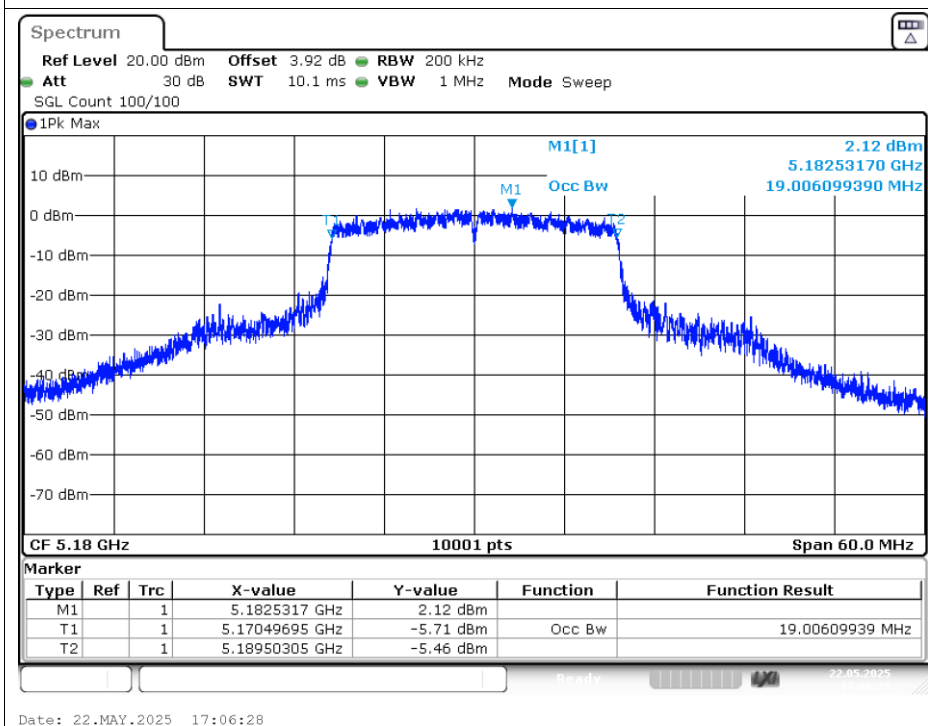 


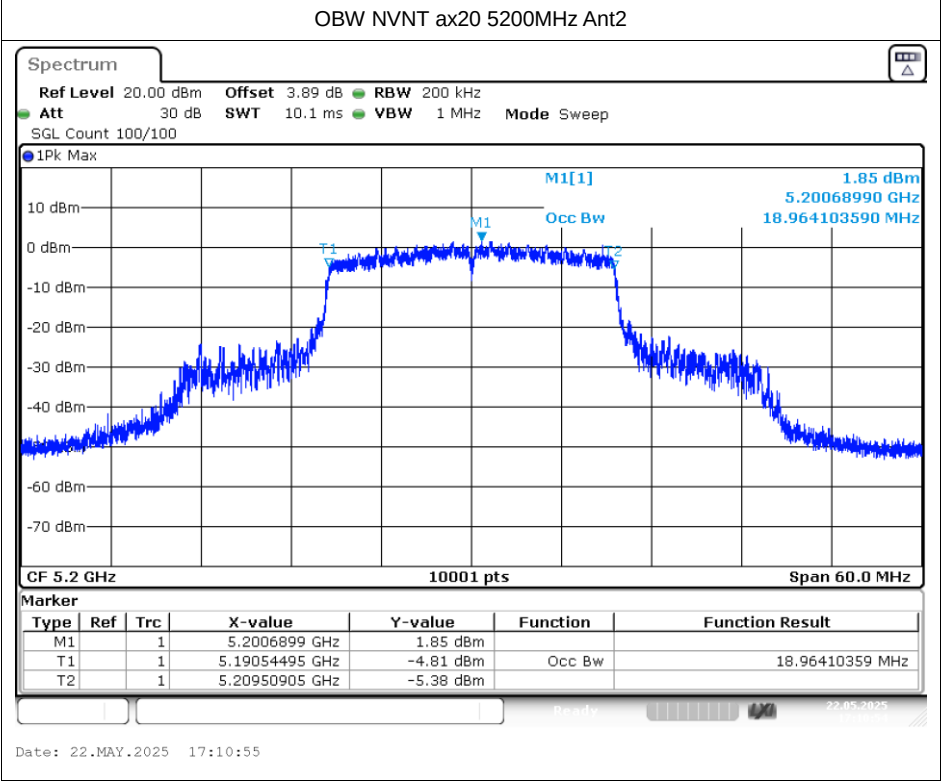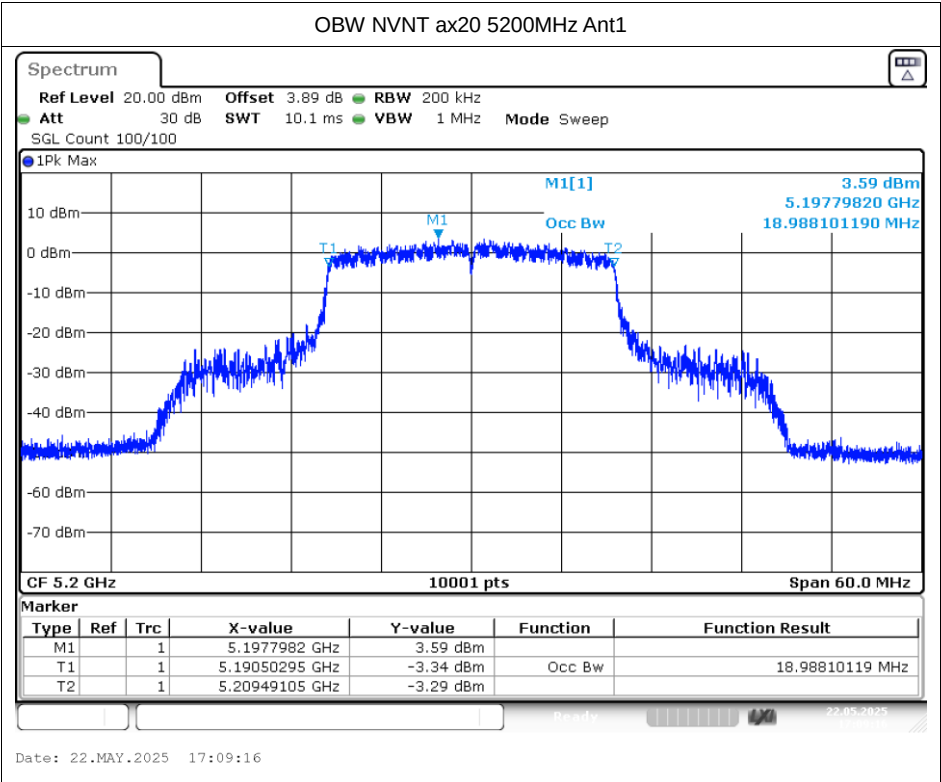  


OBW NVNT ax20 5240MHz Ant1

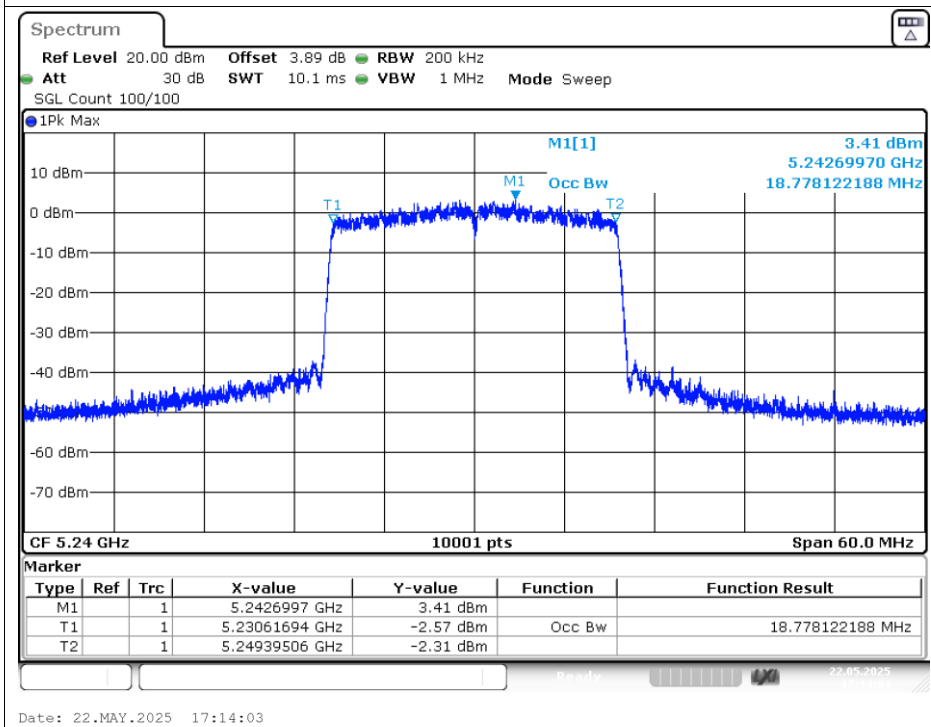 


OBW NVNT ax20 5240MHz Ant2

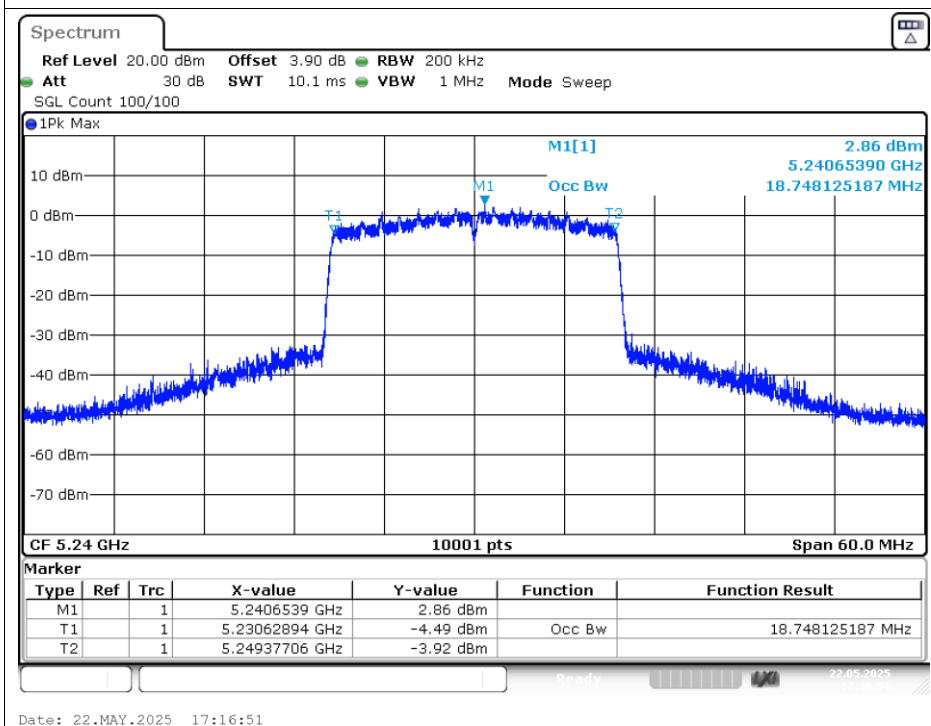 


OBW NVNT ax20 5260MHz Ant1

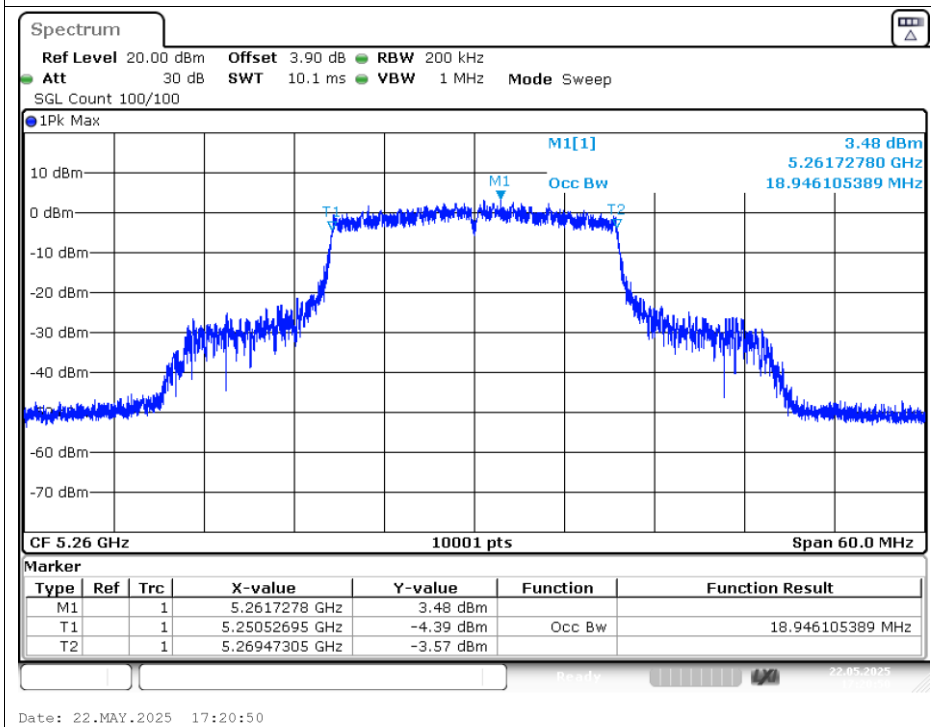 


OBW NVNT ax20 5260MHz Ant2

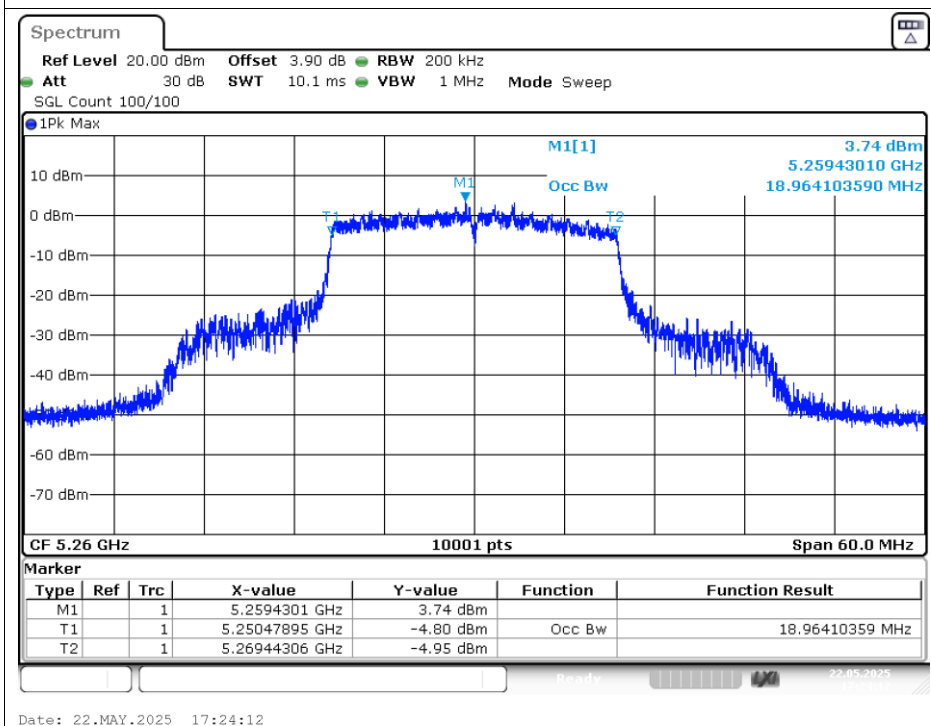 


OBW NVNT ax20 5280MHz Ant1

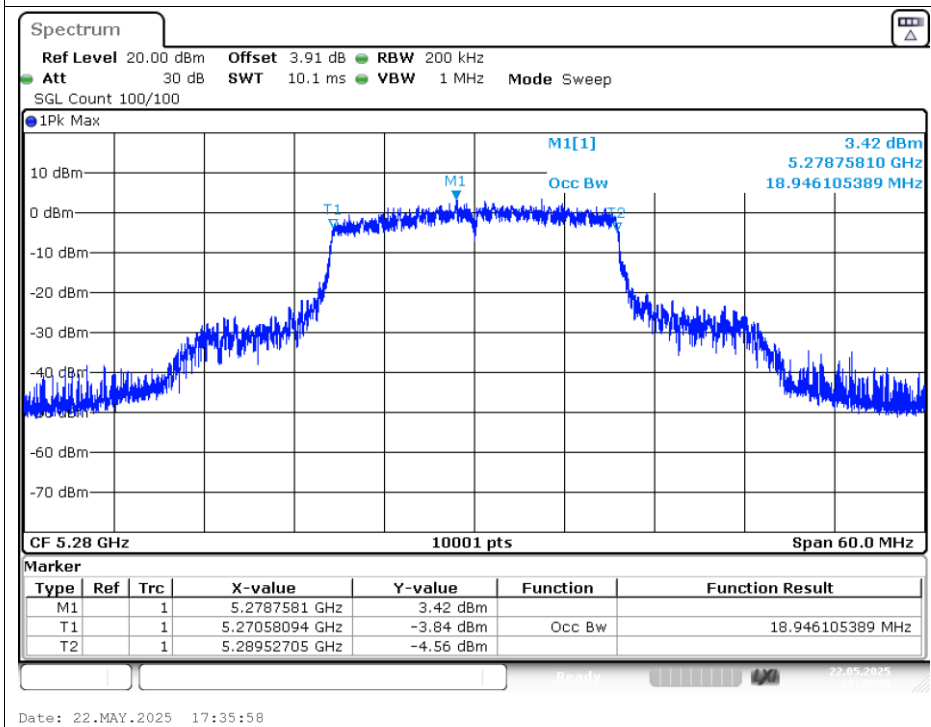 


OBW NVNT ax20 5280MHz Ant2

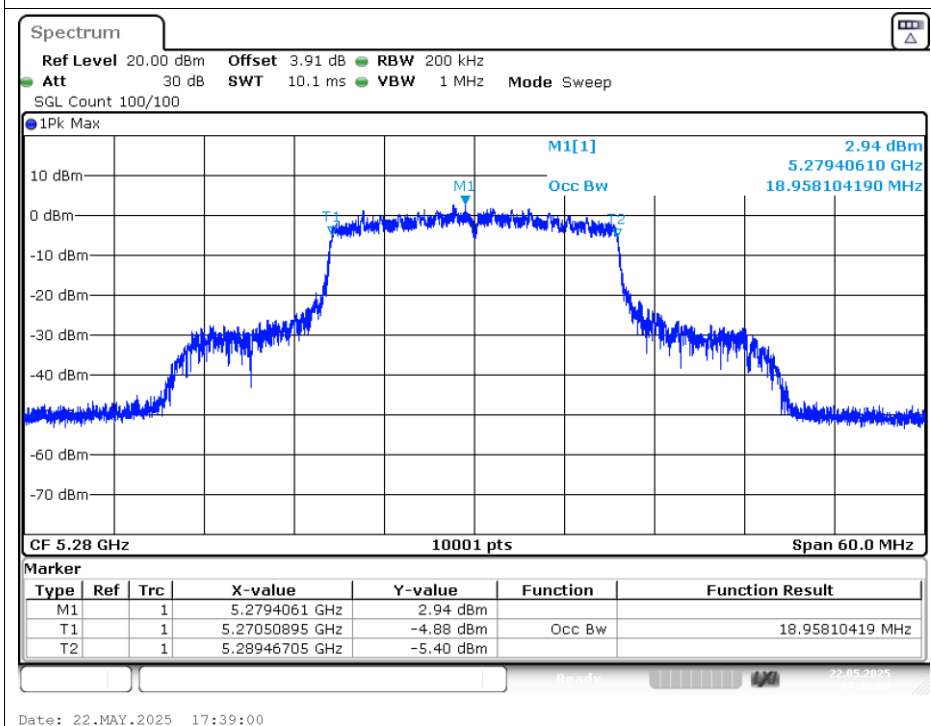 


OBW NVNT ax20 5320MHz Ant1

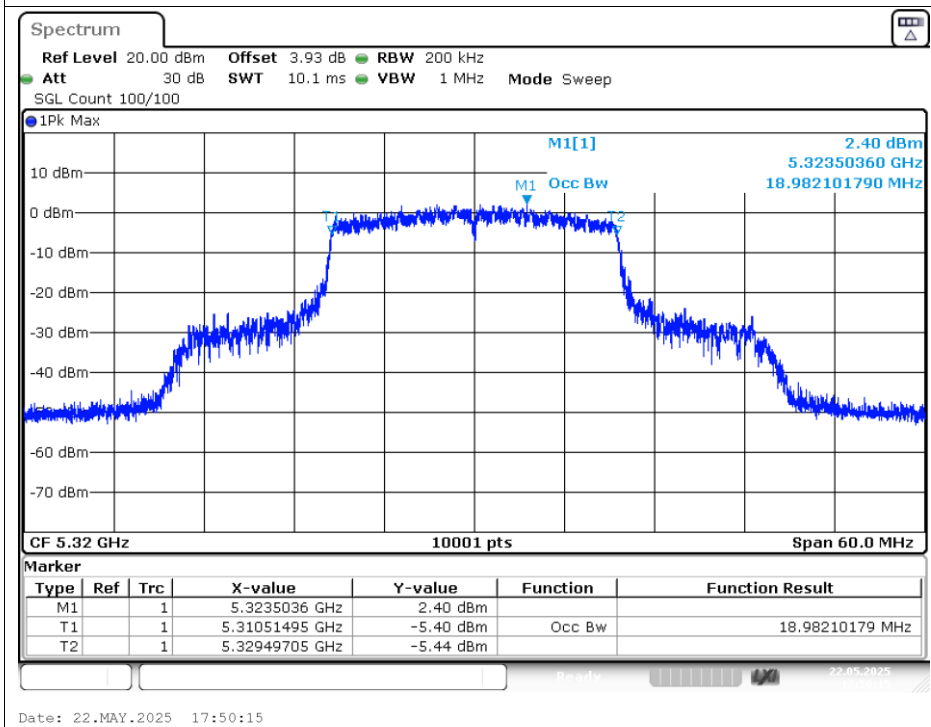 


OBW NVNT ax20 5320MHz Ant2

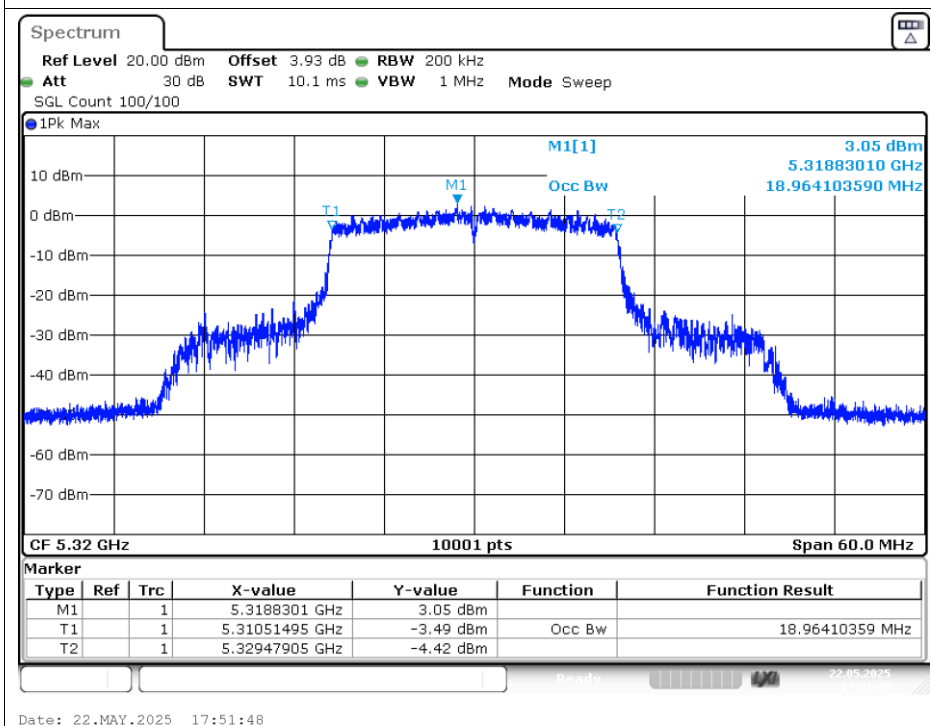 


OBW NVNT ax20 5500MHz Ant1

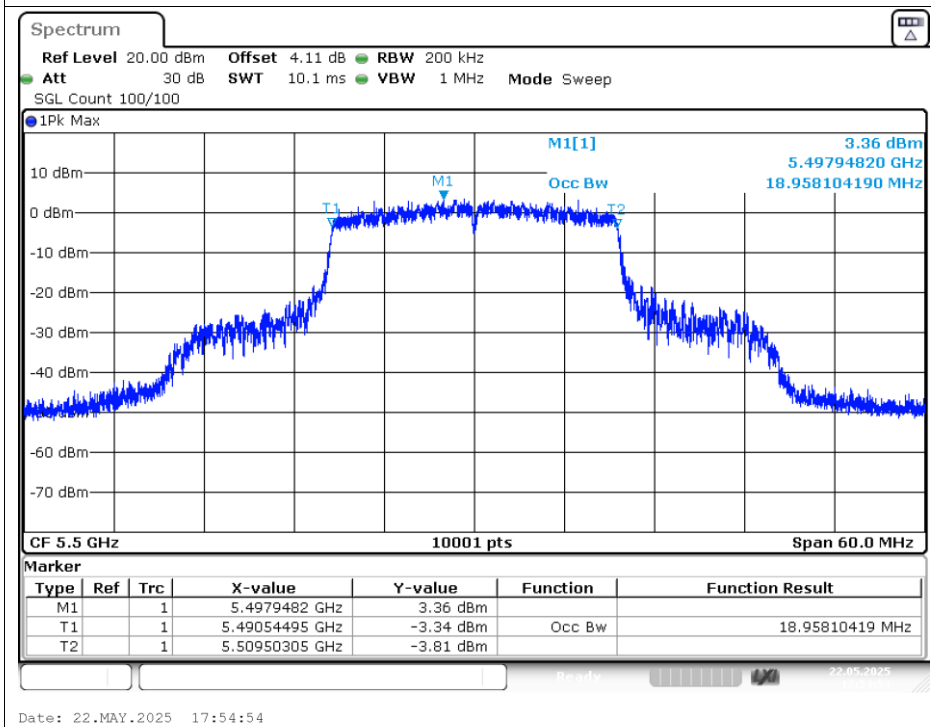 


OBW NVNT ax20 5500MHz Ant2

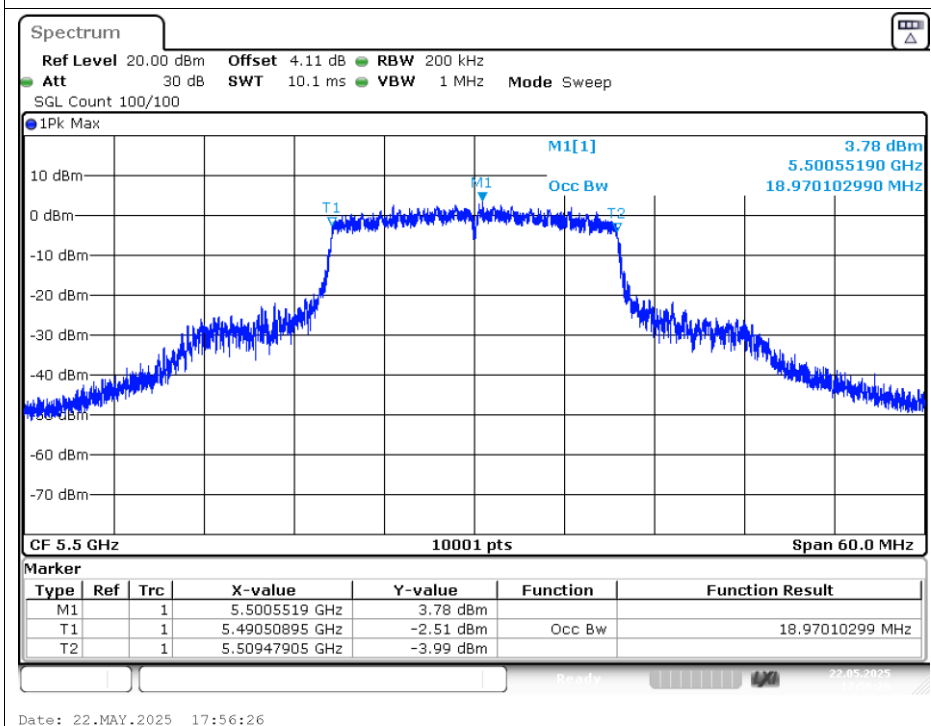 


OBW NVNT ax20 5600MHz Ant1

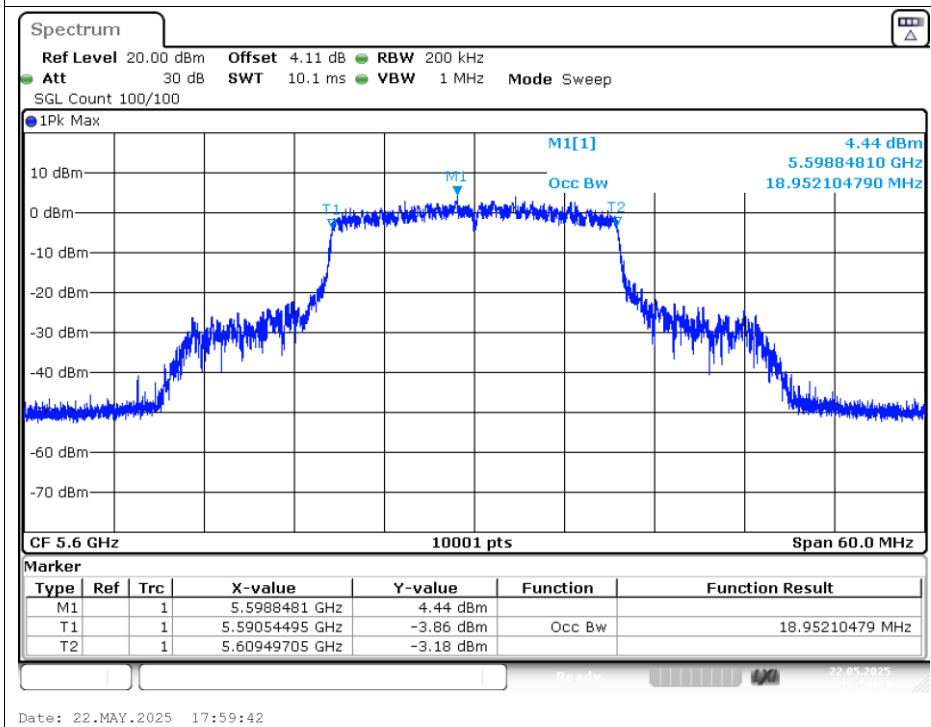 


OBW NVNT ax20 5600MHz Ant2

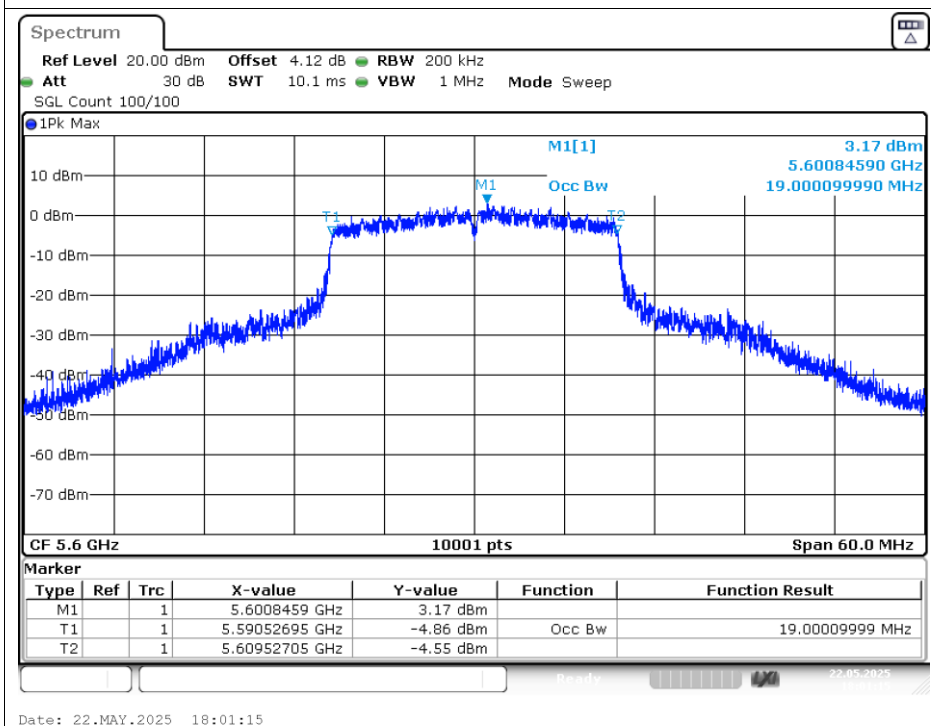 


OBW NVNT ax20 5700MHz Ant1

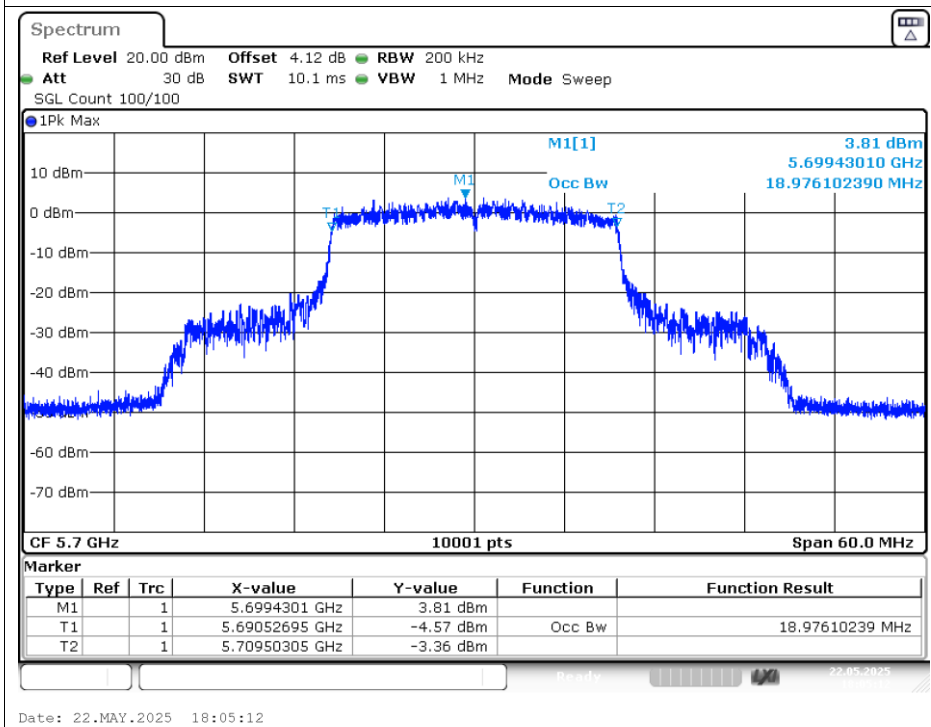 


OBW NVNT ax20 5700MHz Ant2

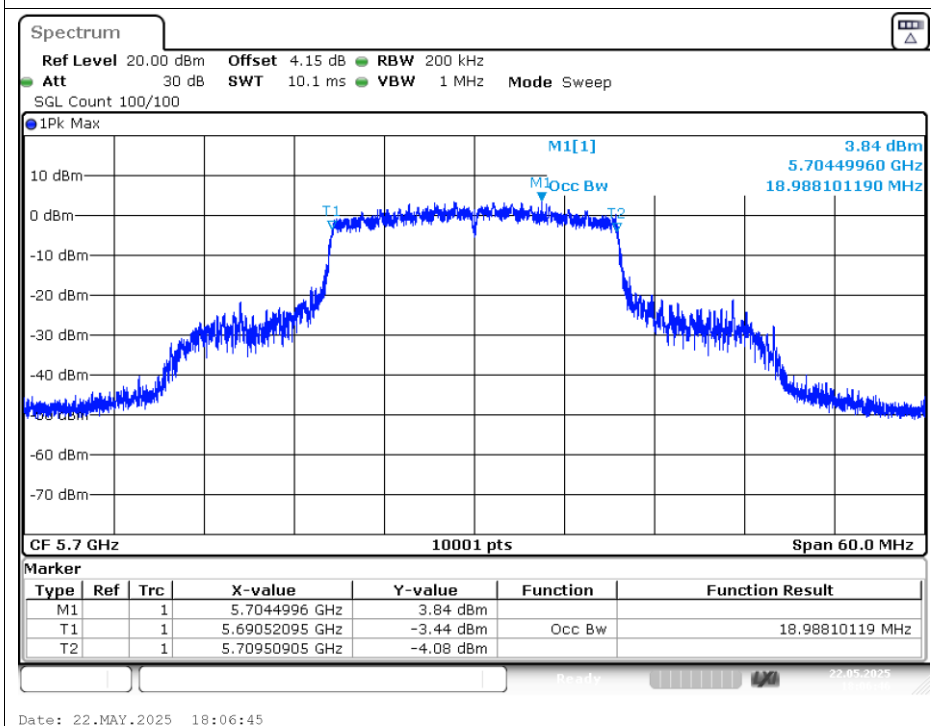 


OBW NVNT ax40 5190MHz Ant1

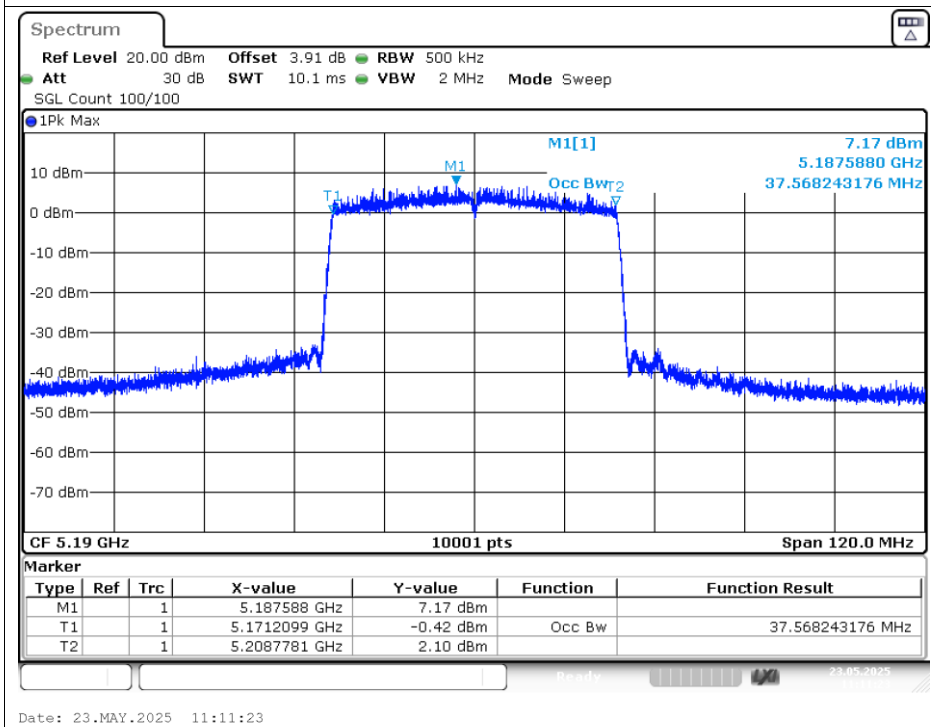 


OBW NVNT ax40 5190MHz Ant2

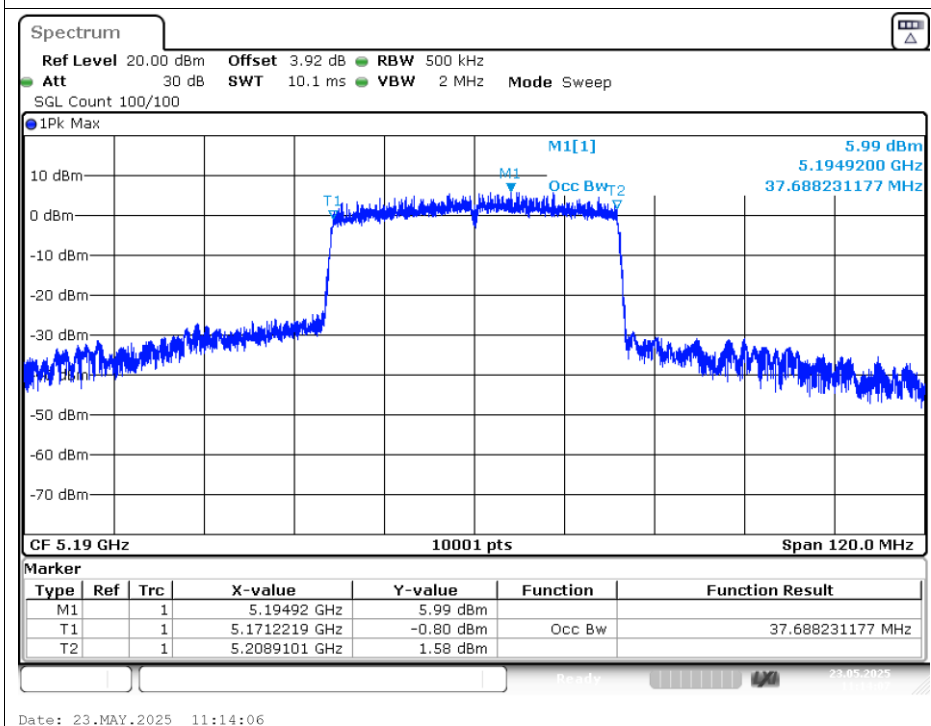 


OBW NVNT ax40 5230MHz Ant1

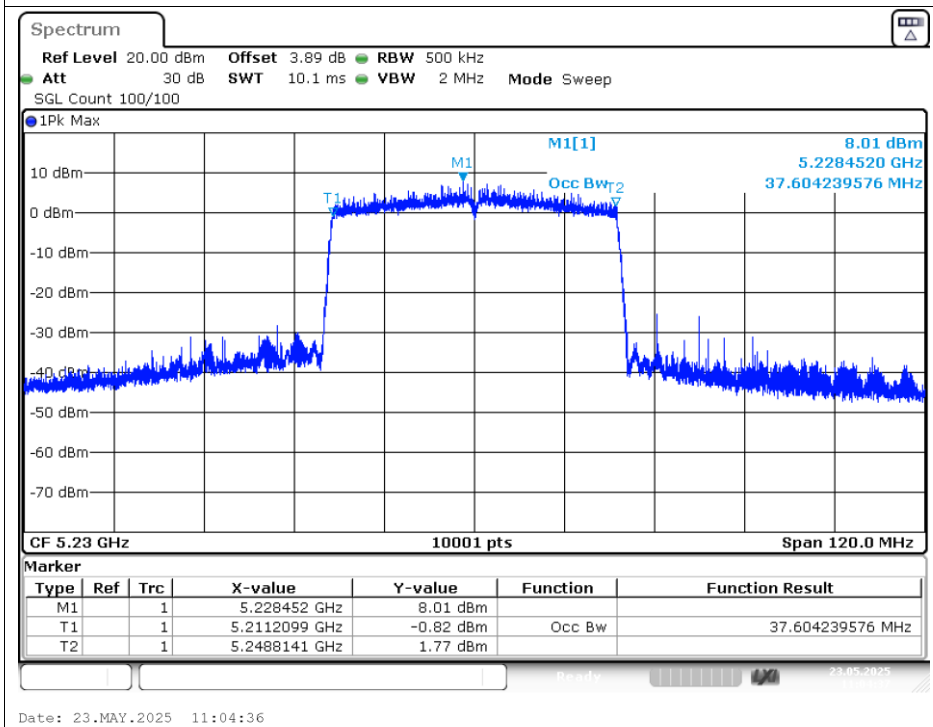 


OBW NVNT ax40 5230MHz Ant2


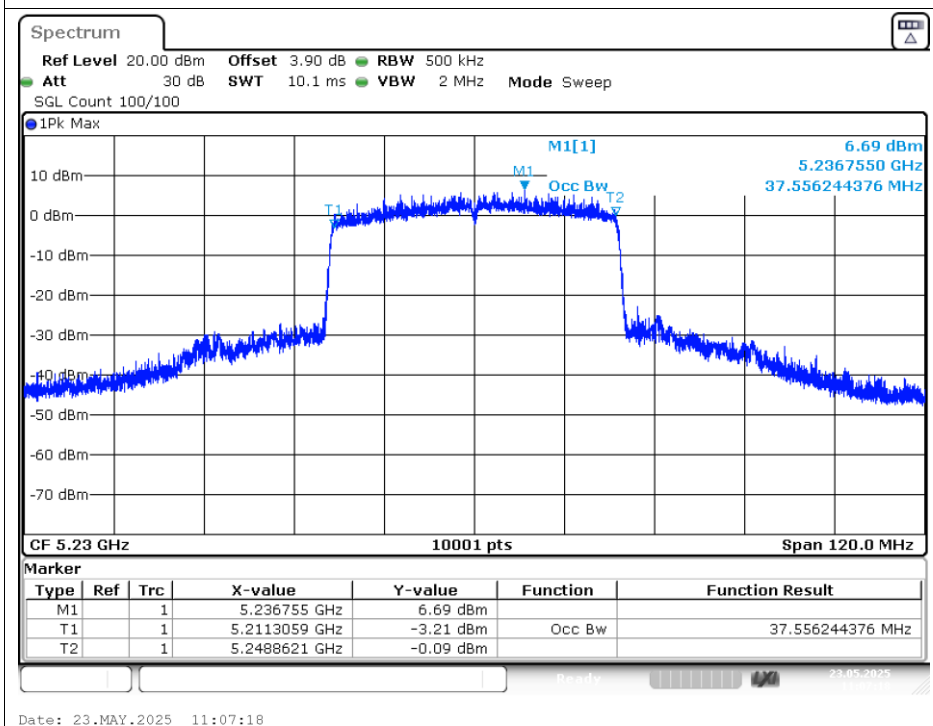 


OBW NVNT ax40 5270MHz Ant1

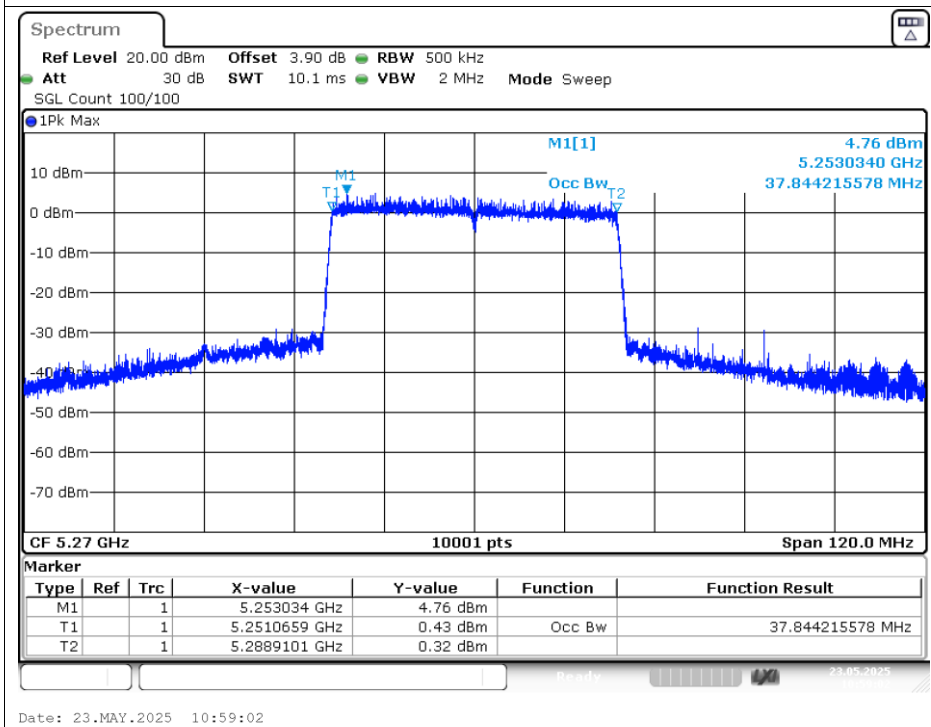 


OBW NVNT ax40 5270MHz Ant2

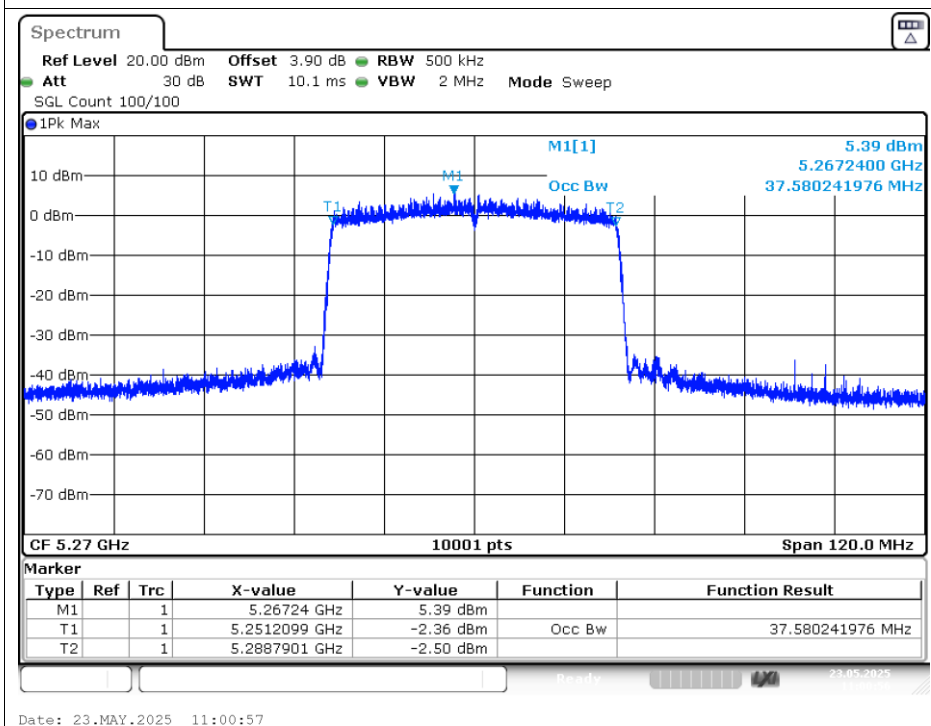 


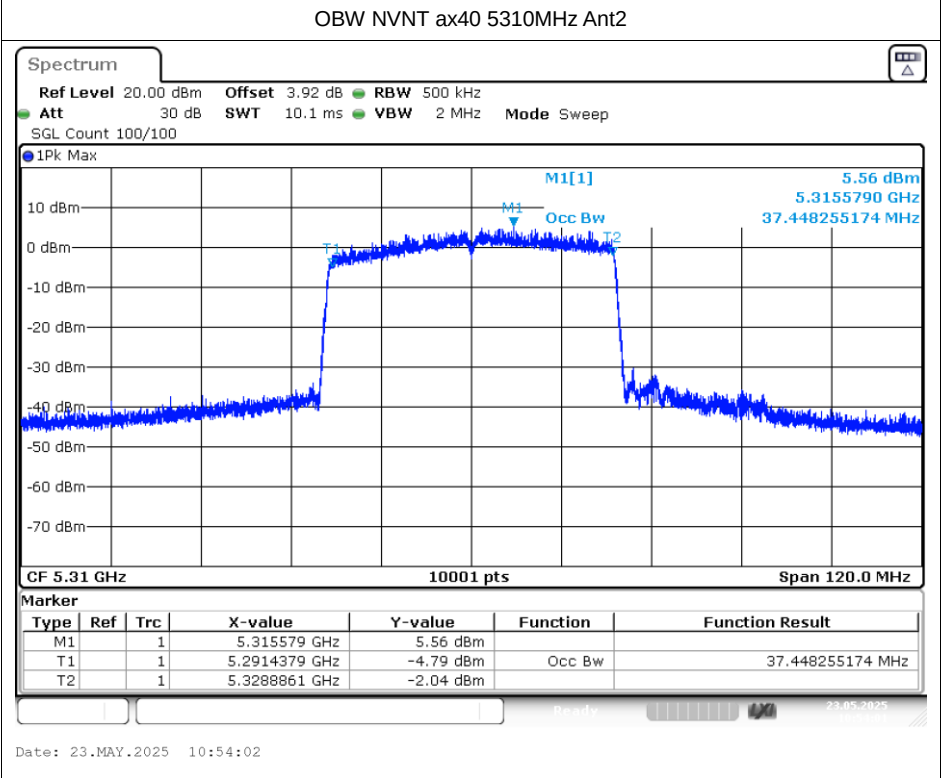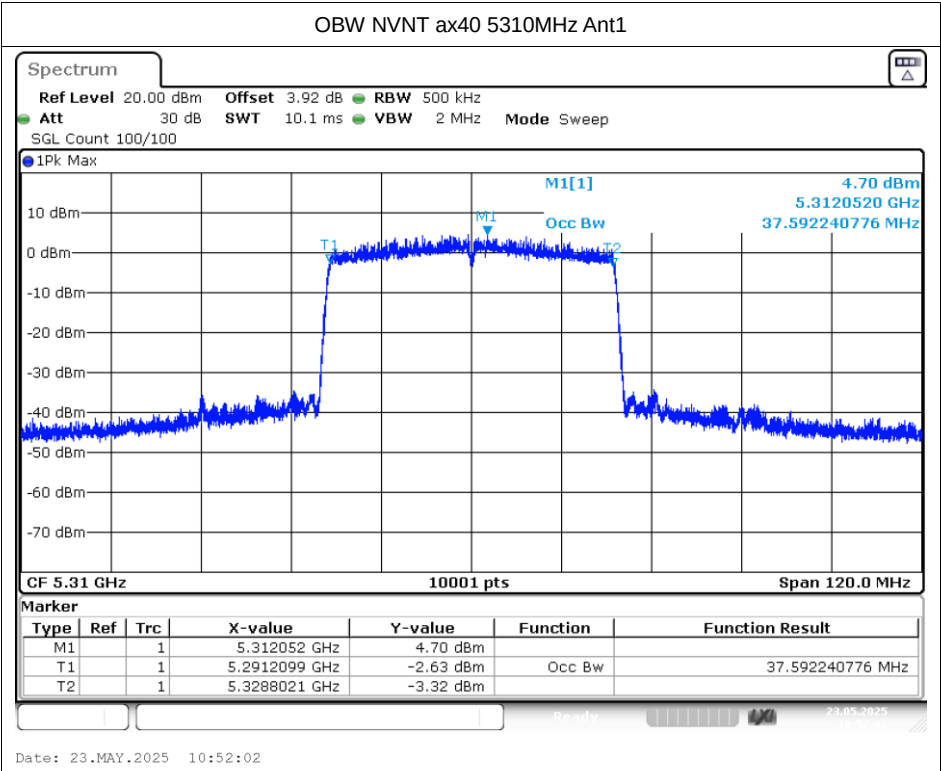  


OBW NVNT ax40 5510MHz Ant1

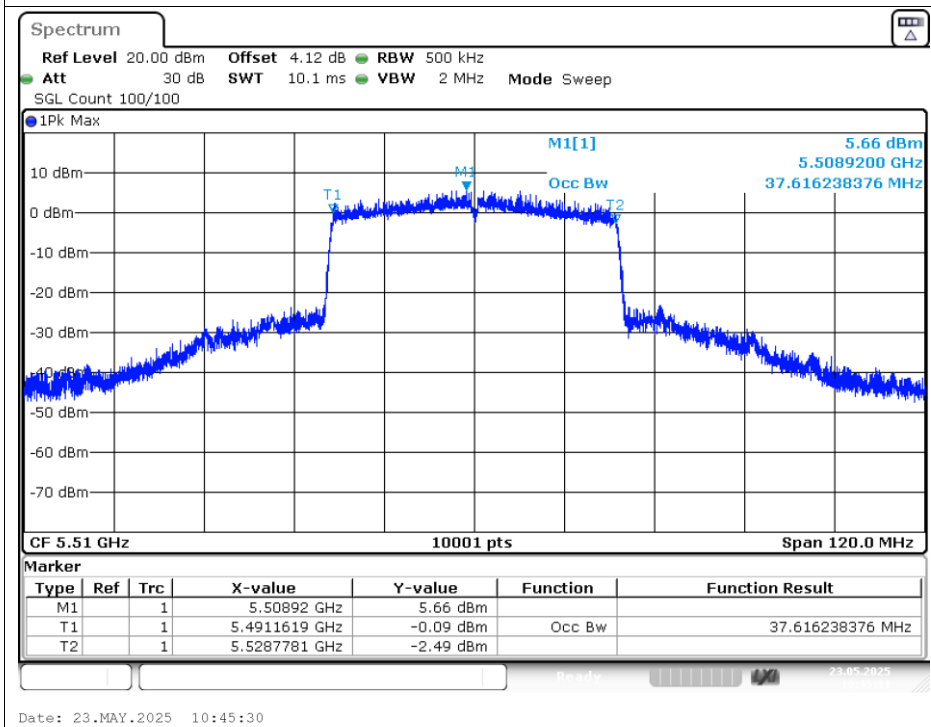 


OBW NVNT ax40 5510MHz Ant2

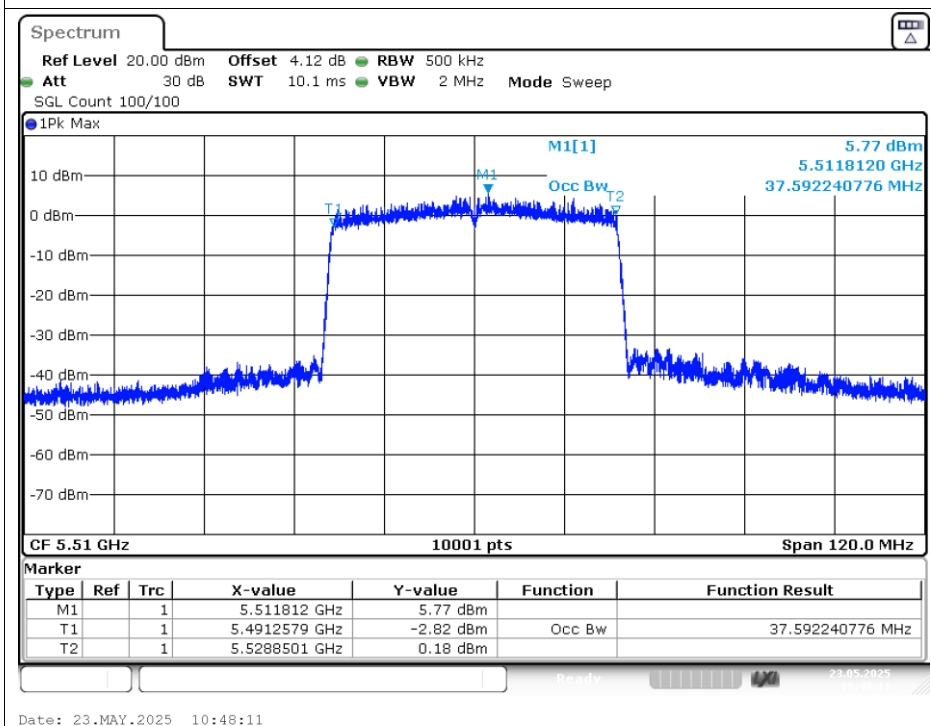 


OBW NVNT ax40 5590MHz Ant1

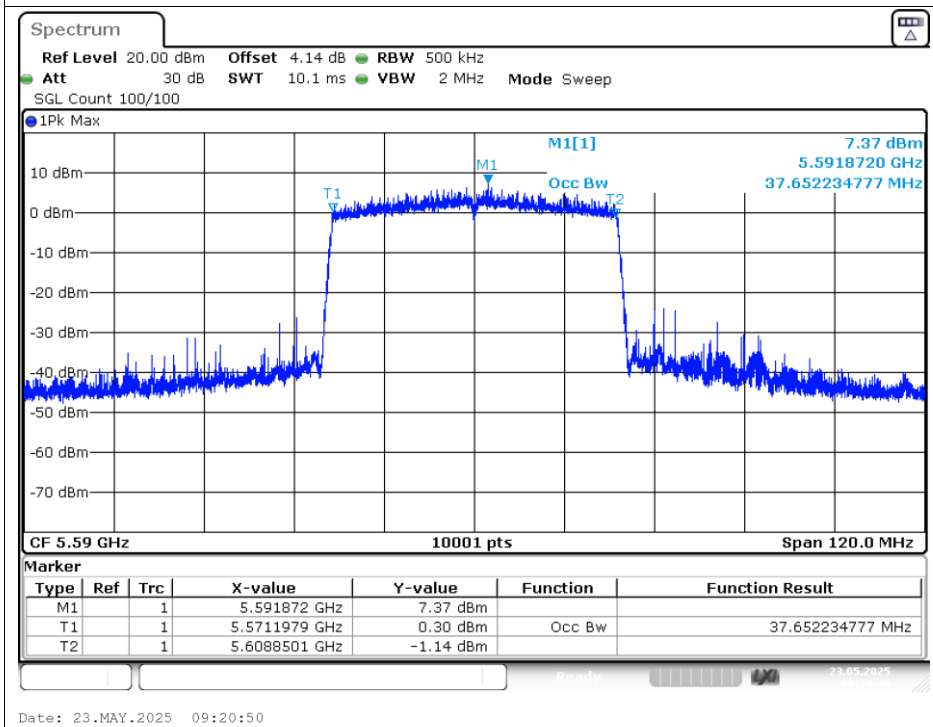 


OBW NVNT ax40 5590MHz Ant2

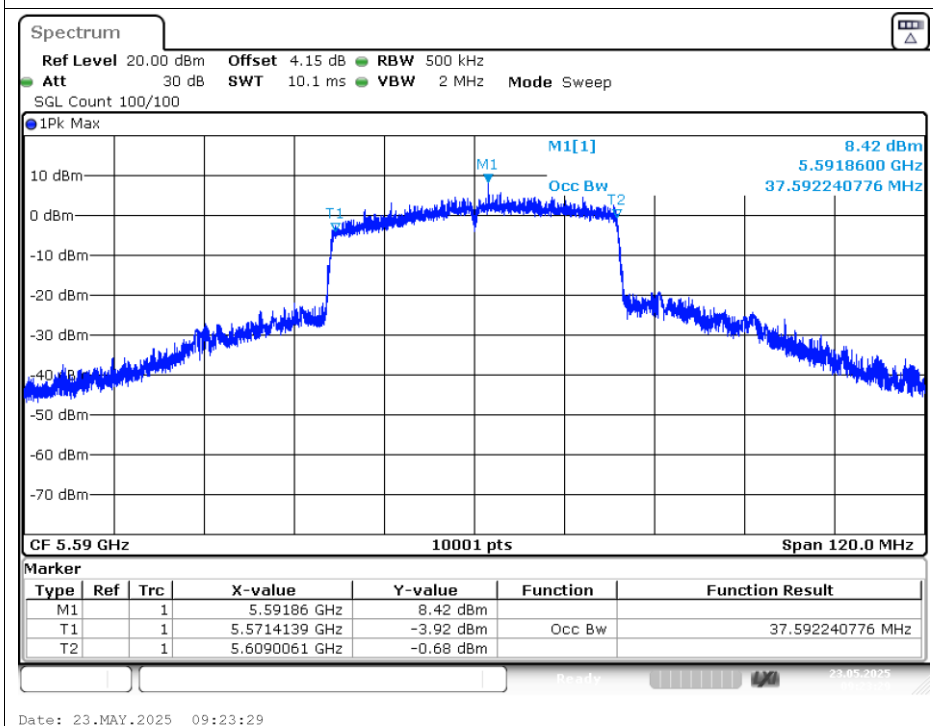 


OBW NVNT ax40 5670MHz Ant1

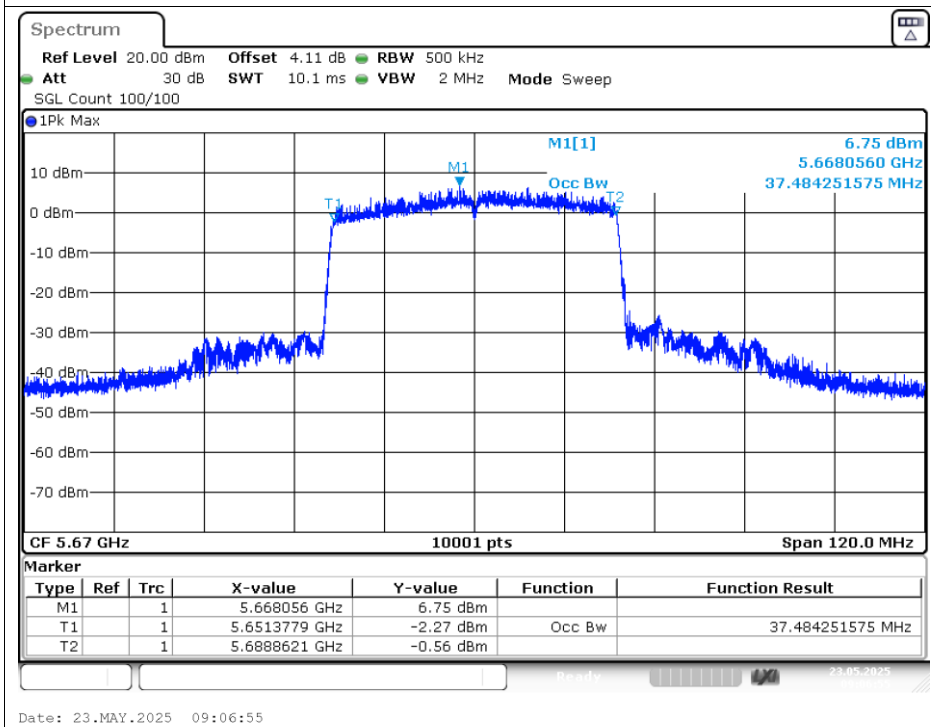 


OBW NVNT ax40 5670MHz Ant2

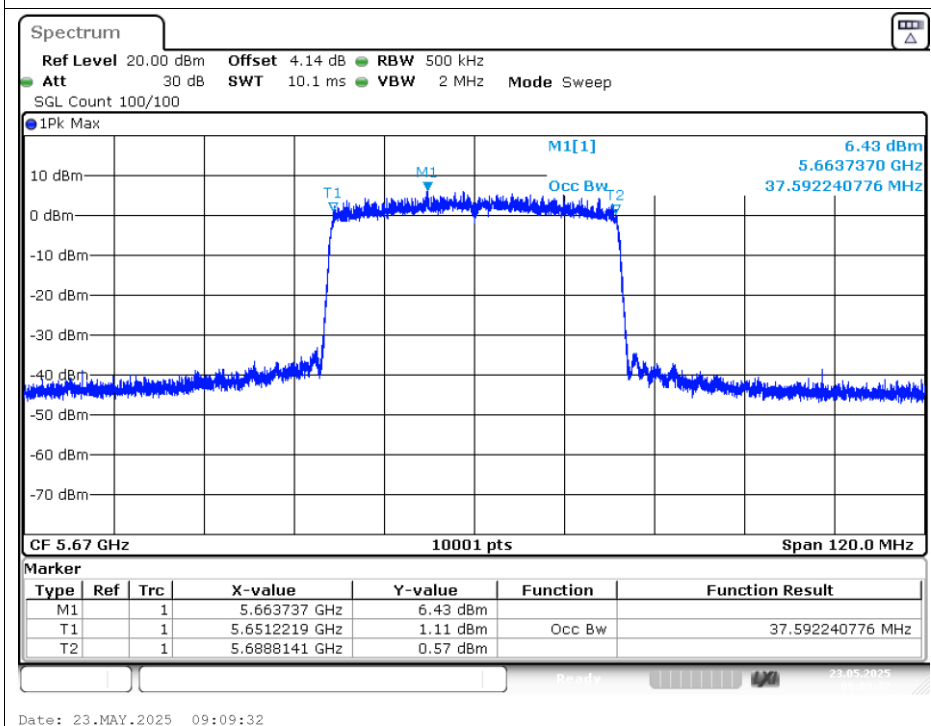 


OBW NVNT ax80 5210MHz Ant1

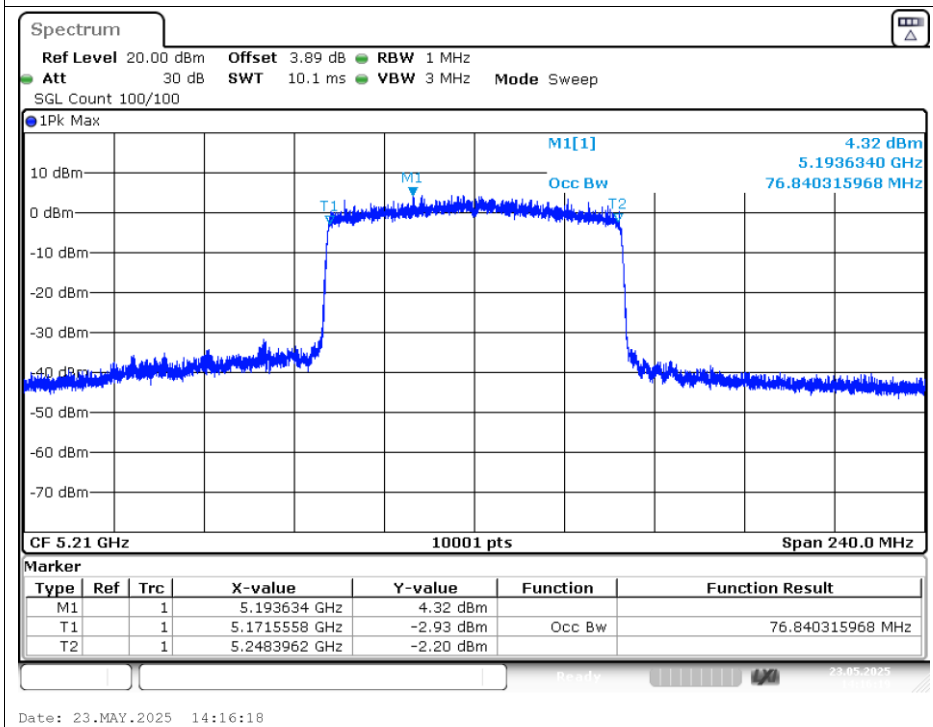 

OBW NVNT ax80 5210MHz Ant2

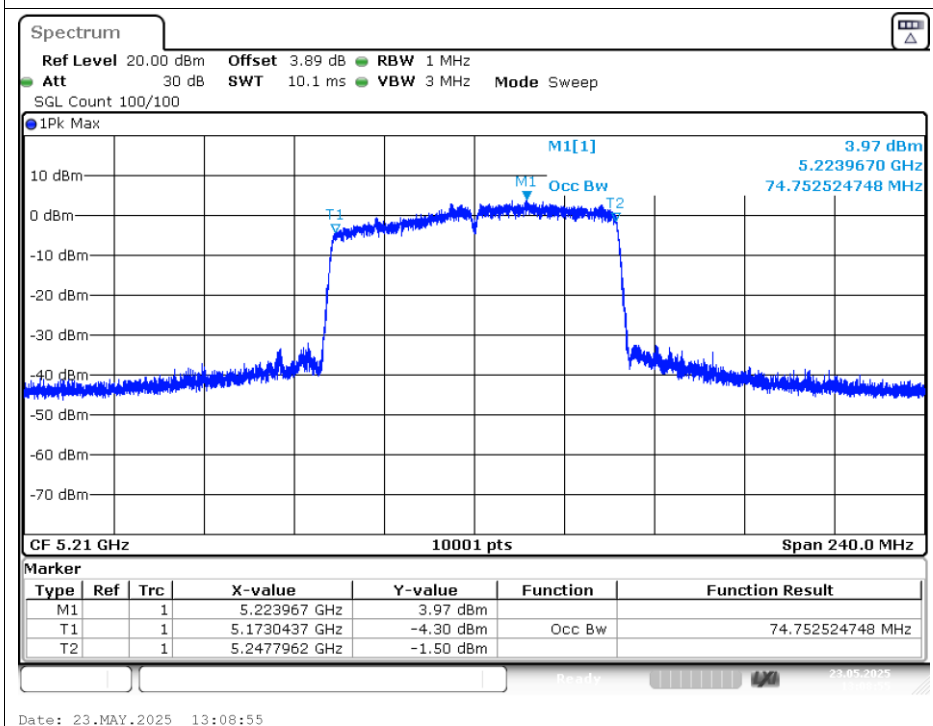 

OBW NVNT ax80 5290MHz Ant1

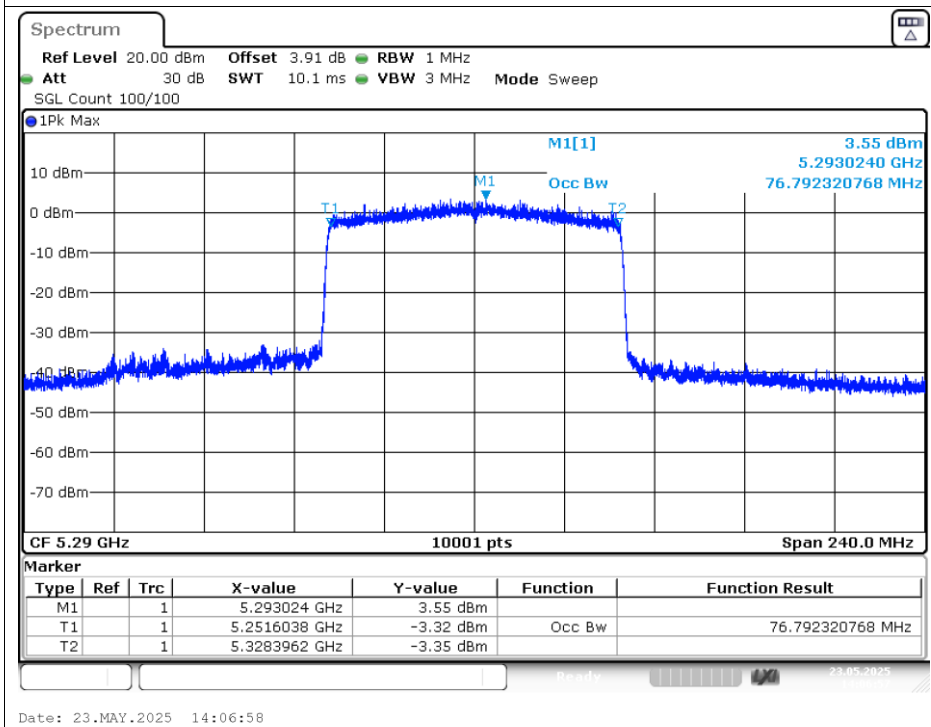 

OBW NVNT ax80 5290MHz Ant2

