

What's in the box

- Device
- Charging Cable

How to Set Up the Device

1. Press and hold the crown on the device for 3 seconds.
2. Unlock your phone and turn on Bluetooth. Connect the device with your phone through Bluetooth.
3. Follow the setup instructions on your phone to finish the setup.

How to Charge the Device

1. Plug the Magnetic Charging Cable into an USB power adapter.
2. Plug the adapter into a power outlet, or plug the charging cable into a USB port directly.
3. Position the back of your device on the charger. The charger's magnets align your device, and you'll see the battery charging icon on the screen of the device.

Basic Safety



WARNING: HEALTH AND SAFETY INFORMATION, READ BEFORE USE.

To avoid damaging your device, accessories, or any connected devices and to reduce the risk of personal injury, discomfort, property damage or other potential hazards, follow the precautions below and those found in the Google Pixel Watch 3 Safety Information at g.co/pixelwatch/regulatory and at Pixel Watch App **Settings > System > About > Regulatory Information**:

- Handle your watch and charger with care. You may damage the watch, the battery or the charger if you disassemble, drop, bend, burn, crush, or puncture your watch or charger. Do not use a watch with a cracked screen or damaged enclosure. Be sure the power adapter (not included with the watch), charging cable and watch are well ventilated when in use or charging. Using a damaged watch, damaged charging cable or charging when moisture or debris is present, may cause overheating, fire, electric shock, injury or damage to your watch or other property. Do not expose your charger to liquids, which can cause a short circuit and overheating. If the watch or charger gets wet, do not attempt to dry them using an external heat source. Do not charge the watch when wet or in direct sunlight.
- This watch must be used with a certified AC adapter with Limited Power Source (LPS) output per IEC 60950-1 and/or PS2 classified output per IEC 62368-1, rated: 5 Volts DC,

maximum 3 Amp. Only charge this watch with the included charging cable or compatible charging accessories, which are available on the Google Store or at Google authorized resellers (look for Google's "made for" badge). Failure to use compatible charging accessories can cause fire, electric shock, injury, or damage to the watch and the accessories.

- Do not force the watch onto the charger as this may damage the device and the charger. Instead, allow the magnets to properly place the watch on the charger.
- Do not place metallic or magnetic objects on the exposed pins of the charger when it is plugged in, as this could cause heating of the object or charger.
- Strangulation hazard. This device and its charger are not a toy. Children have strangled on cords. Keep cords out of the reach of children (more than 3 feet (0.9 meters) away) and do not allow them to play with the watch or its accessories.
- Prolonged exposure to loud sounds (including music) can cause hearing loss. To prevent possible hearing damage, avoid listening at high volume for prolonged periods of time. Continued exposure to high volumes and background noise can make loud sounds seem quieter than they actually are. Check the volume before using headphones or earphones with your watch.



HEALTH RELATED FUNCTIONS

Your watch and its pedometer, sleep, exercise, heart rate, and associated wellness and fitness functions are not medical devices, unless otherwise clearly marked, and are intended for information purposes only. They are not designed or intended for use in the diagnosis of disease or other conditions, or in the cure, monitoring, mitigation, treatment, or prevention of disease or other conditions.

BATTERY

This watch contains a lithium-ion battery, which is a sensitive component that can cause injury if damaged. Do not attempt to remove the battery. The battery is non-replaceable. For contact information, visit g.co/pixelwatch/contact. Replacement by non-qualified professionals can damage your watch. Use of a non-qualified battery and improper disposal may present a risk of fire, explosion, leakage, and/or other hazards. Do not open, crush, heat above 113°F (45°C), or incinerate.

DISPOSAL & RECYCLING

Dispose of and transport your device, batteries, and accessories according to local environmental and transportation regulations. Do not dispose of them in normal household waste. For more information on recycling your device, batteries, and accessories, visit g.co/HWR RecyclingProgram

SKIN IRRITATION

Some people may experience reactions to materials, such as nickel or latex, found in wearable items that are in extended contact with the skin. This can be due to allergies, the presence of skin irritants (like soap, sunscreen or sweat), or other causes. Keep your watch clean and dry and do not wear it too tightly. See g.co/pixelwatch/bands for wearing recommendations. Periodically remove the watch for an hour after extended wear to reduce the chance of skin irritation. Remove the watch, stop use and consult a physician if you experience skin irritation or if wear or fit of the device causes any discomfort. For more information visit g.co/pixelwatch/care.

MEDICAL DEVICE INTERFERENCE

Your watch and charging cable contains magnets that may interfere with pacemakers and other implanted medical devices. See g.co/pixelwatch/regulatory for more information.

Proper Handling and Usage

CARE AND CLEANING

Turn off your watch. Wipe your device with a damp cloth (no soap). Let air-dry or wipe with a non-abrasive cloth. For more cleaning tips, visit g.co/pixelwatch/care

WATER AND DUST RESISTANCE

Your watch is designed to comply with dust and water protection rating IP68 under IEC 60529 standard and water protection rating 5 ATM under ISO Standard 22810:2010 when it leaves the factory, but it is not dust proof or water proof. Dust and water resistance are not permanent conditions and are diminished or lost over time due to normal wear and tear, device repair, disassembly, or damage. Dropping your device may result in loss of dust or water resistance. Liquid damage voids the Limited Warranty (see g.co/devicewarranty). Do not expose your watch or other accessories to liquids or to dust, which can cause short circuit and/or overheating. The charging cable and other accessories, including some Google Pixel Watch bands are not dust or water resistant and should not be exposed to either.

Service & Support

For online help and support, visit g.co/pixelwatch/service. If you send your watch for service, you might receive a replacement in place of your original device. Where permitted by law, goods presented for repair may be replaced by refurbished goods of the same type rather than being repaired. Refurbished parts may be used to repair the goods. If the goods are capable of retaining user-generated data, then the repair or replacement may result in loss of the data.

Regulatory Information

Regulatory information, certification, and compliance marks specific to watch can be found on your device under **Settings > System > Regulatory Information** and on the back and within the band inserts of your device. Additional regulatory and environmental information can be found at g.co/pixelwatch/regulatory.

Manufacturer address: Google LLC, 1600 Amphitheatre Parkway, Mountain View, CA 94043 United States.

EMC COMPLIANCE STATEMENT

Important: This device and other in-box accessories have demonstrated Electromagnetic Compatibility (EMC) compliance under conditions that included the use of compliant peripheral devices and shielded cables between system components. It is important that you use compliant peripheral devices and shielded cables between system components to reduce the possibility of causing interference to radios, televisions and other electronic devices.

RADIO FREQUENCY EXPOSURE

Your watch has been tested and meets applicable limits for Radio Frequency (RF) exposure. To ensure the exposure levels remain at or below the as-tested levels, during the operation the device should be positioned at least 10 mm distance away from your face/head. Radio frequency exposure information can be found at g.co/pixelwatch/regulatory, and on your device under **Settings > System > Regulatory Information**.

Ultra Wideband (UWB)

When the use of Ultra Wideband is prohibited in your region, such as while in an aircraft, Ultra Wideband can be turned off by turning on Airplane mode. Turn on Airplane mode by going to Quick Settings > Tap **Airplane mode**. Airplane mode can also be turned on in **Settings > Network & internet > toggle Airplane mode**. In the US, UWB devices may not be employed for the operation of toys. Operation onboard an aircraft, a ship or a satellite is prohibited.

Regulatory Information: United States

FCC REGULATORY COMPLIANCE

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by Google could void your authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following 2 conditions:

1. These devices may not cause harmful interference.
2. These devices must accept any interference received, including interference that may cause undesired operation.

Model number: GWSQ2, GHH4K

Product name: Google Pixel Watch 4 (41mm)

US Responsible Party

Google LLC

1600 Amphitheatre Parkway

Mountain View, CA 94043

Contact: g.co/pixelwatch/contact

Regulatory Information: Canada

INDUSTRY CANADA, CLASS B

This device complies with ICES-003 Class B limits.

Your watch complies with ISSED license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISDE Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

The device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.

Les dispositifs fonctionnant dans la bande de 5 150 à 5 250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux.