 
 


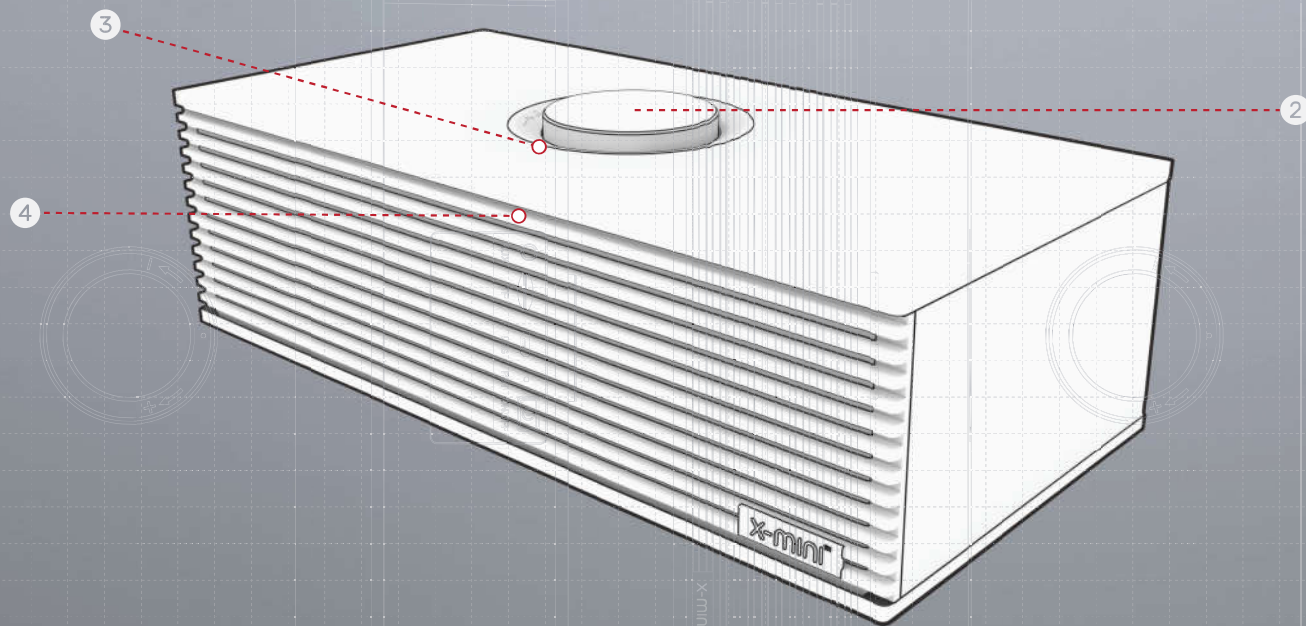

X-mini
SUPA

Back view

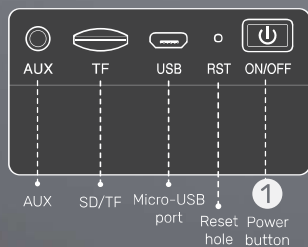

micro SD/TF mode:
1. Insert micro SD card before switching speaker on. Press knob to play music through SD mode.
2. Insert micro SD card after switching speaker on. Music will play automatically in SD mode.

*Support various formats in MP3, FLAC, WMA, WAV, APE. For more information, please refer to X-mini™ support.

*Use only Original micro SD cards to avoid damaging the speaker. Warranty does not cover damages resulted from use of non-Original accessories.

1 Power button



Pairing devices:
Press and hold power button until power on prompt is heard. Search for new Bluetooth device and select X-mini™ SUPA. The connected prompt is heard once the speaker is paired successfully.

*If pairing is unsuccessful, switch off and on X-mini™ SUPA to reattempt.


Disconnecting devices:

Press and hold power button until power off prompt is heard.

Sound mode:

Press power button once to change between treble and bass EQ modes after speaker is switched on.

2 Swivel knob control

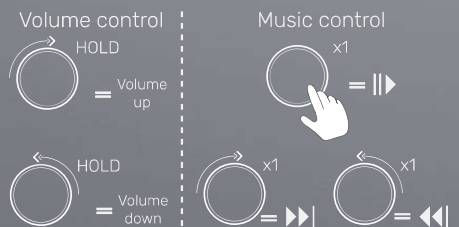

Volume control:
Turn knob clockwise and hold to increase volume.
Turn knob anti-clockwise and hold to decrease volume.

Music control:

Press knob to start or pause music.
Turn knob clockwise to change to next song.
Turn knob anti-clockwise to change to previous song.

Mode switch:

Hold to switch between Bluetooth, micro SD and AUX modes.


3 Microphone



Answering call: Press knob once
End call: Press knob once once

*Functions and indication tones may vary between devices.

4 LED light

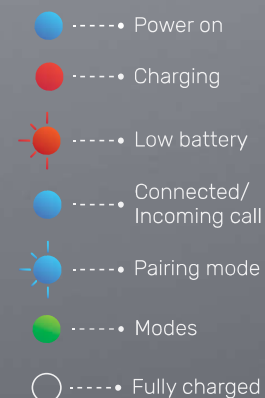

*Audio output gets softer and a warning tone is heard when the battery level of the speaker is low. Recharge before use.