 
 


IMPORTANT INFORMATION Safety Rules 1) Please follow the rules depicted in this manual closely to ensure your safety. Before using the product, we would strongly encourage you to read through this user manual. 2) Be more wary of any edges, uneven surfaces, metal parts, accessories and its packaging so as to prevent any possible injury or damage. 3) Keep this product out of reach of children. Take note that this product is not edible and should not be placed in your mouth. 4) Do not modify, repair or dismantle the product. Doing so may result in electric shocks, complete breakdown of the speaker, etc. All of which, are not covered under warranty. 5) Do not use any diluents or volatile liquid to clean the product. Keep in mind that the surface of the product should only be wiped with a clean dry cloth. 6) Do not use this product in locations whereby there are high-temperatures or high humidity levels (For instance, bathrooms); ideally, the product should be used in a location free of dust and exposure to direct sunlight. 7) Do not insert foreign objects, such as pins, into this product. 8) Do not touch this product when your hands are wet as this may result in electric shocks. 9) Turn down the volume before/while using this product as sudden loud sounds may damage it. 10) Refrain from dropping the product as well as any collision with other objects. 11) Do not use this product when in hazardous locations. 12) Should any abnormal situations or problems occur while using the product, discontinue use immediately.	WARRANTY AND SUPPORT Limited Warranty 1) If this product or any part thereof is proven to be defective by reason of faulty workmanship or defects in materials within 12 months of purchase, we will at our option repair or replace the product free of charge, on condition that the original invoice or sales receipt with the date of purchase, or stamp from the dealer is presented together with the defective unit. 2) The warranty does not cover product failures which have been caused by use of accessories or other peripheral devices are not original X-mini™ branded accessories intended for use with the product. 3) The warranty does not cover product failures caused by modifications, repairs and disassembly by any person who is not authorised by the manufacturer. 4) Any defective unit or part shall become property of the manufacturer. The warranty does not cover any damage caused by misuse, drop, hit or neglect. © 2017, Xmi Pte Ltd. All rights reserved. The name “X-mini”, “Capsule Speaker” and “X-mini logo” are trademarks or registered trademarks of Xmi Pte Ltd. This product is covered by patents/patents pending and are property of Xmi Pte Ltd.	FCC STATEMENT X-mini™ INFINITI 360° Speaker This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -- Reorient or relocate the receiving antenna. -- Increase the separation between the equipment and receiver. -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -- Consult the dealer or an experienced radio/TV technician for help. RF Exposure Statement FCC RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.
--	--	--

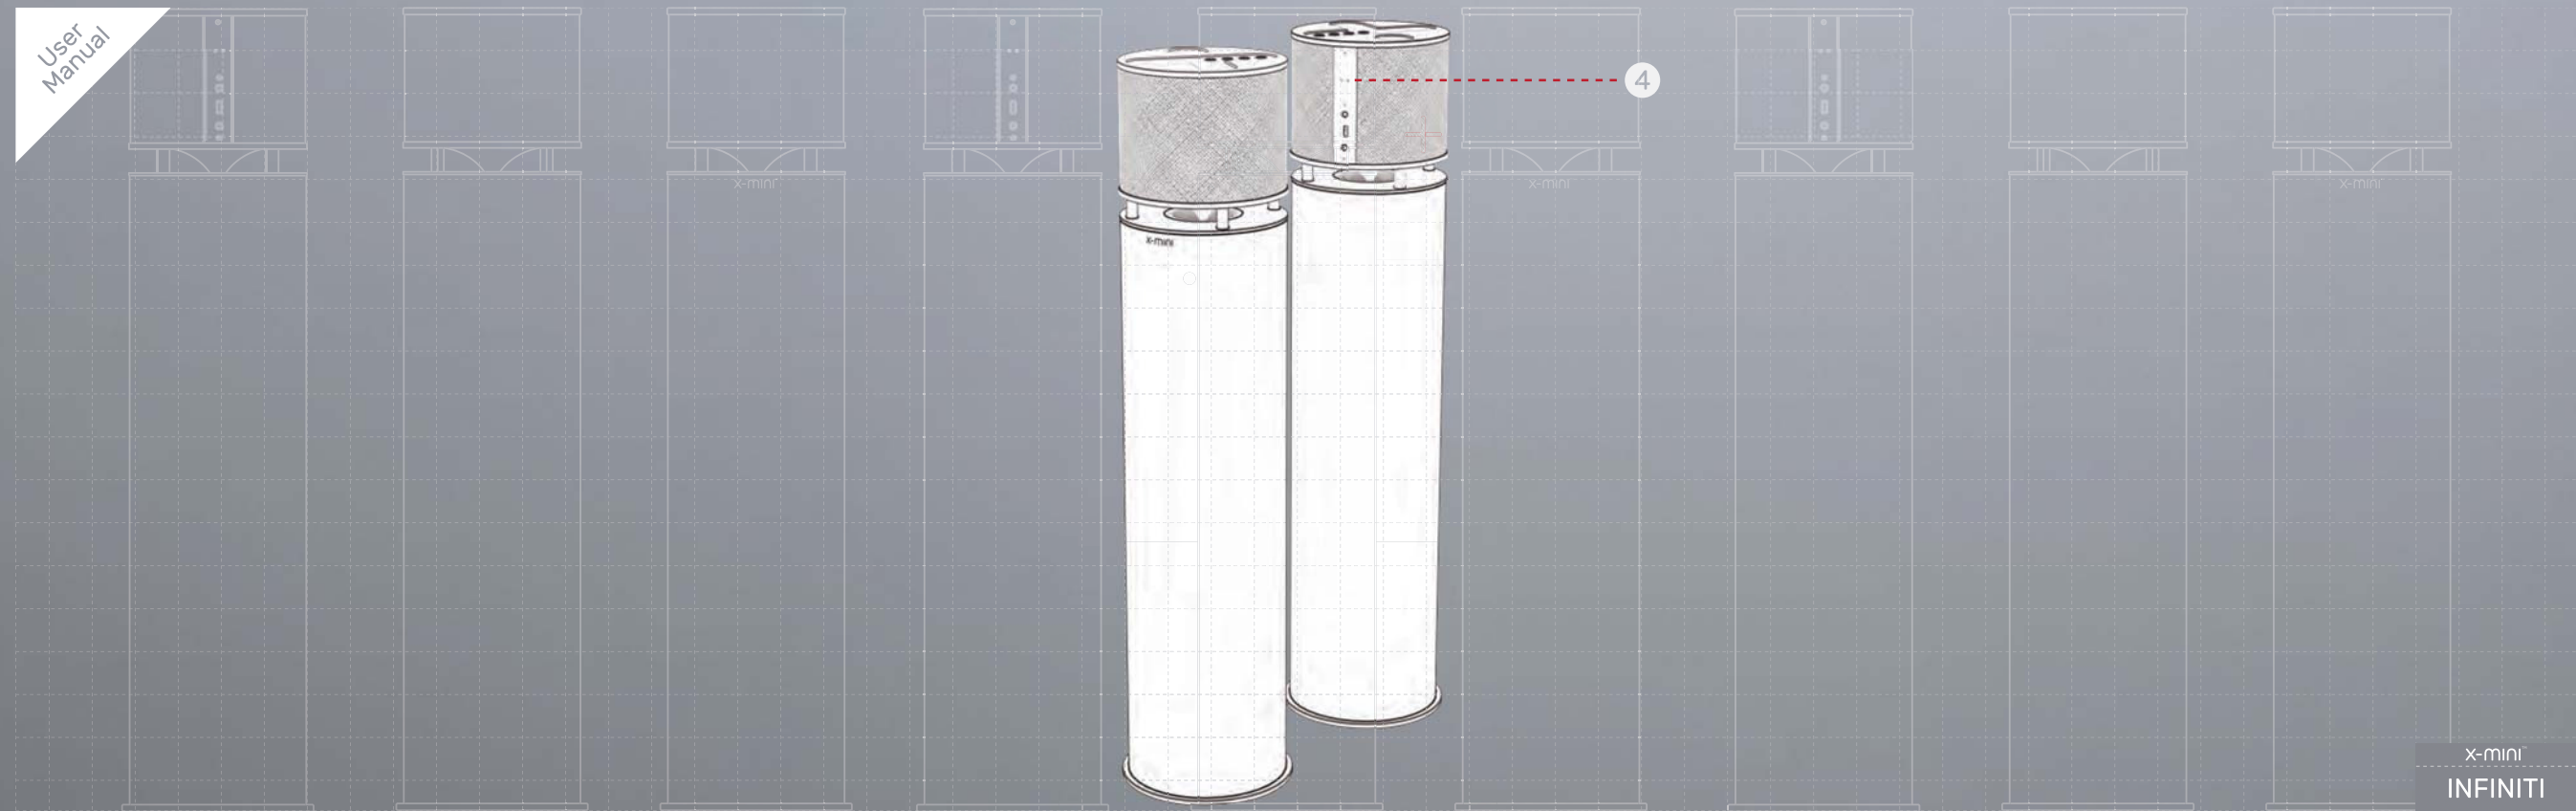 


x-mini
INFINITI


Top view

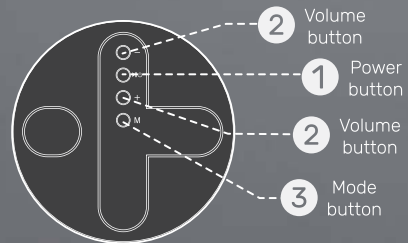

Back view

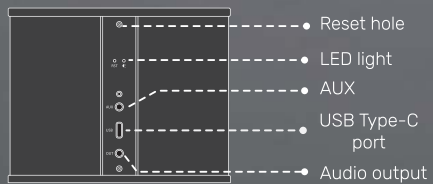

1 Power button

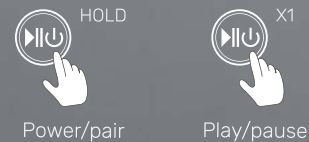 


Pairing devices:
Press and hold power button until power on prompt is heard. Search for new Bluetooth device and select X-mini™ INFINITI. The connected prompt is heard once the speaker is paired successfully.

*If pairing is unsuccessful, switch off and on X-mini™ INFINITI to reattempt.

Disconnecting devices:
Press and hold power button until power off prompt is heard.

 
2 Volume(+/-) buttons

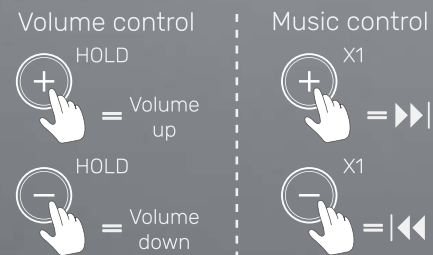

Volume control:
Press and hold + volume button to increase volume
Press and hold - volume button to decrease volume

Music control:
Press + volume button once to change to next song
Press - volume button once to change to previous song

 
3 Mode button

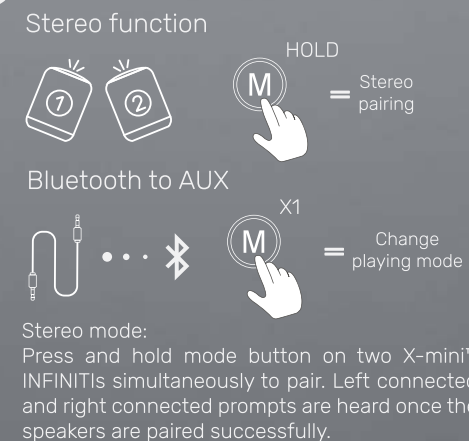

*If pairing is unsuccessful, switch off and on both X-mini™ INFINITIs to reattempt.

Mode switch:
Press mode button once to switch between Bluetooth and AUX modes.

 4 LED light

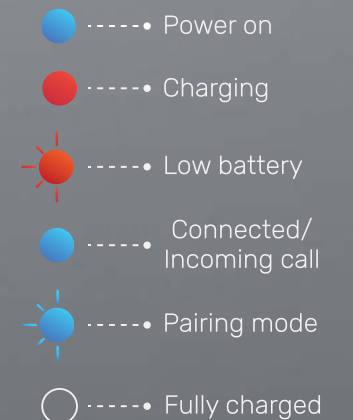

*Audio output gets softer and a warning tone is heard when the battery level of the speaker is low. Recharge before use.