

封面

TWS30

TWS30 True Wireless Bluetooth Headphones
TWS30 Ecouteurs Bluetooth 5.0 True Wireless
TWS30 Auriculares Bluetooth Inalámbricos
TWS30 True Wireless Bluetooth Kopfhörer
TWS30 Autentische Drahtlose Bluetooth Headsets
TWS30 耳機 蓝牙耳机
TWS30 True Wireless Bluetooth Headphones
TWS30 Ecouteurs Bluetooth 5.0 True Wireless
TWS30 Auriculares Bluetooth Inalámbricos
TWS30 True Wireless Bluetooth Kopfhörer
TWS30 Autentische Drahtlose Bluetooth Headsets
TWS30 耳機 蓝牙耳机
TWS30 True Wireless Bluetooth Headphones

User manual
Einige Bedienungsanleitung
About & power
一、关于耳机

Use manual
Einige Bedienungsanleitung
About & power
一、关于耳机

Instructions d'utilisation
Instructions de mise en service
About & power
一、关于耳机

封面反面

English.....0 1
中文.....XX
Français.....XX
Deutsch.....XX
Italiano.....XX
Español.....XX
Polski.....XX
Česká Republika.....XX
Magyarország.....XX
한국어.....XX
日本語.....XX

 
背面

SoundMAGIC Group
Marketing
Shenzhen SoundMAGIC Technology Development Co., Ltd.
R & D and Manufacture
Dongguan Hualan Electronic Technology Co., Ltd.
Fulong Industry Road 8, Fulong Community Shipai Town, Dongguan, China
Tel: +86-769-81270118 Fax: +86-769-81270128
Email: support@soundmagic.com
www.soundmagic.com
FCC ID: K001-TWS30

Shenzhen SoundMAGIC Technology Development Co., Ltd.
Address: 1613F Building A, Waoqianglong Business Building, Meilong Road No 2125,
Qinghua Community, Longhua District, Shenzhen China



I. Packing list

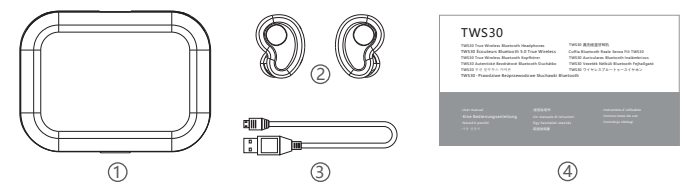


- ① Charging case
③ USB charging cable
② TWS30 Earphones
④ User manual

II. Technical specifications

Bluetooth.....Bluetooth V5.0
Driver.....Dynamics, 9mm, Neodymium
Transmission Range.....Up to 13m
Impedance.....12±10%Ohms
MIC Sensitivity.....-42±3dB
Continuous Playback music.....4-5h
Continuous Talk Time.....3-4h
Standby Time.....280h
Weight.....25g
Ambient Temperature.....-20°C to 60°C

 III. Function display

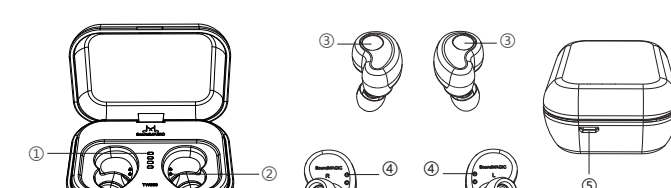

- ①Charging indicator
③Charging Pin(Female)
②Charging Pin(Male)
④Charging socket of charging case
③Multifunction button

IV. Basic functions and operations

1. Power on
Press and hold the "Multifunction" button for 2 seconds to power on. Blue Light will flash and "Power On" prompt will be heard when the earphones are turned on.
2. Power off
Press and hold the "Multifunction" button for 3 seconds to power off. Red light will flash and "Power Off" prompt will be heard when the earphones are turned off.
3. Bluetooth connect
Press and hold the "Multifunction" button for 5 seconds till the red blue light is flashing rapidly and "Pairing mode" prompt will be heard when the earphones enter the search pairing state (the model name of earphones is TWS30).
4. Single earphone pairing
To use left and right earphones independently, choose one of them to press and hold the "Multifunction" button for 5 seconds till the red blue light is flashing rapidly, then to pair with the phone. When the earphone contact with the phone successful, "Connected" prompt will be heard.
5. Dual earphone pairing
Turn on the left and right earphones till the Blue light flash, then to connect the Bluetooth devices. When left and right earphones pairing successful, "connected left channel" prompt will be heard on left earphone and "connected right channel" prompt will be heard on right earphone.
6. Reset the earphones
Turn off the earphones, press and hold the "Multifunction" button about 12 seconds till the red-blue light flash 3 times and "Do do do" prompt be heard. Keep press and hold the "Multifunction" button till the red-blue light flash 3 times again and "Do do do" prompt be heard again.
7. Automatic connection
If your phone has been paired successfully with your earphones, they will connect automatically if they're within the effective distance (13m) and effective time period (5 minutes). If your earphones is outside the effective distance, it will disconnect. But if it comes back to being within the effective distance again within 5 minutes, it will connect back to your phone automatically. After 5 minutes with no connection, your earphones will automatically power off.
8. Playing music
Press the "Multifunction" button to start music. Press again to stop music.

V. Maintenance and precautions

1. Any improper use or unauthorized servicing that results in damage to your TWS30 will void the warranty.
2. Do not use sharp objects near your TWS30.
3. Do not keep your TWS30 in charging mode for long periods.
4. Do not store your TWS30 near toxic chemicals.
5. Do not store your TWS30 near magnets.
6. Do not leave your TWS30 with a fully drained battery for long periods.
7. If your TWS30 is out of use for a long time, please charge it periodically to protect the battery.

VI. Common problems and solutions

Problem	Reasons	Solutions
Not turning on	Battery low	Charge battery
Disconnecting	Signal subject to interference	Re-pair the devices in a different place
No sound after pairing	Mobile Bluetooth media audio is not turned on	Enable mobile Bluetooth media audio
When making a call, voice is still coming from smartphone	Smartphone call audio is set to smartphone	Set to Bluetooth answer
Noise/stuttering	Smartphones too far away from TWS30 or there is interference in the surrounding environment	Move closer to smartphone or move to a different place
My voice is too quiet when making a call	The microphone aperture is blocked with dust	Clean your TWS30
Unable to hold current call and answer incoming call	Phone operator hasn't enabled this function	Connect the phone operator to enable this function

 
VII. Customer service and support

Please contact us directly for service and support. Our service team is ready to help you.
E-Mail: support@soundmagic.com
Phone: +86 769 81270118
Fax: +86 769 81270128
Factory address: Fulong Industry Road 8, Fulong Community Shipai town, Dongguan, China
For more information about SoundMAGIC, please visit our website: www.soundmagic.com

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio and television reception. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
Changes or modifications not expressly approved by the party responsible for compliance, could void the user's authority to operate the equipment.
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation.

一、装箱清单

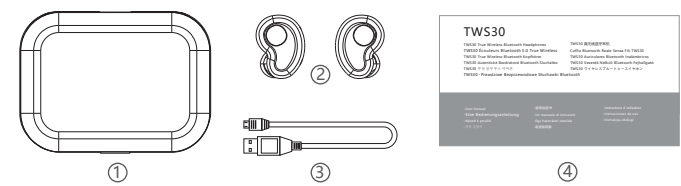


- ① 蓝牙耳机充电座
③ 数据线
② TWS30耳机
④ 说明书

二、技术参数

技术标准.....Bluetooth v5.0
单元.....9mm钹铁磁驱动
传输距离.....约13m
直流电阻.....12±10%Ω
MIC灵敏度.....-42±3dB
连续播放音乐时间.....4-5h
连续通话时间.....3-4h
待机时间.....280h
重量.....25g
环境温度.....-20°C-60°C

 三、功能展示

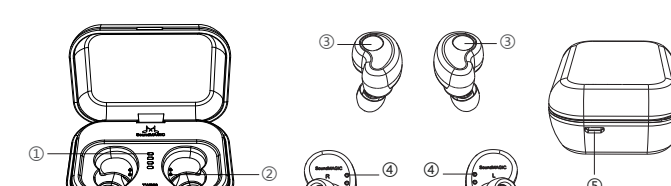

- ①充电指示灯
③充电触针（母）
②充电触针（公）
④充电盒充电接口
③多功能按键

四、基本功能与操作

1. 开机
关机状态下，长按多功能键2秒，蓝灯亮，耳机提示音“power on”，松开按键即开机。
2. 关机
开机状态下，长按多功能键3秒，红灯亮，耳机提示音“power off”，松开按键即关机。
3. 蓝牙连接
关机状态下长按多功能键5秒，将红蓝灯交替闪烁并有语音提示“pairing mode”即进入搜索配对状态。（搜索耳机型号TWS30）
4. 配对连接
左右耳机独立使用时，选择任意耳机，长按多功能键5s至红蓝灯交替闪烁即可与手机蓝牙进行配对，当语音提示“connected”即蓝牙连接成功。
5. 双耳配对
两个耳机长按多功能键到开机状态，蓝灯闪烁，松开按键即可与蓝牙设备进行连接，当左右双耳连接成功后，语音提示connected left channel, 右耳语音提示connected right channel,即配对成功。
6. 如何重置耳机
关机状态下长按多功能键12秒，红蓝灯同时双闪3下，伴随提示音“咚咚咚”，再双闪3下伴随提示音“咚咚咚”，即重置耳机成功。
7. 自动连接
手机与耳机若已配对成功，耳机与手机蓝牙功能都处于开启状态，在有效距离（13米）和有效时间（5分钟）内二者可自动建立连接，在使用过程中，耳机超出有效距离断开连接后，5分钟内回到有效距离，耳机将与手机自动建立连接，超过5分钟耳机将启动省电模式自动关机。
8. 音乐播放
点按“多功能”键：播放/再次播放；暂停播放音乐。

五、维护 and 注意事项

1. 任何由于个人使用不当或者非专业人士的维修对耳机造成破坏的情况，不列入保修范围。
2. 不可使用尖锐的物体接触耳机。
3. 不可将耳机一直处于充电状态。
4. 不可将耳机存放在有化学腐蚀性环境，也不可在其中使用。
5. 不可将产品放置于潮湿的环境中。
6. 不可让耳机长期处于充电状态。
7. 长时间不使用耳机时，请隔一段时间进行充电，以保护电池。

六、常见问题与解决方案

常见问题	常见原因	解决方案
不能开机	电量不足	进行充电
无法连接	其他电磁波干扰	换个环境重新匹配连接
配对连接后媒体声音外放	手机蓝牙功能未打开	打开设置
拨打电话声音仍然为听筒	手机接听方式设置为听筒	设置为蓝牙接听
有杂音	手机离耳机太远或者周围环境有干扰	拉近距离更换环境
通话时对方听到声音小	麦克风通话孔被灰尘堵塞	保持耳机清洁及时清理
无法接听第三方	运营商未开通此功能	联系运营商开通解决

七、服务与支持

在需要提供服务时，请直接联系我们，专业的客服人员第一时间为您服务：
邮箱: support@soundmagic.com
电话: 0769-81270118
传真: 0769-81270128
厂址: 广东省东莞市石排镇福隆工业区8路年瑞电子科技有限公司
您需要了解SoundMAGIC更多产品信息请登录官方网站
www.soundmagic.com