

User manual

Model: RNE72

Slim Powerbank MagSafe

Please read these instructions carefully before charging and using this product, and keep this booklet for future reference.

Product Overview

This 5,000mAh power bank provides portable charging for smartphones, tablets, and other USB-powered devices. Its compact design makes it ideal for everyday use and travel.



Product specifications

Battery Capacity	5000mAh (3.6V/18Wh)
USB - C input	5V-3A/9V-2A/12V-1.5A
USB - C output	5V-3A/9V-2.22A/12V-1.67A
Wireless	5W/ 7.5W/ 10W/ 15W max

Features

- 15W Wireless charging.
- Charge with MagSafe or/and with cable
- 15W USB-C charging
- Input & output for USB-C
- LED power indicator
- High quality polymer battery
- 5000mAh

Connecting & charging

With MagSafe

Ensure your phone is compatible with wireless charging before proceeding.

Place your device on the designated wireless charging surface of the power bank.


The magnets in your phone and within the power bank will automatically connect when you place the device on the MagSafe surface. Note that while this item is compatible with various devices, the magnetic function may not operate with certain items.

During wireless charging, the wireless charging indicator illuminates blue, while the battery indicators display the corresponding battery level in white.

With cable

Plug your cable into the USB-C port on the power bank, and the other end goes into your device.

After you have charged your device, recharge the power bank before using it again.

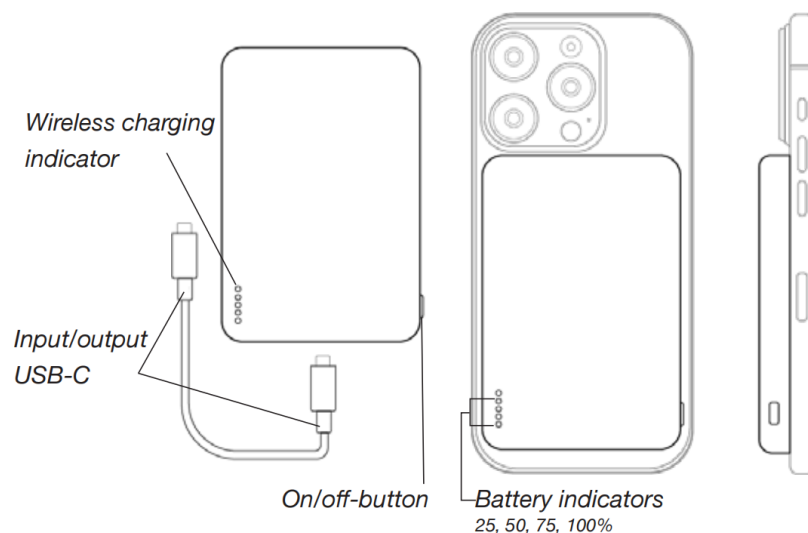

Charge the power bank

Connect a USB C cable to your adapter, ensuring the USB connector is securely plugged into the charger and the USB C end into your power bank.

Once fully charged, disconnect the power bank for immediate use.

The LED indicator will illuminate in flashing white during the charging process and remain on when fully charged.

Safety precautions

Please thoroughly review all instructions and warnings before using the product. Improper usage may result in damage to the product or your device, overheating, or impaired functionality. Always observe basic precautions when using this product, including the following:

1. Avoid exposing the device to moisture.
2. Adhere to the specified output rating of the device to prevent overloading beyond its capacity, which may pose a risk of fire or injury.
3. Refrain from using the device if it shows any signs of damage or modification.
4. Damaged or modified batteries may demonstrate unpredictable behavior, potentially resulting in fire, explosion, or injury.
5. Do not disassemble the device to avoid the risk of fire or injury.
6. Keep the power bank out of reach of children to prevent accidents.
7. Avoid exposing the device to fire or excessive temperatures, as it may lead to an explosion.
8. When charging, do not place your charger on flammable material such as carpets, bed linen, etc.

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.