

CONTENTS

Preparation	8
Power Sources	8
Installing Batteries	8
Important Information About the External Power Jacks	9
Using Standard AC Power	10
Using Vehicle Battery Power	11
Charging Nickel-Cadmium Batteries	12
Connecting the Antenna	13
Connecting an Optional Antenna	13
Connecting an Earphone/Headphones	14
Listening Safely	14
Traffic Safety	14
Connecting an Extension Speaker	15
Using the Belt Clip	15
Understanding Your Scanner	16
A Look at the Keypad	16
A Look at the Display	17
Banks and Memories	19
Channel-Storage Banks	19
Monitor Memories	19
Operation	20
Turning On the Scanner and Setting Squelch	20
Storing Frequencies	20
Searching For and Temporarily Storing	
Active Frequencies	21
Limit Search	22
Direct Search	23
Listening to Monitor Memories	24
Moving a Frequency from a Monitor Memory	
to a Channel	24
Manually Selecting a Channel	25
Special Features	26
Using the Keypad	26
Locking Out Channels	27
Turning Channel-Storage Banks On and Off	27
Search Skip Memory	27
Priority	28
Using the Display Backlight	28
Listening to the Weather Band	29

FCC ID: AAO2000311A

A General Guide to Scanning	30
Guide to Frequencies	30
National Weather Frequencies	30
Canadian Weather Frequencies	30
Guide to the Action Bands	31
Band Allocation	33
Avoiding Image Frequencies	37
Frequency Conversion	37
Troubleshooting	38
Resetting the Scanner	39
Care and Maintenance	40
Specifications	41

Not Finalized

See Attached Page 40

This contains the required wording
per FCC Part 15.21

2 KAT 4/4/99

CARE AND MAINTENANCE



Keep the scanner dry. If it gets wet, wipe it dry immediately. Liquids can contain minerals that can corrode the electronic circuits.



Use only batteries of the recommended size and type. Always remove old and weak batteries. They can leak chemicals that destroy electronic circuits.



Handle the scanner gently and carefully. Dropping it can damage circuit boards and cases and can cause the scanner to work improperly.



Use and store the scanner only in normal temperature environments. Temperature extremes can shorten the life of electronic devices, damage batteries, and distort or melt plastic parts.



Keep the scanner away from dust and dirt, which can cause premature wear of parts.



Wipe the scanner with a damp cloth occasionally to keep it looking new. Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the scanner.

Modifying or tampering with the scanner's internal components can cause a malfunction, invalidate your scanner's warranty and void your FCC authorization to operate it. If your scanner is not operating as it should, take it to your local RadioShack store for assistance.