


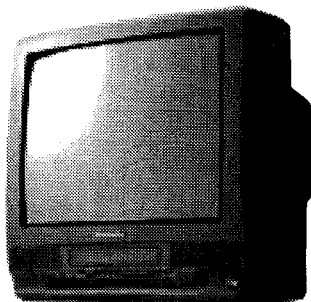

Omnivision VHS

Panasonic

Combination VCR Operating Instructions Models No. PV-C2060 / PV-C2080

-TENTATIVE-

EXHIBIT	#	6
FIG	NO.	
FCC	ID :	ACJ927130TX
MODEL	NO.	PV-C2080
OUR REF :		MKES99-F023



As an ENERGY STAR® Partner,
Matsushita Electric Corporation of
America has determined that this
product or product model meets the
ENERGY STAR® guidelines for
energy efficiency.

VCRplus+
Easy Taping.



Please read these instructions before attempting to connect, operate or
adjust this product. Please save this manual.

Spanish Quick Use Guide is included. (Guía para rápida consulta
en español está incluida.)

LSQT0185A

For assistance, call 1-800-211-PANA(7262)

Getting Started

Basic Operation

Advanced Operation

For Your Information

Safety Precautions/Mesures de sécurité

Warning: To prevent fire or shock hazard, do not expose this equipment to rain or moisture.

Caution: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

Avertissement: Afin de prévenir tout risque d'incendie ou de chocs électriques, ne pas exposer cet appareil à la pluie ou à une humidité excessive.



Attention: Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.

This video recorder, equipped with the HQ (High Quality) System, is compatible with existing VHS equipment.

Only use those tapes with the **VHS** mark. It is recommended that only cassette tapes that have been tested and inspected for use in 2, 4, 6, and 8 hour VCR machines be used.

This television receiver provides display of television closed captioning in accordance with §15.119 of the FCC rules.

FCC WARNING: Any unauthorized changes or modifications to this equipment would void the user's authority to operate.

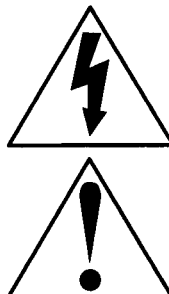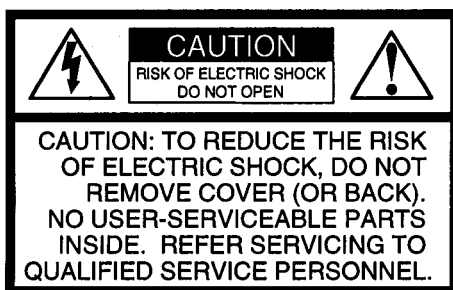

This symbol warns the user that uninsulated voltage within the unit may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any inside part of this unit.

This symbol alerts the user that important literature concerning the operation and maintenance of this unit has been included. Therefore, it should be read carefully in order to avoid any problems.

Table of Contents

To
Start!

Important Safeguards and Precautions ... 2

Before Using 6

- Accessories 6
- Loading the Batteries 6
- Record/Playback Time 6
- Prevent Accidental Tape Erasure .. 6

Use
Now!

TV Operation 10

(Main Operation, NIGHT (NITE) Mode, Using the 100 Key, Rapid Tune, Audio Mute, Phones, SELF-DEMO Mode)

MTS Broadcast / TV Stereo System 11

(Stereo/SAP/Mono broadcast, Select Audio Mode for TV Viewing)

Enjoy
more!

Timer Recording 14 ~ 15

(Main Operation, Cancel, Replace or Clear Program Contents)

Timer Program using VCR Plus+ System 16 ~ 19

- CABLE BOX SETUP 17
- VCR Plus+ Channel Setup 18
- VCR Plus+ System Programming 19

TV Timer Features 20 ~ 21

- ON-TIMER with Alarm 20
- SLEEP TIMER 21
- INSTANT ALARM 21

Closed Caption System 22 ~ 23

- Closed Caption Mode Feature 22
- Caption On Mute Feature 23

Tape Operation 24 ~ 27

- Commercial Skip 24
- Program End Search 24
- Tape Position 24
- Repeat Play 25
- Zero Search 25
- Auto Operation Functions 25
- VHS Index Search System .. 26, 27

Other
Information!

Reset Language, Channels, Clock... 46

On-Screen Display (OSD) 47

Unit Information 48

Before Requesting Service 49

Connections 7

- Outdoor Antenna Connections 7
- DSS/Cable box Connections 7

One Time Setup 8 ~ 9

(Language, Channel, Clock)

Playback a Tape 12

(Main Operation, Forward or Reverse Search, Still Picture, Slow Motion, Frame by Frame Advance, Features for a Quality Picture)

Record On a Tape 13

(Main Operation, One Touch Recording(OTR), Selecting Input Mode)

Special VCR Features 28 ~ 32

- Channel Caption 28, 29
- Weak Signal Display ON/OFF ... 32
- Time Stamp 30, 31
- VCR Lock 32

Copy Your Tapes (Dubbing) 33

FM Radio 34 ~ 35

- FM Radio Setup 34
- Using FM Radio 35
- FM ANTENNA Setup 34
- To select Audio Mode for FM Radio ... 35

FM Transmitter (For Model PV-C2080 only) 36

(FM Transmitter Carry Frequency Setup, FM Transmitter Setup, Speaker with FM Transmitter Setup)

Picture Adjustment 37

V-Chip Control Feature 38 ~ 41

- Enter Secret Code 38
- Setup US TV PROGRAMS Ratings .. 40
- Setup US MOVIES Ratings 39
- Blocking Message 41

Cable Box Universal Remote Control Feature 42 ~ 43

- The Universal Remote Control Setup ... 42
- Remote Warning ON/OFF 43
- Using the Universal Remote Controls .. 42
- DSS/Cable Box Brand Code Numbers ... 43

Audio Feature (For Model PV-C2080 only) 44 ~ 45

Service Center List 50

Spanish Quick Use Guide 51 ~ 53

Location of Controls 54

Warranty Back Cover

Getting Started

Basic Operation

Advanced Operation

For Your Information

Connections

Getting Started


Outdoor Antenna Connection

Unhook the antenna from your previous TV or VCR and connect it to the back of the unit as shown in the diagram.

If your antenna system has separate UHF and VHF lead-ins, you need a UHF/VHF Band Mixer (not supplied.)

WARNING:

When using "Nut type" RF coaxial cables, tighten with fingers only. Overtightening may damage terminals.

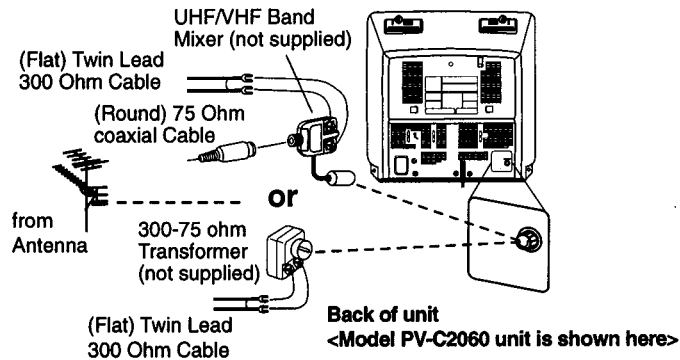

DSS/Cable box Connections


Without a Cable Box

You can;

- record or view unscrambled channels.

You cannot;

- record or view scrambled channels.
- view a channel other than the one selected for any type of recording.

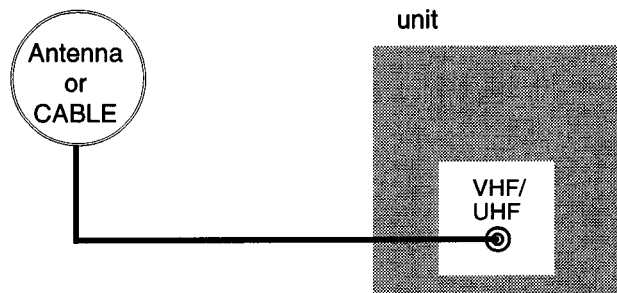

With a Cable Box

You can;

- record or view any channel including scrambled channels.


NOTE: Channel selection must be made at the cable box.

You cannot;

- view a channel other than the one selected for any type of recording.
- do a Timer recording of a channel unless you select it at the cable box.

Note to CABLE System Installer

This reminder is provided to call the CABLE (Cable TV) System Installers attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

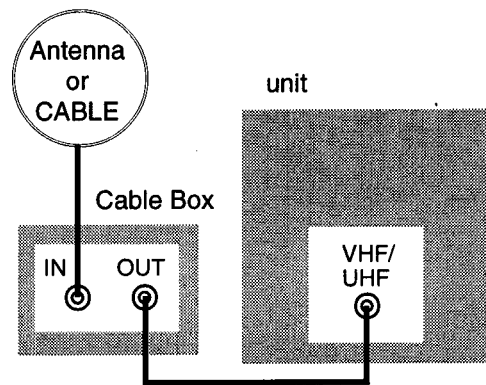

With a DSS Receiver

You can;


- record or view any channel including scrambled channels.

NOTE: Channel selection must be made at the DSS Receiver.

You cannot;

- view a channel other than the one selected for any type of recording.
- do a Timer recording of a channel unless you select it at the DSS box.

NOTE: The DSS receiver must be turned off to view programs from a cable box or antenna. See the DSS manual for details.

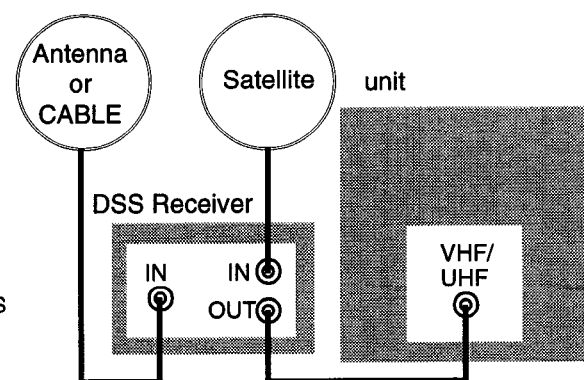

FM Radio

FM Radio Setup


1




Display FM radio mode.

Press FM/TV* on the remote or
TIMER/FM twice on the unit.

2

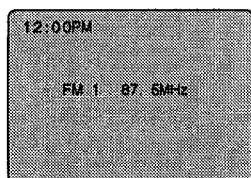


Select the FM number.

 


Press a
NUMBERED key
(1~9.)


3

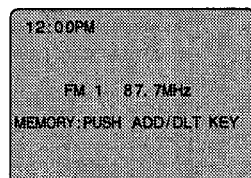

Set the radio station.

 

- 1) Press CH ▲▼
to select the
desired radio
station.
(Each press changes
frequency 200 kHz.)
- 2) Press ADD/DEL
to set.

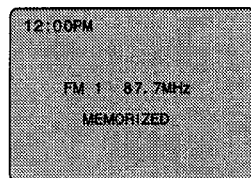

Quick Station Scan

Hold down CH ▲ or ▼ for a few
seconds, then release to
scan for FM stations in your area.

• To cancel, press CH ▲ or ▼ while
in search mode.


To Make Corrections,
select station with a NUMBERED key, then do step 3 again.

To exit FM mode, press FM/TV on the remote or
TIMER/FM twice on the unit.


FM Radio is ...

This unit has an FM radio with built-in
antenna, 9 station preset, and a band range
of 87.5 ~ 108.1 MHz. You can even set the
On-Timer (page 20) to wake up to your
favorite radio station.

Model PV-C2060 unit is shown here.

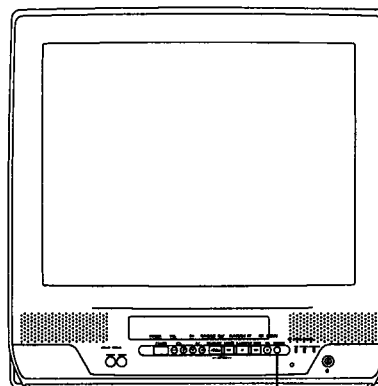

1 TIMER/FM

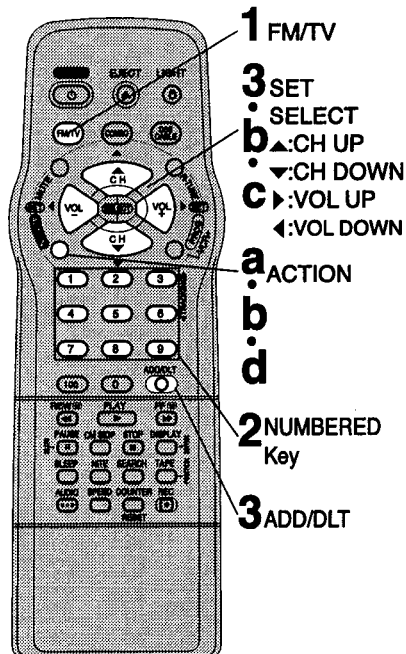

FM ANTENNA Setup

Make sure FM tuning is done correctly
(See FM Radio Setup.)


a




Display MAIN MENU.

Press ACTION.

b

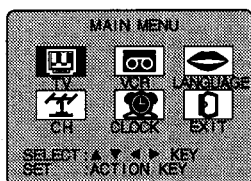


Display SET UP TV screen.

 

- 1) Press ▲▼◀▶
to select "TV."
- 2) Press ACTION
to display.


Continued on the next page...

*Important: if the remote control POWER, CH Up/Down, NUMBERED keys, ACTION, PROG/VCR+, DISPLAY, SEARCH, R-TUNE, FM/TV, or ADD/HLT button does not work when pressed, press COMBO button on the remote and try the button again.

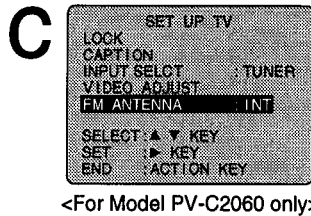


<For Model PV-C2060 only>

 Select FM ANTENNA.



- 1) Press ▲▼ to select.
- 2) Press ► to select "INT (INTERNAL)" or "EXT (EXTERNAL)" whichever sounds the best.

 
- For cable TV users → "INT"
- For antenna users → "EXT"



End setup.


Press ACTION twice to exit.

Model PV-C2060 unit is shown here.

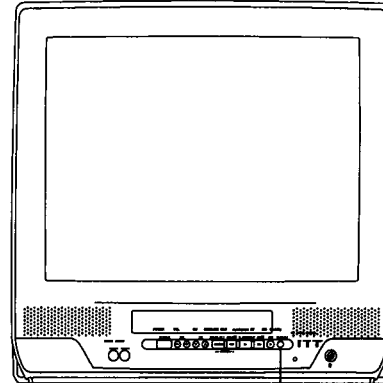


A TIMER/FM

 Using FM Radio




Display FM radio mode.

Press FM/TV on the remote or TIMER/FM twice on the unit.

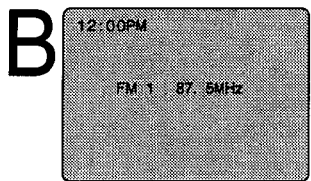

Select the FM number.

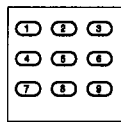


Press a NUMBERED key (1~9) to select a preset station (see steps 2 and 3 on the previous page.)

To cancel, press FM/TV on the remote or TIMER/FM twice on the unit.

Notes

Once stations are set, the selected station and current time are displayed when FM Radio mode is entered. To remove time, press DISPLAY. If DISPLAY is pressed, the unit status screen appears.


To select Audio Mode for FM Radio

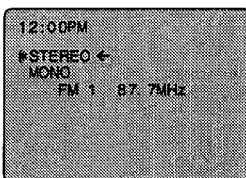

Select "STEREO" or "MONO."



Press AUDIO repeatedly in FM Radio mode.

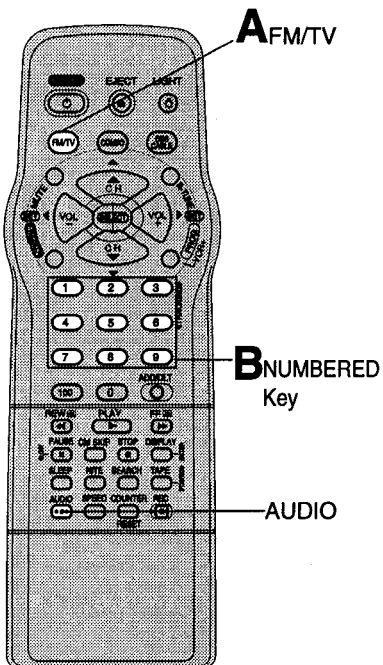

Notes

- FM radio cannot be recorded on a Video cassette.
- You may get better reception by repositioning the unit.
- You cannot select FM Radio mode during playback or record, or while a blue back (PROG, ACTION, MENU) screen is displayed.
- If SEARCH is pressed while in the FM Radio mode, you will not be able to select other stations with the NUMBERED keys.

FM Transmitter

FM Transmitter is ...


a feature whereby this unit's sound signal can be heard on your FM Radio.


Tune the same carry frequency of this unit, after the frequency of your Radio is set. (88.1 ~ 107.9MHz.) (Please choose frequency that is not used by other radio station.)


Fine-tune the frequency of your Radio that sound is clear.


FM Transmitter Carry Frequency Setup

1  **Display MAIN MENU.**
Press ACTION*.

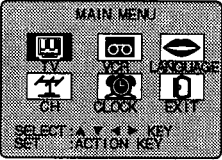2  **Display SET UP TV screen.**
1) Press Δ ∇ $\leftarrow$ $\rightarrow$ to select "TV".
2) Press ACTION to display.

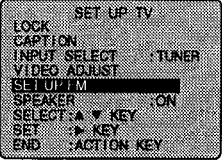3  **Select SET UP FM.**
1) Press Δ ∇ to select.
2) Press $\rightarrow$ to display.

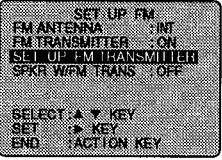4  **Select SET UP FM TRANSMITTER.**
1) Press Δ ∇ to select.
2) Press $\rightarrow$ to display.

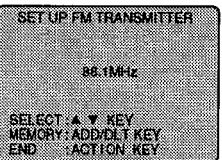5  **Set the Carry Frequency.**
1) Press CH Δ ∇ to select the desired frequency. (Each press changes frequency 200 kHz.)
2) Press ADD/HLT to set.


- Frequency is set after 5 seconds, or Press ACTION to return to step 4.

To Make Corrections, select frequency with a CH Δ ∇ , then repeat step 5.

6  **End setup**
Press ACTION four times.


36

<For Model PV-C2080 only>

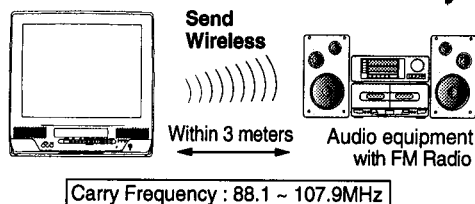

FM Transmitter Setup


1 Do "FM Transmitter Carry Frequency" steps 1~3. (See left.)

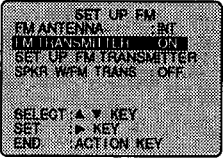2  **Select SET UP FM TRANSMITTER.**
1) Press Δ ∇ to select.
2) Press $\rightarrow$ to set "ON" or "OFF."

3  **End setup**
Press ACTION three times.

Speaker with FM Transmitter Setup

1 Do "FM Transmitter Carry Frequency" steps 1~3. (See left.)

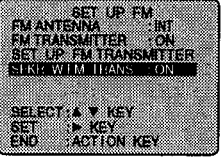2  **Select Speaker with Transmitter.**
1) Press Δ ∇ to select.
2) Press $\rightarrow$ to set "ON" or "OFF."

If you select...

- "ON" → Internal Speaker ON with Transmitter
- "OFF" → Internal Speaker MUTE with Transmitter

Notes

- This operation has effect only when "FM TRANSMITTER : ON" (see above.)
- If "SPKR W/FM TRANS : OFF", the MUTE and VOLUME key will not function.

3  **End setup**
Press ACTION three times.

Notes

- The unit will transmit sound when unit power is on and "FM TRANSMITTER : ON" is selected.
- When unit power is turned off, "FM TRANSMITTER" returns to "OFF" setting.
- "FM TRANSMITTER" can not be set and sound will not transmit when TV channels 95 - 97 are selected.
- Please put your FM Radio within 3 meters from the unit.

For assistance, call 1-800-211-PANA(7262)