 


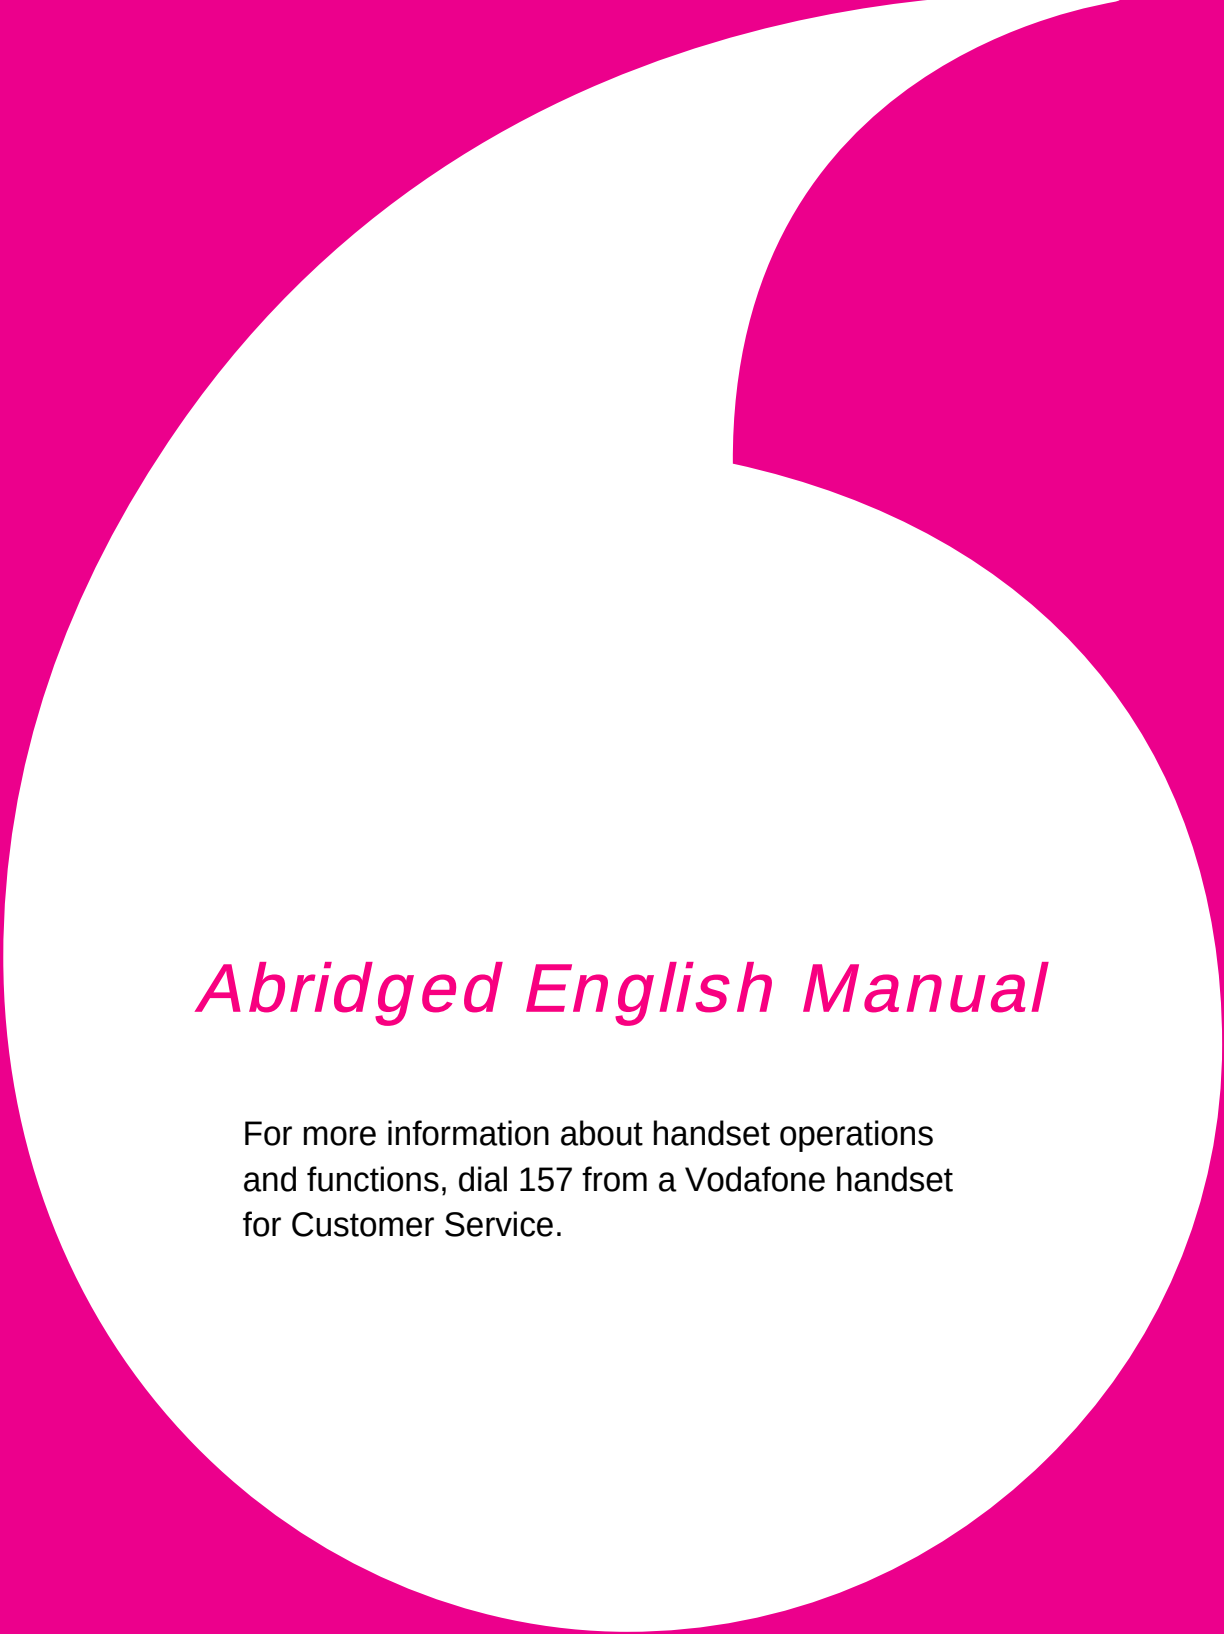


Abridged English Manual

For more information about handset operations and functions, dial 157 from a Vodafone handset for Customer Service.

Contents

Mail Services	13-3
■ Customizing Handset E-mail Address	13-4
Receiving Text Messages	13-5
■ Checking New Mail/SMS	13-5
■ Downloading Mail	13-5
■ Replying to Mail/SMS	13-6
■ Forwarding Mail/SMS	13-7
Drafting and Sending Mail/SMS	13-8
■ Drafting Mail/SMS	13-8
■ Setting Options	13-10
Web	13-11
■ Obtaining Information from Vodafone Web	13-11
Java™ Applications	13-12
Customer Service	13-13

 Mail Services



Mail Services are message communication services provided by J-Phone. Relayed via Vodafone live! Service Center, exchange messages with other Vodafone handsets, e-mail compatible handsets, PCs and other devices connected to the Internet, J-Phone's Mail Services include Mail (Packet Communications) and SMS.

"The Center" refers to Vodafone live! Service Center.

Not all handsets are compatible with all Vodafone Mail applications. Some messages may not be delivered if the receiver's handset is not compatible with the application used for sending the message.

Mail (Packet Communications)

Exchange long text messages of up to 20,000 single-byte characters with Vodafone handsets or other e-mail compatible devices connected to the Internet. Attach image, sound, e-mail compatible handsets or vSeries files such as vCard or vMessage. A separate subscription is required to receive Mail.

SMS

Exchange short text messages with Vodafone handsets (compatible with Sky Mail and SMS).

Retry Function

If the recipient's handset power is turned off or the handset is out-of-range, the Center holds Mail/SMS until the handset is accessible. Please note, if Mail/SMS is not delivered within 72 hours, it will be deleted.



Perform Retrieve Network Information (☞ Operations Manual). Otherwise not all services of Vodafone live! will be available.

Customizing Handset E-mail Address

Change the alphanumerics before @ of your handset e-mail address.

1 Open *Set Mail-Address*

- ① Press   from Standby
- ② Use  to select  *Mail* and press  OK
- ③ Use  to select *Mail Settings* and press  OK
- ④ Use  to select *Set Mail-Address* and press  OK

Follow instructions on Display. Please note, instructions are in Japanese. For assistance in English, please contact Customer Service (☎ page 13-13).

Receiving Text Messages



13

Checking New Mail/SMS

1 Mail/SMS arrives

The handset rings/vibrates when Mail/SMS is received. The number of unread Mail/SMS appears.  indicates unread Mail and  indicates unread SMS.

2 Press

3 Press OK

Downloading Mail

If a Mail message exceeds 384 single-byte characters (192 double-byte characters) or a file is attached, the message is stored on the server. Only the initial portion of the message is received as a notification.  appears to indicate the message remains on the server. Charges apply for downloading the complete message. For more information about charges, contact J-Phone Service Center ( page 13-13).

1 Press More

2 Use to select *Next* or *Mail Contents* and press OK

Next: Download complete Mail.

Mail Contents: Select items to download. Proceed to Step 3.

3 Use to select item and press

 appears next to the selected item.

To select more than one item, repeat Step 3.

4 Press Set

Replying to Mail/SMS

1 Open *Inbox*

- ① Press   from Standby
- ② Use  to select  *Mail* and press  **OK**
- ③ Use  to select *Mailbox* and press  **OK**
- ④ Use  to select *Inbox* and press  **OK**

13

2 Use to select *Unread Folder* or *Read Folder* and press **OK**

3 Use to select a Mail/SMS message and press **OK**

4 Press **Reply**

5 Use to select a reply method and press **OK**

Reply:

Create a new message.

Reply with Original Message:

Quote the original message and reply. An attached file is not sent back with the reply message.

Reply to All:

Create a new message and reply to the sender and all addressees (To/Cc). Proceed to Step 7.

Reply to All with Original Message:

Quote the original message and reply to the sender and all addressees (To/Cc). An attached file is not sent back with the reply. Proceed to Step 7.

Note

- *Reply to All* and *Reply to All with Original Message* not available for SMS or if Mail notification is selected in Step 3.
- If the address type is e-mail, proceed to Step 7.

6 Use to select *Mail* or *SMS* and press **OK**

7 Enter message

8 Press **Send**

Forwarding Mail/SMS

1 Open *Inbox*

- ① Press   /  from Standby
- ② Use  to select  *Mail* and press  **OK**
- ③ Use  to select *Mailbox* and press  **OK**
- ④ Use  to select *Inbox* and press  **OK**

2 Use to select *Unread Folder* or *Read Folder* and press **OK**

3 Use to select a Mail/SMS message and press **OK**

4 Press **Reply**

5 Use to select *Forward* and press **OK**

6 Use to select *Mail* or *SMS* and press **OK**

7 Enter address

8 Press **Send**

Drafting and Sending Mail/SMS

Drafting Mail/SMS

- 1 Press from Standby
- 2 Use to select **Mail** and press **OK**
- 3 Use to select **Write New Mail** or **Write New SMS** and press **OK**

Mail/SMS window appears.



Item	Mail*	SMS
Address	Enter up to 5 addresses (Phone number or e-mail address)	Enter 1 address (Phone number)
Subject	Enter up to 512 single-byte characters	—
Message	Enter up to 20,000 single-byte characters	Enter up to 70 single-byte characters in Standard entry mode Enter up to 160 single-byte alphanumeric characters in Alphabet entry mode
Attachment	Attach up to 20 files	—

* Up to 200 Kbytes including address, subject, message and attached file can be sent per Mail.

STEP 1

Enter an Address

- 1 Select from Mail/SMS window and press **Edit**

Note

Press **E-mail** / **TEL** to toggle between address types (e-mail or phone number) (Mail only).

- 2 Enter an address and press **OK**

Proceed to Step 3 for Mail.

Note

- To search an address from Phone Book, press from To Phone Number? window or Address List window. Use to select **Find Address**.
- To toggle To/Cc/Bcc, select an address and press **To/Cc/Bcc**. Each press of **To/Cc/Bcc** switches between the three types (Mail only).

- 3 To add another address, use  to select an empty line and press  **Edit** . Repeat Step 2
- 4 Press  **Set**

STEP 2 Enter Subject

Subject field is available only for Mail.

- 1 Use  to select  from Mail window and press  **Edit**
- 2 Enter a subject and press  **OK**

STEP 3 Enter a Message

- 1 Use  to select  from Mail/SMS window and press  **Edit**
Proceed to Step 3 for Mail.

- 2 Use  to select an entry form and press  **OK**

Standard: Enter text in Kanji/Hiragana, Katakana, Roman Letter and Number input modes.

Alphabet: Enter text in single-byte Roman Letter and Number input modes.

- 3 Enter a message and press  **OK**

STEP 4 Attach a File

Attach files to Mail.

- 1 Use  to select  from Mail window and press  **Edit**
- 2 Press  **Add**
- 3 Use  to select a folder and press  **OK**
- 4 Use  to select a file and press  **Select**
- 5 To add another file, repeat Steps 2 - 4

Note

To remove an attachment, select the attachment and press . Use  to select *Delete* and press  **OK** . Then select *Delete One* or *Delete All*.

6 Press  **Set**

STEP 5 Send

1 Press  **Send** from Mail/SMS window

Setting Options

Set options for outgoing Mail/SMS messages.


1 Open *Option Settings*

- ① Press  from Mail/SMS window
- ② Use  to select *Option Settings* and press  **OK**

2 Use to select an item and press **Change**

Item	Description
<i>Importance Level</i>	Select priority level of outgoing Mail in three levels
<i>Confirm Delivery</i>	Request Delivery Report to confirm SMS/Mail delivery status
<i>Sender</i>	Enter and set Sender name to appear on outgoing Mail
<i>Recipient</i>	Enter and set Recipient name to appear with outgoing Mail on recipient's handset, PC or other device
<i>Reply Address</i>	Enter and set a reply address other than your V801SA's address for Mail
<i>Valid for</i>	Set the duration of Retry Function ( page 13-3)
<i>Auto Resend</i>	Set to resend SMS automatically if delivery fails

 3 Perform each setting and press  **Set**



Use Web to access various sites provided by Vodafone live! contents partners. Vodafone live! Service Center searches for the requested information and sends the information, image or sound to your handset. Download up to 15,000 double-byte characters.

Access the Internet via Web

13

V801SA handset can display SSL/TLS contents. SSL (Secure Sockets Layer) and TLS (Transport Layer Security) use authentication/encoding technology to provide higher security. SSL/TLS contents send/receive encoded data to prevent eavesdropping or falsification of communication contents or identity theft. Personal information can be exchanged more securely.

Obtaining Information from Vodafone Web

1 Open *Vodafone Web*

- ① Press   from Standby
- ② Use  to select  *Web* and press  **OK**
- ③ Use  to select *Vodafone Web* and press  **OK**

2 Use to select *Global Net* and press **Select**

3 Use to select an item and press **Select**



Java™ Applications

From Web, download various Java™ applications to enjoy games or obtain real-time information.

- Use network connecting Java™ applications to enjoy on-line games or obtain real-time information.
- Java™ applications can be set to reside on Standby Display or to launch at a pre-determined time automatically.



Perform Retrieve Network Information (☞ Operations Manual). Otherwise, not all functions of Vodafone live! will be available.



If you have any questions about a Vodafone handset or services, please call General Information. For service or repairs, please call Customer Assistance.

J-Phone Service Centers

From a Vodafone handset, dial toll free at 157 for General Information or toll free at 113 for Customer Assistance

13

Call These Numbers Toll Free from Fixed Line Phones:

Subscription Areas

Hokkaido	General Information	 0088-243-157
	Customer Assistance	 0088-243-113
Aomori · Akita · Iwate · Yamagata · Miyagi · Fukushima · Niigata	General Information	 0088-245-157
	Customer Assistance	 0088-245-113
Tokyo · Kanagawa · Chiba · Saitama · Ibaraki · Tochigi · Gunma · Yamanashi · Nagano	General Information	 0088-240-157
	Customer Assistance	 0088-240-113
Aichi · Gifu · Mie · Shizuoka	General Information	 0088-241-157
	Customer Assistance	 0088-241-113
Toyama · Ishikawa · Fukui	General Information	 0088-227-157
	Customer Assistance	 0088-227-113
Osaka · Hyogo · Kyoto · Nara · Shiga · Wakayama	General Information	 0088-242-157
	Customer Assistance	 0088-242-113
Hiroshima · Okayama · Yamaguchi · Tottori · Shimane	General Information	 0088-259-157
	Customer Assistance	 0088-259-113
Tokushima · Kagawa · Ehime · Kochi	General Information	 0088-247-157
	Customer Assistance	 0088-247-113
Fukuoka · Saga · Nagasaki · Oita · Kumamoto · Miyazaki · Kagoshima · Okinawa	General Information	 0088-250-157
	Customer Assistance	 0088-250-113

