

LOCATION Free TV

Operating Instructions



LF-X1

Owner's Record

The model and serial numbers are located at the bottom of the base station. Record the serial number in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. LF-X1

Serial No. _____

Contacting Sony

 
If, after reading these operating instructions, you have additional questions related to the use of your Sony television, please call our Customer Information Services Center at 1-800-222-SONY (7669) (US residents only) or 1-877-899-SONY (7669) (Canadian residents only).

Important Safety Instructions

- 1) Read these instructions.
 - 2) Keep these instructions.
 - 3) Heed all warnings.
 - 4) Follow all instructions.
 - 5) Do not use this apparatus near water.
 - 6) Clean only with dry cloth.
 - 7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
 - 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
 - 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
 - 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
 - 11) Only use attachments/accessories specified by the manufacturer.
 - 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
 - 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

WARNING

To reduce the risk of fire or shock hazard, do not expose the TV to rain or moisture.



This symbol is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

CAUTION

Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC Radiation Exposure Statement:

The available scientific evidence does not show that any health problems are associated with using low power wireless devices. There is no proof, however, that these low power wireless devices are absolutely safe. Low power Wireless devices emit low levels of radio frequency energy (RF) in the microwave range while being used. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects might occur, but such findings have not been confirmed by additional research. The LF-X1 has been tested and found to comply with the Federal Communications Commission (FCC) guidelines on radio frequency energy (RF) exposures. The maximum SAR levels tested for the LF-X1 has been shown to be 0.87 W/kg at Body.

- * This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
- * When using the unit with 802.11a (5GHz), use in doors.

NOTIFICATION

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference with radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

FCC WARNING

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

For customers in the United States

This product contains mercury. Disposal of this product may be regulated if sold in the United States. For disposal or recycling information, please contact your local authorities or the Electronics Industries Alliance (<http://eia.org>).

Pour les clients résidant aux États-Unis

Ce produit contient du mercure. L'élimination de ce produit peut être soumise à réglementation s'il est vendu aux États-Unis. Pour obtenir des informations concernant l'élimination ou le recyclage, veuillez contacter les autorités locales ou l'Electronics Industries Alliance (<http://www.eiae.org>).


Table of Contents

Locating the Components	6
Checking the Package Contents	9
Connecting a Cable or an Antenna	10
Connecting Video/Audio Equipment	10
Turning On the Power	13
Connecting to the Internet	15
Configuring Network Settings	17
Setting Up for Mail	20
Watching TV and Video	21
Basic TV/Video Screen	22
Viewing Web Pages	23
Basic Internet Screen	24
Using E-mail	25
Basic E-mail Screen	25
Viewing Enlarged Images	28
Basic Digital Photo Album Screen	29
Specifications	30

Locating the Components

Monitor


Right side

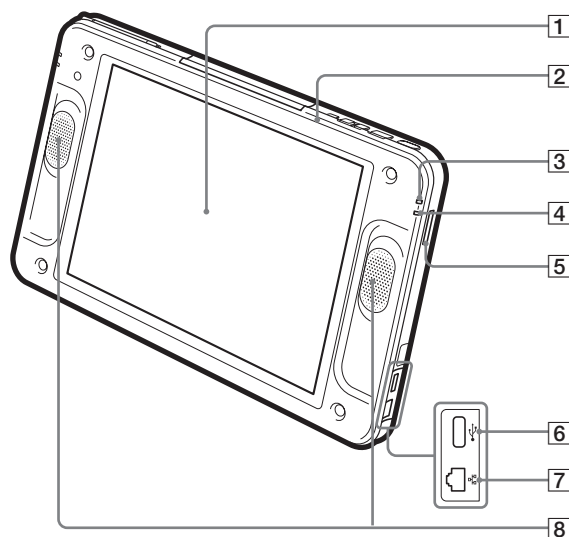


- 1** LCD (Liquid Crystal Display)
- 2** POWER indicator
Lights green when the power is on.
- 3** WIRELESS indicator
Indicates the status of wireless communications.
Lights blue: Communications using the 5 GHz channel are in progress.
Lights green: Communications using the 2.4 GHz channel are in progress.
Off: No radio waves are being output.
- 4** “Memory Stick” indicator
Lights orange while the unit and the inserted “Memory Stick” are communicating.
- 5** “Memory Stick” slot
Insert a “Memory Stick.”
- 6** USB connector
Connect a commercially available keyboard.
- 7** LAN connector
Connect a LAN cable.
- 8** Speakers

Left side

- 9** Mail Auto Receive indicator
Lights red when new e-mail is received through periodical e-mail check.
- 10** Charge indicator
Indicates the status of charging.
Lights red: Charging the battery is in progress.
Off: Charging finished.
- 11** Infrared receiver
- 12** Headphones jack (stereo minijack)
- 13** AV IN connector

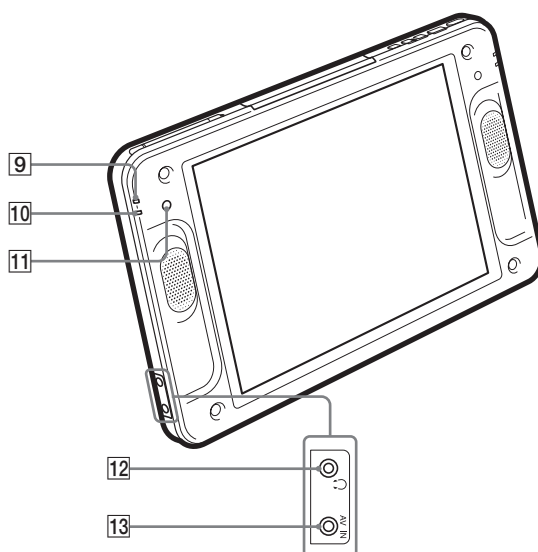


Top

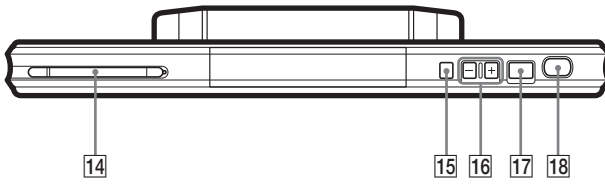

- 14** Stylus pen compartment
- 15** POWER switch
Turns on and off the power to the monitor.
- 16** VOLUME +/- buttons
Adjusts the volume of the speakers.
- 17** CAPTURE button
Saves the currently displayed screen in an album as a still image.
- 18** INDEX button
Displays the Index window.


Rear

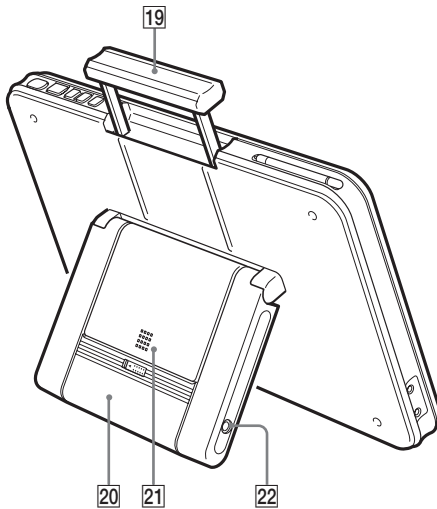

- 19** Monitor handle
- 20** Monitor stand
- 21** Battery
- 22** DC IN connector
Connect the AC power adaptor (supplied) for the monitor.


Base Station

Front

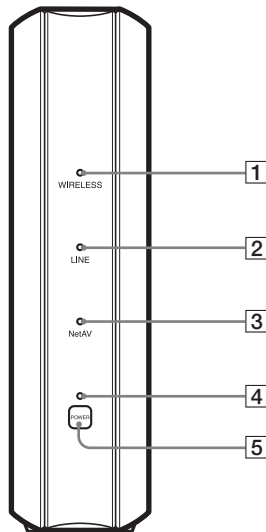

- 1** WIRELESS indicator
Indicates the status of wireless communications.
Lights blue: Communications using the 5 GHz channel are in progress.
Lights green: Communications using the 2.4 GHz channel are in progress.
- 2** LINE indicator
Indicates the connection status to an external network such as the Internet.
Blinks green: Connection is being made.
Lights green: Connection has been made.
Off: Connection has not been made.
- 3** NetAV indicator
Indicates the connection status when connection with the monitor has been made using the NetAV function.
Lights green: Connection to the NetAV has been made.
Off: Connection to the NetAV has not been made.
- 4** POWER indicator
Lights green when the power to the base station is on.
- 5** POWER switch
Turns on and off the power to the base station.

Rear

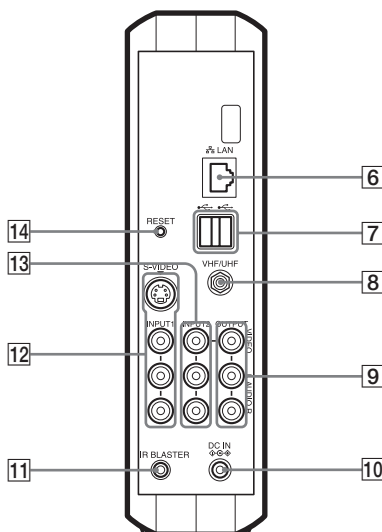

- 6** LAN connector
Connect a LAN cable.
- 7** USB connector
- 8** VHF/UHF connector
Connect an antenna connection cable.
- 9** VIDEO LINE OUTPUT (AUDIO/VIDEO) jacks
Output signals that are input to the video input 2 jack.
Connect audio and video cables.
- 10** DC IN connector
Connect the AC power adaptor (supplied) for the base station.
- 11** IR BLASTER connector
Connect the AV mouse (supplied).
- 12** VIDEO LINE INPUT1 (S-VIDEO/AUDIO/VIDEO) jacks
Connect S-video and audio cables; or connect audio and video cables.
- 13** VIDEO LINE INPUT2 (AUDIO/VIDEO) jacks
Connect audio and video cables.
- 14** BASESTATION RESET button
Returns all settings including line and wireless communications settings on the base station to the factory defaults.

Checking the Package Contents

After unpacking, check that all the following items have been included:

- Base station (× 1)
- Monitor (× 1)
- Stylus (× 1)
- BP-LX1A battery (× 1)
- AC-LX1B AC power adapter for the base station (× 1)
- AC-LX1M power adaptor for the monitor (× 1)
- Power cord (× 2)
- AV mouse (× 1)
- Base station stand (× 1)

Connecting a Cable or an Antenna

Connecting a TV and Cable/Antenna

When you have connected your TV to the CATV cable or antenna, use this hookup. With this hookup, set Cable to OFF in the Auto CH Program window of Settings TV/Video.

- 1 Turn off the power of your TV and remove the antenna or CATV cable from the antenna input of your TV.
 - 2 Plug the OUT connector of the supplied antenna connector into the antenna input of your TV.
 - 3 Plug the antenna or CATV cable removed from your TV in step 1 into the ANT connector of the supplied antenna connector.
 - 4 Plug the output cord of the antenna connector into the VHF/UHF connector of the base station.
- * If the output cord of the supplied antenna connector is short, use the optional EAC-40 TV antenna connector.

To connect the base station only to the antenna or CATV cable directly

Use the optional EAC-315 or equivalent antenna cable.

Connecting Video/Audio Equipment

Connecting a Cable Box

Use this hookup if you subscribe to a cable TV system that uses scrambled or encoded signals requiring a cable box to view all channels.

- 1 Connect the coaxial connector from your cable service to the IN connector of the cable box.
- 2 Using a coaxial cable, connect the OUT connector of the cable box to the VHF/UHF connector of the base station.

With this hookup, set Cable to ON in the Auto CH Program window of Settings TV/Video.

Caution
To change channels using the cable box, set your Wireless Home Network TV to channel from 1 to 6, depending on the cable box channel output.

Connecting a VCR and Cable/Antenna

Use this hookup if you have cable TV that does not require a cable box.

- 1 Disconnect all power sources.
- 2 Connect the CATV cable or antenna to the VHF/UHF IN connector of the VCR.
- 3 Using a coaxial cable, connect the VHF/UHF OUT connector of the VCR to the VHF/UHF connector of the base station.

-
- 4** Using the audio/video cable, connect the audio and video OUT jacks of the VCR to the VIDEO LINE INPUT AUDIO and VIDEO jacks of the base station.

Connecting a VCR and Cable Box

Use this hookup if your cable TV company scrambles some channels, but not all of them (pay channels vs. regular cable channels) and you need to use a cable box.

-
- 1** Disconnect all power sources.
-
- 2** Connect the coaxial connector from your cable service to the VHF/UHF IN connector of the cable box.
-
- 3** Using a coaxial cable, connect the VHF/UHF OUT connector of the cable box to the VHF/ UHF IN connector of the VCR.
-
- 4** Using a coaxial cable, connect the VHF/ UHF OUT connector of the VCR to the VHF/UHF connector of the base station.
-
- 5** Using the audio/video cable, connect the audio and video OUT jacks of the VCR to the VIDEO LINE INPUT AUDIO and VIDEO jacks of the base station.

Connecting a Satellite Receiver

-
- 1** Disconnect all power sources.

-
- 2** Connect the satellite antenna cable to the SATELLITE IN connector of the satellite receiver.

-
- 3** Using the audio/video cable, connect the audio and video OUT jacks of the satellite receiver to the VIDEO LINE INPUT AUDIO and VIDEO jacks of the base station.

-
- 4** Connect a coaxial cable from your cable or antenna to the VHF/UHF connector of the base station.

Connecting a Satellite Receiver and a VCR

-
- 1** Disconnect all power sources.
-
- 2** Connect the satellite antenna cable to the SATELLITE IN connector of the satellite receiver.
-
- 3** Connect the CATV cable to the VHF/UHF IN connector of the VCR.
-
- 4** Using a coaxial cable, connect the OUT connector of the VCR to the VHF/UHF connector of the base station.
-
- 5** Using the audio/video cable, connect the audio and video OUT jacks of the satellite receiver to the audio/video IN jacks of the VCR.

-
- 6** Using the audio/video cable, connect the audio/video OUT jacks of the VCR to the VIDEO LINE INPUT AUDIO and VIDEO jacks of the base station.

Connecting a Satellite Receiver and a DVD Player


-
- 1** Disconnect all power sources.
-
- 2** Connect the satellite antenna cable to the SATELLITE IN connector of the satellite receiver.
-
- 3** Using a coaxial cable, connect the VHF/UHF OUT connector of the satellite receiver to the VHF/UHF connector of the base station. Set the RF OUT selector of the satellite receiver to 3 CH or 4 CH.
-
- 4** Using the audio/video cable, connect the audio and video OUT jacks of the DVD player to the VIDEO LINE INPUT AUDIO and VIDEO jacks of the base station.
-

Turning On the Power


Connecting the Power Cord

Connect the power cord after finishing all other connections.

Connecting the power cord to the base station

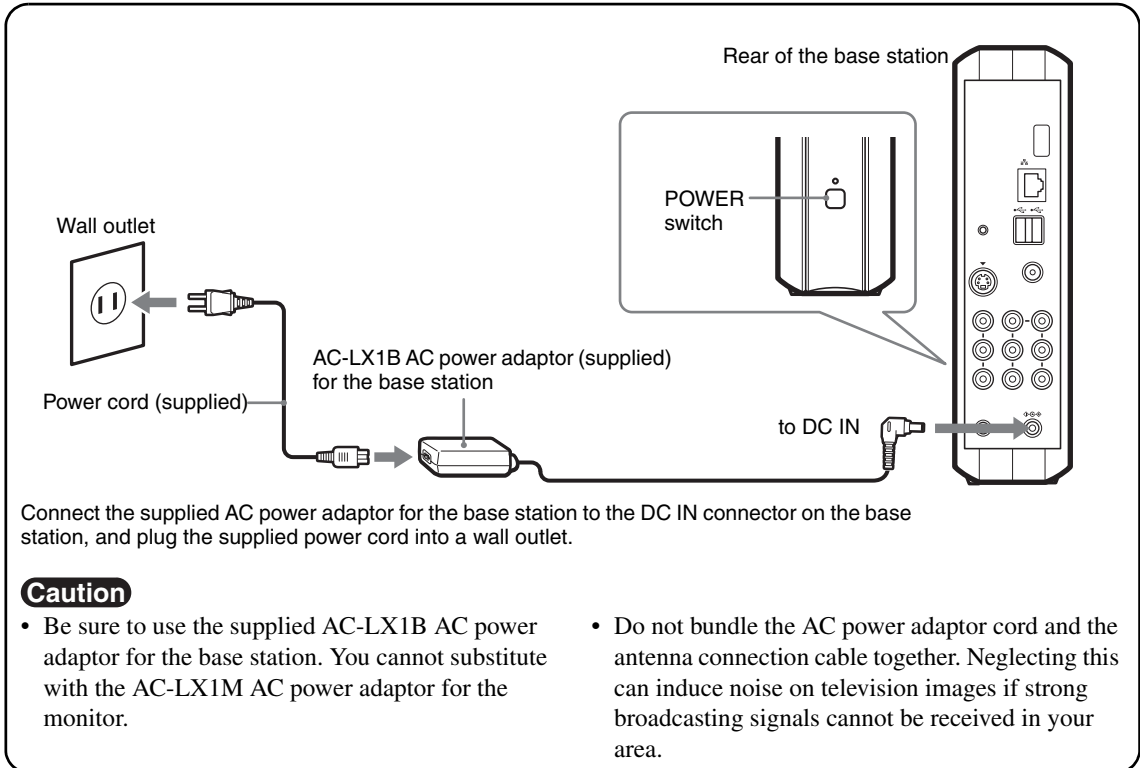


Connecting the power cord to the monitor

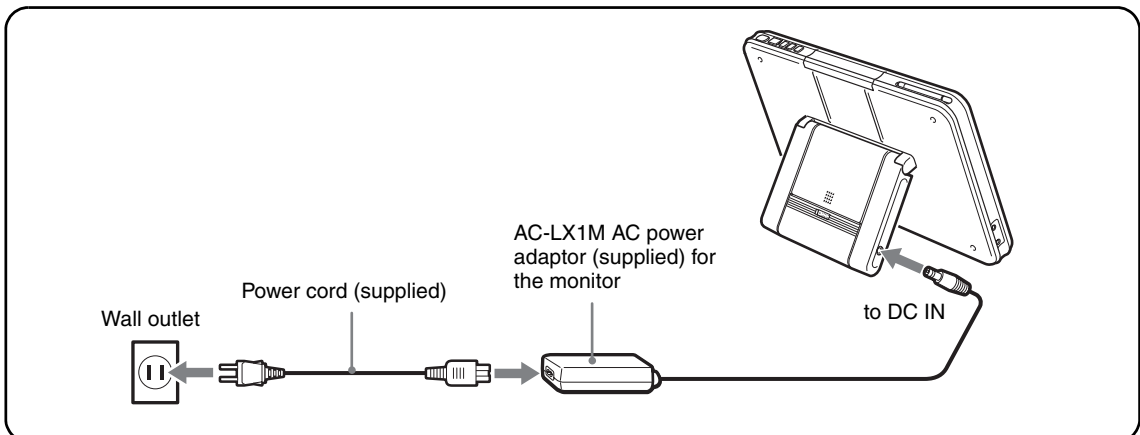


Turning On the Power


- 1 Press POWER on the front of the base station to turn on the base station.

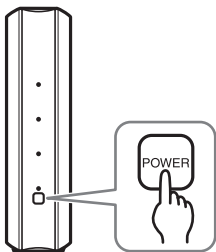

The POWER indicator on the front of the base station lights green.

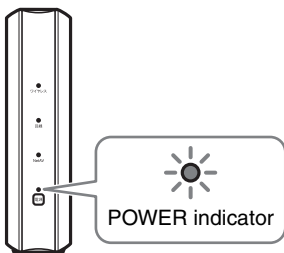

- 2 Press POWER on the top of the monitor to turn on the monitor.

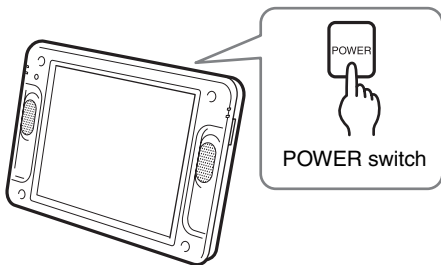


The POWER indicator on the top of the monitor lights green and the monitor shows pictures.

To turn off the power, press POWER again.

Charging the Monitor Battery

To charge the monitor battery, connect the supplied AC power adaptor for the monitor to the monitor. You can use the monitor even while it is being charged.

During charging, the  (charge) indicator on the left panel of the monitor lights red. The indicator goes off when charging is finished.

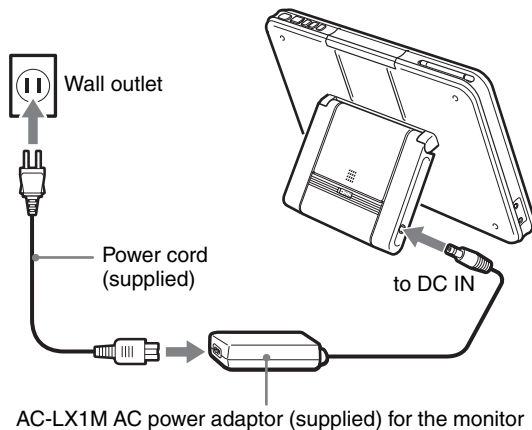


Battery charging time

Charging method	Monitor power On	Monitor power Off
Use the AC power adaptor for the monitor	About 2.5 hours	About 2 hours

Battery duration

Approximate battery life using a fully charged battery (supplied) is:
 4 hours with the minimum screen brightness selected;
 3 hours with the medium screen brightness selected; and
 100 minutes with the maximum screen brightness selected.

 A warning message appears 1 to 15 minutes before the battery is exhausted.
 The battery indicator appears on the top of the screen.




Connecting to the Internet

This section offers examples and explanations of several common methods for connecting to the Internet. Because the best connection method for you will depend on the Internet service provider and connection devices you use, check with your Internet service provider or network administrator for more information.

Connecting by LAN cable

Using a LAN cable (not supplied), connect the LAN port on the unit to your cable modem, ADSL modem, or dial-up router.


Connect to the Ethernet port in the wall if you live in an Internet-ready residential complex.

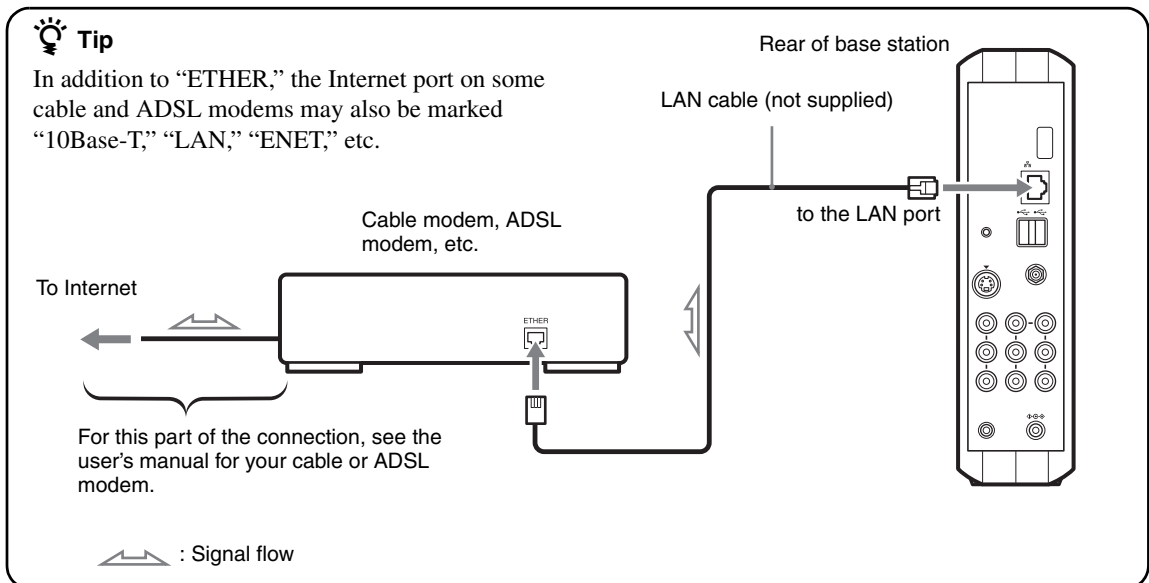

Caution

- LAN cables come in two kinds: straight-wired and cross-wired. The type of cable you should use depends on what kind of cable modem or ADSL modem you have. See the user's manual for your modem for more information.
- For details on setting up the connection, cross-refer to the user's manual for your cable modem or ADSL modem. If you are unclear on some point regarding your modem, contact your cable television company, ADSL network administrator, or Internet service provider.

Connecting several devices to a modem with a router

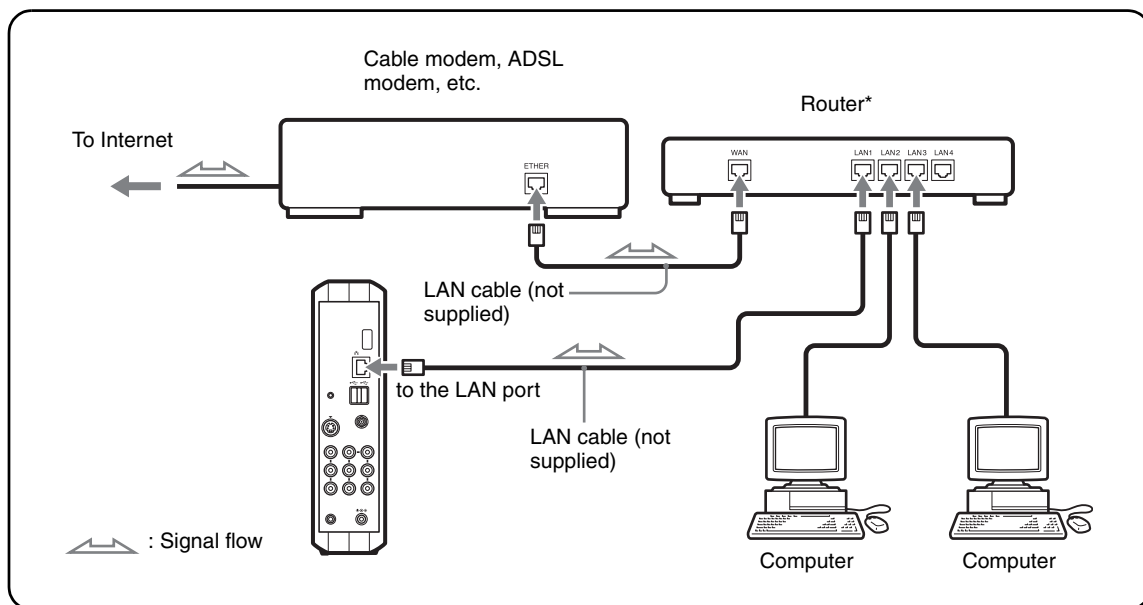

Caution

- Depending on your Internet service contract, you may not be able to connect multiple devices, such as several computers and an Airboard. Check with your cable television company, ADSL network administrator, or Internet service provider.
- To determine what kind of LAN cable to use, see the user's manual for your router, cable modem, or ADSL modem.
- For details on setting up the connection, cross-refer to the user's manual for your router, cable modem, or ADSL modem.

Configuring router settings

- If the user's manual for your router directs you to use a web browser (Internet Explorer or Netscape Navigator) to access the router's settings screen, input the router's IP address in the Airboard's Internet address field to display the settings screen. See page 23 for more on how to input to the address field. You must also configure network settings for the Airboard. See page 17 for more on how to configure network settings.
- For more information on configuring router settings, refer to the user's manual for your device.
- The settings for some routers cannot be configured from the Airboard's Internet screen.

* What is a router?

A router is a piece of equipment that relays signals between networks. Using a router allows several devices to share one Internet connection. See page 17 for more on how to configure router settings.

Configuring Network Settings

Configure your network settings according to the documents provided by your Internet service provider.

Before configuring network settings

Check that:

- The base station power is turned on.
- The base station and monitor have established a wireless connection.
- The LAN cable is connected to the base station, when connecting by LAN.
- The telephone cord is connected to the base station, when connecting by analog phone line (USB-PSTN modem adapter UNA-PSTN: not supplied).

Connecting via LAN (DHCP)

With this type of Internet connection a DHCP server automatically assigns the “IP Address,” “Subnet mask,” and “Default gateway.” Depending on the DHCP server, “DNS” may also be automatically assigned.



Tip

Follow the steps below to connect to the Internet when using a router as well.

- 1** Press the [Index] button on the upper part of the monitor.
The index screen appears.

- 2** Select [Internet] from the index screen.
The Internet connection is established when the Airboard web page, which is set as the default homepage, appears.

If the default homepage is not displayed and a connection error message appears saying the Airboard is unable to connect to the Internet server,

go on to step 3 and verify the automatic connection (DHCP) settings.

- 3** Press [Settings] on the lower right of the screen.
The [Settings] window appears.

- 4** Press [Internet connection].
The [Internet connection] window appears.


- 5** Press [Base station].
The [Base station] window appears.

Caution

[Base station] cannot be selected if the operating environment is such that the monitor and base station cannot establish a wireless connection.

- 6 Select [Settings] to the right of [LAN (DHCP/Manual IP address setting)].

LAN (DHCP/Manual IP address setting)

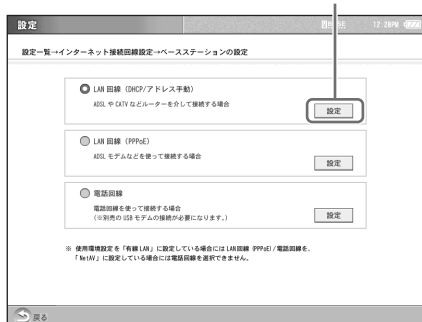

The [LAN (DHCP/Manual IP address setting)] window appears.
Verify that values have been assigned for the IP address, etc.

- 7 Press [OK].


Connecting via LAN (manually assigning an address)

- 1 Perform steps 3 through 6 of “Connecting via LAN (DHCP)” on page 17 to display the [Base station] window.

- 2 Select [Settings] to the right of [LAN (DHCP/Manual IP address setting)].

- 3 Refer to the documents provided by your Internet service provider to input the proper values for “IP Address,” “Subnet mask,” “Default gateway,” “DNS 1,” “DNS 2,” and “Host name,” and then press [OK].


Remove this check mark.

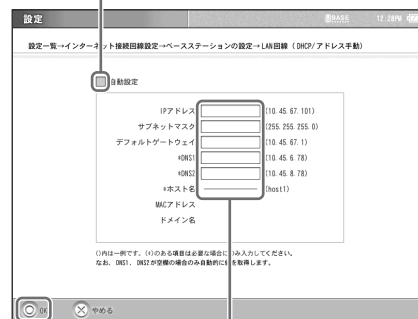

OK Input while referring to documents from your provider.

- 4 Select [LAN (DHCP/Manual IP address setting)].

LAN (DHCP/Manual IP address setting)

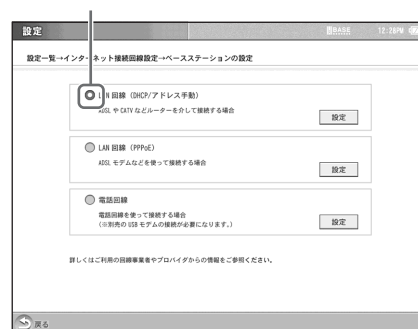


- 5 Press [OK].
This sets the “LAN (DHCP/Manual IP address setting).”

- 6 Press [Back].

- 7 Press [Settings] and then [End].

Connecting via LAN (PPPoE)


- 1 Press [Settings] on the lower right of the screen.
If the [Settings] window is not displayed on the lower right of the screen, touch the screen lightly and it will appear.
- 2 Press [Internet connection].
- 3 Press [Base station].
- 4 Press [Settings] to the right of [LAN (PPPoE)].
- 5 Input each item while referring to the documents provided by your Internet service provider, and then press [OK].

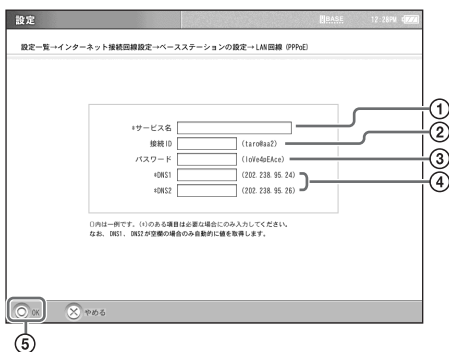

- ① Input your service provider's name.
- ② Input your connection ID.
- ③ Input your password for connecting to the Internet.
- ④ Input values for DNS1 and DNS2.
- ⑤ Press [OK].

- 6 Press [LAN (PPPoE)].

LAN (PPPoE)

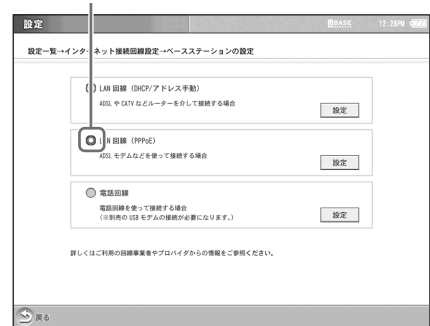

- 7 Press [OK].
This sets the "LAN (PPPoE)".
- 8 Press [Back].
- 9 Press [Settings] and then [End].

Setting Up for Mail

You cannot send and receive mail (e-mail) unless you program the unit with information about your Internet Service Provider (ISP). Program the necessary information according to the document supplied by the provider.

- ⑧ Specify the interval for checking if there is new mail, in the range from 0 to 999 minutes.
- ⑨ Select the size of characters for mail text on the screen.
- ⑩ Press [OK].


5 Press [Settings], then press [End].

- 1 Press [Settings] at the bottom right of the screen.
If [Settings] is not shown, touch anywhere on the screen to make it appear.

- 2 Press [e-mail].

- 3 Press [Send/Receive].

- 4 Enter into the individual fields, then press [OK].

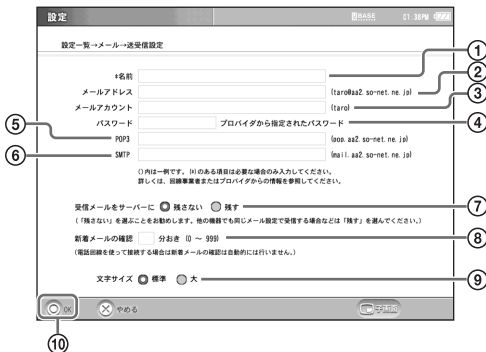


- ① Enter a name.
- ② Enter a mail address.
- ③ Enter the mail account.
- ④ Enter the mail password specified by the provider.
- ⑤ Enter the POP3 server.
- ⑥ Enter the SMTP server.
- ⑦ Specify whether to leave received mail in the server.
Normally, set so that received mails are not left in the server.

Watching TV and Video

Open the Index window, then select a desired channel.

To adjust the volume, press VOL +/- on the top of the monitor.

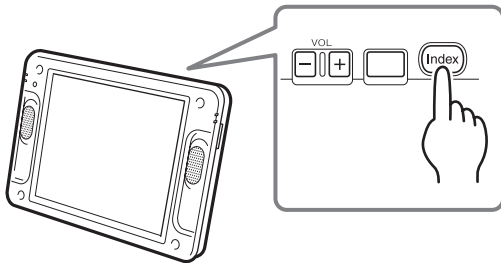

Tips

- You can turn on the monitor by pressing POWER on the remote control. You may directly press channel number buttons or [CH +/-] on the remote control to turn on the monitor and select a channel.
- Pressing [VOL -] on the monitor for 2 seconds silences the sound quickly.

To select a channel from the TV channel list

Touch anywhere on the screen to display the TV channel list, then select a desired channel.


The TV channel list disappears automatically 5 seconds after the screen is operated.

TV channel list



Basic TV/Video Screen

Parts and controls on the TV/Video screen

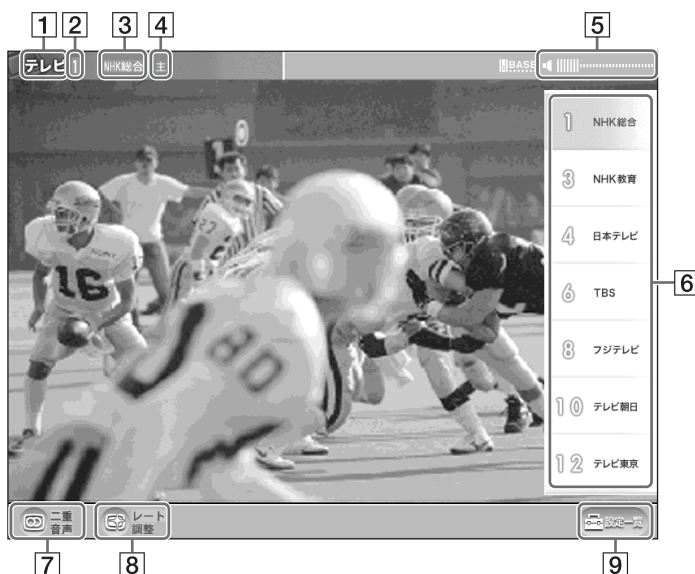

- 1** TV/video mode indication
- 2** TV channel number
- 3** TV station name
- 4** Multi-language mode indication
When a multi-language program is tuned in, [Main], [Sub], or [Main/Sub] is displayed. When a stereo program is tuned in, [Stereo] is displayed.
- 5** Mute/volume level indication
- 6** TV channel list
This appears when you touch anywhere on the screen showing a TV program and allows you to select a channel. The list disappears automatically 5 seconds after the screen is operated.
- 7** Multi-language mode button
Switches among the multi-language modes when a multi-language program is tuned in.
- 8** Rate adjustment button
Optimizes picture quality according to the ambient radio wave conditions.
- 9** [Settings]
Displays the [Settings] window for various setups. Selecting [TV/Video] in the [Settings] window allows you to adjust the quality of picture and sound or manually set up channels, for example.

About guide bar display

When a TV or video mode is selected, the guide bars appear for 5 seconds then disappear. Touching anywhere on the screen displays the top and bottom guide bars and a TV channel list.

Caution

This monitor does not support non-interlace signals used for monitors such as personal computer screens.

Viewing Web Pages

This section explains how to open the Internet window and display web pages. Let us assume that you will access the Sony's web site whose URL is <http://www.sony.com/>.

- 1 Open the [Index] window, then press [WWW].
The Internet window appears.

- 2 Press a new tab, then press the URL entry field.

New tab URL entry field



- 3 Using the keyboard, enter <http://www.sony.com/>, then press [End].

アドレス: [http://](http://www.sony.com/)

Basic Internet Screen

Parts and Controls on the Internet Screen



- 1 Internet icon
Moves when a web page is being downloaded.
- 2 Internet indication
- 3 URL entry field
The URL of a currently opened web page is displayed. To open another web page, press a new tab, then enter a URL.
- 4  (SSL) icon
Appears when a web page handling SSL (Secure Socket Layer) is currently opened.
- 5 [Favorites]
Displays the Favorites list panel for registering the address of the currently opened web page. It also displays the list of registered URLs.
- 6 [History]
Displays the list of web pages that you have opened before.
- 7 [Save]
Saves the currently opened web page. You can open saved web pages without accessing to the Internet.
- 8 [Close Tab]
Closes the page of the currently displayed tab and the tab becomes blank again.
- 9 Tab
If you select a link that opens using another window, the linked web page is opened under a new tab. Six tabs are available in total. Just after an Internet connection, all tabs other than the leftmost one are blank.

Using E-mail

You can compose, send, and receive e-mail by switching to the e-mail screen.


Select e-mail.



The e-mail screen appears.

Basic E-mail Screen

Inbox/Outbox screen

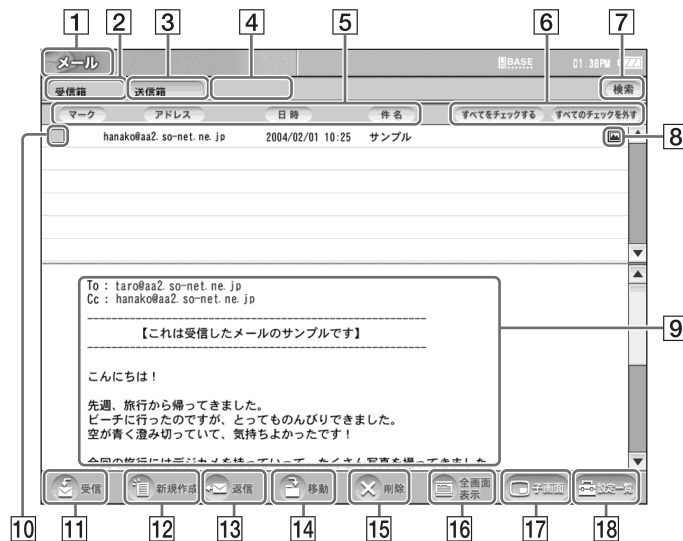

1 E-mail display

2 Inbox tab


Displays a list of incoming e-mail (i.e., e-mail that was sent to you).
A preview of e-mail content for the selected list is continually displayed in the lower frame.

3 Outbox tab

Displays a list of sent e-mail and saved drafts of unsent e-mail.
A preview of e-mail content for the selected list is continually displayed in the lower frame.

- 4** Filing cabinet tab
Appears when a “Memory Stick” is inserted.
Allows you to arrange the e-mail you have sent and received.
- 5** Sort button
Allows you to sort your e-mail by each attribute: address, date and time, or subject. With each touch of the sort button, e-mail is sorted in ascending or descending order.
- 6** Check all/Uncheck all
[Check all] places a check mark next to all e-mails in the displayed tab, and [Uncheck all] removes all check marks.
- 7** Search
Allows you to search for a designated tab by keyword.
- 8** Attached image icon
Appears when an image file is attached to an e-mail. When a non-image file is attached, the paper clip icon appears.
- 9** Preview display
Displays highlighted e-mail contents in the inbox, outbox, and filing cabinet tabs.
- 10** Check box
A check mark is placed in or removed from this box each time it is pressed.
- 11** Receive
Checks for new incoming e-mail.
- 12** Compose New
Creates a new blank e-mail.
- 13** Reply (Resend, Edit)
Depending on the content of the e-mail displayed in the preview, [Reply], [Resend], and/or [Edit] will be displayed.
Reply: Displays a screen for replying to e-mail.
Resend: Displays an editing screen for resending sent e-mail.
Edit: Displays a screen for editing e-mail content.
- 14** Move (move checked e-mail)
Moves checked e-mail messages to a designated location, such as the filing cabinet.
- 15** Delete (delete checked e-mail)
Deletes checked e-mail messages and any files attached to them.
- 16** Full-screen display
Displays the main e-mail text at full-screen size.
- 17** Sub-screen
Displays television or video in a sub screen.
- 18** Settings
Displays the [Settings] window used to change settings.
Selecting [E-mail] on the [Settings] window allows you to change on-screen font size and other settings.

E-mail composition screen

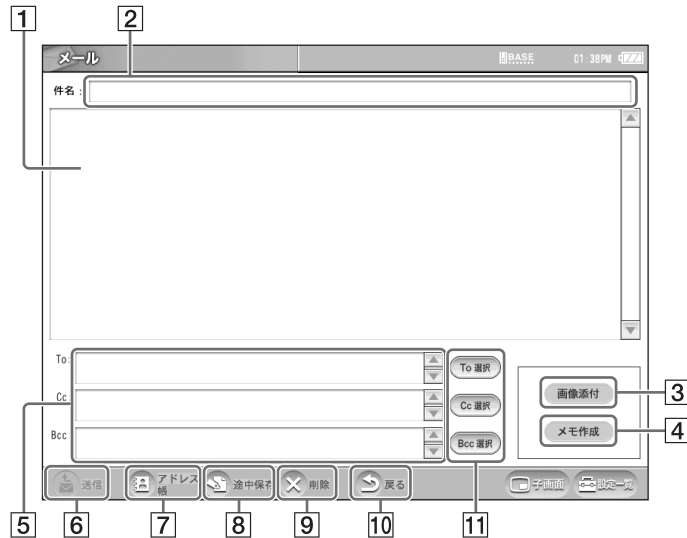

- | | |
|--|--|
| <p>1 Main text field
The main e-mail text is input here.</p> <p>2 Subject
The title of the e-mail is input here.</p> <p>3 Image attachment
This attaches an image to the e-mail.</p> <p>4 Create memo
This attaches a hand-written picture or note to the e-mail.</p> <p>5 Address field
The e-mail address of the addressee is input here.</p> <p>6 Send
Immediately sends the composed e-mail message.</p> | <p>7 Address book
Displays the address book.</p> <p>8 Save draft
Saves the e-mail currently being composed to the outbox.</p> <p>9 Delete
Deletes the displayed e-mail.</p> <p>10 Back
Cancels e-mail composition and returns to the inbox or outbox. (Saves a draft of e-mail that was in mid composition or that failed to send.)</p> <p>11 Select To, Select Cc, Select Bcc
Displays the address book so you can select an address for these fields.</p> |
|--|--|

Viewing Enlarged Images

- 1 Directly press the image you want to enlarge.

Press an image (do not press the ☐.)



An enlarged view of the image appears.


Caution

It may take several tens of seconds to enlarge some images. During this interval you cannot perform other operations.

Tip

You can also enlarge an image by pressing it, pressing [Details], and then pressing [Enlarged display] on the [Image Details] screen that appears. Lightly pressing the enlarged image, in this case, returns you to the [Image Details] screen.

Gliding your finger from left to right over the screen will display the next image, and gliding it from right to left will display the previous

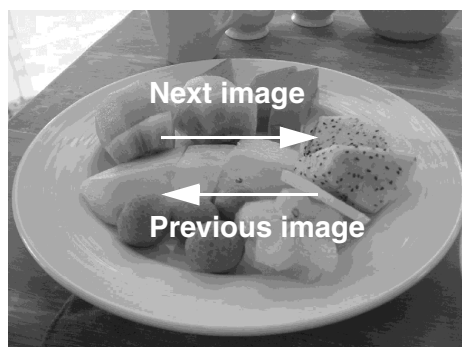

- 2 To quit the enlarged view, lightly press the image.
This returns you to the [Image list] screen.

Tip

You can also return to the [Image list] screen by pressing INDEX on the monitor.

Basic Digital Photo Album Screen



- 1** Digital photo album display
- 2** Storage cabinet tab
Displays a list of images saved on the Airboard or a "Memory Stick".
- 3** Filing cabinet tab
Appears when a "Memory Stick" is inserted. Allows you to arrange the images you have saved.
- 4** Check all/Uncheck all
[Check all] places a check mark next to all e-mails in the displayed tab, and [Uncheck all] removes all check marks.
- 5** Image
Pressing an image directly will display an enlarged view. For movies, a direct press begins playback.
- 6** Sort button
Images can be sorted by name or date and time of modification. With each press of the sort button, images are sorted in ascending or descending order.
- 7** Check box
A check mark is placed in or removed from this box each time it is selected.
- 8** Slideshow
Automatically displays in succession all images in the digital photo album or all selected images.
- 9** Drawing
Allows you to draw pictures and write text by hand.
- 10** Send
Attaches the selected images to e-mail.
- 11** Details
Allows you to change the selected images' names, switch to enlarged display (or movie display), and rotate images. Also displays image attributes, such as file size, date and time of creation, and date and time of modification.
- 12** Copy
Copies the selected images to the Airboard or a "Memory Stick".
- 13** Delete
Deletes the selected images.
- 14** Settings
Displays the [Settings] window used to change settings.
Selecting [Digital Photo Album] on the [Settings] window allows you to change the filing cabinet name and other settings.

Specifications

System

Television system	NTSC
Channel coverage	VHF: 2 - 13, UHF: 14 - 69, CATV: 1 - 125
Tuning system	PLL synthesizer
Screen size	12.1 inches 24.9 × 18.7 cm (9 ⁷ / ₈ × 7 ³ / ₈ inches), 31.1 cm (12 ¹ / ₄ inches) (w/h, diagonal)
Display	Transparent TN LCD panel
Drive system	TFT Active matrix drive system
Effective picture element ratio	99.99 %s
Effective picture elements	Horizontal: 800 dots Vertical: 600 lines
Speaker	4 × 2.8 cm (1 ⁵ / ₈ × 1 ¹ / ₈ inches) oval (2)
Audio output	0.6 W × 2, 8 ohms

Web browser

HTML	HTML 4.01, XHTML Basic 1.0 Frame, JavaScript, SSL (V2/3), TLS 1.0, JavaApplet (PJA 1.2)
Image file	GIF, JPEG, PNG
Flash	Ver. 6

E-mail

Transmit protocol	SMTP
Receive protocol	POP3

Album

Album file	GIF, JPEG, PNG, BMP, MPG (MPEG1 movie)
------------	---

Inputs/outputs

Base station

VHF/UHF	75-ohm connector
VIDEO LINE INPUT1	S-video: 4-pin mini DIN Y: 1 Vp-p, 75 ohms unbalanced, sync negative C: 0.286 Vp-p (burst), 75 ohms Video: Phono jack, 1 Vp-p, 75 ohms unbalanced, sync negative Audio: Phono jack, 2-channel, 500 mVrms, Impedance: 47 kohms

VIDEO LINE INPUT2

Video: Phono jack, 1 Vp-p, 75 ohms unbalanced, sync negative Audio: Phono jack, 2-channel, 500 mVrms, Impedance: 47 kohms

VIDEO LINE OUTPUT

Video: Phono jack, 1 Vp-p, 75 ohms unbalanced, sync negative Audio: Phono jack, 2-channel, 500 mVrms, Impedance: less than 5 kohms
--

DC IN	12 V DC
ETHERNET	10BASE-T/100BASE-T connector (1)
IR BLASTER	Minijack (1)
USB	USB 1.1 (2)

Monitor

DC IN	16 V DC
Headphones	Stereo minijack Impedance: 16 ohms or more
USB	USB 1.1 (1)
ETHERNET	10BASE-T/100BASE-T connector (1)
AV IN	Minijack (1)

AC power adaptor

AC-LX1B (for the base station)

Power requirements	100 V - 240 V AC, 50/60 Hz
Rated output	DC OUT: 12 V DC, 3 A
Operating temperature	32 to 95 °F (0 to 35 °C)
Storage temperature	14 to 140 °F (–10 to +60 °C)
Dimensions	Approx. 99.5 × 42.5 × 25.5 mm (4 × 1 ¹¹ / ₁₆ × 1 ¹ / ₁₆ inches) (w/h/d, not including projecting parts)
Mass	200 g (7 oz)

AC-LX1M (for the monitor)

Power requirements	100 V - 240 V AC, 50/60 Hz
Rated output	DC OUT: 16 V DC, 3.75 A
Operating temperature	32 to 95 °F (0 to 35 °C)
Storage temperature	14 to 140 °F (–10 to +60 °C)
Dimensions	Approx. 125 × 30 × 60 mm (5 × 1 ³ / ₁₆ × 2 ³ / ₈ inches) (w/h/d, not including projecting parts)
Mass	300 g (11 oz)

Battery BP-LX1A

Rated voltage	10.8 V DC
Capacity	4,400 mAh
Type	Lithium ion battery
Dimensions	Approx. 123.6 × 88.0 × 20.5 mm (4 ⁷ / ₈ × 3 ¹ / ₂ × ¹³ / ₁₆ inches) (w/h/d)
Mass	310 g (11 oz)
Operating temperature	32 to 95 °F (0 to 35 °C)
Storage temperature	14 to 95 °F (–10 to +35 °C)

General

Power consumption

Base Station: Approx. 12 W (watching TV)
Approx. 0.6 W (power off, using AC power adaptor)

Monitor: Approx. 50 W
(watching TV, using AC power adaptor)
Approx. 24 W
(watching TV, using battery)
Approx. 39 W
(power off, charging battery)

Operating temperature
32 to 95 °F (0 to 35 °C)

Storage temperature
14 to 113 °F (–10 to +45 °C)

Dimensions

Base Station: 5.8 × 22.2 × 18.0 cm
(2 ³/₈ × 8 ³/₄ × 7 ¹/₈ inches)
(w/h/d, not including projecting parts)

Monitor: 36.5 × 24.0 × 3.1 cm
(14 ³/₈ × 9 ¹/₂ × 1 ¹/₄ inches)
(w/h/d, not including projecting parts)

Mass

Base Station: Approx. 550 g (1 lbs 3 oz)
Monitor: Approx. 2.4 kg (5 lbs 5 oz),
including the battery

Communication range

Indoors: approx. 30 m (98 feet)
(depending on the environments)

Standards IEEE802.11 a/b/g

Frequency range

2.4 GHz, 5 GHz

Modulation Direct Sequence Spread Spectrum (DSSS)
Orthogonal Frequency Division Multiplexing (OFDM)

Power requirements

AC power adaptor: 100-240 V
AC, 50/60 Hz
Battery: 4,400 mAh

Battery duration Approx. 4 hours
(with the minimum screen
brightness)
Approx. 3 hours
(with the medium screen
brightness)
Approx. 100 minutes
(with the maximum screen
brightness)

Battery charging time
Approx. 2.5 hours
(monitor power on)
Approx. 2 hours
(monitor power off)

Supplied accessories
BP-LX1A battery (× 1)
Stylus (× 1)
AC-LX1B AC power adapter
for the base station (× 1)
AC-LX1M AC power adaptor
for the monitor (× 1)
Power cord (× 2)
AV mouse (× 1)
Base station stand (× 1)

