

Figure 7
General Appearance of the EUT



Figure 8
Inside Configuration of the EUT

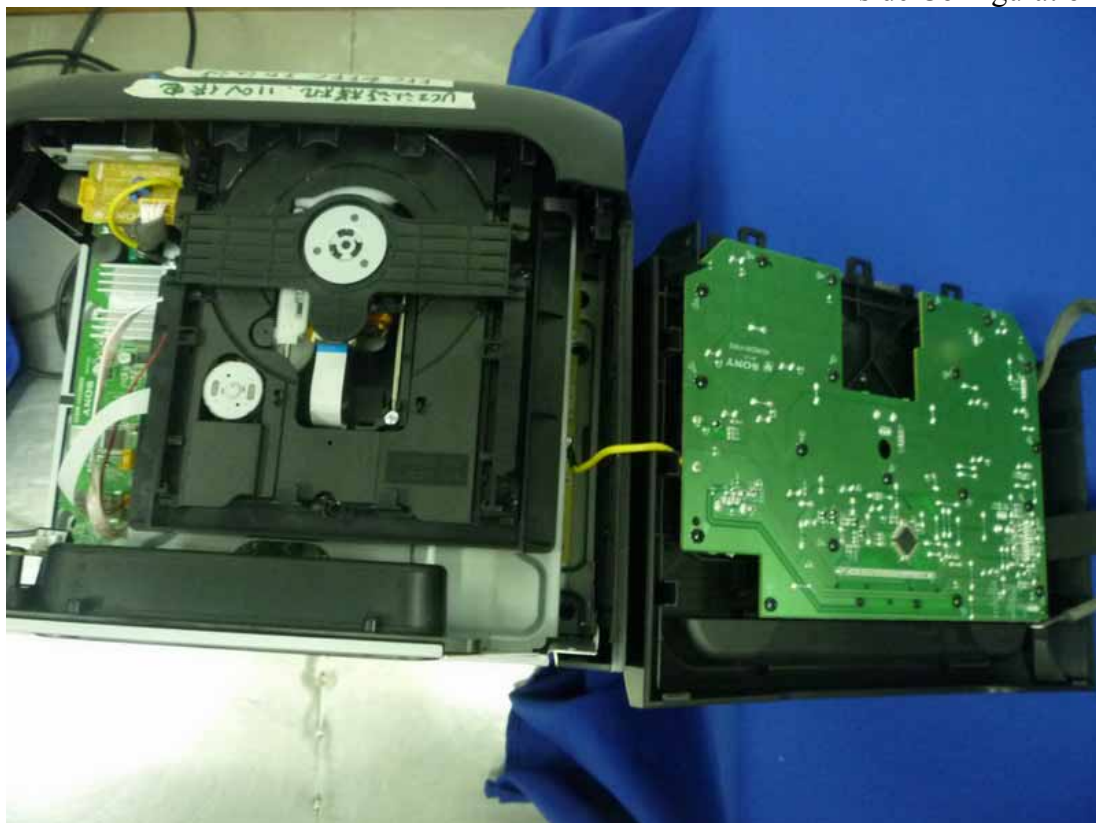


Figure 9
Inside Configuration of the EUT

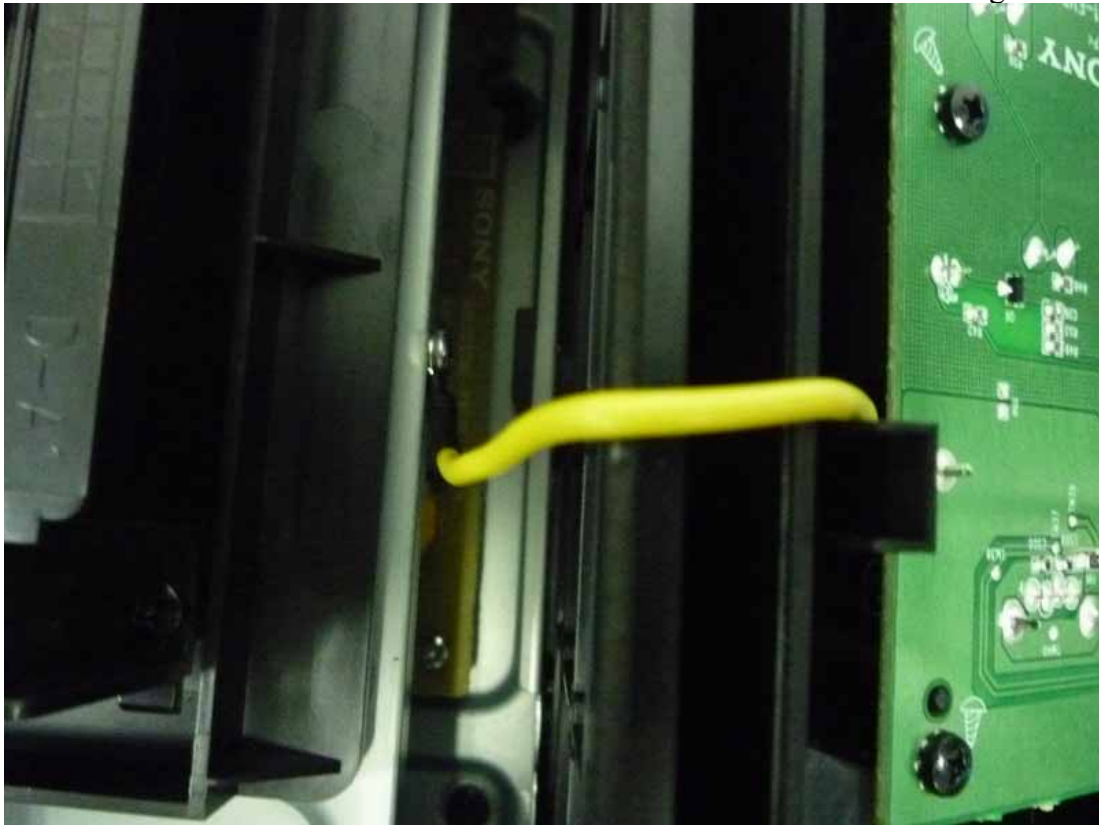


Figure 10
Inside Configuration of the EUT



Figure 11
Inside Configuration of the EUT

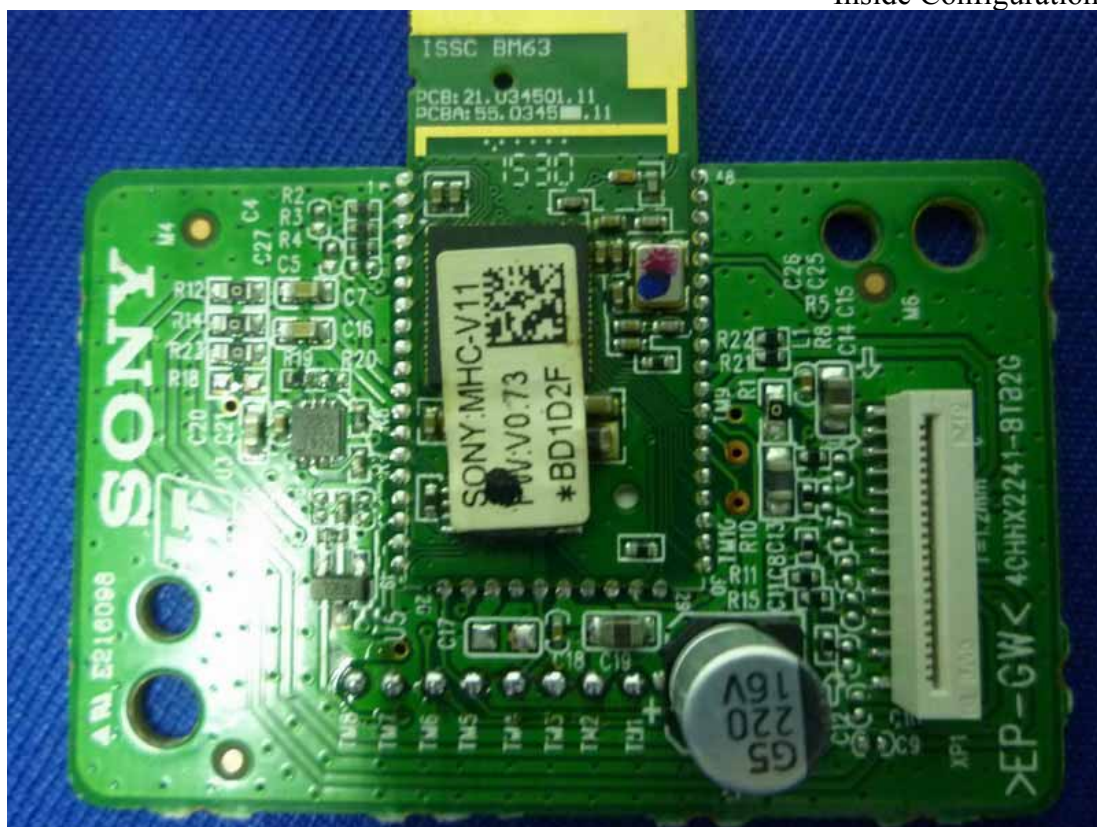


Figure 12
Inside Configuration of the EUT



Figure 13
Inside Configuration of the EUT

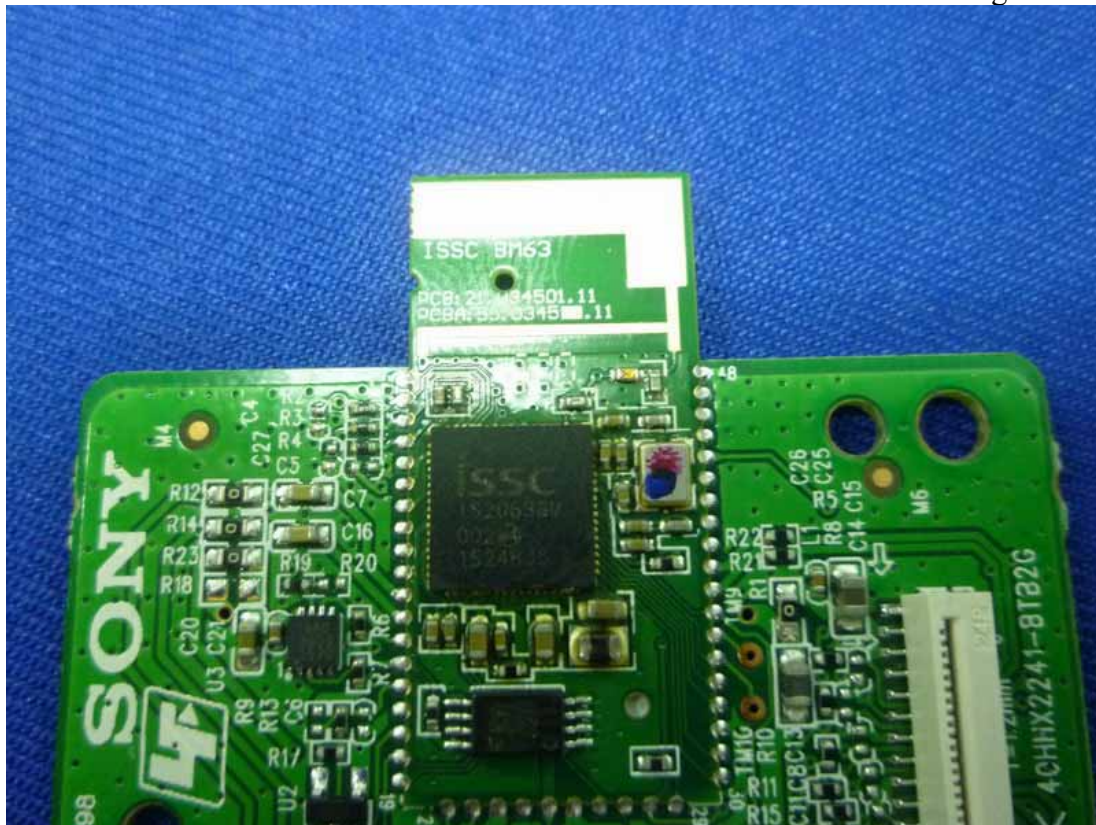


Figure 14
Inside Configuration of the EUT

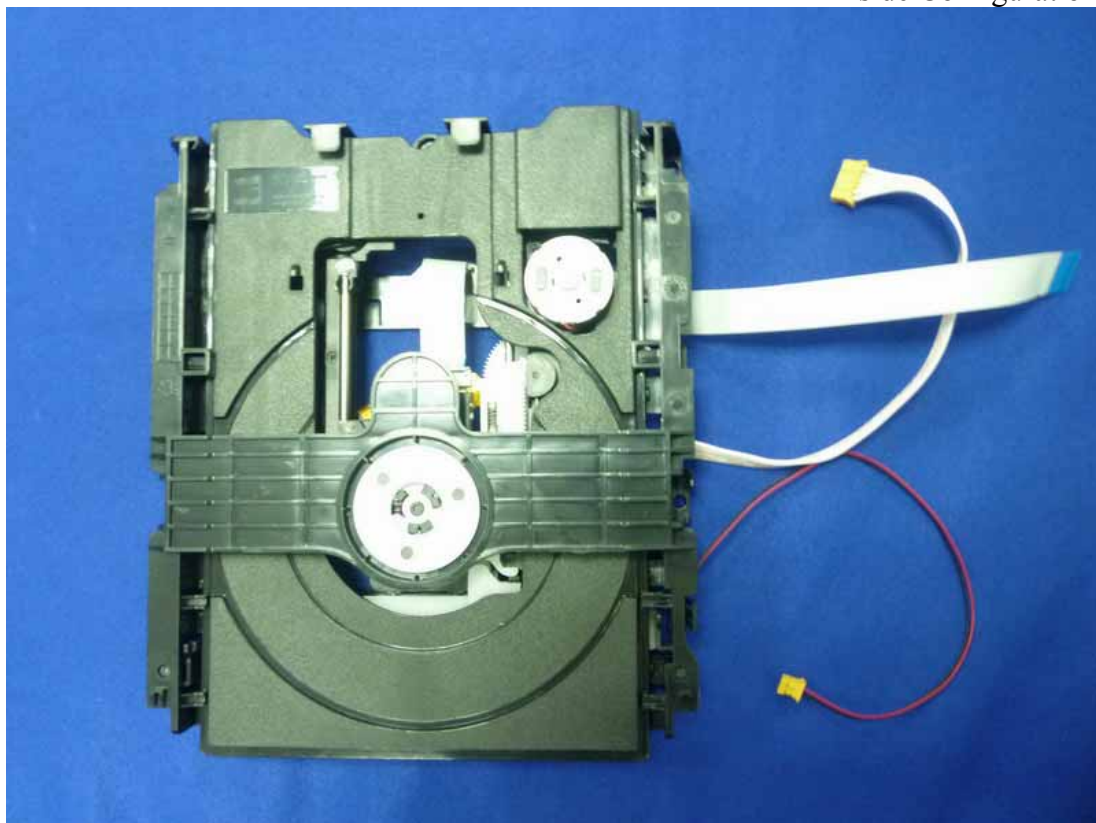


Figure 15
Inside Configuration of the EUT

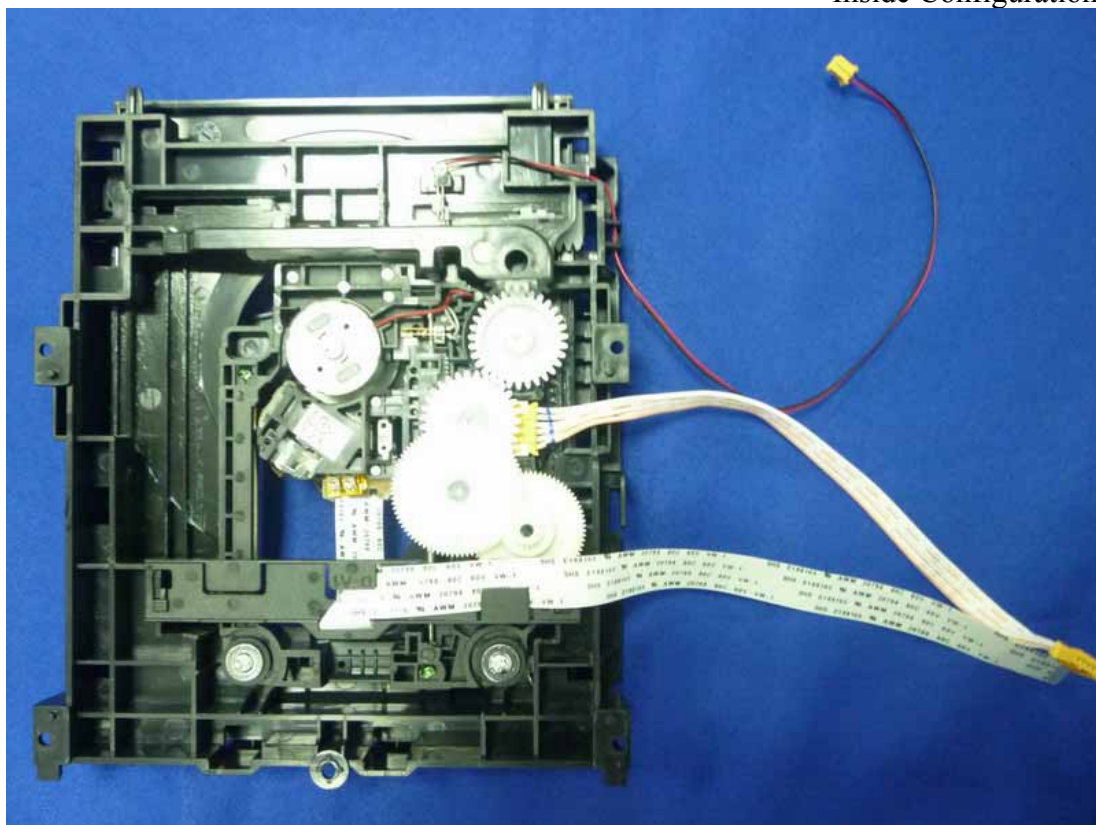


Figure 16
Inside Configuration of the EUT



Figure 17
Inside Configuration of the EUT

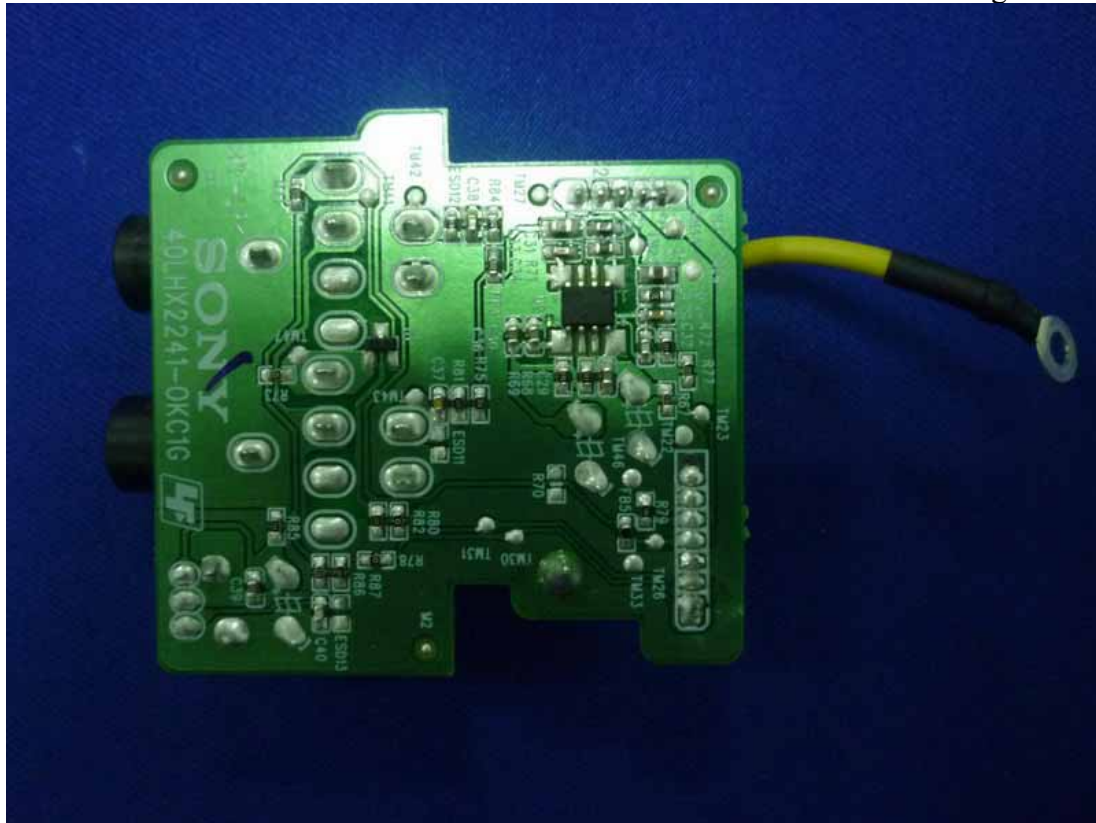


Figure 18
Inside Configuration of the EUT

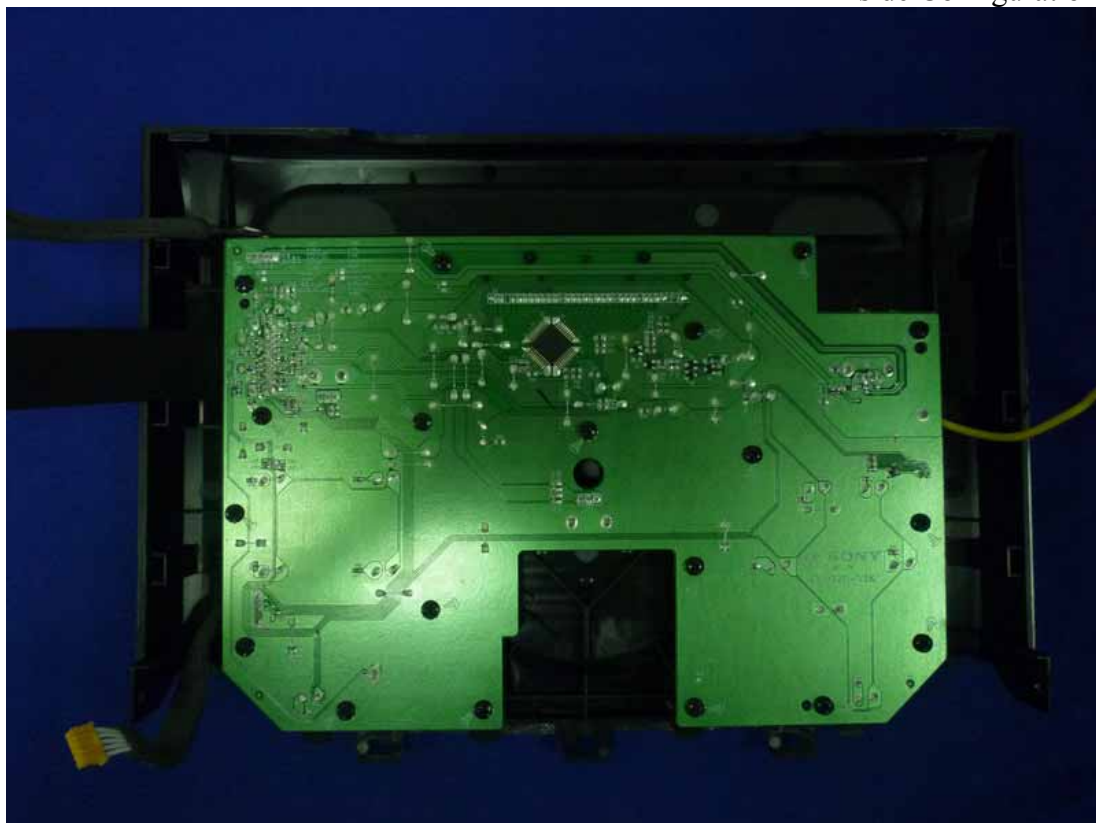


Figure 19
Inside Configuration of the EUT



Figure 20
Inside Configuration of the EUT



Figure 21
Inside Configuration of the EUT

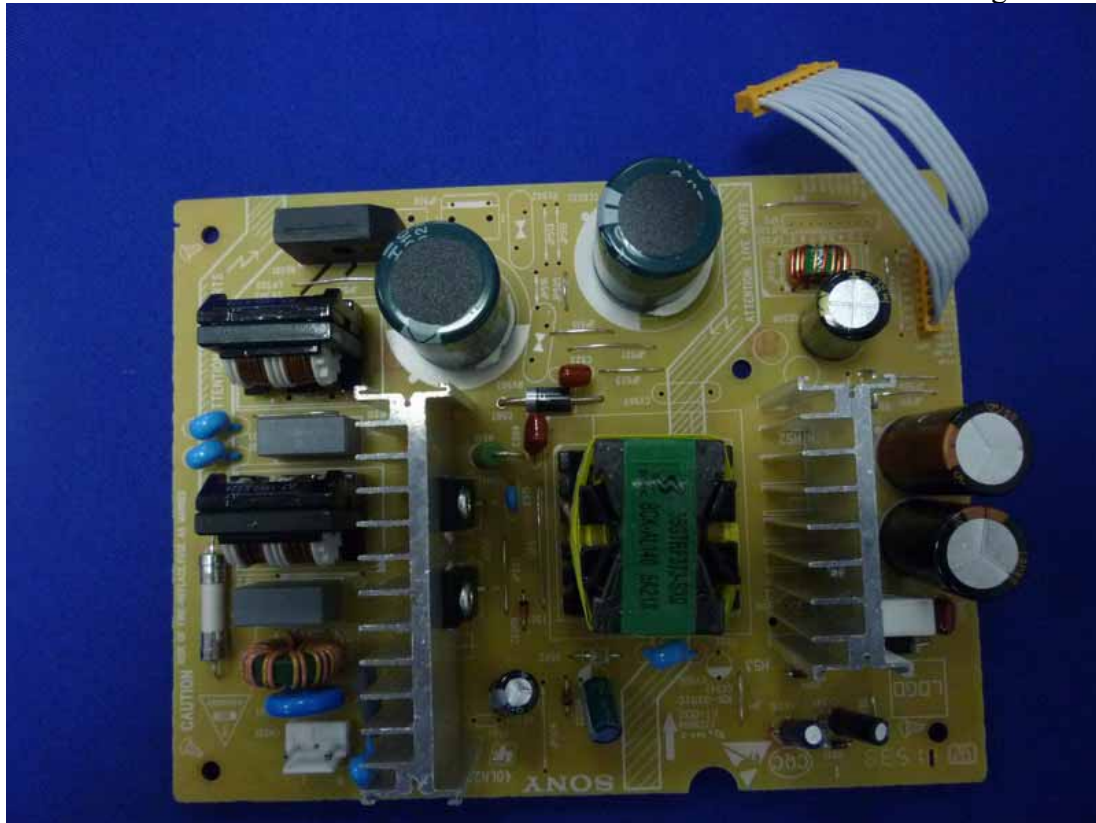


Figure 22
Inside Configuration of the EUT

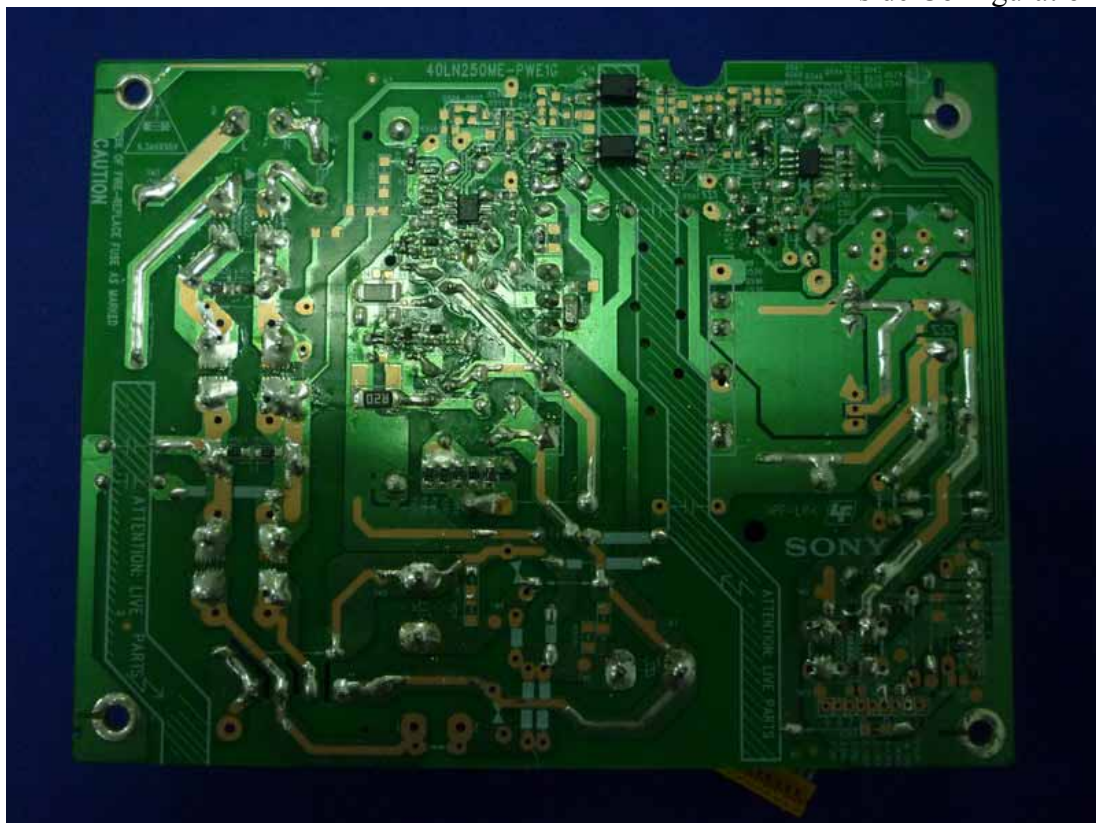


Figure 23
Inside Configuration of the EUT



Figure 24
Inside Configuration of the EUT

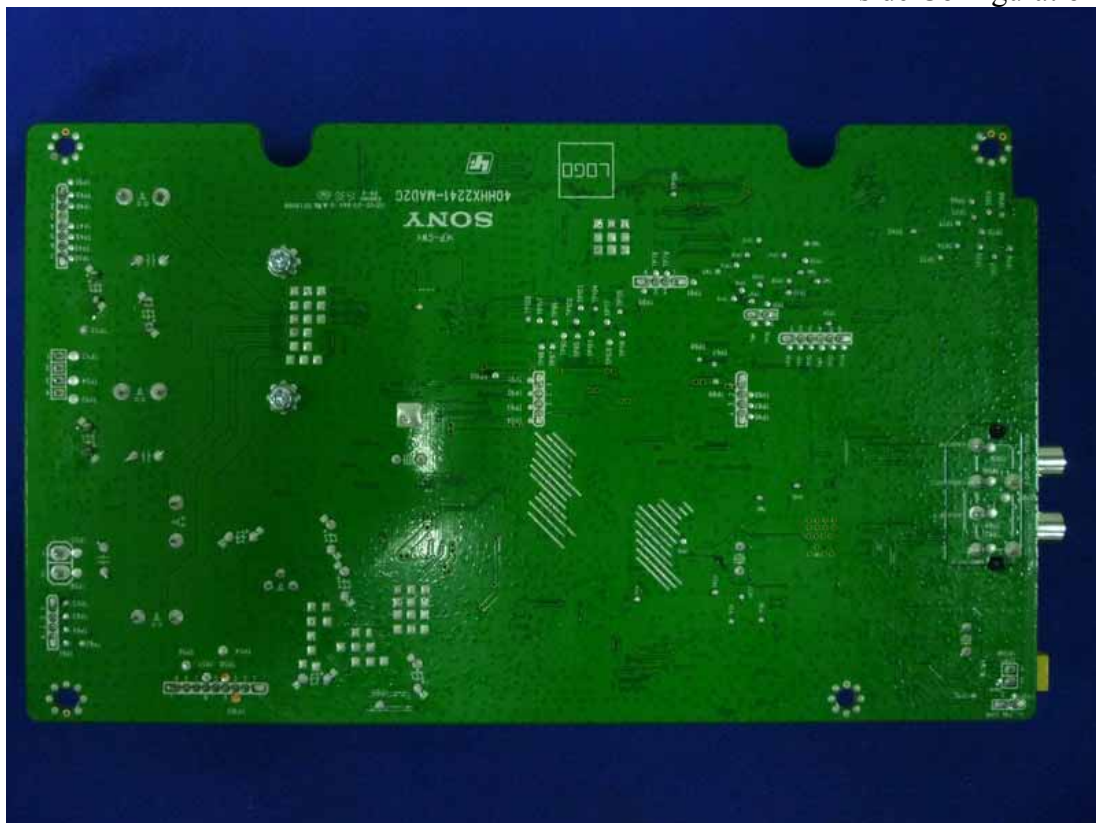


Figure 25
Inside Configuration of the EUT



Figure 26
Inside Configuration of the EUT

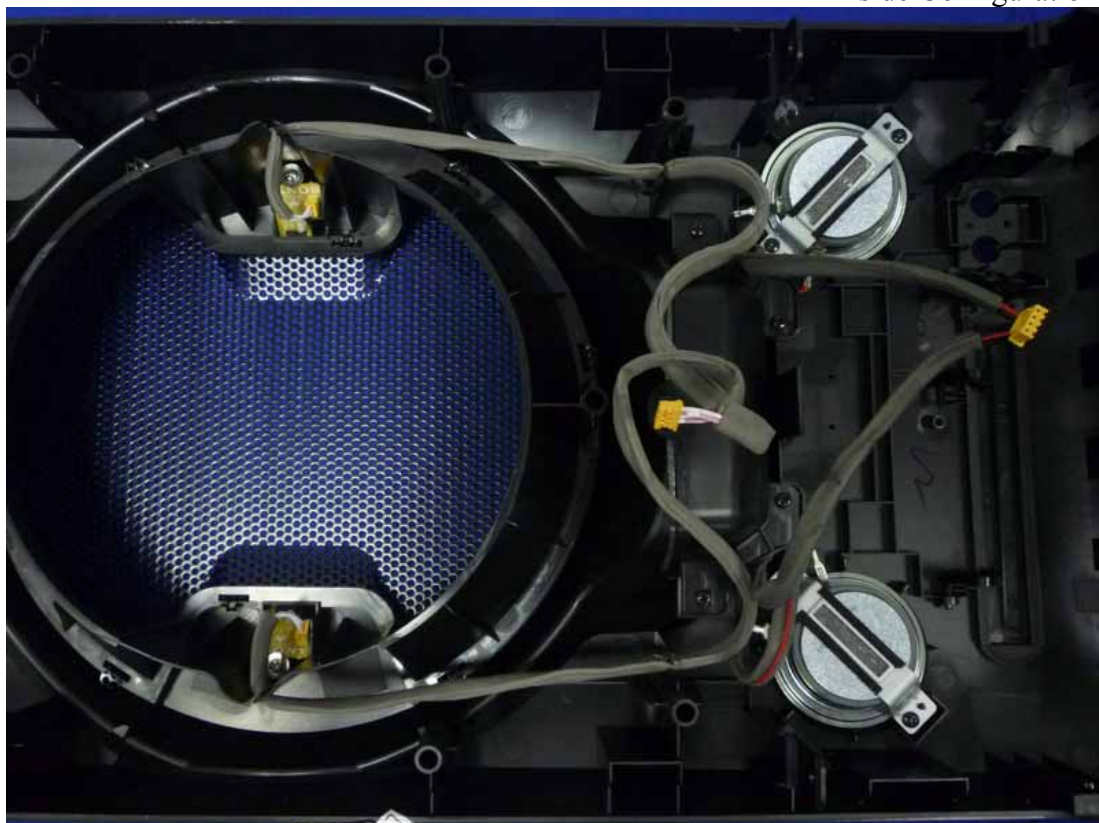


Figure 27
Inside Configuration of the EUT



Figure 28
Inside Configuration of the EUT



Figure 29
Inside Configuration of the EUT



Figure 30
Inside Configuration of the EUT

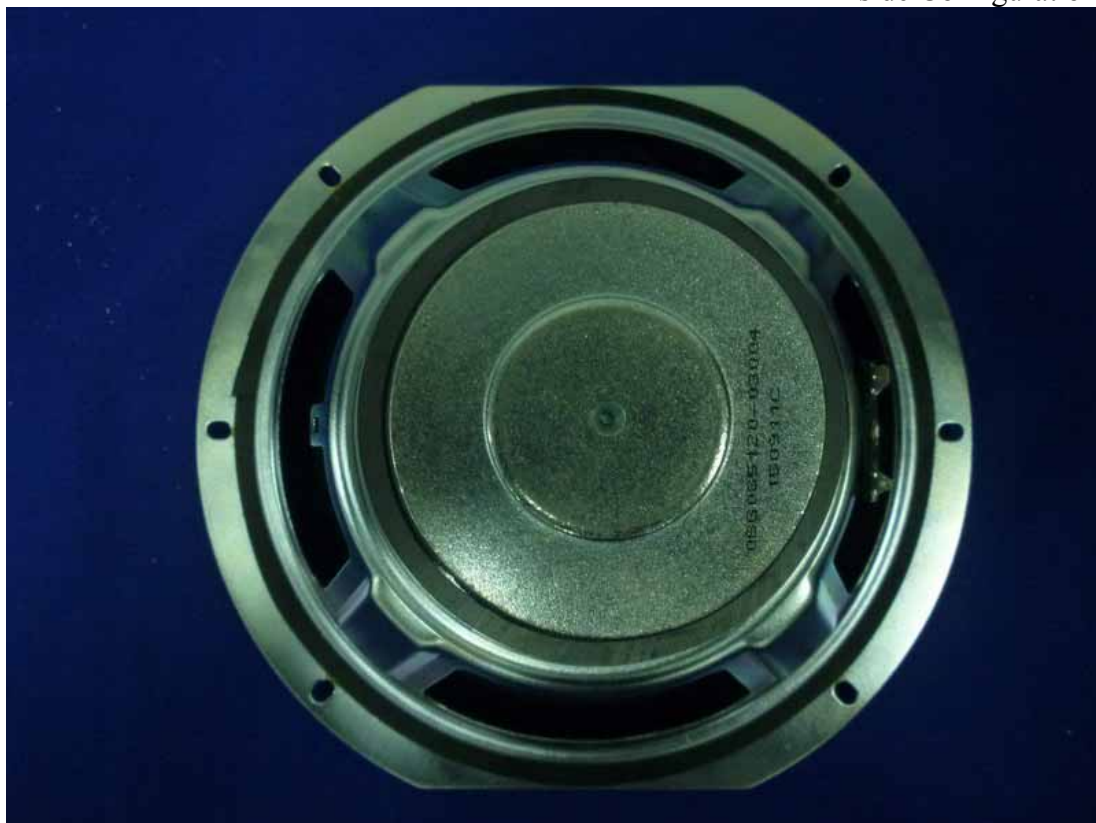


Figure 31
RF Module



Figure 32
RF Module

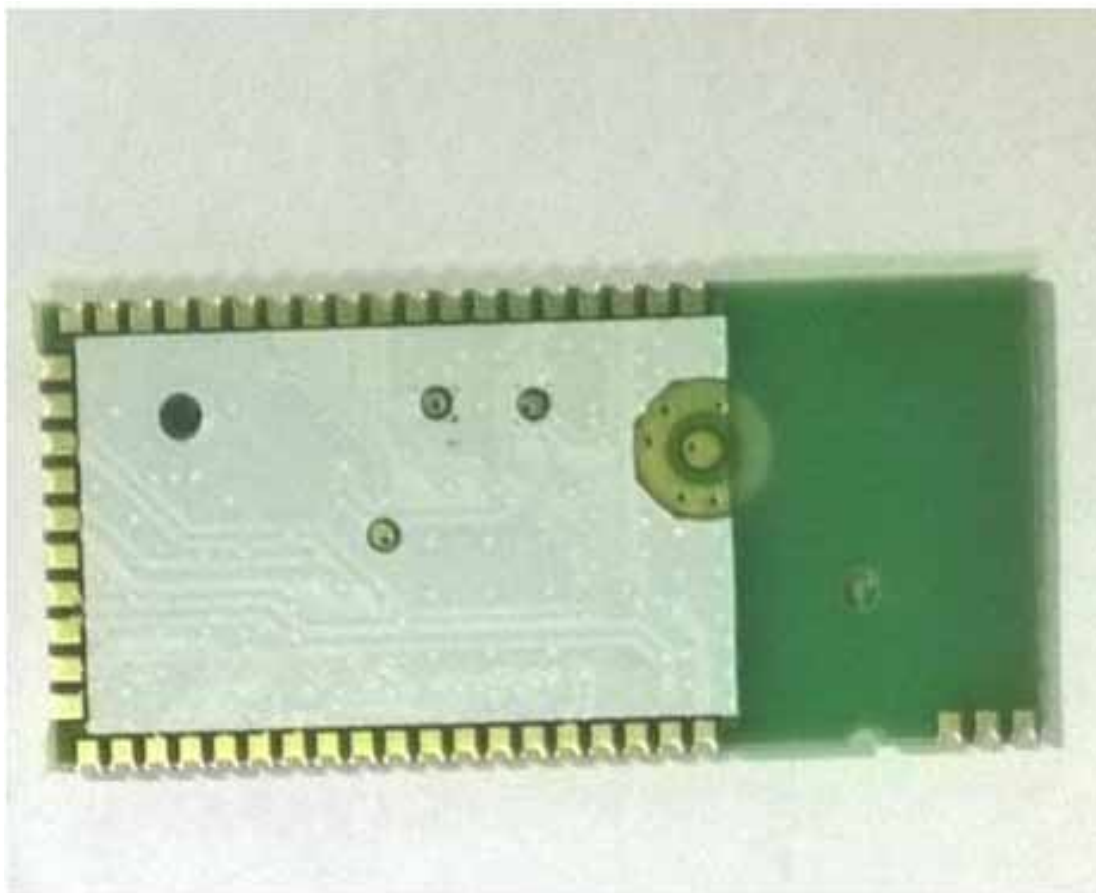


Figure 33
Remote Controller



Figure 34
Remote Controller



Figure 35
FM Antenna Cable



Figure 36
Power Cable

