




Model: WRT-805A(64)



Model: WRT-805A(64)

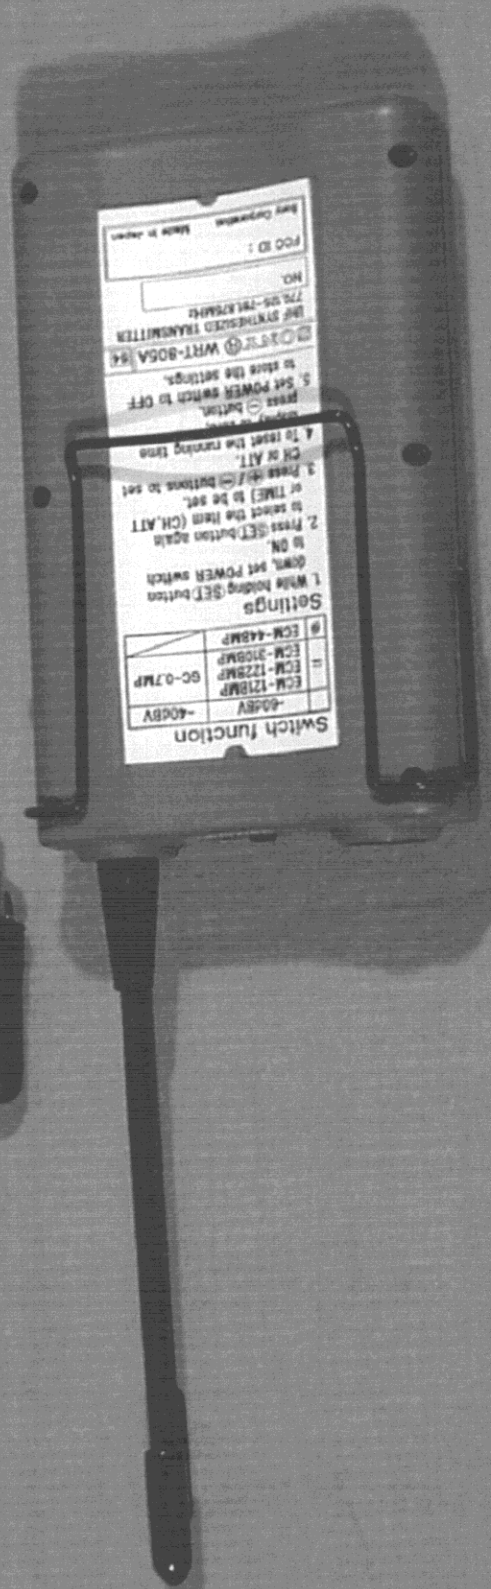

Switch function

ECM-448MP	#
ECM-3108MP	=
ECM-1228MP	=
GC-0.7MP	=
-60dBV	

Settings

1. While holding SET button
down, set POWER switch
to ON.

2. Press SET button again
to select the item (CH, ATT
or TIME) to be set.

3. Press CH/ATT buttons to set
CH or ATT.

4. To reset the running time
press SET button.

5. Set POWER switch to OFF
to store the settings.

CONTRAST WRT-805A (64)

IMP SYNTHESIZED TRANSMITTER
770.00-770.05MHz

NO.

PCO ID :

Model: WRT-805A(64)

Model: WRT-805A(64)



Model: WRT-805A(64)