 


Using the OSD Functions

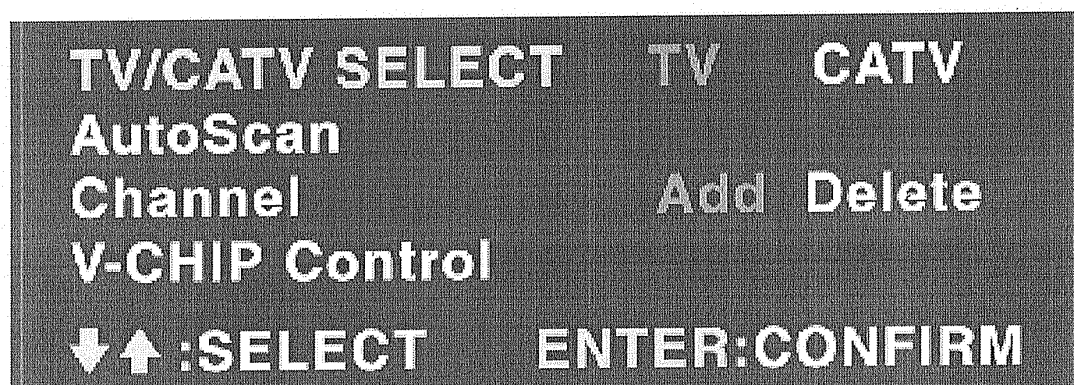


TV/CATV SELECT: To select TV signal input is TV or CATV.

AutoScan: To autoscan the TV channel (TV or CATV).


Channel: Add or delete TV channel.

V-CHIP Control: To setting V-Chip condition and password.

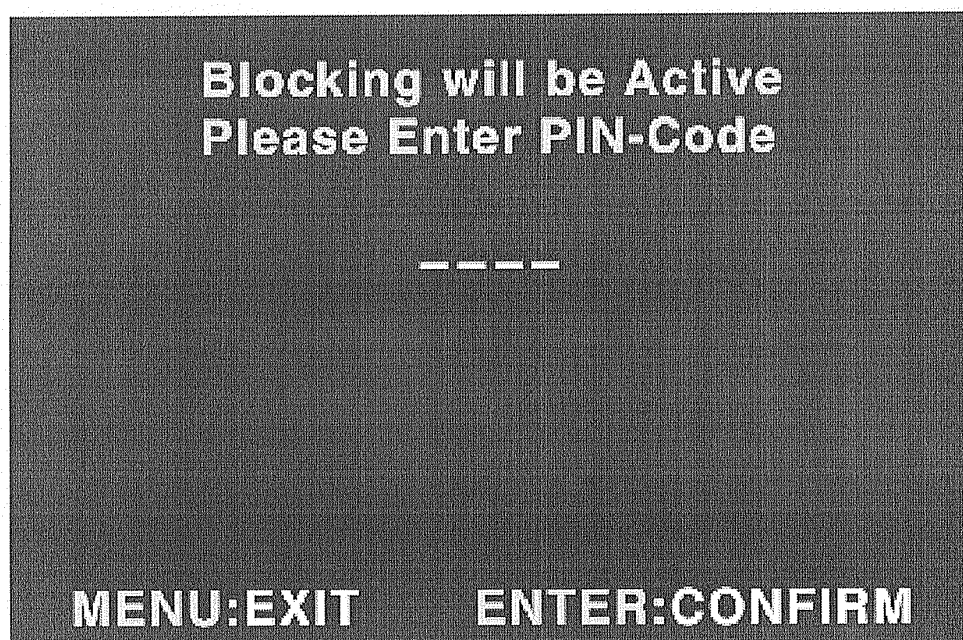

V-Chip setting: Key in the original password is 1234, and come into V-Chip setting.

Using the OSD Functions

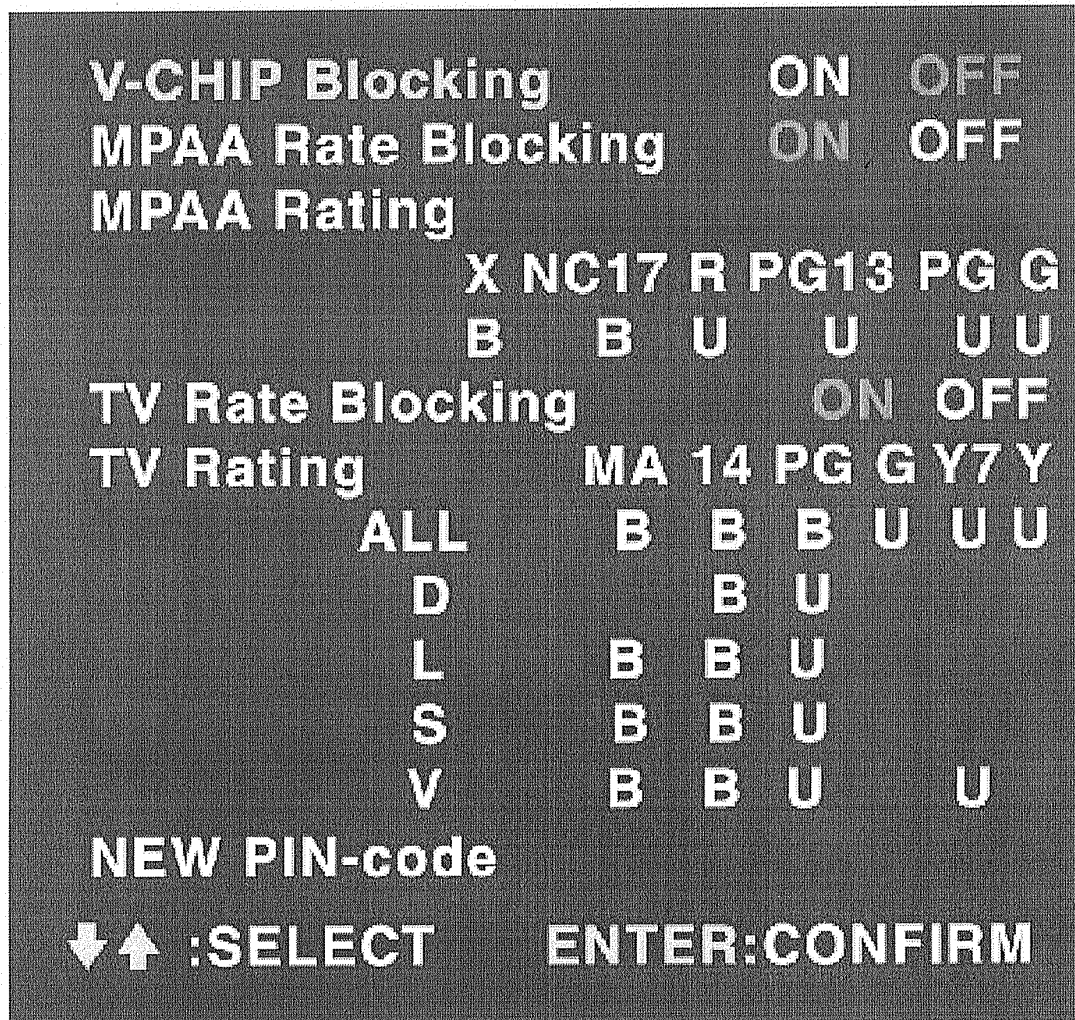

Use remote control ▲, ▼, ◀, ▶ and enter key to setting parental Guide lines.

- Press ▲, ▼, ◀, ▶ key you can see the curse to moving.
- When the text is yellow, press enter key you can setting block or unblock condition.
- New PIN-Code: You can to change password.

Using the OSD Functions

**This program is BLOCKED
by Rating Type**

TV PG

Press MENU to enter PIN Code

When meet V-CHIP signal Active, OSD will show the message as below.

**Blocking is Active, Please
Enter PIN-Code to
temporarily unblock**

MENU:EXIT ENTER:CONFIRM

If you want to release V-Chip block OSD.

1. Press Menu-Key.
2. Press password from remote control, The V-Chip block OSD will disappear.