 


Using the OSD Functions

Press menu key it can display OSD Menu.

Video mode (Include-YCbCr, AV)

Picture Menu:

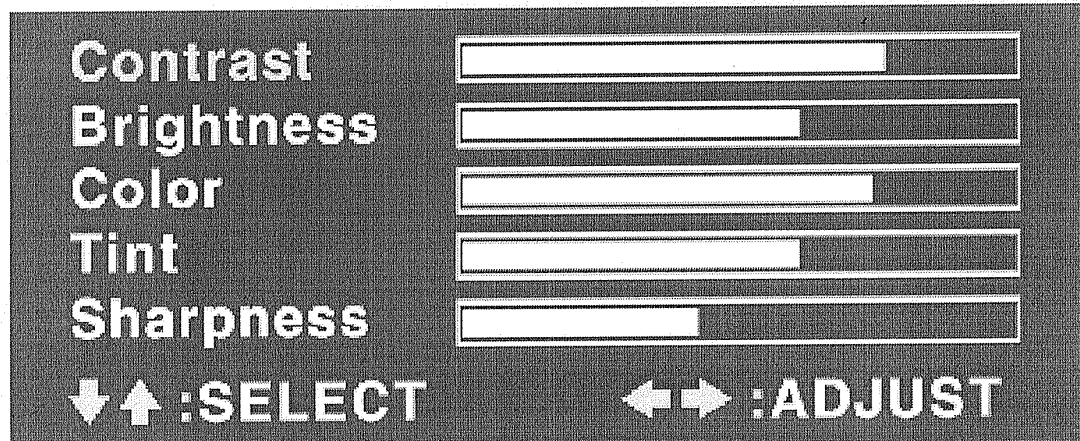

This submenu can to adjust Contrast, Brightness, Color, Tint and sharpness.

 
Contrast: To adjust the contrast of the video.

Brightness: To adjust the Luminance of the Video.

Color: To adjust color saturation.

Tint: To adjust the Hue.

Sharpness: To adjust the picture sharpness of display.

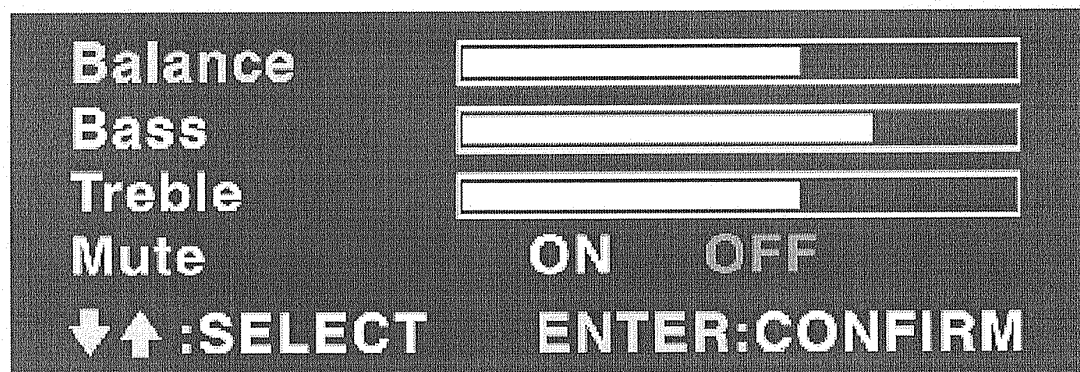

This submenu can to adjust Balance, Bass, Treble, and to mute ON/OFF.

 
Balance: To adjust the left and right audio balance.

Bass: To adjust the bass.

Treble: To adjust the treble.

Mute: To select the Mute ON/OFF.

Using the OSD Functions

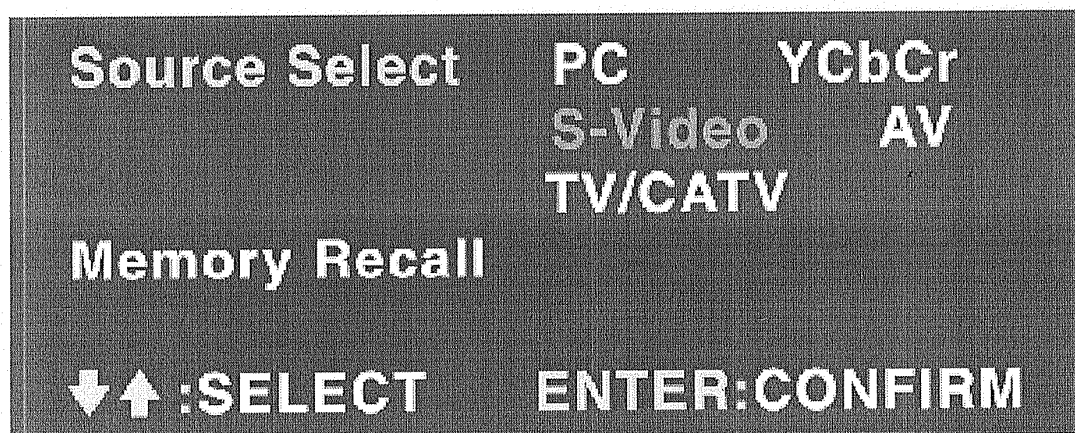

Source Select: To select the source (PC, YCbCr, S-Video, AV).

 
Memory Recall: Recall factory setting condition, about video & Audio setting.

Using the OSD Functions

Press menu key it can display OSD Menu.

PC mode

Main Menu:

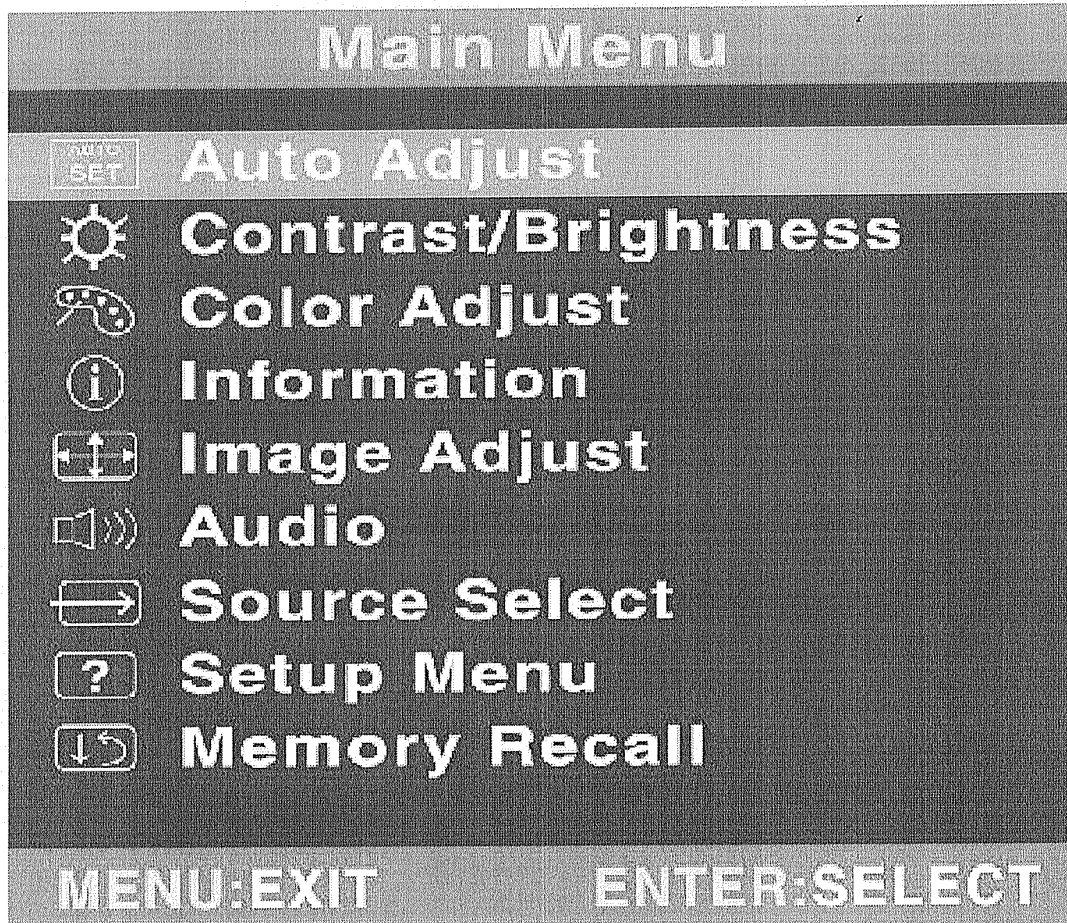

Adjusting

Auto Adjust: Auto adjust picture's horizontal position, vertical position, fine tune and H-Size.

Memory Recall

Memory Recall: Restore default settings of contrast (Max), brightness (Middle), color temperature (preset color), OSD Position (Center), Sharpness (Min) and Volume (Middle).

Using the OSD Functions

Contrast



MENU:EXIT

ENTER: 

Contrast: To adjust the contrast of the video.

Brightness



MENU:EXIT

ENTER: 

Brightness: To adjust the back-light current.

Color Adjust



Preset

User Color

MENU:EXIT

ENTER:SELECT

Color Adjust: To select the preset color temperature or user color setting.