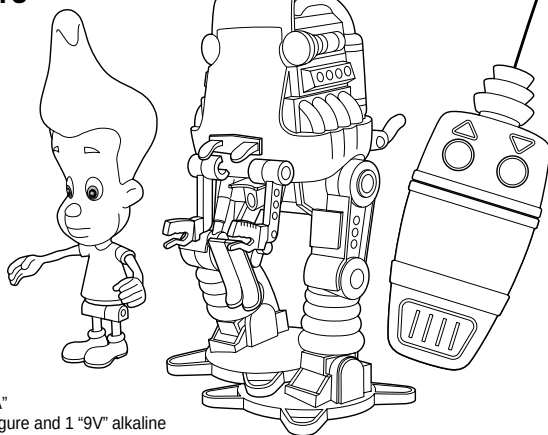 


Atenção: Não recomendável para menores de 3 anos por conter partes pequenas que podem ser engolidas.

[illegible]

- Keep these instructions for future reference as they contain important information. • Conserver ce mode d'emploi pour s'y référer en cas de besoin. • Diese Anleitung bitte für mögliche Rückfragen aufbewahren. Sie enthält wichtige Informationen. • Conservare queste istruzioni per futuro riferimento. Contengono importanti informazioni.
- Bewaar deze gebruiksaanwijzing. Kan later nog van pas komen. • Sirvanse guardar estas instrucciones para futura referencia, ya que contienen información de importancia acerca de este juguete. • Guardar estas instruções para referência futura pois contém informação importante. • Spara de här anvisningarna för framtida användning, de innehåller viktig information. • Κρατήστε αυτές τις οδηγίες για μελλοντική χρήση καθώς περιέχουν σημαντικές πληροφορίες.

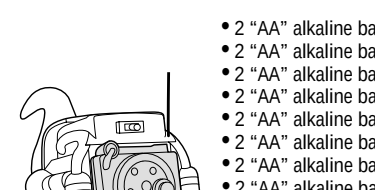 


CHOKING HAZARD – Small parts.
Not for children under 3 years.

PUEDA CAUSAR ASFIXIA.No recomendable para menores de 3 años. Contiene piezas pequeñas.

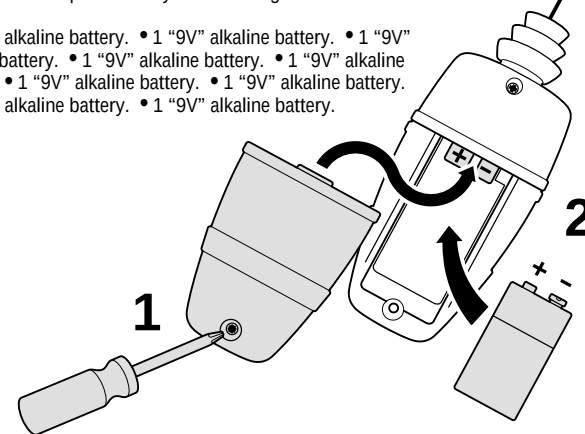 
NE CONVIENT PAS aux enfants de moins de 36 mois. Petits éléments détachables susceptibles d'être avalés.

[illegible]

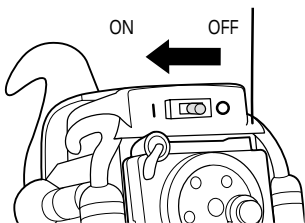 
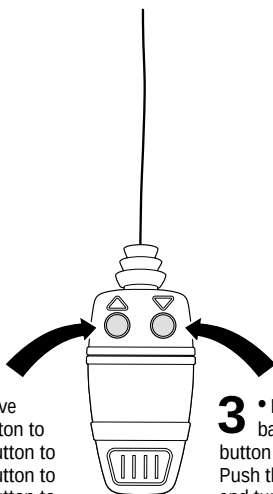 
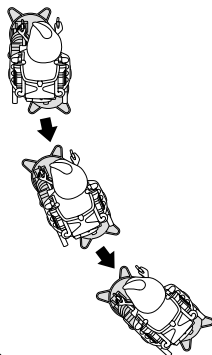 
- 2 “AA” alkaline batteries.
• 2 “AA” alkaline batteries.
• 2 “AA” alkaline batteries.
• 2 “AA” alkaline batteries.
• 2 “AA” alkaline batteries.
• 2 “AA” alkaline batteries.
• 2 “AA” alkaline batteries.
• 2 “AA” alkaline batteries.
- 1**
- 
- 2**
- 

- [illegible]

- 1 “9V” alkaline battery. • 1 “9V” alkaline battery. • 1 “9V”
alkaline battery. • 1 “9V” alkaline battery. • 1 “9V” alkaline
battery. • 1 “9V” alkaline battery. • 1 “9V” alkaline battery.
• 1 “9V” alkaline battery. • 1 “9V” alkaline battery.



OPERATION / OPERATION / OPERATION
OPERATION / OPERATION / OPERATION
OPERATION / OPERATION / OPERATION

[illegible][illegible][illegible]

FOR U.S. ONLY:

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FOR CANADA ONLY:

• 27 MHz; • 35.49 dB/V/m

This device complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- Operating multiple Robo Runner toys with the same frequency in close proximity will cause interference and poor performance. Works best away from high voltage power lines, large buildings and walls. Keep the transmitter at 5 feet or less from the Robo Runner for best performance. Hold transmitter antenna up for best performance. Works best on flat, hard smooth surfaces. Do not operate Robo Runner in water.

Check the battery installation if product malfunctions. When the product does not respond, loses range, or slows down, replace the batteries. For longer life use only alkaline batteries.

- Operating multiple Robo Runner toys with the same frequency in close proximity will cause interference and poor performance. Works best away from high voltage power lines, large buildings and walls. Keep the transmitter at 5 feet or less from the Robo Runner for best performance. Hold transmitter antenna up for best performance. Works best on flat, hard smooth surfaces. Do not operate Robo Runner in water.

Check the battery installation if product malfunctions. When the product does not respond, loses range, or slows down, replace the batteries. For longer life use only alkaline batteries.

- Operating multiple Robo Runner toys with the same frequency in close proximity will cause interference and poor performance. Works best away from high voltage power lines, large buildings and walls. Keep the transmitter at 5 feet or less from the Robo Runner for best performance. Hold transmitter antenna up for best performance. Works best on flat, hard smooth surfaces. Do not operate Robo Runner in water.

Check the battery installation if product malfunctions. When the product does not respond, loses range, or slows down, replace the batteries. For longer life use only alkaline batteries.

- Operating multiple Robo Runner toys with the same frequency in close proximity will cause interference and poor performance. Works best away from high voltage power lines, large buildings and walls. Keep the transmitter at 5 feet or less from the Robo Runner for best performance. Hold transmitter antenna up for best performance. Works best on flat, hard smooth surfaces. Do not operate Robo Runner in water.

Check the battery installation if product malfunctions. When the product does not respond, loses range, or slows down, replace the batteries. For longer life use only alkaline batteries.

- Operating multiple Robo Runner toys with the same frequency in close proximity will cause interference and poor performance. Works best away from high voltage power lines, large buildings and walls. Keep the transmitter at 5 feet or less from the Robo Runner for best performance. Hold transmitter antenna up for best performance. Works best on flat, hard smooth surfaces. Do not operate Robo Runner in water.

Check the battery installation if product malfunctions. When the product does not respond, loses range, or slows down, replace the batteries. For longer life use only alkaline batteries.

- Operating multiple Robo Runner toys with the same frequency in close proximity will cause interference and poor performance. Works best away from high voltage power lines, large buildings and walls. Keep the transmitter at 5 feet or less from the Robo Runner for best performance. Hold transmitter antenna up for best performance. Works best on flat, hard smooth surfaces. Do not operate Robo Runner in water.

Check the battery installation if product malfunctions. When the product does not respond, loses range, or slows down, replace the batteries. For longer life use only alkaline batteries.

- Operating multiple Robo Runner toys with the same frequency in close proximity will cause interference and poor performance. Works best away from high voltage power lines, large buildings and walls. Keep the transmitter at 5 feet or less from the Robo Runner for best performance. Hold transmitter antenna up for best performance. Works best on flat, hard smooth surfaces. Do not operate Robo Runner in water.

Check the battery installation if product malfunctions. When the product does not respond, loses range, or slows down, replace the batteries. For longer life use only alkaline batteries.

- Operating multiple Robo Runner toys with the same frequency in close proximity will cause interference and poor performance. Works best away from high voltage power lines, large buildings and walls. Keep the transmitter at 5 feet or less from the Robo Runner for best performance. Hold transmitter antenna up for best performance. Works best on flat, hard smooth surfaces. Do not operate Robo Runner in water.

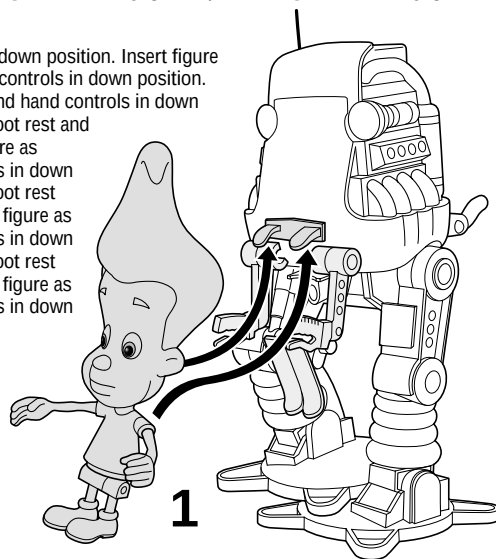 
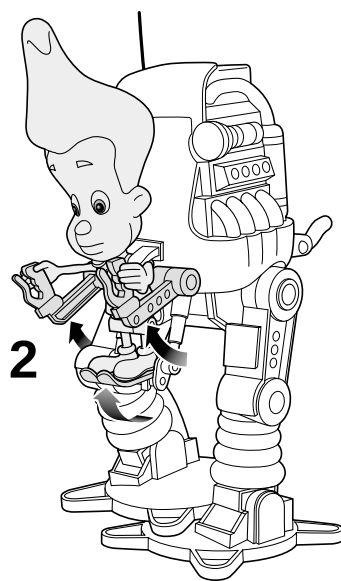 
Check the battery installation if product malfunctions. When the product does not respond, loses range, or slows down, replace the batteries. For longer life use only alkaline batteries.

- Operating multiple Robo Runner toys with the same frequency in close proximity will cause interference and poor performance. Works best away from high voltage power lines, large buildings and walls. Keep the transmitter at 5 feet or less from the Robo Runner for best performance. Hold transmitter antenna up for best performance. Works best on flat, hard smooth surfaces. Do not operate Robo Runner in water.

Check the battery installation if product malfunctions. When the product does not respond, loses range, or slows down, replace the batteries. For longer life use only alkaline batteries.

REINSTALL FIGURE / REINSTALL FIGURE / REINSTALL FIGURE /
REINSTALL FIGURE / REINSTALL FIGURE / REINSTALL FIGURE /
REINSTALL FIGURE / REINSTALL FIGURE / REINSTALL FIGURE

1 • Place foot rest and hand controls in down position. Insert figure as shown. • Place foot rest and hand controls in down position. Insert figure as shown. • Place foot rest and hand controls in down position. Insert figure as shown. • Place foot rest and hand controls in down position. Insert figure as shown. • Place foot rest and hand controls in down position. Insert figure as shown. • Place foot rest and hand controls in down position. Insert figure as shown. • Place foot rest and hand controls in down position. Insert figure as shown. • Place foot rest and hand controls in down position. Insert figure as shown. • Place foot rest and hand controls in down position. Insert figure as shown.

[illegible]

BATTERY SAFETY INFORMATION

1. Non-rechargeable batteries are not to be recharged.
2. Rechargeable batteries are to be removed from the product before they are charged.
3. If rechargeable batteries are used, they are only to be charged under adult supervision.
4. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
5. Do not mix old batteries and new batteries.
6. Only batteries of the same or equivalent type as recommended are to be used.
7. Be sure to insert batteries with the correct polarities and always follow the toy and battery manufacturers' instructions.
8. Exhausted batteries are to be removed from the product.
9. The supply terminals are not to be short-circuited.
10. Dispose of batteries safely.

MISES EN GARDE AU SUJET DES PILES

1. Ne pas recharger des piles non-rechargeables.
2. Retirer les piles rechargeables du produit avant de les recharger.
3. Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
4. Ne pas mélanger des piles alcalines, standard (carbone-zinc) ou rechargeables (nickel-cadmium).
5. Ne jamais mélanger des piles usées avec des piles neuves.
6. N'utiliser que des piles du même type que celles recommandées, ou des piles équivalentes.
7. Veiller à bien respecter le sens des polarités (+) et (-), et toujours suivre les indications des fabricants du jouet et des piles.
8. Toujours retirer les piles usées du produit.
9. Ne pas court-circuiter les bornes des piles.
10. Jeter les piles usagées dans un conteneur réservé à cet usage.

BATTERIESICHERHEITSHINWEISE

1. Nicht-wiederaufladbare Batterien dürfen nicht wieder aufgeladen werden.
2. Wiederaufladbare Batterien müssen zum Aufladen aus dem Produkt herausgenommen werden.
3. Das Aufladen wiederaufladbarer Batterien sollte nur unter Aufsicht eines Erwachsenen durchgeführt werden.
4. Niemals Alkali-Batterien, Standardbatterien (Zink-Kohle) oder wiederaufladbare Nickel-Cadmium-Zellen miteinander kombinieren.
5. Niemals alte und neue Batterien zusammen einsetzen.
6. Nur Batterien desselben oder ähnlichen Typs verwenden.
7. Darauf achten, daß die Batterien in der angegebenen Polrichtung eingelegt sind, und immer die Anleitungen der Spielzeug- und Batteriehersteller beachten.
8. Alte oder verbrauchte Batterien immer aus dem Spielzeug entfernen.
9. Die Anschlußklemmen dürfen nicht kurzgeschlossen werden.
10. Batterien sicher und vorschriftsgemäß entsorgen.

INFORMAÇÃO DE SEGURANÇA SOBRE AS PILHAS

1. Não recarregue pilhas não recarregáveis.
2. Pilhas recarregáveis devem ser removidas do veículo antes de serem colocadas à carga.
3. Se forem utilizadas pilhas recarregáveis, devem ser recarregadas exclusivamente sob a supervisão de um adulto.
4. Não misture pilhas de tipos diferentes.
5. Nunca misture pilhas novas com pilhas usadas.
6. Utilizar exclusivamente pilhas iguais ou equivalentes às indicadas.
7. Assegure-se de que coloca as pilhas de maneira correcta, seguindo as instruções dos fabricantes das pilhas e do brinquedo.
8. Nunca deixar pilhas usadas dentro do brinquedo.
9. Os terminais não devem estar em curto-circuito.
10. Deitar fora em local conveniente.

BATTERY INFORMATION

1. Icke-uppladdningsbara batterier får inte laddas upp.
2. Ta ut laddningsbara batterier ur leksaken innan de laddas upp.
3. Vid användning av löstagbara uppladdningsbara batterier får dessa bara laddas under överinseende av en vuxen.
4. Blanda aldrig olika batterityper (alkaliska med vanliga eller uppladdningsbara).
5. Blanda aldrig nya och gamla batterier.
6. Använd bara batterier av den typ (eller motsvarande) som rekommenderas.
7. Lägg i batterierna åt rätt håll och följ alltid anvisningarna från batteri- och leksakstillverkarna.
8. Ta alltid ur uttjänta batterier ur leksaken.
9. Batteripolerna får inte kortslutas.
10. Lägg använda batterier i en batterihölk eller lämna in dem.

ΠΛΗΡΟΦΟΡΙΕΣ ΑΣΦΑΛΕΙΑΣ ΓΙΑ ΤΙΣ ΜΠΑΤΑΡΙΕΣ

1. Οι μη-επαναφορτιζόμενες μπαταρίες δεν επαναφορτίζονται.
2. Σιγουρευτείτε ότι τα σημεία επαφής είναι καθαρά και λαμπρά πριν την τοποθέτηση των μπαταριών.
3. Μην βραχυκυκλώνετε τους πόλους των μπαταριών.
4. Μην χρησιμοποιείτε συγχρόνως αλκαλικές, συμβατικές ή επαναφορτιζόμενες (νικελίου-καδμίου) μπαταρίες.
5. Μην χρησιμοποιείτε παλιές και καινούργιες μπαταρίες μαζί.
6. Βγάλτε τις μπαταρίες όταν πρόκειται να μην χρησιμοποιήσετε το παιχνίδι για μεγάλο χρονικό διάστημα.
7. Σιγουρευτείτε ότι τοποθετείτε σωστά τις μπαταρίες και πάντα ν' ακολουθείτε τις οδηγίες του κατασκευαστή του προϊόντος και των μπαταριών.
8. Πάντα να βγάζετε τις άδειες ή παλιές μπαταρίες από το προϊόν.
9. Μην βραχυκυκλώνετε τους πόλους των μπαταριών.
10. Πελάτε προσεκτικά τις μπαταρίες.

• Mattel Canada Inc., Mississauga, Ontario L5R 3W2.
You may call us free at 1-800-665-6288.

- Mattel U.K. Ltd., Varwall Business Park, Maidenhead SL6 4UB. Helpline 01628500303.
- Mattel France, S.A. 27/33 rue d'Antony, Silic 145, 94523 Rungis Cedex Mattel France.

• Mattel France, S.A., 27/33 rue d'Antony, Silic 145, 94523 Rungis Cedex Mattel France, S.A., 27/33 rue d'Antony, Silic 145, 94523 Rungis Cedex N° Indigo 0 825 00 00 25 ou www.allomattel.com

• Mattel B.V., Postbus 576, 1180 AN Amstelveen, Nederland. 0800 - 2628835. • Mattel

Belgium, Trade Mart, Atomiumsquare, Bogota 202 – B 275, 1020 Brussel, België.
• Deutschland : Mattel GmbH, An der Trift 75 D-63303 Dreieich. • Schweiz: Mattel AG,

• Österreich: Mattel Ges.m.b.H., Triester Str., A-2355 Wiener Neudorf.

- Mattel Scandinavia A/S, Ringager 4C, DK-2605 Brøndby.

- Mattel Scandinavia A/S, Ringvej 4C, DK-2003 Copenhagen.
- Mattel Srl., 28040 Oleggio Castello, Italy.
- Mattel España S.A. Aribau 200 08036 Barcelona N.I.F. A08-842809

- Mattel España, S.A., Arbau 200, 08036 Barcelona. N.I.F. A08-8
- Mattel Portugal, Lda., Av. da República No.90-96, 1600 Lisboa.

• Mattel ΑΕΒΕ, Ελληνικού 2, Ελληνικό 16777, ΕΛΛΑΔΑ.

- Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1 800 800 812.

- Mattel, Inc., El Segundo, CA 90245 U.S.A. Consumer Affairs 1 (800) 524-Toys.

• Importado y distribuido por Mattel de México, S.A. de C.V., Camino a Santa Teresa No. 1040, 7o. Piso, Col. Jardines en la Montaña, Delegación Tlalpan, 14210 México, D.F.
D-52-MME-200701-NP2 TEL: 51 40 41 00

• Mattel Chile, S.A., Avenida Américo Vespucio 501-B, Quilicura, Santiago. Mattel de

Venezuela, C.A., Ave. Mara, C.C. Macaracuay Plaza, Torre B, Piso 8, Colinas de la California, Caracas 1071.

- Mattel Argentina, S.A., Avenida Libertador 1515 C.P. (1638), Buenos Aires. Mattel Colombia, S.A., calle 123#7-07 P.5, Bogotá.

• Mattel do Brasil Ltda - CGC: 54.558.002/0001-20 - Rua Jaceru, 151 CEP: 04705-000
São Paulo. Atendimento ao Consumidor: 0800 5507800

Política de garantia Mattel do Brasil Ltda garante este produto por um prazo de 90 dias em todas as suas partes de fabricação a partir da data de aquisição. Em caso de defeito, ligar para 0800-550780 esta garantia não se aplica a prejuízos decorrentes de acidentes e má utilização do produto.