 
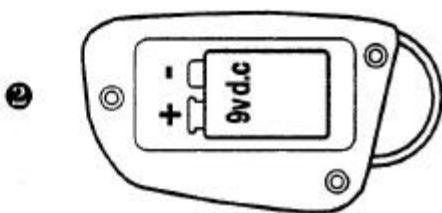 


KEY START

Keep these instructions for future reference. For more information, visit www.tyco.com.

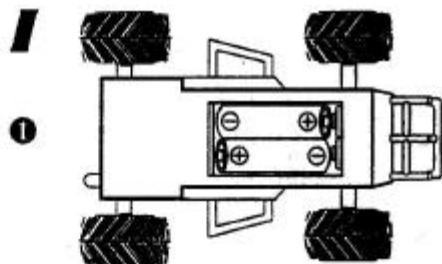

**TYCO R/C
CONSUMER AFFAIRS
WE CARE!**

If you have questions or difficulty operating this vehicle,
DO NOT RETURN IT TO THE STORE!
Call Toll-Free 1-800-880-TYCO (1-800-880-8929) for R/C
technical help and R/C parts and service solutions.
www.tyco.com



© 1999 Mattel, Inc., Mt. Laurel, NJ 08054
U.S.A. PRINTED IN CHINA. All Rights
Reserved. ® and ™ designate U.S. trade-
marks of Mattel, Inc.
Retain this address for future reference: Mat-
tel U.K., Ltd., Meridian West, Leicester LE3
ZWT, Mattel Australia Pty., Ltd., Richmond,
Victoria 3121 - Consumer Advisory Service:
1800 800 812 (valid only in Australia). Mattel
East Asia Limited, 930 Ocean Centre, Harbour
City, HK, China.

COMPLIANCE WITH FCC REGULATIONS
THIS DEVICE COMPLIES WITH PART 15 OF
FCC RULES. OPERATION OF THIS DEVICE IS
SUBJECT TO THE FOLLOWING TWO CONDI-
TIONS:
(1) THIS DEVICE MAY NOT CAUSE HARMFUL
INTERFERENCE.
(2) THIS DEVICE MUST ACCEPT ANY HARM-
FUL INTERFERENCE THAT MAY CAUSE UNDE-
SIRED OPERATION.
This device generates and uses radio fre-

quency energy and if not used properly may
cause interference to radio and television
reception. It has been tested and found to
comply with the limits set by the FCC, which
are designed to provide reasonable protec-
tion against such interference.
CAUTION: FCC Regulations state that
changes or modifications to this product not
expressly approved by the party responsible
for compliance could void the user's authority
to operate the equipment.

MATTEL WHEELS



[Vehicle & Transmitter]

Push battery doors open in direction of arrow.

 
① **Vehicle** requires 2 AA alkaline batteries. Install with polarity (+/-) as shown inside battery compartment.

② **Transmitter** requires 1 9V alkaline battery. Install with polarity (+/-) as shown inside battery compartment.

Close battery doors.



1. Your vehicle starts with a key, just like a real car! Just insert the key and turn it clockwise to the **ON** position. Remove the key - your vehicle will run backward and to the left.
2. Your transmitter is the "remote" on your key-chain. It has an automatic **ON** feature. Just press the button to steer straight ahead.
3. Release the button to back up and turn. Press it again to go forward when the vehicle is facing the direction you want.
4. Insert the key and turn it counterclockwise to the **OFF** position after use. Remove the key for storage.



Bent or dirty contacts may result in loss of power. If battery does not fit correctly, gently bend back metal

contact as shown in diagram.

- Insure that battery polarity is correct.
- Use only batteries of the type recommended (or equivalent).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Remove used-up batteries immediately. Remove batteries if vehicle will not be used for a long period.
- For best performance use alkaline batteries (where disposable batteries are called for). Battery life may vary depending on battery brand.
- Do not recharge non-rechargeable batteries.
- Do not short-circuit terminals.
- Remove rechargeable batteries before recharging. Recharge batteries only under adult supervision.
- Dispose of batteries safely.



① When your vehicle starts to lose power, it may lose functions or performance. It's time for fresh batteries. Your vehicle's running time may change, depending on your driving style.

② Radio interference can make your vehicle run badly. Interference can be caused by other R/C vehicles running on the same frequency; electrical

wires; large buildings; or CB radios. Try to stay away from these!

- ③ Point your transmitter up - not down toward your vehicle. If your vehicle gets too far away, it won't work properly.
- ④ Don't drive your vehicle in sand or through water or snow. If your vehicle does get wet, wipe with a towel and allow to dry completely.
- ⑤ Don't store your vehicle near heat or in direct sunlight. Always turn switches **OFF** and remove all batteries for storage.

SAFETY PRECAUTIONS

Adults, this toy is recommended for children 3 years of age and older. To ensure that the child's play is both safe and fun, please review the operating instructions and these general safety rules with the child.

- DO NOT pick up vehicle while in motion.
- Keep fingers, hair and loose clothing away from the tires and the wheel hubs while the vehicle is switched **ON**.
- Adult supervision is recommended during operation of this vehicle.
- To avoid accidental operation, remove batteries when not in use.
- DO NOT operate your vehicle on streets! They're for real cars.

EXCLUSIVE SOUND FEATURE

Your vehicle features an exclusive sound feature for extra driving fun! Turn the sound switch to the ON position: your 'remote' will make cool driving sounds as you operate your vehicle.

 
Your 'remote' operates on two different kinds of batteries: 1 9-volt battery for the transmitter function (not included), and 3 button cell batteries (included and pre-installed) for the sound feature. You can drive your vehicle with the sound feature turned off: just leave the sound switch in the OFF position and drive your vehicle normally.

If the sound feature stops working, you'll need to replace these batteries as follows:


1. Open upper battery door, using a Phillips screwdriver (not included). Remove battery door.
2. Remove old batteries. Install 3 fresh AG13/LR44 button cell batteries, with polarity (+/-) as shown.
3. Replace battery door and tighten screw.



Sound Switch

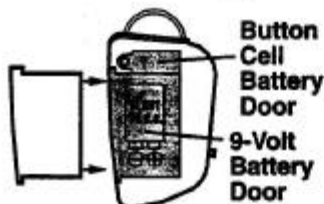

 Button Cell Battery Door
9-Volt Battery Door

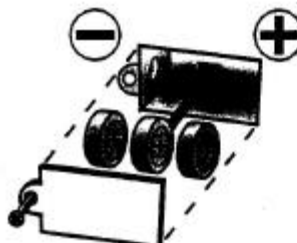

Please discard used-up batteries immediately, being careful to keep them away from young children at all times.



Please refer to your Owner's Manual for detailed information about the operation of your vehicle; installation of the 9-volt transmitter battery; and other important battery safety information.

©2000 Mattel, Inc. CHINA 92182-0924

