



E40BT



E40BT

Quick Start Guide

Guide de démarrage rapide

1

Cable connections





E40BT

Quick Start Guide


Guide de démarrage rapide

2 Turn on/off power and pair

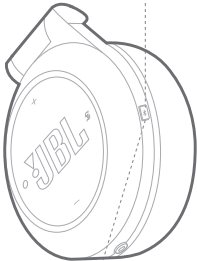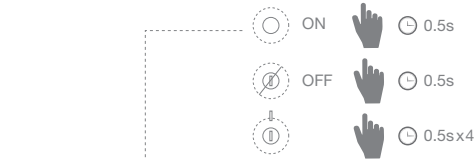

Clear Previously Paired Devices

- Effacer un appareil associé
- Borrar los dispositivos emparejados anteriormente
- Limpar dispositivos emparelhados anteriormente
- Bereits abgestimmte Geräte löschen
- Cancella dispositivi precedentemente accoppiati
- Wis eerder gekoppelde apparaten
- Fjerntidligere parrede enheter
- Tyhjennä aiemmat laiteparit
- Удалить ранее сопряженные устройства
- Rensa tidigare parkopplade enheter
- Slet tidligere parrede enheder
- ペアリング済みデバイスの消去
- 장치 페어링 전에 지우기
- 清除已配对的设备

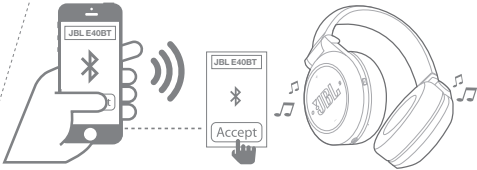

LED Status		LED behaviors
Pairing mode		Fast
Power on		Slow
Low battery		

E40BT

Quick Start Guide

Guide de démarrage rapide

3 Adjust volume



4 Multi-function Button (MFB) to control music



Play or Pause

Press



Next track

Press x2



Previous track

Press x3

5 Multi-function Button (MFB) to skip track



Skip track forward

Press +
Press and hold



Skip track backward

Press x2 +
Press and hold

E40BT

Quick Start Guide

Guide de démarrage rapide

6 Multi-function Button (MFB) to control calls



Press

Answer call



Long Press

Reject call

7 Multi-function Button (MFB) to manage second incoming call



Press

Hang up current call and switch to second call



Long Press

Switch calls

Answer/reject second incoming call

8 Multi-function Button (MFB) to manage 2 calls at the same time



Press

Hang up current call and switch to second call



Long Press

Switch calls

E40BT

Quick Start Guide

Guide de démarrage rapide

9 To use ShareMe™ function



Step 1: Pair and connect the headphone to a source device.

Step 2: Pause music or disengage voice calls from the source device.

Step 3: Press ShareMe™ button once on the first headphone then LED behind the button starts blinking. This headphone is ready to connect to the second headphone.

Step 4: Press ShareMe™ button twice on the second headphone then LED behind the button starts blinking. LED stops blinking after ShareMe™ connects. Play the music on the source device. Two headphones are ready to share the music.

Press ShareMe™ button once to disconnect.

ShareMe™ connection ends in 10 minutes when no audio is streaming from a device.

E40BT

Quick Start Guide

Guide de démarrage rapide

EN

- Advanced 40mm drivers
- Dynamic frequency response: 20-20kHz
- BT frequency range: 2.402-2.480GHz
- BT transmitter power: <4dBm
- BT transmitter modulation:
GFSK $\pi/4$ DQPSK 8-DPSK
- Support BT 3.0, A2DP v1.3, AVRCP v1.5, HFP v1.6, HSP v1.2
- Maximum SPL: 115dB @ 30mW
- Rated power input: 30mW
- Microphone sensitivity:
-42dBV/Pa @ 1kHz
- Battery type: Lithium polymer (3.7V,610mAh)
- Music playing time: 16 hours
- Talk time: 24 hours

ES

- Advanced 40mm drivers
- Dynamic frequency response: 20-20kHz
- BT frequency range: 2.402-2.480GHz
- BT transmitter power: <4dBm
- BT transmitter modulation:
GFSK $\pi/4$ DQPSK 8-DPSK
- Support BT 3.0, A2DP v1.3, AVRCP v1.5, HFP v1.6, HSP v1.2
- Maximum SPL: 115dB @ 30mW
- Rated power input: 30mW
- Microphone sensitivity:
-42dBV/Pa @ 1kHz
- Battery type: Lithium polymer (3.7V,610mAh)
- Music playing time: 16 hours
- Talk time: 24 hours

FR

- Advanced 40mm drivers
- Dynamic frequency response: 20-20kHz
- BT frequency range: 2.402-2.480GHz
- BT transmitter power: <4dBm
- BT transmitter modulation:
GFSK $\pi/4$ DQPSK 8-DPSK
- Support BT 3.0, A2DP v1.3, AVRCP v1.5, HFP v1.6, HSP v1.2
- Maximum SPL: 115dB @ 30mW
- Rated power input: 30mW
- Microphone sensitivity:
-42dBV/Pa @ 1kHz
- Battery type: Lithium polymer (3.7V,610mAh)
- Music playing time: 16 hours
- Talk time: 24 hours

PT

- Advanced 40mm drivers
- Dynamic frequency response: 20-20kHz
- BT frequency range: 2.402-2.480GHz
- BT transmitter power: <4dBm
- BT transmitter modulation:
GFSK $\pi/4$ DQPSK 8-DPSK
- Support BT 3.0, A2DP v1.3, AVRCP v1.5, HFP v1.6, HSP v1.2
- Maximum SPL: 115dB @ 30mW
- Rated power input: 30mW
- Microphone sensitivity:
-42dBV/Pa @ 1kHz
- Battery type: Lithium polymer (3.7V,610mAh)
- Music playing time: 16 hours
- Talk time: 24 hours

E40BT

Quick Start Guide

Guide de démarrage rapide

Торговая марка: JBL

Назначение товара: АКТИВНАЯ АКУСТИЧЕСКАЯ СИСТЕМА

Изготовитель: ХАРМАН ИНТЕРНЕШНЛ ИНДАСТРИЗ ИНКОРПОРЕЙТЕД, США,
06901 КОННЕКТИКУТ, г.СТЭМФОРД, АТЛАНТИК СТРИТ 400, ОФИС 1500

Страна происхождения: Китай

Импортер в России: ООО «У.Р.А.Н.» УС СиАйЭс», РОССИЯ, 123317, МОСКВА,
ПРЕСНЕНСКАЯ НАБ., Д.10

Гарантийный период: 1 год

Информация о сервисных центрах: <http://ru.jbl.com>, тел. +7-800-700-0467

Срок службы: 7 лет

Срок хранения: не ограничен

Условия хранения: Стандартные при нормальных значениях климатических факторов внешней среды



Este equipamento opera em caráter secundário, isto é, não tem direito a proteção contra interferência prejudicial, mesmo de estações do mesmo tipo, e não pode causar interferência a sistemas operando em caráter primário"

Este produto está homologado pela ANATEL, de acordo com os procedimentos regulamentados pela Resolução 242/2000, e atende aos requisitos técnicos aplicados.

Para maiores informações, consulte o site da ANATEL – www.anatel.gov.br



XXXX-XX-XXXX



(01)07896359533664

C€0890