



FLIP4




FLIP4

Quick Start Guide
Guide de démarrage rapide

1 What's in the box




2 Buttons

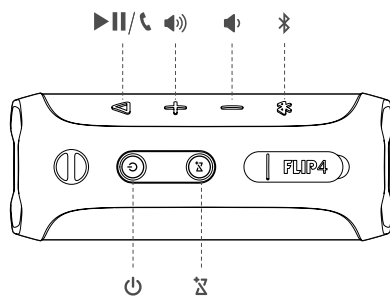

FLIP4


Quick Start Guide
Guide de démarrage rapide

3 Connections

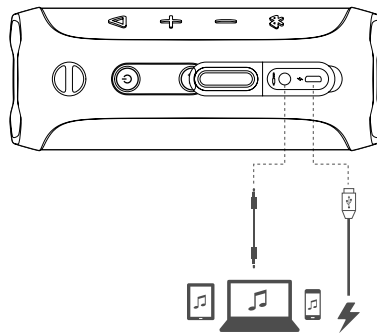


4 Bluetooth®

 1. Bluetooth connection



Choose "JBL Flip 4" to connect

 2. Music control




Press - Play/Pause
Double Press - Next Track

FLIP4

Quick Start Guide

Guide de démarrage rapide

3. Speakerphone

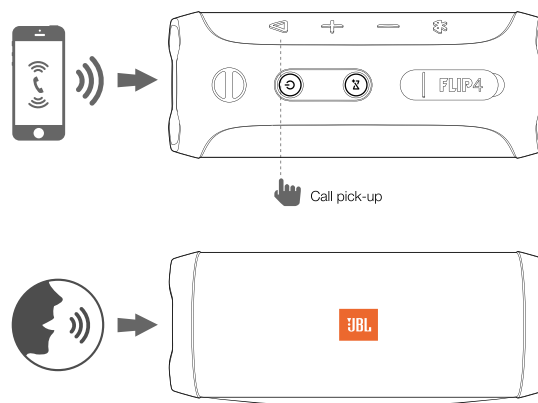


5 Voice assistant

- [illegible]



Quick Start Guide
Guide de démarrage rapide

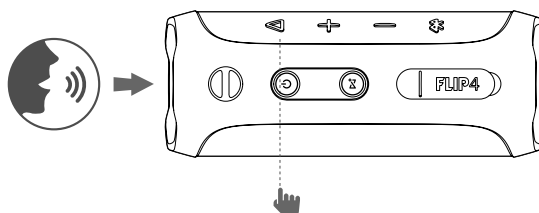[illegible][illegible]


FLIP4

Quick Start Guide
Guide de démarrage rapide


6 Bluetooth Connect+

Wirelessly links multiple compatible speakers together

 Step 1



Step 2

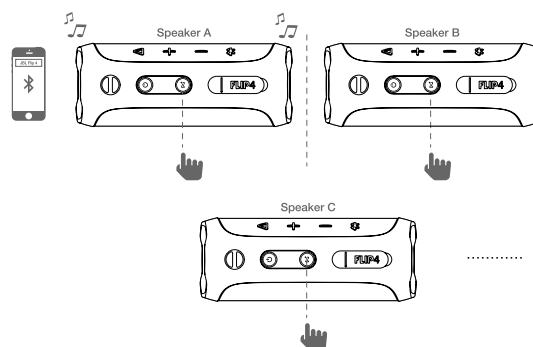


FLIP4

Quick Start Guide

Guide de démarrage rapide

Step 3

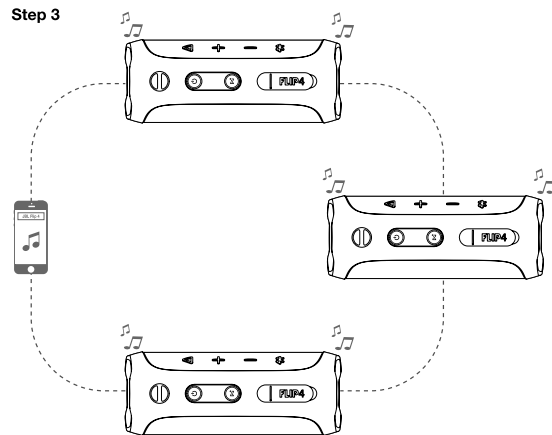

Play music on one of your speakers and then press the Bluetooth Connect+ button on all desired speakers to start broadcasting. All the other speakers will play same music from the music source.

Play music on one of your speakers and then press the Bluetooth Connect+ button on all desired speakers to start broadcasting. All the other speakers will play same music from the music source.

Play music on one of your speakers and then press the Bluetooth Connect+ button on all desired speakers to join the group listening. All the other speakers will play same music from the music source.

Play music on one of your speakers and then press the Bluetooth Connect+ button on all desired speakers to start broadcasting. All the other speakers will play same music from the music source.

Play music on one of your speakers and then press the Bluetooth Connect+ button on all desired speakers to start broadcasting. All the other speakers will play same music from the music source.

Play music on one of your speakers and then press the Bluetooth Connect+ button on all desired speakers to start broadcasting. All the other speakers will play same music from the music source.

Play music on one of your speakers and then press the Bluetooth Connect+ button on all desired speakers to start broadcasting. All the other speakers will play same music from the music source.

Play music on one of your speakers and then press the Bluetooth Connect+ button on all desired speakers to start broadcasting. All the other speakers will play same music from the music source.

Play music on one of your speakers and then press the Bluetooth Connect+ button on all desired speakers to start broadcasting. All the other speakers will play same music from the music source.

Play music on one of your speakers and then press the Bluetooth Connect+ button on the desired speakers to start broadcasting. All the other speakers will play same music from the music source.

Play music on one of your speakers and then press the Bluetooth Control buttons on all desired speakers to start broadcasting. All the other speakers will play same music from the music source.

Play music on one of your speakers and then press the Bluetooth Connect+ button on all desired speakers to start broadcasting. All the other speakers will play same music from the music source.

Play music on one of your speakers and then press the Bluetooth Connect+ button on all desired speakers to start broadcasting. All the other speakers will play same music from the music source.

speakers to start broadcasting. All the other speakers will play ~~same~~ music from the music source.

FLIP4

Quick Start Guide Guide de démarrage rapide

Play music on one of your speakers and then press the Bluetooth Connect+ button on all desired speakers to start broadcasting. All the other speakers will play same music from the music source.
Play music on one of your speakers and then press the Bluetooth Connect+ button on all desired speakers to start broadcasting. All the other speakers will play same music from the music source.
Play music on one of your speakers and then press the Bluetooth Connect+ button on all desired speakers to start broadcasting. All the other speakers will play same music from the music source.
Play music on one of your speakers and then press the Bluetooth Connect+ button on all desired speakers to start broadcasting. All the other speakers will play same music from the music source.
Play music on one of your speakers and then press the Bluetooth Connect+ button on all desired speakers to start broadcasting. All the other speakers will play same music from the music source.
Play music on one of your speakers and then press the Bluetooth Connect+ button on all desired speakers to start broadcasting. All the other speakers will play same music from the music source.
Play music on one of your speakers and then press the Bluetooth Connect+ button on all desired speakers to start broadcasting. All the other speakers will play same music from the music source.



Download the Bluetooth Connect+ app for the following features: stereo setup, firmware upgrade, and device renaming.
Téléchargez l'application Bluetooth Connect+ pour les fonctions suivantes : configuration stéréo, mise à jour de micrologiciel et changement de nom d'appareil.
Descargue la aplicación Bluetooth Connect+ para disfrutar de las funciones siguientes: configuración estéreo, actualización del firmware y renombrado de dispositivos.
Baixe o aplicativo Bluetooth Connect+ para usar os seguintes recursos: configuração estéreo, atualização de firmware e mudança dos nomes dos dispositivos.
Lade die Bluetooth Connect+-App herunter, um über folgende Funktionen zu verfügen: Stereo-Einstellung, Firmware-Aufrüstung und Geräteumbenennung.
Scarica l'applicazione Bluetooth Connect+ per le seguenti funzionalità: configurazione stereo, aggiornamento del firmware, e ridenominazione del dispositivo.
Download de Bluetooth Connect+ app voor de onderstaande functies: stereo setup, firmware upgrade, en apparaten hernoemen.
Last ned Bluetooth Connect+-appen for følgende funksjoner: stereooppsett, oppgradering av fastvare og omdøping av enhet.
Lataa Bluetooth Connect+ -sovellus saadaksesi käyttöön seuraavat ominaisuudet: stereoasetukset, laiteohjelmistopäivitykset ja laitteiden uudelleen nimeäminen.
Загрузите приложение Bluetooth Connect+ для доступа к следующим функциям: настройка стереозвучания, обновление микропрограммы и переименование устройства.
Ladda ner appen Bluetooth Connect+ som har följande funktioner: stereoinställning, uppdatering av fast programvara och nya namn på enheter.
Download appen Bluetooth Connect+ for at få adgang til følgende funktioner: stereoconfiguration, firmwareopgradering og omdøbning af enheder.
以下の機能を使用するために、JBFLIP4ト・アプリをダウンロードしてください:ステレオ・セットアップ、ファームウェアのアップグレード、機器の名称変更
Pobierz aplikację Bluetooth Connect+, aby korzystać z następujących funkcji: konfiguracja stereo, aktualizacja oprogramowania układowego oraz zmiana nazwy urządzenia.
JBFLIP4을 다운로드하여 다음을 따릅니다. 스테레오 설정, 펌웨어 업그레이드 및 장치 이름 바꾸기.
下載 Bluetooth Connect+ 應用，即可使用以下功能：立體聲設置、固件升級和設備重命名。
下載 Bluetooth Connect+ 應用程式以使用下列功能：立體聲設定、韌體升級以及裝置重新命名。
Unduh aplikasi Bluetooth Connect+ untuk fitur-fitur berikut ini: pengaturan stereo, memperbarui firmware, dan penamaan ulang perangkat.
ורד את יישום ה-Bluetooth Connect+ בעבור היכולת הבאות: התקנת סטראו, שדרוג קושחה ושינוי שם מכשיר.


FLIP4

Quick Start Guide Guide de démarrage rapide

7 LED Behavior

	 (White)	 (White)	 (Blue)	 (Blue)
①	Standby	Power on	Bluetooth Pairing	Bluetooth Connected
⌂	NA	Speaker in broadcasting mode	NA	NA

8 Warning

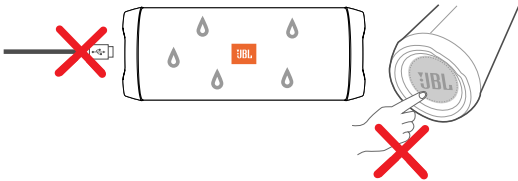

JBL Flip 4 is IPX7 waterproof; submerging it in water or other liquids may result in permanent damage to the speaker.

IMPORTANT: To ensure that the JBL Flip 4 is waterproof, please remove all cables connections and tightly close the cap; exposing the JBL Flip 4 to liquids without doing so may result in permanent damage to the speaker. And do not expose JBL Flip 4 to water while charging, as doing so may result in permanent damage to the speaker or power source.

IPX7 waterproof is defined as the speaker can be immersed in water up to 1m for up to 30 minutes.

JBL Flip 4 is IPX7 waterproof; submerging it in water or other liquids may result in permanent damage to the speaker.

IMPORTANT: To ensure that the JBL Flip 4 is waterproof, please remove all cables connections and tightly close the cap; exposing the JBL Flip 4 to liquids without doing so may result in permanent damage to the speaker. And do not expose JBL Flip 4 to water while charging, as doing so may result in permanent damage to the speaker or power source.

IPX7 waterproof is defined as the speaker can be immersed in water up to 1m for up to 30 minutes.

JBL Flip 4 is IPX7 waterproof; submerging it in water or other liquids may result in permanent damage to the speaker.

IMPORTANT: To ensure that the JBL Flip 4 is waterproof, please remove all cables connections and tightly close the cap; exposing the JBL Flip 4 to liquids without doing so may result in permanent damage to the speaker. And do not expose JBL Flip 4 to water while charging, as doing so may result in permanent damage to the speaker or power source.

IPX7 waterproof is defined as the speaker can be immersed in water up to 1m for up to 30 minutes.

JBL Flip 4 is IPX7 waterproof; submerging it in water or other liquids may result in permanent damage to the speaker.

IMPORTANT: To ensure that the JBL Flip 4 is waterproof, please remove all cables connections and tightly close the cap; exposing the JBL Flip 4 to liquids without doing so may result in permanent