


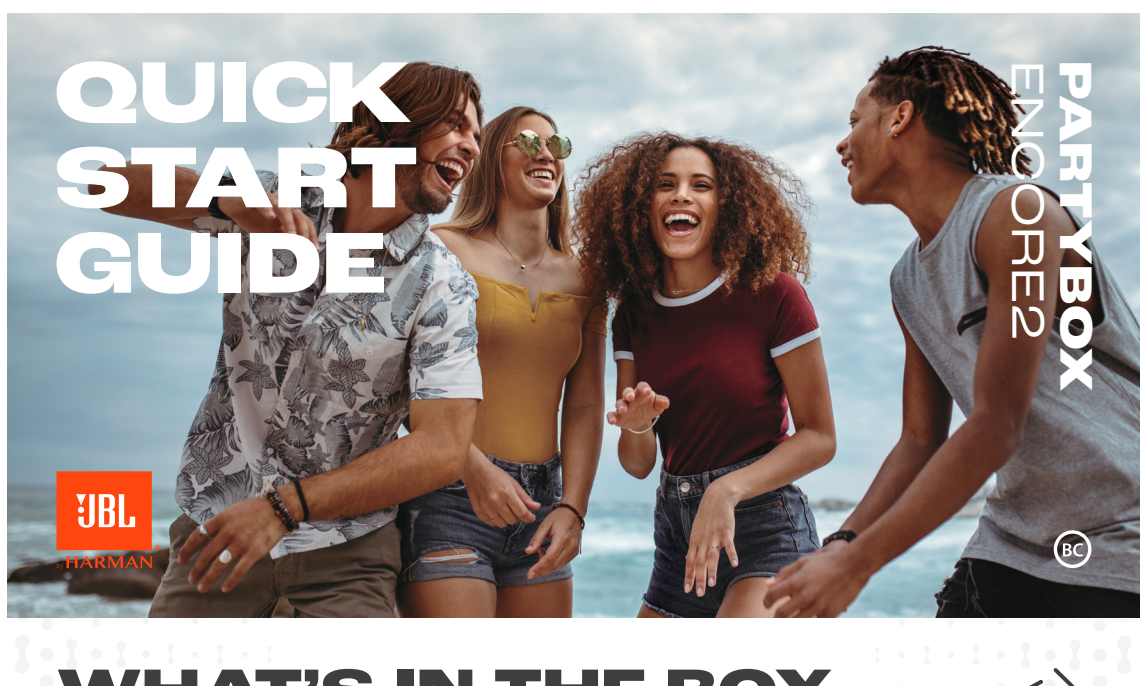

WHAT'S IN THE BOX

*Power cord quantity and plug type vary by regions.

BLUETOOTH PAIRING

PLAY

LIGHTSHOW

Apply lightshow presets and more with the JBL PARTYBOX app.

APP

MICROPHONE

GUITAR

MULTI-SPEAKER CONNECTION

CHARGING

MICROPHONE HOLDER

BATTERY REPLACEMENT

Charge the battery before first use.

USB file format: USB charge out: Cable length: Bluetooth® version: Bluetooth® profile: Bluetooth® transmitter frequency range: Bluetooth® transmitter power: ≤ 1.6 dBm (EIRP) Bluetooth® transmitter modulation: GFSK, π/4 DQPSK, BPSK	Model No. JBLB PBW100 SINGLE MIC 50 Hz - 15 kHz (± 6 dB) > 59 dBA ≤ 85 dBm (EIRP) 2404 - 2478 MHz Distance between transmitter and receiver: ≤ 30 m	Model No. JBLB PBW100 SINGLE MIC 50 Hz - 15 kHz (± 6 dB) > 59 dBA ≤ 85 dBm (EIRP) 2404 - 2478 MHz Distance between transmitter and receiver: ≤ 30 m
* Factory reset: To restore the factory settings, hold ⌘ and ▷ for more than 10 seconds.	* Factory reset: To restore the factory settings, hold ⌘ and ▷ for more than 10 seconds.	* Factory reset: To restore the factory settings, hold ⌘ and ▷ for more than 10 seconds.

2024/12/3 10:22:56