
INTERTEK TESTING SERVICES

EXHIBIT 7

INSTRUCTION MANUAL

INTERTEK TESTING SERVICES

7.0 Instruction Manual

Attached is a preliminary copy of the Instruction Manual.

The FCC information to user can be found in page 8 of this manual.

This manual will be provided to the end-user with each unit sold/leased in the United States.

Please read before using this equipment.

Road Raptor

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you. In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, crash, collision, impact, violent contact, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, Dept. W, 100 Throckmorton St., Suite 600, Fort Worth, TX 76102

We Service What We Sell

397

RadioShack
A Division of Tandy Corporation
Fort Worth, Texas 76102



RadioShack®

FEATURES

Your RadioShack Radio-Controlled Road Raptor is a winner! The car's precise steering gives you control over the Road Raptor anywhere it goes. Enjoy the excitement of the Road Raptor's speed and sharp turns, and use the controls to rock the car from side to side, pop a wheelie, or spin out!

Note: You need these items (not supplied) to power your Road Raptor:

- One 9-volt battery (RadioShack Cat. No. 23-553) for the transmitter
- One 9.6-volt rechargeable battery pack (Cat. No. 23-229 or 23-329) for the car
- One battery pack charger (Cat. No. 23-240)

 
Warning: Your Road Raptor can reach much higher speeds than most radio-controlled cars. Be careful when you use the car to avoid high-impact collisions with people and objects.

© 1997 Tandy Corporation.
All Rights Reserved.

RadioShack is a registered trademark used by Tandy Corporation.

PREPARATION

ATTACHING THE TRANSMITTER'S ANTENNA

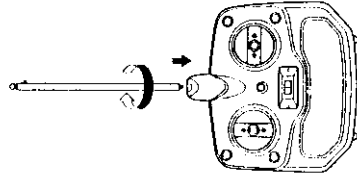


Thread the antenna into the transmitter's antenna connector. Make sure the connection is tight.


In the Transmitter

You need one 9-volt battery (Cat. No. 23-553) to power the transmitter.

 1. Slide the transmitter's OFF/ON switch to OFF.

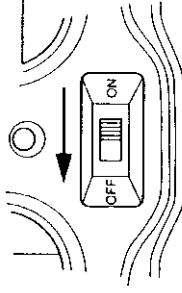

 2. Slide the battery compartment cover in the direction of the arrow marked on it and lift it off.

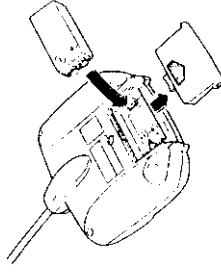

INSTALLING BATTERIES

Cautions:

- Use only a fresh battery of the required size and recommended type.
- If you do not plan to use the car for a week or more, remove the battery from the transmitter and the battery pack from the car. Batteries can leak chemicals that can damage electronic parts.
- Never leave dead or weak batteries in the transmitter or the car.
- Dispose of batteries and the battery pack promptly and properly; do not bury or burn them.

3. Put the battery in the compartment as indicated by the polarity symbols (+ and -) marked inside.

 
4. Replace the cover and snap it shut.

When the transmitter's range decreases, replace its battery.


In the Car

You need one 9.6-volt rechargeable battery pack (Cat. No. 23-229 or 23-329) to power the motor. Before you use the battery pack, use a special battery-pack charger (Cat. No. 23-240) to charge it.


1. Slide the car's **ON/OFF** switch to **OFF**.

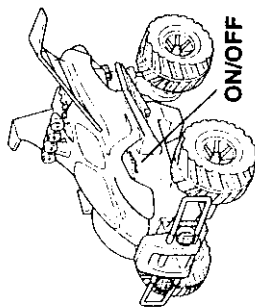

 2. Press the tab on the battery compartment cover and slide the cover in the direction of the arrow marked on it. Then remove the cover.

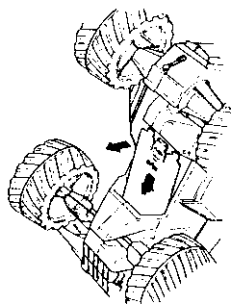

3. Attach the battery pack's connector to the car's matching connector. Do not force them! They fit together only one way.

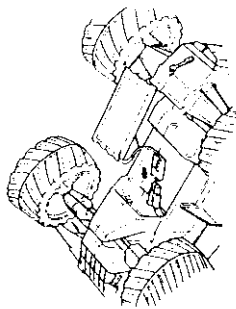 

4. Put the connectors in the groove in the battery compartment. Then put the battery pack in the battery compartment.
5. Close the cover and snap it shut.

When the car loses power, its turns become wider. When you notice this, change the battery pack or recharge it according to the battery charger's supplied instructions.

Note: If you want to drive your Road Raptor for longer periods of time, we suggest that you purchase an extra battery pack. You can charge one while you use the other.

Cautions:

- Use only the recommended battery pack and charger.
- Do not charge or recharge the battery pack while it is in the car.
- After you charge or recharge the battery pack (for 12-14 hours), disconnect it from the charger. Overcharging the battery pack could damage it.

- When you disconnect the battery pack from the charger, do not pull on the connector's wires. You might damage the battery pack.

- Do not recharge a battery pack immediately after use (while it is still hot). Allow it to cool first.

 
Important: At the end of the battery pack's useful life, it must be recycled or disposed of properly. Contact your local, county, or state hazardous waste-management authorities for information on recycling or disposal programs in your area. Some options that might be available are: municipal curbside collection, drop-off boxes at retailers such as your local RadioShack store, recycling collection centers, and mailback programs.

Warning: Never play with your Road Raptor in the street.


Caution: To avoid crashes, always watch where the car is going.

1. Extend the transmitter's antenna to its full length. For maximum range, hold the transmitter with the antenna as high as possible and pointing straight up.


2. Slide the transmitter's OFF/ON switch to ON.

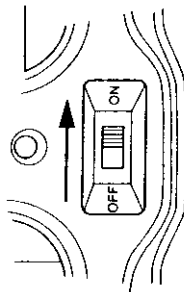

 3. Slide the car's ON/OFF switch to O.

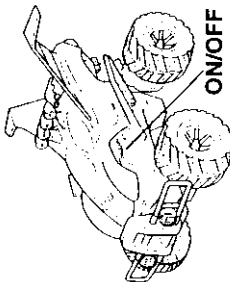

 4. Use the transmitter's control levers to drive and steer the Road Raptor.

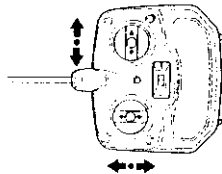

Left Control Lever

- Push forward to move forward.
- Push forward further for higher speed.
- Push forward all the way for maximum speed.
- Pull backward to move back.
- Pull backward all the way for maximum reverse.

Right Control Lever

- Push left to turn left.
- Push right to turn right.
- Release to go straight.

Driving Hints:

- Rocking Action — You can make the car rock from side to side as it moves forward or backward by moving the right control lever rapidly from right to left.
- Wheelie Action — You can make the car do a wheelie by moving the left control lever to maximum reverse, then quickly moving the control to forward.

- Spinning Action — While doing the wheelie, move the right control lever rapidly from right to left to make the car spin.

Caution: If the car gets stuck under an object, immediately slide the transmitter's ON/OFF switch to OFF. Then retrieve the car.

5. When you finish driving the Road Raptor, slide the car's ON/OFF switch to OFF and the transmitter's OFF/ON switch to OFF.

Caution: Do not touch the motor immediately after using the vehicle, as it might become hot during use.

HELPFUL HINTS

These hints can help you get the most enjoyment from your Road Raptor.

- Running your car continuously for long periods generates high heat levels. Heat causes the most wear and tear on the motor. To help keep heat levels down, when your car's battery pack dies, let the car cool at least 10 minutes before installing a newly charged battery pack.
- The Road Raptor has a special circuit to prolong battery life. If you keep the left control lever in one position continuously for 80 seconds, the transmitter automatically shuts off. If this happens, move the left control lever to another position to continue driving.
- If someone uses a CB nearby, it might interfere with control of the car. If this happens, move the car away from the CB.
- You cannot operate your car near devices with transmitters that use the same frequency as your car (27 MHz).
- Be sure the car is not out of the transmitter's range. The range depends on the surroundings and on battery strength. Obstructions such as buildings, fences, and so on, between the transmitter and the vehicle, reduce the range.
- If the vehicle moves slowly and you have installed a fully charged battery pack, check the wheel mechanisms for lint, thread, hair, or dust.

Your RadioShack Road Raptor is an example of superior design and craftsmanship. Follow these suggestions to care for your vehicle so you can enjoy it for years.

- Do not drive the car into puddles or in the rain, mud, sand, or snow. Doing so can damage the car.
- Do not expose the car to temperature extremes.
- Do not leave the car or transmitter outside overnight. Dampness can damage them.
- Clean the car with a damp cloth to keep it looking new.

Modifying or tampering with the car's or transmitter's internal components can cause a malfunction and might invalidate the warranty and void your FCC authorization to operate the car. If your car does not work properly, take it to your local RadioShack store for assistance.

THE FCC WANTS YOU TO KNOW

 
Your vehicle and transmitter might cause TV or radio interference even when they are operating properly. To determine whether your vehicle and transmitter are causing the interference, turn them off. If the interference goes away, your vehicle and transmitter are causing it. Try to eliminate the interference by:

- Moving your vehicle and transmitter away from the TV or radio
- Contacting your local RadioShack store for help

If you cannot eliminate the interference, the FCC requires that you stop using your Road Raptor and transmitter.

USER-REPLACEABLE PARTS

You can order these easily replaceable parts for your car at your local RadioShack store. Simply identify the part(s) you need from this exploded view, then find the part number in the list on Page 10.

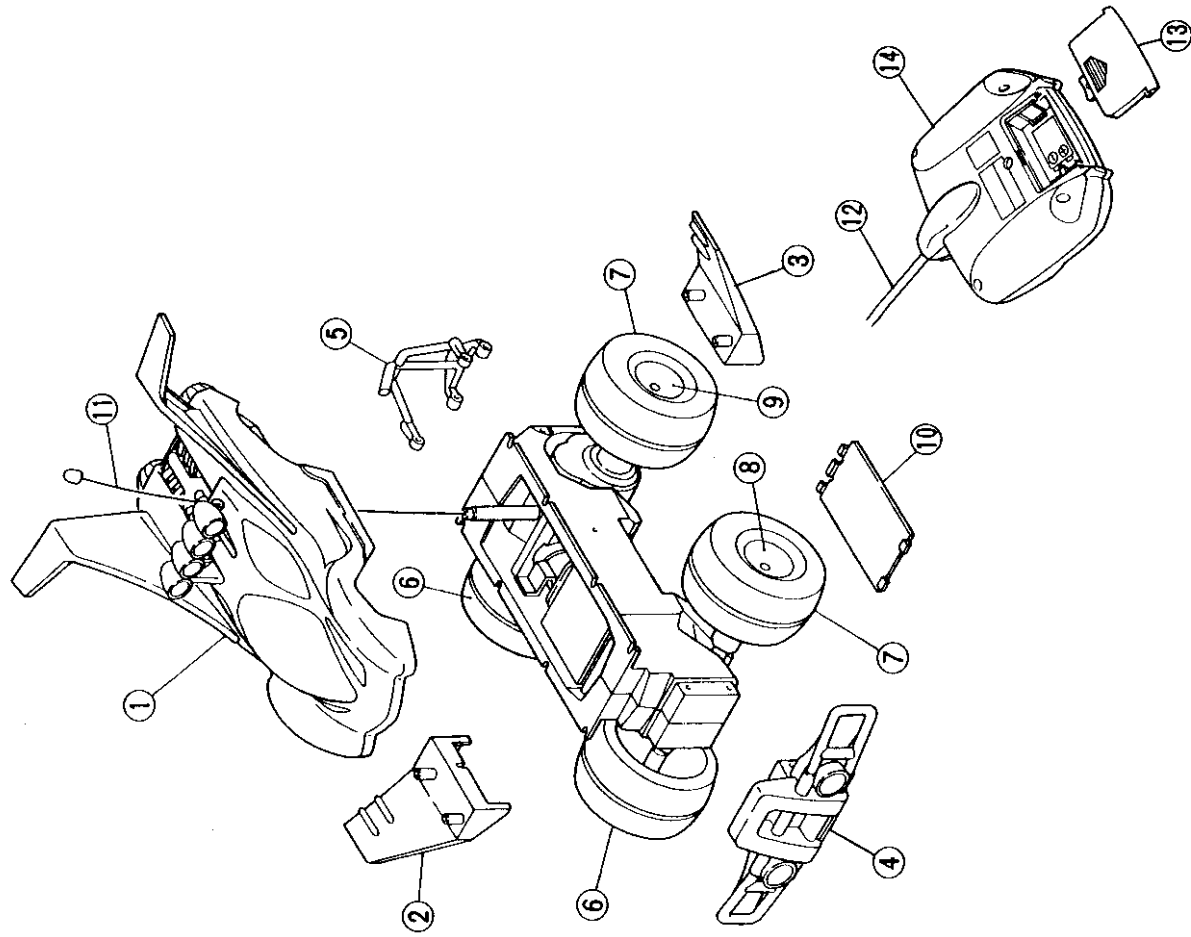

Ref. No.	Description	RSU #	NP Parts #
1	Body Set Consists of: Body Left Rear Wing Right Rear Wing Fog Lamp Afterburner Engine Tapping Screw (3x8(+)) (12) Tapping Flange Screw (3x8(+)) (8)	11964335	Z90678
2	Right Front Wing	11964509	Z90691
3	Left Front Wing	11964517	Z90692
4	Front Bumper	11964426	Z90684
5	Large Rear Bumper	11964418	Z90683
6	Right Tire	11964491	Z90690
7	Left Tire	11964483	Z90689
8	Front Wheel Hub	11964467	Z90687
9	Rear Wheel Hub	11964475	Z90688
10	Receiver Battery Lid	11964459	DB90190
11	Receiver Antenna	11964400	A90051
12	Transmitter Antenna	11964574	A90052
13	Transmitter Battery Lid	11964616	DB90191
14	Transmitter	11964541	ZA90070
15†	Service Manual	11964665	MS6004191
16†	Owner's Manual	11964673	MU6004191

†Not shown in exploded view