

Optional Accessories

Available optional parts:

- BPRP1100-Battery Pack, 7.2V, 1100mAh
- SMRP-Speaker Microphone
- BCRP-Battery Charger



Troubleshooting

Trouble	Solution
No power	• Battery may be used up. Please change battery or recharge it. • Probably, battery is not properly installed. Remove the battery and install it again.
Power doesn't last long even if fully charged	Battery may be out of use, please replace it with new battery.
Can't talk to or hear other users in your group	• Make sure you are using the same frequency and CTCSS/DCS tone as the other users in your group. • Other group users may be too far away. Make sure you are within range of the other transceiver.
Other voices (Non-group users) are present on the channel	• Change CTCSS/DCS tone. Be sure to change the tone on all transceivers in your group.