 
 
 
 


Front page in English

  True Wireless Stereo Earbuds with Charging Case LEVEL OF PROTECTION FROM WATER INTRUSION FCC ID: ATL-TS100 English	 S.												
TS100 User Manual (Ver 2.1)  Bluetooth 5.1	2. Wear Earbuds Both earbuds are marked with a L or R to indicate the appropriate ear side; earbuds are differently angled to fit either the left or the right ear. The proper fit will ensure the best sound quality. Insert the earbud into your ear and rotate slightly clockwise (as shown in image below); adjust for comfort.												
 POWER ON AND PAIRING 1. Before Using  Please charge your TS100 before use. Simply take the earbuds out of the charging case and insert them into your ears. The earbuds will automatically power on and become ready to pair to your device.  The TS100 earbuds are rated IPX6 Waterproof which means that the earbuds can resist high pressure water sprays however they shouldn't be submerged under water for a long period of time.	C. Turn on Bluetooth on your device a. Go to Settings > Bluetooth. iOS  Android  b. Turn on Bluetooth.  c. Scan for and select "iLuv TS100".  d. Wait for successful pairing												
 LISTENING TO MUSIC Once paired, open a music app on your device to Play/Pause music, adjust Volume Up/Down and Track Next/Previous. You can Play/Pause your music by simply touching the touch area of either earbud once; a sound prompt "Du" will be heard from both earbuds.	You can adjust the Volume Up/Down by touching and holding the touch area of the earbuds. The Right earbud will adjust the Volume Up and the Left earbud will adjust the Volume Down; a sound prompt "Du..du..du.." will be heard from both earbuds. You can skip tracks by double touching the touch area of the earbuds. The Right earbud will skip to the next track and the Left earbud will skip to the previous track; a sound prompt "Du" will be heard from both earbuds.												
 HANDS-FREE CALLING Please follow the instructions below to answer/hang up/ reject calls. 1. Answer Call  2. Hang Up Call  3. Reject Call 	 SIRI & GOOGLE ASSISTANT VOICE CONTROL To activate Siri with the TS100, triple touch the touch area of either the Right or Left earbud; a sound prompt "Du" will be heard from both earbuds. Note: Availability of Google Assistant voice control features will vary by different Android Phone models. Touch area is located directly on the center of the earbud.												
 CHARGING 1. To charge your earbuds Place both earbuds into the charging case whenever not using; Make sure to keep the lid closed. 2. To charge your case With the provided micro USB Cable, plug the micro USB port into the charging port located on the backside of the charging case. Then plug the USB side of the Micro USB Cable into a standard USB Charger or port.	3. Checking the Battery Level A. Earbuds • Earbud LEDs will indicate charge status while being charged in the case • When fully charged, earbud LEDs will be turned off B. Charging case • LED will indicate the Battery level of the case whenever connected to a charger • All LEDs will be lit when charging is complete • LED will display the battery level of the case for 4 seconds when the earbuds are placed back in the case												
 BATTERY LIFE The TS100 earbuds will provide a playtime of 20 hours. Get up to 8 hours on a single charge and an additional 12 hours from the included charging case. For a quick charge, place both earbuds back into the charging case for 20 minutes and get 2 hours of listening time. <table border="1"> <thead> <tr> <th></th><th>Earbud</th><th>Charging Case</th></tr> </thead> <tbody> <tr> <td>Listening Time</td><td>8 hrs**</td><td>12 hrs</td></tr> <tr> <td>Charging Time</td><td>1.5 hrs</td><td>1.5 hrs</td></tr> <tr> <td>Play time after charged for 20 minutes</td><td>2 hrs</td><td></td></tr> </tbody> </table> ** Listening time measured on a single charge at an 80% volume level		Earbud	Charging Case	Listening Time	8 hrs**	12 hrs	Charging Time	1.5 hrs	1.5 hrs	Play time after charged for 20 minutes	2 hrs		 POWER ON/OFF 1. Power On the Earbuds The earbuds will automatically power on and connect to the previously paired device whenever taken out of the charging case. To power on the earbuds without the charging case, hold the touch area of both earbuds for 2 seconds until a "Power on" prompt is heard.
	Earbud	Charging Case											
Listening Time	8 hrs**	12 hrs											
Charging Time	1.5 hrs	1.5 hrs											
Play time after charged for 20 minutes	2 hrs												
2. Power Off the Earbuds To power off the earbuds, place both earbuds into the charging case and close the lid. Please hold the touch area of either earbuds for 5 seconds to power off the earbuds without the charging case; a " Power off " prompt will be heard. Please make sure that all music/audio is paused before powering off. 3. Auto Power Off To conserve battery, the earbuds will automatically power off when it's out of range from your device for more than 5 minutes.	 TROUBLESHOOTING Place both earbuds into the charging case and leave the lid closed; take earbuds out of charging case after 15 seconds. This simple trick will resolve most problems which include but isn't limited to L/R channel disconnection or pairing/connectivity issues with devices.												
 FAQ (FREQUENTLY ASKED QUESTIONS) 1. How can I power on/off the TS100? The earbuds will automatically power on when removed from the charging case and power off when placed back into the charging case. Whenever the charging case isn't near the earbuds, hold the touch area of both earbuds for 2s to Power on and hold the touch area of either earbud for 5s to Power off. 2. How can I play/pause music or receive calls? Simply touch the touch area of either earbud to Play/ Pause music. Double touch either earbud to receive phone calls. 3. How can I control the volume of the music or call? Touch and hold the touch area of the Right/Left earbud to turn Up/Down the volume. 4. What will affect the total playtime? Playtime will vary the volume level, type of audio and connection status.	NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: - Reorient or relocate the receiving antenna. - Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. - Consult the dealer or an experienced radio/TV technician for help Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and(2) This device must accept any interference received, including interference that may cause undesired operation. Hereby, iLuv Creative Technology declares that the radio equipment type Bubble Gum Air is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the follow internet address : www.iluv.com TROUBLE SHOOTING: When the battery is completely drained while not in use for a long period of time, try charging it a few times as it will resume its normal charging process. Restart the charging process if the charging indicator does not respond or is turned off after a few minutes. DÉPANNAGE : Lorsque la pile est complètement épuisée parce qu'elle n'a pas été utilisée depuis longtemps, tentez de la charger quelques fois afin qu'elle se remette à charger normalement. Recommencez le processus de chargement si l'indicateur de charge ne répond pas ou s'il s'éteint après quelques minutes. ONE YEAR LIMITED WARRANTY GARANTIE LIMITÉE D'UN AN       Printed in China. EUROPEAN UNION TWO YEARS LIMITED WARRANTY GARANTIE LIMITÉE DE DEUX ANS												