


---

# SocketModem™ CDMA

Embedded Data/Fax Wireless Modem

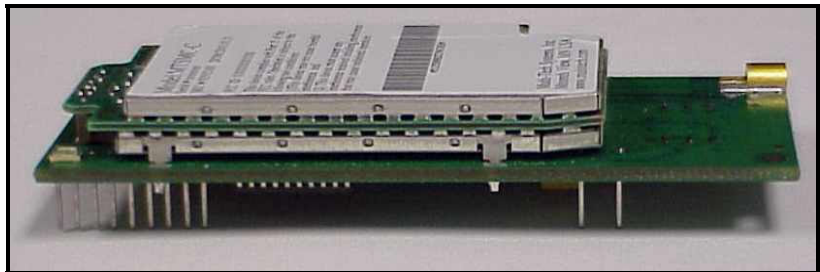

*MTSMCC-C – Global CDMA 2000 1xRTT, 800/1900 MHz*

## Developer's Guide

**Global SocketModem CDMA Developer's Guide**  
**MTSMMC-C – CDMA 2000 1xRTT, 800/1900 MHz**  
**PN S000298A, Version A**

**Copyright**

This publication may not be reproduced, in whole or in part, without prior expressed written permission from Multi-Tech Systems, Inc. All rights reserved.

Copyright © 2003, by Multi-Tech Systems, Inc.

Multi-Tech Systems, Inc. makes no representations or a warranty with respect to the contents hereof and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose.

Furthermore, Multi-Tech Systems, Inc. reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation of Multi-Tech Systems, Inc. to notify any person or organization of such revisions or changes.

**Revisions**

| <i>Revision Level</i> | <i>Date</i> | <i>Description</i> |
|-----------------------|-------------|--------------------|
| <b>A</b>              | 06/09/03    | Initial release.   |

**Patents**

This device covered by the following patent: 5,673,268

**Trademarks**

Multi-Tech Trademarks: SocketModem, Multi-Tech, and the Multi-Tech logo.

All other products and technologies are the trademarks or registered trademarks of their respective holders.

**World Headquarters**

Multi-Tech Systems, Inc.  
2205 Woodale Drive  
Mounds View, Minnesota 55112  
Phone: 763-785-3500 or 800-328-9717  
Fax: 763-785-9874

**Technical Support**

| <b>Country</b>                                                                    | <b>By Email</b>            | <b>By Phone</b>    |
|-----------------------------------------------------------------------------------|----------------------------|--------------------|
| France:                                                                           | support@multitech.fr       | (33) 1-64 61 09 81 |
| India:                                                                            | support@multitechindia.com | 91 (124) 6340778   |
| U.K.:                                                                             | support@multitech.co.uk    | (44) 118 959 7774  |
| U.S. and Canada:                                                                  | oemsales@multitech.com     | (800) 972-2439     |
| Rest of the World:                                                                | oemsales@multitech.com     | (763) 717-5863     |
| Internet Address: <a href="http://www.multitech.com">http://www.multitech.com</a> |                            |                    |


## Table of Contents

|                                                                                   |           |
|-----------------------------------------------------------------------------------|-----------|
| <b>CHAPTER 1 – PRODUCT DESCRIPTION AND SPECIFICATIONS .....</b>                   | <b>4</b>  |
| PRODUCT DESCRIPTION .....                                                         | 4         |
| APPLICATIONS.....                                                                 | 4         |
| PRODUCT FEATURES.....                                                             | 5         |
| FEATURE DETAILS.....                                                              | 5         |
| DEVELOPER'S KIT .....                                                             | 5         |
| TECHNICAL SPECIFICATIONS.....                                                     | 6         |
| RELATED MANUALS .....                                                             | 6         |
| ADDITIONAL INFORMATION .....                                                      | 6         |
| <b>CHAPTER 2 – MECHANICAL SPECIFICATIONS .....</b>                                | <b>7</b>  |
| PHYSICAL DIMENSIONS.....                                                          | 7         |
| PIN CONFIGURATIONS .....                                                          | 8         |
| <i>Pin Descriptions</i> .....                                                     | 8         |
| <b>CHAPTER 3 – ELECTRICAL CHARACTERISTICS .....</b>                               | <b>9</b>  |
| I/O ELECTRICAL CHARACTERISTICS .....                                              | 9         |
| POWER CONSUMPTION.....                                                            | 9         |
| HANDLING PRECAUTIONS .....                                                        | 9         |
| <b>CHAPTER 4 – SOCKETMODEM INTERFACES.....</b>                                    | <b>10</b> |
| FLASHING LED .....                                                                | 10        |
| RF INTERFACE.....                                                                 | 10        |
| <i>RF Connector</i> .....                                                         | 10        |
| TRANSMITTER SPECIFICATIONS.....                                                   | 10        |
| RECEIVER SPECIFICATIONS .....                                                     | 11        |
| <b>CHAPTER 5 – SOCKETMODEM TEST BOARD .....</b>                                   | <b>12</b> |
| SERIAL TEST/DEMO BOARD COMPONENTS.....                                            | 12        |
| SERIAL TEST/DEMO BOARD BLOCK DIAGRAM.....                                         | 13        |
| <b>CHAPTER 6 – APPLICATION CONSIDERATIONS.....</b>                                | <b>14</b> |
| GENERAL GUIDELINES FOR THE USE OF THE SOCKETMODEM.....                            | 14        |
| <i>Hardware and RF</i> .....                                                      | 14        |
| <i>The Antenna</i> .....                                                          | 14        |
| <i>Soldering and Cleaning the SocketModem</i> .....                               | 14        |
| FIRMWARE UPGRADE .....                                                            | 14        |
| INITIAL CONFIGURATION USING MOBILE PHONETOOLS.....                                | 14        |
| <b>APPENDIX A – SAFETY PRECAUTIONS &amp; REGULATORY STANDARDS COMPLIANCE.....</b> | <b>15</b> |
| SAFETY PRECAUTIONS .....                                                          | 15        |
| <i>RF Safety</i> .....                                                            | 15        |
| <i>General Safety</i> .....                                                       | 16        |
| <i>General Safety Standards</i> .....                                             | 17        |
| <i>RF Exposures</i> .....                                                         | 17        |
| <i>Instructions to OEMs</i> .....                                                 | 17        |
| REGULATORY STANDARDS COMPLIANCE .....                                             | 18        |
| <i>CDMA compliance</i> .....                                                      | 18        |
| <b>APPENDIX B – SOURCES FOR PERIPHERAL DEVICES .....</b>                          | <b>19</b> |
| CDMA ANTENNA .....                                                                | 19        |
| <b>APPENDIX C – AT COMMAND LIST .....</b>                                         | <b>20</b> |
| <b>APPENDIX D – ACRONYMS AND ABBREVIATIONS .....</b>                              | <b>24</b> |
| <b>INDEX .....</b>                                                                | <b>25</b> |

# Chapter 1 – Product Description and Specifications

## Product Description

The Multi-Tech SocketModem CDMA is a complete, ready-to-integrate, embedded wireless modem. Designed for global use, it offers standards-based multi-band CDMA200 1x performance. The SocketModem CDMA is based on industry-standard open interfaces and utilizes the same form factor as the SocketModem, SocketModem IP, or SocketEthernet IP modules from Multi-Tech.

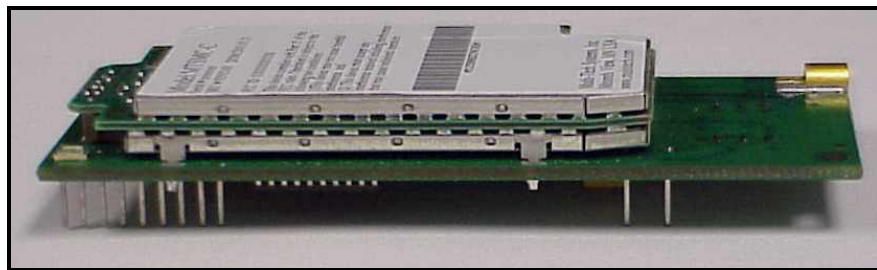

*Multi-Tech's Wireless SocketModem CDMA*

| Product  | Description                  | Region |
|----------|------------------------------|--------|
| MTSMMC-C | CDMA2000 1xRTT, 800/1900 MHz | Global |

## Applications

The CDMA SocketModem is targeted at applications that periodically need to send or receive data over a wireless network. It is an ideal solution for:

- Appliances
- ATM terminals
- Automotive
- Data collection
- Gas pumps
- Industrial and medical remote monitoring systems
- Remote diagnostics
- Remote metering
- Security systems
- Vending/gaming machines
- Other devices requiring wireless connectivity

## Product Features

- CDMA200 1xRTT
- CDMA IS-95-A, IS-95B
- Class 2.0 Group 3 FAX
- Dual-band 800/1900 CDMA
- Short Message Services features including text SMS mobile originated, SMS mobile terminated, cell broadcast, Over the Air Activation (OTA), OTASP, OTAPA
- 14.4K circuit switched data
- MMCX antenna connector
- Serial interface supports DTE speeds to 230K
- AT command compatible\*
- Phone book management
- Personal Information Management (PIM)
- Fixed dialing number
- Real time clock
- Alarm management

**\*AT Commands** - AT commands for this product are published in a separate document available on the Developer's Kit system CD or from Multi-Tech. For a copy of this document, contact OEM Sales at [oemsales@multitech.com](mailto:oemsales@multitech.com) or call (800) 972-2439.

## Feature Details

**Integration Reduces Space, Power, and Cost** – The SocketModemCDMA integrates the controller, RF transceiver, and antenna interface in one module. This integration requires low power and low real estate, and it provides an overall reduction in costs.

**Reduces Development Time** – The SocketModem CDMA can make your existing and next generation device, machine, or system communication-ready without requiring significant hardware changes to its design. This complete, ready-to-integrate wireless SocketModem allows you to enhance your product while you focus on developing its core features.

**Short Message Services** – The SocketModem CDMA offers SMS features such as mobile originated, mobile terminated, cell broadcast, Over the Air Activation (OTA), OTASP, and OTAPA.

**Management Features** – The SocketModem CDMA provides advanced management features that include: phone book management, fixed dialing number, real time clock, and alarm management.

**Industry-standard Modem Commands** – The SocketModem CDMA provides industry-standard AT-style commands for ease of integration into your existing software application.

**SocketModem Pin-Out** – The SocketModem CDMA interfaces easily with existing products through a standard serial communication channel. The complete on-board RF transceiver interfaces with an antenna for direct connection to wireless SMS, circuit-switched dial-up, or packet data networks. The SocketModem also includes an onboard LED to display network status. The SocketModem is a Data Terminal Equipment (DTE) device with serial asynchronous protocol support. The serial DTE channel is capable of transfer speeds to 230K bps and can be interfaced directly to a UART or microcontroller.

## Developer's Kit

The SocketModem CDMA Developer's Kit allows you to plug in the SocketModem and use it for testing, programming, and evaluation. The kit includes:

- one development board with RS-232 DB-25 connector
- universal power supply
- antenna
- RS-232 cable

## Technical Specifications

The SocketModem CDMA meets the following specifications:

|                              |                                                                                          |
|------------------------------|------------------------------------------------------------------------------------------|
| <b>Fax Compatibility</b>     | CDMA Class 2.0 Group 3 Fax                                                               |
| <b>Weight</b>                | 1.2 oz (34 g)                                                                            |
| <b>Dimensions</b>            | 3.1" w x 1.4" h x 0.5" d<br>(8.0 cm x 3.5 cm x 1.2 cm)                                   |
| <b>Power Requirements</b>    | 5 VDC; 400mA Typical, 700mA Maximum                                                      |
| <b>Operating Environment</b> | -20° to +55° C                                                                           |
| <b>Storage Temperature</b>   | -30° to +85° C                                                                           |
| <b>Certifications</b>        | CE Mark<br>EMC: FCC Part 2, 15, 22, 24, EN 55022 & EN55024<br>Safety: UL 60950, EN 60950 |
| <b>Cleaning</b>              | No cleaning/washing due to the manufacturing process used to produce this product        |

## Related Manuals

AT commands for this product are published in a separate document available on the Developer's Kit system CD or from Multi-Tech. Multi-Tech manuals and other resources are available on the Multi-Tech Web page at <http://www.multitech.com>.

## Additional Information


European Telecommunications Standards Institute (ETSI) - Contact the ETSI at:  
650, route des Lucioles  
06921 Sophia-Antipolis Cedex  
France  
Tel: +33 (0)4 92 94 42 00  
Fax: +33 (0)4 93 65 47 16  
<http://www.etsi.org>

Global Engineering Documents manages a collection of more than one million documents from over 460 organizations worldwide:  
<http://global.ihs.com>  
Phone: 800-854-7179  
Fax: 303-792-2192

The ITU is the leading publisher of telecommunication technology, regulatory and standards information, with over 4,000 titles in printed form, on CD-ROM and Online at  
<http://www.itu.int/publications/>.

# Chapter 2 – Mechanical Specifications


## Physical Dimensions

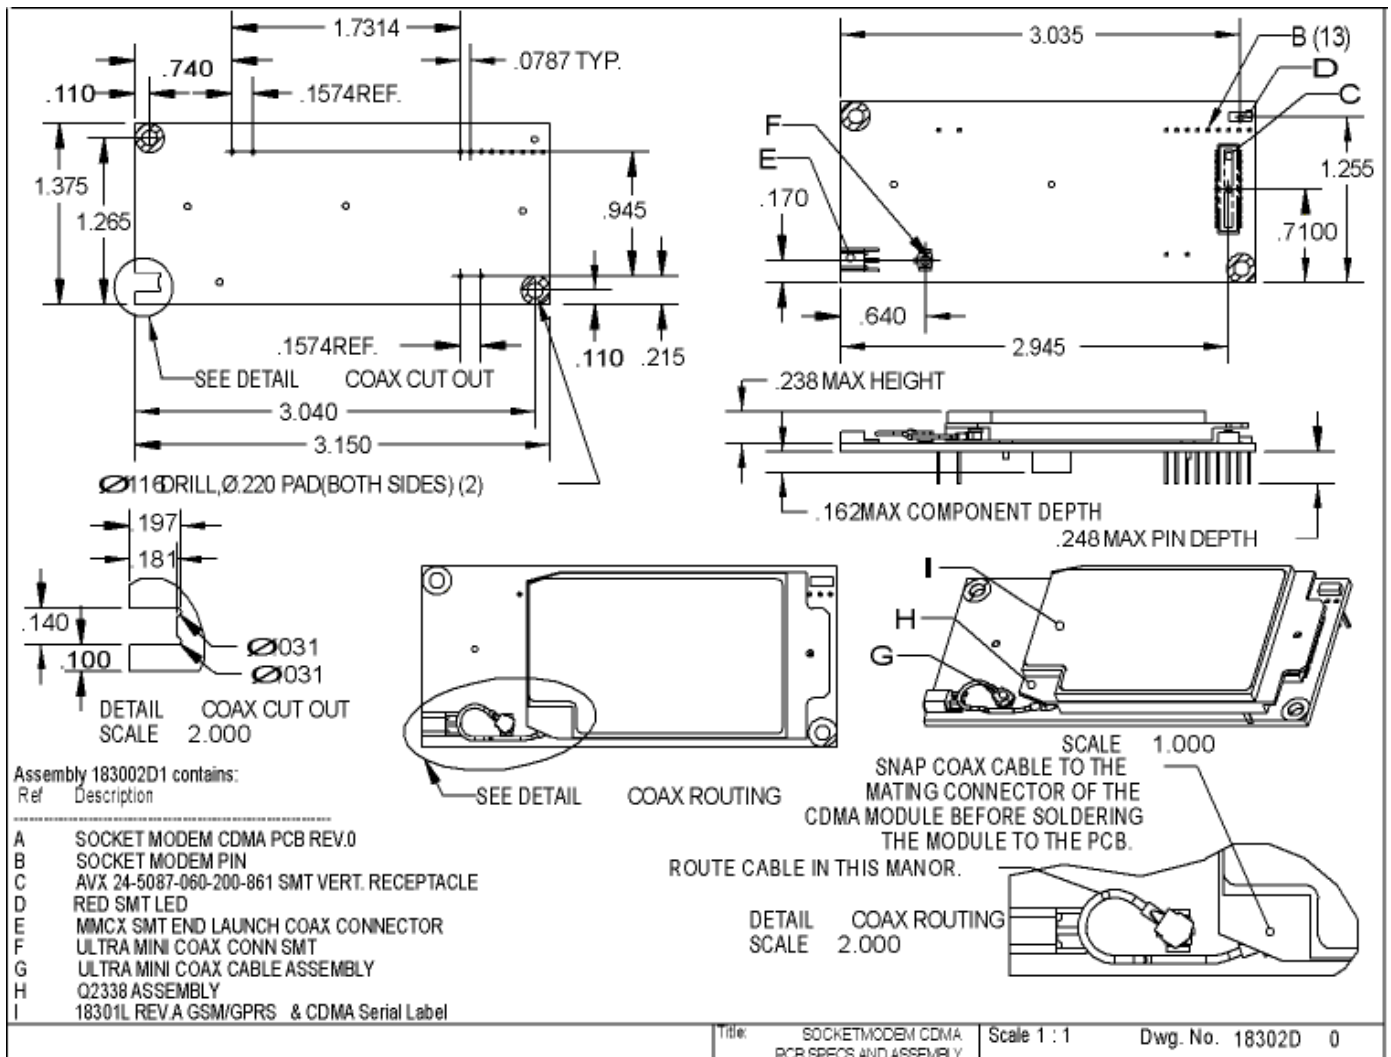

SocketModem CDMA Mechanical Drawing

## Pin Configurations

The SocketModem CDMA uses a 13-pin interface.

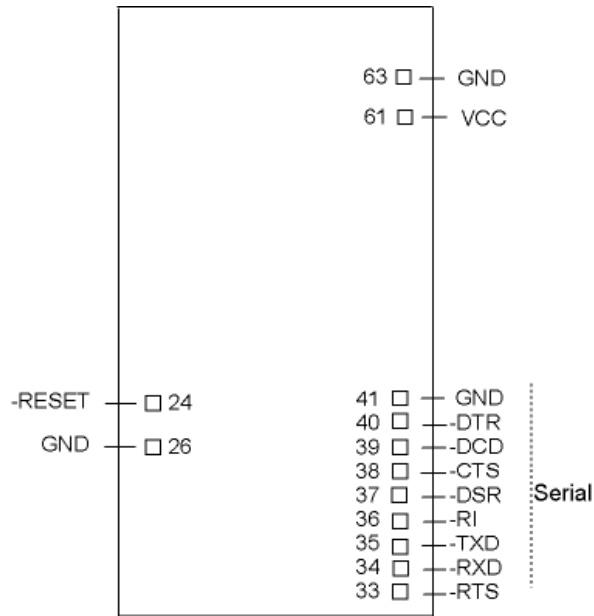

SocketModem Pins - Top View

### Pin Descriptions

| Pin #      | Signal Name | I/O Type | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|------------|-------------|----------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 24         | -RESET      | I/O      | <b>Reset.</b> This signal is used to force a reset procedure by providing low level during at least 500 $\mu$ s. This signal is considered an emergency reset only. A reset procedure is already driven by an internal hardware during the power-up sequence.<br>This signal can also be used to provide a reset to an external device. It then acts as an output. If no external reset is necessary, this input can be left open. If used (emergency reset), it has to be driven by an open collector or an open drain. |
| 26, 41, 63 | GND         |          | <b>Ground</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| 33         | -RTS        | I        | <b>Request to Send.</b> The -RTS signal is used for hardware flow control.                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| 34         | -RXD        | O        | <b>Received Data.</b> The modem uses the RXD line to send received data to the DTE and to send modem responses to the DTE.                                                                                                                                                                                                                                                                                                                                                                                               |
| 35         | -TXD        | I        | <b>Transmitted Data.</b> The DTE uses the -TXD line to send data to the modem or to transmit commands to the modem.                                                                                                                                                                                                                                                                                                                                                                                                      |
| 36         | -RI         | O        | <b>Ring Indicate.</b> -RI output ON (low) indicates the presence of a ring signal ON segment.                                                                                                                                                                                                                                                                                                                                                                                                                            |
| 37         | -DSR        | O        | <b>Data Set Ready.</b> -DSR indicates modem status to the DTE. -DSR OFF (high) indicates that the DTE is to disregard all signals appearing on the interchange circuits except Ring Indicator (-RI). It reflects the status of the local data set and does not indicate an actual link with any remote data equipment.                                                                                                                                                                                                   |
| 38         | -CTS        | O        | <b>Clear To Send.</b> -CTS is controlled by the modem to indicate whether or not the modem is ready to transmit data. -CTS ON, indicates to the DTE that signals presented on TXD will be transmitted. -CTS OFF indicates to the DTE that it should not transfer data across the interface on TXD.                                                                                                                                                                                                                       |
| 39         | -DCD        | O        | <b>Data Carrier Detect.</b> -DCD output is ON (low) when a data connection is established.                                                                                                                                                                                                                                                                                                                                                                                                                               |
| 40         | -DTR        | I        | <b>Data Terminal Ready (Active Low).</b> The -DTR input is turned ON (low) by the DTE when the DTE is ready to transmit or receive data. -DTR ON prepares the modem to be connected, and, once connected, maintains the connection. -DTR OFF places the modem in the disconnect state.                                                                                                                                                                                                                                   |
| 61         | VCC         | PWR      | <b>+5V</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |

# Chapter 3 – Electrical Characteristics

Electrical characteristics for the 5V Serial SocketModem are presented in this chapter.

## I/O Electrical Characteristics

**5 Vdc Characteristics (TA = -20° C to 55° C; VDD = 5 V ± 0.25 V) VDDMAX = 5.25 V**

|                                                                                |                                  |                                |                            |
|--------------------------------------------------------------------------------|----------------------------------|--------------------------------|----------------------------|
| <b>Digital Inputs</b><br>–DTR (40), –TXD (35), –RTS (33), –RESET (24)          | <b>Input High</b><br>Min 3.675 V | <b>Input Low</b><br>Max 1.4 V  |                            |
| <b>Digital Outputs</b><br>–DCD (39), –CTS (38), –DSR (37), –RI (36), –RXD (34) | <b>Output High</b><br>Min. 4 V   | <b>Output Low</b><br>Max 0.4 V | <b>Current Drive:</b> 2 ma |
| <b>Digital Input Capacitance</b>                                               |                                  |                                | <b>5 PF</b>                |

## Power Consumption

| Operating Mode | Band     | Average (mA) |
|----------------|----------|--------------|
| CDMA RXTX      | Cellular | 615          |
| Full Power     | PCS      | 770          |
| CMA RXTX       | Cellular | 340          |
| Average Power  | PCS      | 445          |
| CDMA Standby   | Cellular | 20           |
|                | PCS      | 20           |

## Handling Precautions

All devices must be handled with certain precautions to avoid damage due to the accumulation of static charge. Although input protection circuitry has been incorporated into the devices to minimize the effect of this static buildup, proper precautions should be taken to avoid exposure to electrostatic discharge during handling and mounting.

# Chapter 4 – SocketModem Interfaces

This chapter describes the SocketModem interfaces.

- Flashing LED Interface
- RF Interface

## Flashing LED

The flashing LED signal is used to indicate the working mode of the SocketModem.

### LED and SocketModem Status

| Signal | SocketModem Status             |                                             |
|--------|--------------------------------|---------------------------------------------|
| OFF    | Download mode or switched OFF> |                                             |
| ON     | Continuously lit               | Switched ON (not registered on the network) |
|        | Flashing                       | Switched ON (registered on the network)     |

## RF Interface

The impedance is 50 Ohms nominal.

### RF Connector

The RF connector is MMCX standard type. An antenna can be directly connected through the mating connector or using a small adapter.

## Transmitter Specifications

Transmitter performance test specification is CDMA2000 mobile station minimum requirement standard, **3GPP2 TSG C0011-A**

|                                                                                        |                                                                 |
|----------------------------------------------------------------------------------------|-----------------------------------------------------------------|
| <b>Operating Frequency</b>                                                             | 824MHz ~ 849MHz (Cellular Band)<br>1850MHz ~ 1910MHz (PCS Band) |
| <b>Modulation</b>                                                                      | QPSK                                                            |
| <b>Conversion Method</b>                                                               | Heterodyne                                                      |
| <b>Oscillation Method</b>                                                              | VCTCXO & PLL Synthesizer                                        |
| <b>RF Output Power</b><br>Maximum<br>Minimum                                           | 0.2W<br>10nW (-50dBm)                                           |
| <b>Frequency Stability</b>                                                             | +/- 300Hz                                                       |
| <b>Open Loop Power Control Output Power</b><br>RX= -25dBm<br>RX= -65dBm<br>RX= -104dBm | TX= -57.5 ~ -38.5dBm<br>TX= -17.5 ~ +1.5dBm<br>TX= +18 ~ +30dBm |
| <b>Spurious Emission</b><br>RX Band<br>TX Band<br>Other Frequency                      | -80dBm at 1MHz RBW<br>-61dBm at 1MHz RBW<br>-47dBm at 30KHz RBW |


## Receiver Specifications

Receiver performance test specification is CDMA2000 mobile station minimum requirement standard, 3GPP2 TSG C.S0011-A


|                                                                                                  |                                                                                                                                                                                |
|--------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Operating Frequency</b>                                                                       | 869MHz ~ 894MHz (Cellular Band)<br>1930MHz ~ 1990MHz (PCS Band)                                                                                                                |
| <b>Modulation</b>                                                                                | QPSK                                                                                                                                                                           |
| <b>Conversion Method</b>                                                                         | Heterodyne                                                                                                                                                                     |
| <b>Oscillation Method</b>                                                                        | VCTCXO & PLL Synthesizer                                                                                                                                                       |
| <b>Receiver Sensitivity</b>                                                                      | -104dBm @ FER 0.5%                                                                                                                                                             |
| <b>Single Tone Desensitization</b>                                                               | -101dBm @ FER 1%<br>(FC+/-1900KHz @ -30dBm)                                                                                                                                    |
| <b>IMD</b>                                                                                       | -101dBm @ FER 1%<br>(FC+/-900KHz, FC+/-1700KHz @ -43dBm)<br>-90dBm @ FER 1%<br>(FC+/-900KHz, FC+/-1700KHz @ -36dBm)<br>-79dBm @ FER 1%<br>(FC+/-900KHz, FC+/-1700KHz @ -21dBm) |
| <b>Conducted Spurious Emission</b><br><b>RX Band</b><br><b>TX Band</b><br><b>Other Frequency</b> | -81dBm at 1MHz RBW<br>-61dBm at 1MHz RBW<br>-47dBm at 30KHz RBW                                                                                                                |

# Chapter 5 – SocketModem Test Board

## Serial Test/Demo Board Components

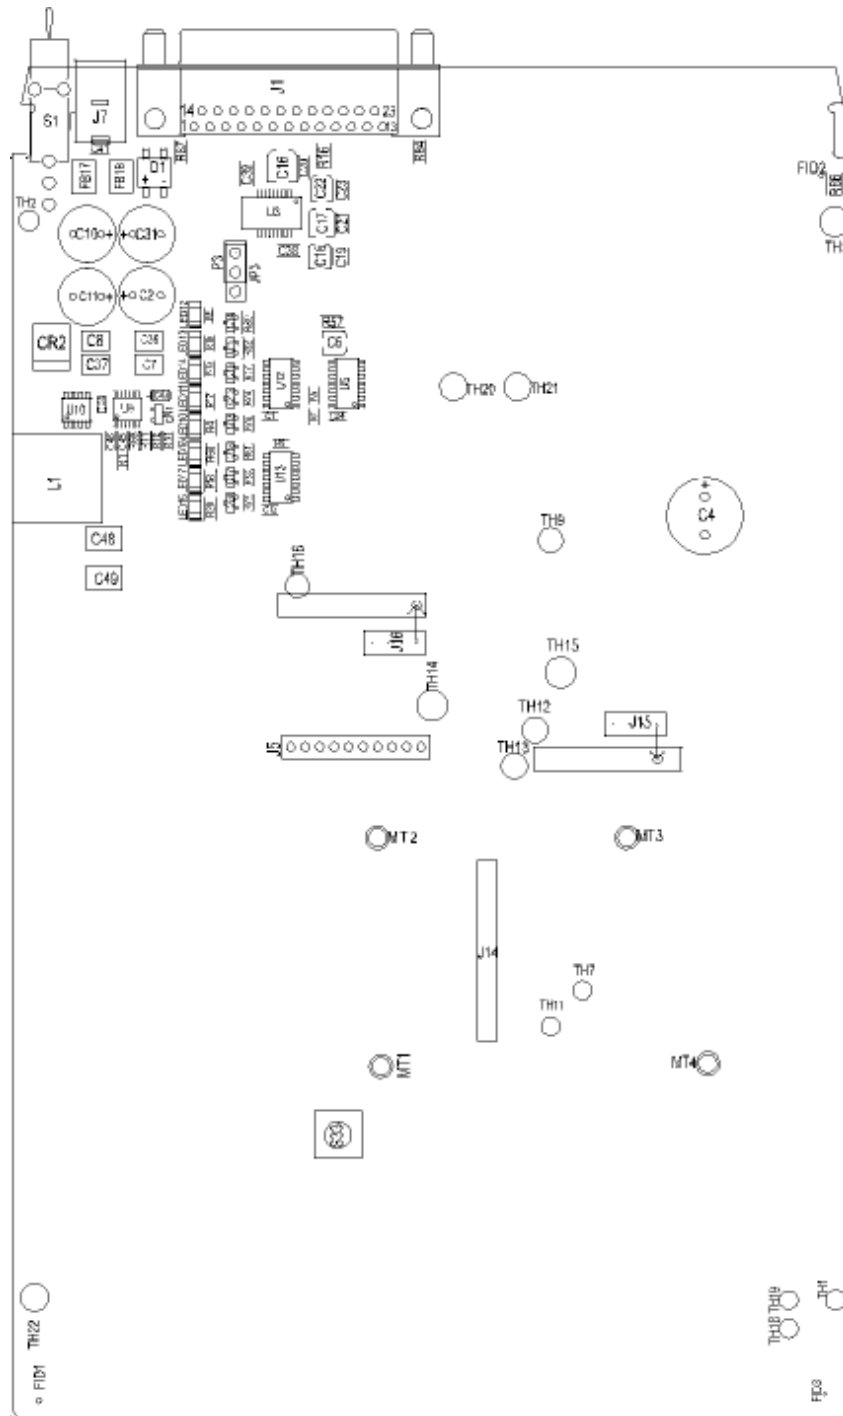

## Serial Test/Demo Board Block Diagram

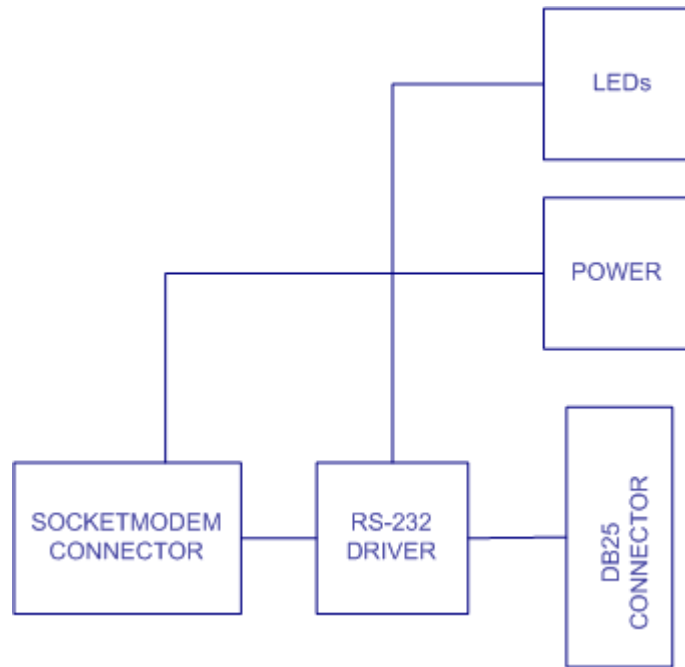

Block Diagram for the SocketModem CDMA

# Chapter 6 – Application Considerations

## General Guidelines for the Use of the SocketModem

### Hardware and RF

- Ground plane: Multi-Tech recommends having a common ground plane for analog, digital, and RF grounds.
- ESD protection on serial link, ...
- Possible spurious emission radiated by the application to the RF receiver in the receiver band

### The Antenna

The antenna sub-system and integration in the application is a major issue. It is a major issue in the choice of the antenna cable (type, length, performances, thermal resistance, etc.)

These elements could affect CDMA performances such as sensitivity and emitted power.

The antenna should be isolated as much as possible from the digital circuitry including the interface signals.

Multi-Tech recommends shielding the terminal. On terminals including the antenna, a poor shielding could dramatically affect the sensitivity of the terminal. Subsequently, the power emitted through the antenna could affect the application.

### Soldering and Cleaning the SocketModem

The pins of the SocketModem may be hand soldered or wave soldered. If wave soldered, the temperature on the top of the SocketModem must not exceed 100° C.

There should be no solvent or water washing of the SocketModem.

Do not use a hot air gun on the SocketModem.

## Firmware Upgrade

The SocketModem firmware is stored in flash memory, and it can easily be upgraded. Contact the factory for details.

## Initial Configuration Using Mobile PhoneTools

For initial configuration of your wireless device, Multi-Tech offers a Windows-based mobile PhoneTools application.

To load Mobile PhoneTools, click the Mobile PhoneTools icon on the system CD and follow the on-screen prompts.

# Appendix A – Safety Precautions & Regulatory Standards Compliance

## Safety Precautions

### **IMPORTANT!**

FOR THE EFFICIENT AND SAFE OPERATION  
OF YOUR CDMA INTEGRATED MODEM  
READ THIS INFORMATION BEFORE USE.

## RF Safety

### General

Your SocketModem is based on the CDMA standard for cellular technology. Your modem is actually a low power radio transmitter and receiver. It sends out and receives radio frequency energy. When you use your SocketModem integrated modem, the cellular system, which handles your calls controls both the radio frequency and the power level of your cellular modem.

### Exposure to RF Energy

There has been some public concern about possible health effects of using CDMA modems. Although research on health effects from RF energy has focused on the current RF technology for many years, scientists have begun research regarding newer radio technologies, such as CDMA. After existing research had been reviewed, and after compliance to all applicable safety standards had been tested, it has been concluded that the product was fitted for use. If you are concerned about exposure to RF energy there are things you can do to minimize exposure. Obviously, limiting the duration of your calls will reduce your exposure to RF energy. In addition, you can reduce RF exposure by operating your cellular modem efficiently by following the below guidelines.

### Efficient Modem Operation

For your modem to operate at the lowest power level, consistent with satisfactory call quality:

- If your modem has an extendible antenna, extend it fully. Some models allow you to place a call with the antenna retracted. However your modem operates more efficiently with the antenna fully extended.
- Do not hold the antenna when the modem is IN USE. Holding the antenna affects call quality and may cause the modem to operate at a higher power level than needed.

### Antenna Care and Replacement

Do not use the modem with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Replace a damaged antenna immediately. Consult your manual to see if you may change the antenna yourself. If so, use only a manufacturer-approved antenna. Otherwise, have your antenna repaired by a qualified technician. Use only the supplied or approved antenna. Unauthorized antennas, modifications, or attachments could damage the modem and may contravene local RF emission regulations or invalidate type approval.

## **General Safety**

### **Driving**

Check the laws and the regulations regarding the use of cellular devices in the area where you have to drive as you must comply with these laws and regulations. When using your modem while driving, please give full attention to driving. Pull off the road and park before making or answering a call if driving conditions so require.

### **Electronic Devices**

Most electronic equipment, for example in hospitals and motor vehicles, is shielded from RF energy. However, RF energy may affect some improperly shielded electronic equipment.

### **Vehicle Electronic Equipment**

Check your vehicle manufacturer representative to determine if any on-board electronic equipment is adequately shielded from RF energy.

### **Medical Electronic Equipment**

Consult the manufacturer of any personal medical devices (such as pacemakers, hearing aids, etc.) to determine if they are adequately shielded from external RF energy. Turn your modem OFF in health care facilities when any regulations posted in the area instruct you to do so. Hospitals or health care facilities may be using RF monitoring equipment.

### **Aircraft**

Turn your modem OFF before boarding any aircraft.

- Use it on the ground only with crew permission.
- Do not use it in the air.

To prevent possible interference with aircraft systems, Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your modem while the aircraft is on the ground. To prevent interference with cellular systems, local RF regulations prohibit using your modem while airborne.

### **Children**

Do not allow children to play with your modem. It is not a toy. Children could hurt themselves or others (by poking themselves or others in the eye with the antenna, for example). Children could damage the modem or make calls that increase your modem bills.

### **Blasting Areas**

To avoid interfering with blasting operations, turn your unit OFF when in a “blasting area” or in areas posted “turn off two-way radio”. Construction crews often use remote control RF devices to set off explosives.

### **Potentially Explosive Atmospheres**

Turn your modem OFF when in any area with a potentially explosive atmosphere. It is rare, but your modem or its accessories could generate sparks. Sparks in such areas could cause an explosion or fire resulting in bodily injuries or even death. Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include fueling areas such as gas stations; below deck on boats; fuel or chemical transfer or storage facilities; and areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Do not transport or store flammable gas, liquid, or explosives, in the compartment of your vehicle, which contains your modem or accessories. Before using your modem in a vehicle powered by liquefied petroleum gas (such as propane or butane) ensure that the vehicle complies with the relevant fire and safety regulations of the country in which the vehicle is to be used.

## General Safety Standards

THIS WIRELESS SOCKETMODEM COMPLIES WITH ALL APPLICABLE RF SAFETY STANDARDS. This cellular modem meets the standards and recommendations for the protection of public exposure to RF electromagnetic energy that have been established by governmental bodies and other qualified organizations, such as the following:

- Directives of the European Community,
- Directorate General V in Matters of Radio Frequency Electromagnetic Energy

## RF Exposures

Pursuant to 47 CFR § 24.52 of the FCC Rules and Regulations, personal communications services (PCS) equipment is subject to the radio frequency radiation exposure requirements specified in § 1.1307(b), § 2.1091 and § 2.1093 as appropriate.

The Multi-Tech SocketModem is a CDMA (PCS 1900) terminal which operates in the US licensed PCS frequency spectrum. The device transmits over the 1850-1910 MHz band and receives over the 1930-1990 MHz Band. Multi-Tech Systems, Inc. certifies that it has determined that the Modem complies with the RF hazard requirements applicable to broadband PCS equipment operating under the authority of 47 CFR Part 24, Subpart E of the FCC Rules and Regulations. This determination is dependent upon installation, operation, and use of the equipment in accordance with all instructions provided.

The modem is designed for and intended to be used in fixed and mobile applications. "Fixed" means that the device is physically secured at one location and is not able to be easily moved to another location. "Mobile" means that the device is designed to be used in other than fixed locations and generally in such a way that a separation distance of at least 20 cm is normally maintained between the transmitter's antenna and the body of the user or nearby persons. The Modem is not designed for or intended to be used in portable applications (within 20 cm of the body of the user) and such uses are strictly prohibited. To ensure that the unit complies with current FCC regulations limiting both maximum RF output power and human exposure to radio frequency radiation, a separation distance of at least 20 cm must be maintained between the unit's antenna and the body of the user and any nearby persons at all times and in all applications and uses.

Finally, the tune-up procedure for the O9EM2113 ensures that the maximum RF output power of the device does not exceed 30.0 dBm within the variations that can be expected due to quantity production and testing on a statistical basis.

## Instructions to OEMs

The Multi-Tech product manual includes specific warnings and cautions in order to ensure that OEMs are aware of their responsibilities, with regards to RF exposure compliance, for products into which the modem is integrated. With this guidance, the OEM will be able to incorporate into their documentation the necessary operating conditions and warnings.

OEMs need to provide a manual with the "final" product that clearly states the operating requirements and conditions and that these must be observed to ensure compliance with current FCC RF exposure requirements / MPE limits (see the "RF Exposures" section above). This will enable the OEM to generate (and provide the end-user with) the appropriate operating instructions, warnings and cautions, and/or markings for their product.

## **Regulatory Standards Compliance**

### **CDMA compliance**

The SocketModem is in compliance with reference regulations: TBR 19, TBR 20, TBR 31, TBR 32.

### **CE Label**

The Wireless SocketModem is CE compliant, which implies that the modem is in conformity with the European Community directives and it bears the CE label.

## Appendix B – Sources for Peripheral Devices

### CDMA Antenna

The integrated modem antenna connector is a MMCX connector. The MMCX connector incorporates a 'Snap On' latching action in order to make the connection easier with an excellent RF performance. An additional advantage is its small physical size, which is 50% of the standard MCX connector.

This type of connector is suitable for the standard ranges of flexible and semi-rigid cables. The characteristic impedance of the MMCX coaxial connector is 50 ohm. The antenna manufacturer must guarantee that the antenna will be working according to the radio characteristics presented in the table below.

#### Radio Characteristics

|                              | CDMA 850                        | CDMA 1900        |
|------------------------------|---------------------------------|------------------|
| <b>Frequency RX</b>          | 869 to 894 MHz                  | 1930 to 1990 MHz |
| <b>Frequency TX</b>          | 824 to 849 MHz                  | 1850 to 1910 MHz |
| <b>Impedance</b>             | 50 ohms                         |                  |
| <b>VSWR</b>                  | <1.5                            |                  |
| <b>Typical Radiated Gain</b> | 0 dBi in at least one direction |                  |

#### MMCX Plug

The SocketModem requires an MMCX plug to connect to an antenna.



MMCX Connector Example (right angle type)

#### Antenna

An antenna with mating connector can be ordered, for example, from:

IMS Connectors Systems GMBH

<http://www.imscs.com/>

#### MMCX / SMA Adapter

A small MMCX / SMA adapter can be ordered, for example, from:

Amphenol

<http://www.amphenol.com/>

Order No: 908-31100

# Appendix C – AT Command List

For comprehensive information about AT Commands, please read the AT Commands Reference Manual.

## AT Command List

| General Commands         |                                          |
|--------------------------|------------------------------------------|
| +CGMI                    | Manufacturer Identification              |
| +CGMM                    | Request Model Identification             |
| +CGMR                    | Request Revision Identification          |
| +CGSN                    | Product Serial Number                    |
| +CSCS                    | Select TE Character Set                  |
| +CIMI                    | Request IMSI                             |
| +CCID                    | Card Identification                      |
| +GCAP                    | Capabilities List                        |
| A/                       | Repeat Last Command                      |
| +CPOF                    | Power Off                                |
| +CFUN                    | Set Phone Functionality                  |
| +CPAS                    | Phone Activity Status                    |
| +CMEE                    | Report Mobile Equipment Errors           |
| +CKPD                    | Keypad Control                           |
| +CCLK                    | Clock management                         |
| +CALA                    | Alarm management                         |
| Call Control Commands    |                                          |
| D                        | Dial command                             |
| H                        | Hang-up Command                          |
| A                        | Answer a Call                            |
| +CEER                    | Extended Error Report                    |
| +VTD, +VTS               | DTMF Signals                             |
| ATDL                     | Redial Last Telephone Number             |
| AT%Dn                    | Automatic Dialing (or SMS send) with DTR |
| ATSO                     | Automatic Answer                         |
| +CICB                    | Incoming Call Bearer                     |
| +VGR, +VGT               | Gain Control                             |
| +CMUT                    | Microphone Mute Control                  |
| +SPEAKER                 | Speaker and Microphone Selection         |
| +ECHO                    | Echo Cancellation                        |
| +SIDET                   | Side Tone Modification                   |
| +VIP                     | Initialize Voice Parameters              |
| +CSNS                    | Single Numbering Scheme                  |
| Network Service Commands |                                          |
| +CSQ                     | Signal Quality                           |
| +COPS                    | Operator Selection                       |
| +CREG                    | Network Registration                     |
| +WOPN                    | Read Operator Name                       |
| +CPOL                    | Preferred Operator List                  |

**AT Command List (continued)**

| <b>Security Commands</b>      |                                     |
|-------------------------------|-------------------------------------|
| +CPIN                         | Enter PIN                           |
| +CPIN2                        | Enter PIN2                          |
| +CPINC                        | PIN Remaining Attempt Number        |
| +CLCK                         | Facility Lock                       |
| +CPWD                         | Change Password                     |
| <b>Phone Book Commands</b>    |                                     |
| +CPBS                         | Select Phone Book Memory Storage    |
| +CPBR                         | Read Phone Book Entries             |
| +CPBF                         | Find Phone Book Entries             |
| +CPBW                         | Write Phone Book Entry              |
| +CPBP                         | Phone Book Phone Search             |
| +CPBN                         | Move Action in Phone Book           |
| +CNUM                         | Subscriber Number                   |
| +WAIP                         | Avoid Phone Book Init               |
| <b>Short Message Commands</b> |                                     |
| +CSMS                         | Select Message Service              |
| +CNMA                         | New Message Acknowledgement         |
| +CPMS                         | Preferred Message Storage           |
| +CMGF                         | Preferred Message Format            |
| +CSAS                         | Save Settings                       |
| +CRES                         | Restore Settings                    |
| +CSDH                         | Show Text Mode parameters           |
| +CNMI                         | New Message Indication              |
| +CMGR                         | Read Message                        |
| +CMGL                         | List Message                        |
| +CMGS                         | Send Message                        |
| +CMGW                         | Write Message to Memory             |
| +CMSS                         | Send Message from Storage           |
| +CSMP                         | Set Text Mode Parameters            |
| +CMGD                         | Delete Message                      |
| +CSCA                         | Service Center Address              |
| +CSCB                         | Select Cell Broadcast Message Types |
| +WCBM                         | Cell Broadcast Message Identifiers  |
| +WMSC                         | Message Status Modification         |
| +WMGO                         | Message Overwriting                 |

**AT Command List (continued)**

| <b>Supplementary Services Commands</b> |                                            |
|----------------------------------------|--------------------------------------------|
| +CCFC                                  | Call Forwarding                            |
| +CLCK                                  | Call Barring                               |
| +CPWD                                  | Modify SS Password                         |
| +CCWA                                  | Call Waiting                               |
| +CLIR                                  | Calling Line Identification Restriction    |
| +CLIP                                  | Calling Line Identification Presentation   |
| +COLP                                  | Connected Line Identification Presentation |
| +CAOC                                  | Advice Of Charge                           |
| +CACM                                  | Accumulated Call Meter                     |
| +CAMM                                  | Accumulated Call Meter Maximum             |
| +CPUC                                  | Price Per Unit and Currency Table          |
| +CHLD                                  | Call Related Supplementary Services        |
| +CLCC                                  | List Current Calls                         |
| +CSSN                                  | Supplementary Service Notifications        |
| +CUSD                                  | Unstructured Supplementary Service Data    |
| +CCUG                                  | Closed User Group                          |
| <b>Data Commands</b>                   |                                            |
| +CBST                                  | Bearer Type Selection                      |
| +FCLASS                                | Select Mode                                |
| +CR                                    | Service Reporting Control                  |
| +CRC                                   | Cellular Result Codes                      |
| +ILRR                                  | DTE-DCE Local Rate Reporting               |
| +CRLP                                  | Radio Link Protocol Parameters             |
| +DOPT                                  | Others Radio Link Parameters               |
| %C                                     | Select Data Compression                    |
| +DS                                    | V42 bis Data Compression                   |
| +DR                                    | V42 bis Data Compression Report            |
| \N                                     | Select Data Error Correcting Mode          |
| <b>Fax Commands</b>                    |                                            |
| +FTM                                   | Transmit Speed                             |
| +FRM                                   | Receive Speed                              |
| +FTH                                   | HDLC Transmit Speed                        |
| +FRH                                   | HDLC Receive Speed                         |
| +FTS                                   | Stop Transmission and Wait                 |
| +FRS                                   | Receive Silence                            |
| <b>Fax Class 2 Commands</b>            |                                            |
| +FDT                                   | Transmit Data                              |
| +FDR                                   | Receive Data                               |
| +FET                                   | Transmit Page Punctuation                  |
| +FPTS                                  | Page Transfer Status Parameters            |
| +FK                                    | Terminate Session                          |
| +FBOR                                  | Page Transfer Bit Order                    |
| +FBUF                                  | Buffer Size Report                         |
| +FCQ                                   | Copy Quality Checking                      |
| +FCR                                   | Capability to Receive                      |
| +FDIS                                  | Current Sessions Parameters                |
| +FDCC                                  | DCE Capabilities Parameters                |
| +FLID                                  | Local ID String                            |
| +FPHCTO                                | Page Transfer Timeout Parameter            |

**AT Command List (continued)**

| <b>V24 - V25 Commands</b>   |                                        |
|-----------------------------|----------------------------------------|
| +IPR                        | Fixed DTE Rate                         |
| +ICF                        | DTE-DCE Character Framing              |
| +IFC                        | DTE-DCE Local Flow Control             |
| &C                          | Set DCD Signal                         |
| &D                          | Set DTR Signal                         |
| &S                          | Set DSR Signal                         |
| O                           | Back to Online Mode                    |
| Q                           | Result Code Suppression                |
| V                           | DCE Response Format                    |
| Z                           | Default Configuration                  |
| &W                          | Save Configuration                     |
| &T                          | Auto-Tests                             |
| E                           | Echo                                   |
| &F                          | Restore Factory Settings               |
| &V                          | Display Configuration                  |
| I                           | Request Identification Information     |
| <b>Specific AT Commands</b> |                                        |
| +CCED                       | Cell Environment Description           |
| +CCED                       | Automatic RXLev Indication             |
| +WIND                       | General Indications                    |
| +ADC                        | Analog Digital Converters Measurements |
| +CMER                       | Mobile Equipment Event Reporting       |
| +WLPR                       | Read Language Preference               |
| +WLPW                       | Write Language Preference              |
| +WIOR                       | Read GPIO Value                        |
| +WIOW                       | Write GPIO Value                       |
| +WAC                        | Abort Command                          |
| +WTONE                      | Play Tone                              |
| +WDTMF                      | Play DTMF Tone                         |
| +WDWL                       | Downloading                            |
| +WVR                        | Voice Rate                             |
| +WDR                        | Data Rate                              |
| +WHWV                       | Hardware Version                       |
| +WDOP                       | Date Of Production                     |
| +WSVG                       | Select Voice Gain                      |
| +WSTR                       | Status Request                         |
| +WSCAN                      | Scan                                   |
| +WRIM                       | Ring Indicator Mode                    |
| +W32K                       | Power saving mode                      |

## Appendix D – Acronyms and Abbreviations

ADC – Analog Digital Converter  
ASIC – Application Specific Integrated Circuit  
BCCH – Broadcast Control Channel  
CE – Communauté Européenne  
CLK – Clock  
CTS – Clear To send  
dB – decibel  
DCD – Data Carrier Detect  
DCE – Data Circuit Terminating Equipment  
DSR – Data Set Ready  
DTE – Data Terminal Equipment  
DTR – Data Terminated Ready  
EFR – Enhanced Full Rate  
ECDMA – Extended CDMA  
EMC – Electromagnetic Conformity  
EN – Enable  
ETSI – European Telecommunications Standards Institute  
FAC – Final Assembly Code  
FR – Full-Rate  
FTA – Full Type Approval  
GND – Ground  
GPIO – General Purpose Input Output  
CDMA – Global System for Mobile Communication  
HR – Half-Rate  
IMEI – International Mobile Equipment Identity  
MO – Mobile Originated  
MT – Mobile Terminated  
OEM – Original Equipment Manufacturer  
PDA – Personal Digital Assistant  
PCB – Printed Circuit Board  
PRES – Presence  
RI – Ring Indicator  
RTS – Request To Send  
SMD – Surface Mounted Design  
SMS – Short Message Service  
TAC – Type Approval Code  
TDMA – Time Code Multiple Access  
TE – Terminal Equipment  
VSWR – Voltage Standing Wave Ratio  
WAP – Wireless Application Protocol

# Index

- Advice Of Charge Command, 22
- aircraft and safety, 16
- analog, 24
- antenna, 10, 14
- antenna cable, 14
- antenna care and replacement, 15
- applications, 4
- AT Commands, 20
- AT commands documentation, 5, 6
- blasting areas and safety, 16
- Block Diagram, 13
- Call Barring Command, 22
- Call Forwarding Command, 22
- Call Waiting Command, 22
- CDMA, 24
- CDMA antenna, 19
- CDMA Compliance, 18
- CE, 18, 24
- Cell Broadcast Command, 21
- children and safety, 16
- Cleaning Safety Standards, 14
- Closed User Group Command, 22
- Data Carrier Detect, 24
- dB, 24
- Demo Board Components, 12
- Developer's Kit, 5
- driving safety, 16
- EFR, 24
- Electrical characteristics, 9
- electronic devices and safety, 16
- ESD protection, 14
- ETSI, 24
- explosive atmospheres and safety, 16
- Exposure to RF Energy, 15
- features, 5
- flashing LED interface, 10
- FR, 24
- gain, 17
- GND, 24
- GPIO, 24
- GPIO Read Command, 23
- GPIO Write Command, 23
- Handling Precautions, 9
- Hardware and RF, 14
- HR, 24
- initial configuration, 14
- Instructions to OEMs, 17
- interfaces, 10
- Mechanical Drawing**, 7
- medical electronic equipment and safety, 16
- MMCX (Miniature Micro Connector), 10, 19
- MO, 24
- MT, 24
- operating conditions, 17
- PCB, 24
- PCS, 17
- PhoneTools, 14
- Pin Descriptions, 8
- Power Consumption, 9
- radio, 15
- Radio Characteristics, 19
- RF connector, 10
- RF Exposures, 17
- RF Interface, 10
- RF safety, 15
- safety, 15
- Safety Standards, 17
- SMS, 24
- SMS Command, 20
- Soldering Safety Standards, 14
- Specifications
  - technical, 6
- Technical specifications, 6
- vehicle electronic equipment and safety, 16
- WAP, 24