



CR6238A
Nash 7 in 1 Record Player
Instruction Manual



Questions, problems, missing parts?
Before returning to the store, call Customer Service
8 a.m. – 6 p.m., EST, Monday – Friday
1-888-CROSLEY
www.crosleyradio.com

Safety Instructions

Read and understand this entire manual before using this product. Keep these instructions for future reference.

1. Do not use this product near water.
2. This product should be operated only by the type of power source indicated on the marking label or in this instruction manual.
3. Do not defeat the safety purpose of the polarized plug. A polarized plug has two blades with one blade wider than the other. This plug will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet try reversing the plug. If the plug should still fail to fit, contact your electrician.
4. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the product.
5. Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
6. Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
7. Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
8. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
9. Do not use attachments not recommended by the product manufacturer as they may cause hazards.
10. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
11. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating. Do not block or cover these openings.
12. Unplug the product during lightning storm or when unused for long periods of time.

Items in this package

Before throwing away any packaging materials, please check thoroughly and make sure you find the following items that come along with this package:

- Turntable
- 45 RPM Adapter
- Power Adaptor
- 4 Legs
- 4 Silicone Feet
- Remote Control

Please contact Crosley customer service if there is any accessory missing from the package. **Retain the original packaging materials for exchange or return purposes.**

Specifications

 
 
Power	AC power adaptor, DC output 12V 1.5A
Power consumption	25W
Speaker	2" 4Ω 5W x 2
Turntable speed	33 $\frac{1}{3}$, 45, 78 RPM
Replacement needle	Crosley NP-16
Frequency Range	AM 520 – 1710 KHz FM 87.5 – 108 MHz

Note:


- *Design and specifications are subject to change without notice.*
- **To help save power consumption, some models will comply with ERP energy saving standard. When there is no audio input for 20 minutes, their powers will automatically cut-off. To turn power back on and resume playing, you will need to turn off the power and turn it on again.**

Product Description


1. Standby Indicator
2. LED Display
3. Tuning Knob
4. CD Tray
5. Power/Mode Button
6. Repeat/Program/
Preset Button
7. Backward Skip/
Previous Button
8. Forward Skip/Next
Button
9. Play/Pause Button
10. Stop Button
11. CD Door
Open/Close Button
12. Volume Knob
13. Turntable Platter
14. Turntable Spindle
15. 45 RPM Adapter
16. Cue Lever
17. Tonearm
18. Auto-stop Switch
19. Speed Switch
20. Tonearm Clip
21. Tonearm Rest

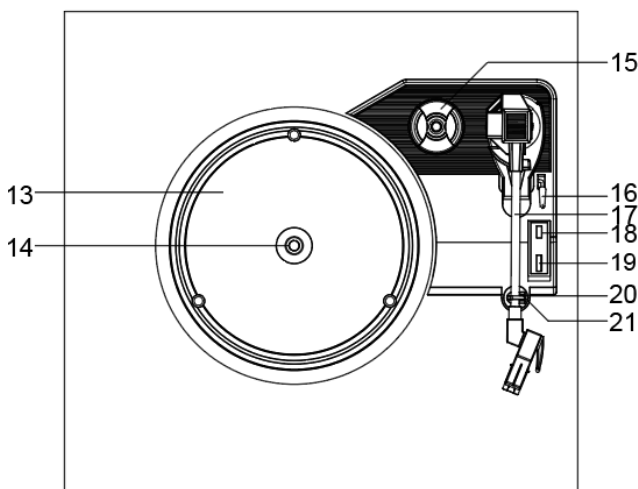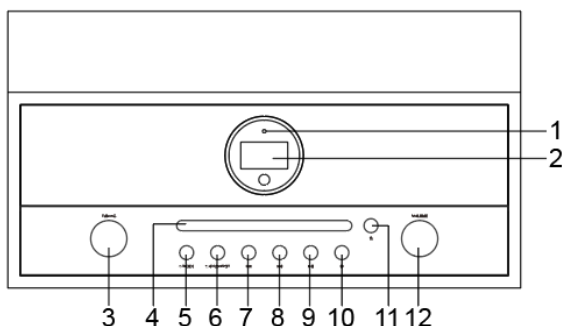

 22. External Antenna
23. Audio Out Jack
24. Aux In Jack
25. Power Jack
26. USB Jack

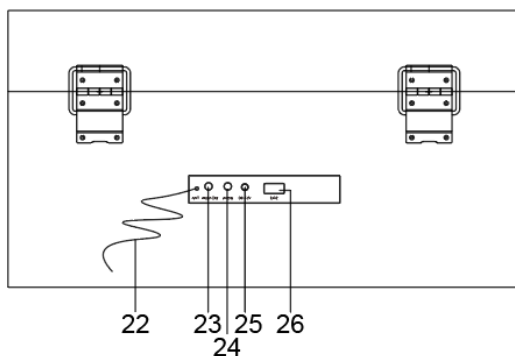

 - 27. Power Button
- 28. CD Door Open/Close Button
- 29. Preset/Program Button
- 30. Mode Button
- 31. Volume Up Button
- 32. Backward Skip/Previous Button
- 33. Forward Skip/Next Button
- 34. Play/Pause Button
- 35. Volume Down Button
- 36. Stop Button
- 37. Repeat Button
- 38. Number Button

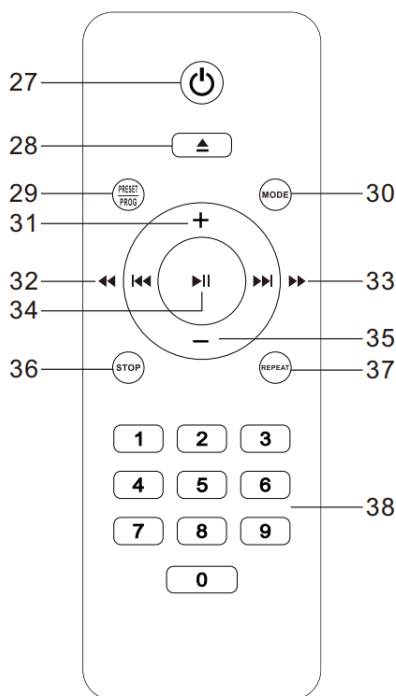

Initial Setup

Essential Setup

1. Turn the turntable on its side and remove plastic pieces from the underside.
2. Insert the legs or silicone feet into the underside of the turntable and tighten.
3. Place the unit on a flat and level surface. The selected location should be stable and free from vibration.
4. Remove the tie-wrap that is holding the tonearm.
5. Connect power adaptor to the Power Jack of the unit.
6. Long press the Power button on the unit to turn the unit on and off.

Note: Do not plug the AC power adaptor to power outlet before all the assembly is completed. Before turning the power on, make sure again all the connection settings are correct. Always turn off the power when connecting or disconnecting.

Stereo System Connection

Audio Out Connection

1. If needed, first insert one end of the 3.5mm auxiliary cable (not included) into the Line Input jack on your powered speakers according to their user manual.
2. Insert the other end of the 3.5mm auxiliary cable into the Audio Out Jack on the unit.

Aux Input Connection

You can connect an audio device to this unit and play your music through its speakers. To do this, connect the 3.5mm auxiliary cable (not included) between your audio device, and the Aux In Jack of this unit, press the Mode Button until AUX Mode is selected and start playing the music.

Note: The LED display will show "AUX"

Turntable Operation

1. Long press the Power button to turn the unit on.
2. Short press the Mode button and select the Phono mode.
Note: The LED display will show "PH"
3. Set the Speed Switch accordingly.
4. Place the record on the turntable. Use the 45 RPM Adapter if necessary.
5. Remove the stylus protector from the needle.
Note: To avoid needle damage, make certain the included stylus protector is in place whenever the turntable is being moved or cleaned.
6. Release the Tonearm Clip.
7. Use the Cue Lever to lift the tonearm.
8. Gently move the tonearm over the record where play is desired to begin. Set the Cue Lever back to the down position, the tonearm will descend slowly onto the record and begin to playback.
9. When the record is finished playing, use the Cue Lever again to raise the tonearm and then return it to the Tonearm Rest. Release the lever to let the tonearm sit back at its rest. To suspend the playback, repeat the same steps.
10. Lock the Tonearm Clip to secure the tonearm.

 
Platter Auto-stop

If the Auto-stop Switch is set to ON position, the platter will stop spinning automatically when the record plays to the end. In some rare occasion, if the turntable stops playing before the end of the record, set the switch to OFF position the turntable should overcome this issue.

Needle Replacement


Removing Needle

1. Gently pull down the front edge of the needle.
2. Pull needle forward.
3. Pull out and remove.

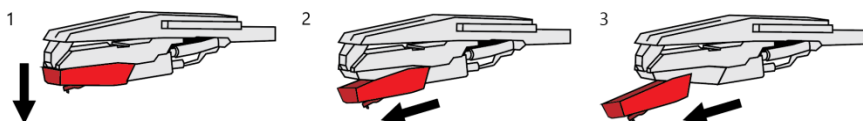

Installing Needle

 1. Position the needle with its tip facing down.
2. Line up the back of the needle with the cartridge.
3. Insert the needle with its front end at a downward angle and gently lift the front of the needle upward until it snaps into place.



Bluetooth Operation

1. Long press the Power button to turn the unit on.
2. Short press the Mode button and select the Bluetooth mode.
Note: The LED display will show "bLUE"
3. Turn on the Bluetooth feature of your audio device, search for "CROSLEY CR6238A" and pair.
4. Once your device is successfully paired with the unit, you will hear a short confirmation sound from the unit.
5. Play and stream music from your device to the unit.

Note: Bluetooth version – 5.4

Radio Operation

1. Press the Mode Button repeatedly to select AM or FM mode.

Note: The LED display will show "AM" or "FM"

2. Rotate the Tuning Knob for the desired radio station.

Automatically Scan and Save Stations (CH Mode)

1. Press the Mode Button repeatedly to select AM or FM mode.

Note: The LED display will show "AM" or "FM"

2. Long press the Play/Pause button to automatically search for stations and save all available radio stations as presets. It will tune to the first station with a strong signal.
3. To go to the previous station, short press the Backward Skip/Previous Button.
4. To go to the next station, short press the Forward Skip/Next Button.

Note: Stations are displayed as "CH 01", "CH 02", etc.

Manually Save Preset (PH mode)

1. In Radio Mode, after automatically scanning and saving stations, use the Backward Skip/Previous Button or tuning knob to select a desired station.
2. To save the current station, long press the Preset button to enter Preset Mode, and the display will blink with "P 01" (or the next available preset slot).
3. Short press the Play/Pause button to confirm and save the station.
4. To save the next desired station, short press the Preset button to return to CH mode. Using tuning knob, tune to desired station and repeat steps 2 & 3 to save station. The stations can be in any number and repeated. A maximum of 20 stations can be programmed at one time.
5. To go to the previous preset station, short press the Backward Skip/Previous Button.
6. To go to the next preset station, short press the Forward Skip/Next Button.
7. To clear all saved presets, long press the Stop button.

Note:

- To switch between automatically saved stations (CH Mode) and user saved stations (PH Mode). Short press the Preset button. In CH mode, the FM/AM indicator remains steady. In PH mode, the FM/AM indicator will flash.
- The unit is equipped with a FM wire antenna. To improve FM reception, move the wire around until the reception is clear without interferences. Do not connect the wire to any additional antenna.
- The AM antenna is built inside the unit. If AM reception is poor, try to rotate the unit for better reception.

CD Playback Operation

1. Press the Mode Button repeatedly to select CD mode.

Note: The LED display will show "dISC".

2. Press the Open/Close button to open the CD tray and put the CD in the tray with the labeled side facing up.
3. Press the Open/Close button again to close the tray. The LED display will show "LOAD" for a few seconds. If it is a blank CD or an unrecognizable CD, it will show "NO CD".

Note: MP3 or similar types of digital audio files cannot be read by the CD player.

4. Playback will start automatically.
5. During the playback, press the Play/Pause button to pause. Press it again to resume playback.
6. To skip to the next or previous track, press the Forward Skip/Next or Backward Skip/Previous button correspondingly.
7. To search fast forward or backward, press and hold the Forward Skip/Next or Backward Skip/Previous button correspondingly until you reach the desired time. Release the button and the playback will resume.
8. To repeat a specific track, press Repeat button once while that track is playing. To repeat all the tracks, press the Repeat button twice. To cancel repeat function, press the Repeat button.
9. Press the Stop button if you want to completely stop playback.

Programmed Playback

1. Press the Stop button to stop the playback. Press the Program button once to enter program mode. The LED display will show "P01" and flash "PROG" icon as the track sequence which is to be edited.
2. Press the Forward Skip/Next or Backward Skip/Previous buttons to select the desired track that you would like to play. The LED's number will show the soundtrack number at selection.
3. Press the Program button to confirm the selected track. The LED's number will show the next track sequence which is to be edited.
4. Repeat steps 2 & 3 for additional soundtracks that you would like to play. The tracks can be in any number and repeated. A maximum of 20 tracks can be programmed at one time.
5. Press the Play/Pause button to start the programmed playback. The tracks will play in the same sequence that you programmed earlier.
6. To exit the program mode, press the Stop button twice.
7. Press the Play/Pause button to resume playback.

USB Playback

1. Insert a USB device into the USB Jack and playback will start automatically.
2. To forward skip, short press the Forward Skip/Next Button.
3. To backward skip, short press the Backward Skip/Previous Button.
4. To pause the playback, short press the Play/Pause button.

Note: Only use 32 GB or smaller USB.

Turntable Maintenance

1. Do not touch the needle tip with your fingers. Avoid bumping the needle on the turntable mat or a record's edge.
2. Clean the needle frequently with a soft brush with a back-to-front motion only.
3. Clean the records to get rid of dust or grease with a record cleaning brush and record cleaning solution.
4. Clean the turntable lid and turntable cabinet with a slightly dampened microfiber cloth.

Note: Please review the instructions for proper care of your unit to ensure your warranty remains valid at: www.crosleyradio.com/use-and-care

**** Crosley offers a product line of different cleaning accessories. Please ask your retailer or check out our website www.crosleyradio.com for more cleaning product information.**

Troubleshooting

There is no power

- Power adaptor is not connected correctly.
- No power at the power outlet.
- To help save power consumption, some models will comply with ERP energy saving standard. When there is no audio input for 20 minutes, their powers will automatically cut-off. To turn power back on and resume playing, turn off the power and turn it on again.

Power is on, but the platter does not turn

- Turntable mode is not selected.
- Turntable's drive belt has slipped off.

Turntable is spinning, but there is no sound or sound not loud enough

- Stylus protector is still on.

CD does not play

- Function mode is not set to CD.
- The CD is blank.
- The CD is placed on the tray incorrectly with the label side facing down.
- The CD has too many scratches or is dirty.

Buttons not responding

- Turn the power off and turn it on again after 10 seconds to reset.

*Note: For additional support and troubleshooting tips visit us at:
www.crosleyradio.com/customer-service*

FCC Statements

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement.

To maintain compliance with FCC's RF exposure guidelines, the distance must be at least 20 cm between the radiator and your body, and fully supported by the operating and installation configurations of the transmitter and its antenna(s).

SIMPLIFIED EU DECLARATION OF CONFORMITY

Hereby, Modern Marketing Concepts Inc. dba Crosley Brands, declares that the radio equipment type is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:
<http://crosleybrands.com/euDoC>