



CT202A
Blast Boombox Cassette Player
Instruction Manual



Questions, problems, missing parts?
Before returning to the store, call Customer Service
8 a.m. – 6 p.m., EST, Monday – Friday
1-888-CROSLEY
www.crosleyradio.com

Safety Instructions

Read and understand this entire manual before using this product. Keep these instructions for future reference.

1. Do not use this product near water.
2. This product should be operated only by the type of power source indicated on the marking label or in this instruction manual.
3. Do not defeat the safety purpose of the polarized plug. A polarized plug has two blades with one blade wider than the other. This plug will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet try reversing the plug. If the plug should still fail to fit, contact your electrician.
4. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the product.
5. Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
6. Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
7. Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
8. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
9. Do not use attachments not recommended by the product manufacturer as they may cause hazards.
10. A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.
11. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating. Do not block or cover these openings.
12. Unplug the product during lightning storm or when unused for long periods of time.

Items in this package

Before throwing away any packaging materials, please check thoroughly and make sure you find the following items that come along with this package:

- Cassette Boombox
- AC Adapter

Please contact Crosley Customer Service if there is any accessory missing from the package. **Retain the original packaging materials for exchange or return purposes.**


Specifications

Power Source	AC Adapter, DC Output 9V 2A
Power consumption	18W
Speaker	4Ω 5W x 2
Playing Time	Up to 4 hours (50% volume)
Charging Time	5 hours
Battery Capacity	2000 mA/h
Bluetooth Version	6.0

Note:

- *Design and specifications are subject to change without notice.*
- **To help save power consumption, some models will comply with ERP energy saving standard. When there is no audio input for 15 minutes, their powers will automatically cut-off. To turn power back on and resume playing, you will need to turn off the power and turn it on again.**

Product Description

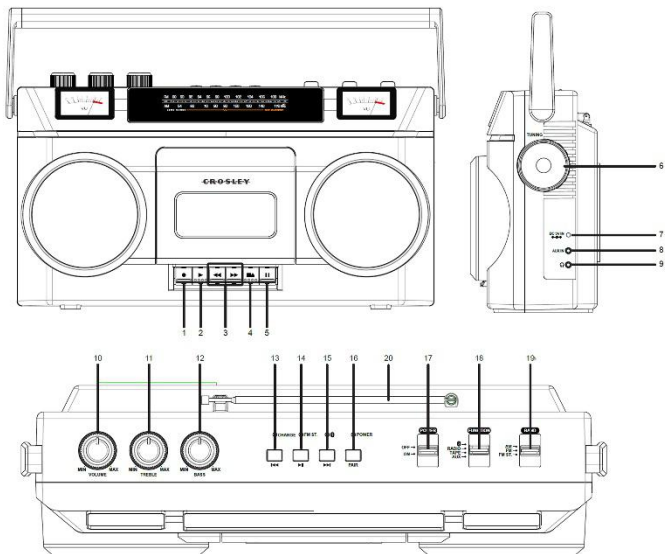

- | | |
|------------------------|--------------------------|
| 1. Cassette Record | 10. Volume |
| 2. Cassette Play | 11. Treble |
| 3. Cassette FWD/RWD | 12. Bass |
| 4. Cassette Stop/Eject | 13. Bluetooth Previous |
| 5. Cassette Pause | 14. Bluetooth Play/Pause |
| 6. Tuning Dial | 15. Bluetooth Next |
| 7. DC Jack | 16. Bluetooth Pair |
| 8. Aux In Jack | 17. Power |
| 9. Headphone Jack | 18. Function Switch |

19. Band Switch

20. Antenna

Initial Setup

Essential Setup

1. Place the unit on a flat and level surface. The selected location should be stable and free from vibration.
2. Connect the AC adapter to the DC Jack of the unit.
3. Fully charge the battery before the first use.
4. Slide the Power Switch to turn the unit on and off.

Charging/Power Source

1. This unit has a built in rechargeable battery.
2. Connect to AC outlet with the provided adapter.
3. The Charging Indicator will turn solid red while charging and off when fully charged.

Aux Input Connection

You can connect an audio device to this unit and play your music through its speakers. To do this, slide the Function Switch to Aux mode, connect the 3.5mm auxiliary cable (not included) between your audio device, and the Aux In Jack of this unit, and start playing the music.

Bluetooth Operation

1. Slide the Function Switch to Bluetooth mode. The Bluetooth indicator will start flashing blue.
2. Turn on the Bluetooth feature of your audio device, search for "CROSLEY CT202A" and pair.
3. Once your device is successfully paired with the unit you will hear a short confirmation sound from the unit, and the Bluetooth indicator will be blue.
4. Play and stream music from your device to the unit.
5. During the playback, press the Play/Pause button to pause and press it again to resume playback.

6. To skip to the next or previous track, press the Previous or Next button correspondingly.

Note: Bluetooth version – 6.0

Cassette Playback/Record Operation

Playback

1. Slide the Function Switch to Tape mode.
2. Press the Stop/Eject button to open the door and insert the cassette tape.
3. Press the Play button to start playback.
4. During the playback, press the Pause button to pause playback. Press it again to resume playback.
5. For Press the FWD or RWD button to advance or rewind the tape.
Note: To avoid damage to your cassette tape, press Stop/Eject button in between each operation.
6. Press the Stop/Eject button if you want to completely stop playback. Press Stop/Eject button again to open the door of cassette compartment.

Record (From Radio)

1. Slide the Function Switch to Radio mode.
2. Slide the Band Switch to select between AM, FM and FM ST.
3. Tune to the desired station and insert a blank cassette tape in the cassette compartment.
4. Press the Record and Play button to start recording.
5. Press the Pause button then Stop/Eject button when finished.

Record (From Aux-in)

1. Slide the Function Switch to Aux mode.
2. Connect the 3.5mm auxiliary cable (not included) between your audio device, and the Aux In Jack of this unit.
3. Insert a blank cassette tape in the cassette compartment.
4. Press the Pause button and then press Record and Play button.
5. Press play on your external audio device to start playback and then release Pause button to start recording.
6. Press the Pause or Stop/Eject button when finished.

Record (From Bluetooth)

1. Slide the Function Switch to Bluetooth mode.
2. Follow the Bluetooth operation section to pair the unit with your Bluetooth device.
3. Insert a blank cassette tape into the cassette compartment.
4. Press the Pause button first and then Record and Play button. Recording function is now on standby.
5. Activate your Bluetooth device playback, and then press Pause button to start.
6. To stop recording, press the stop button on your Bluetooth device first, then press the Pause button and then Stop/Eject button to finish.

Radio

1. Slide the Function Switch to select Radio mode.
2. Slide the Band Switch to select between AM, FM and FM ST.
3. Tune the Tuning Dial for stations.

Note:

- The unit is equipped with a FM antenna. To improve FM reception, move the antenna around until the reception is clear without interferences.
- The AM antenna is built inside the unit. If AM reception is poor, try to rotate the unit for better reception.

Troubleshooting

There is no power

- No power at the power outlet.
- The battery needs to be charged.
- If buttons are unresponsive, turn power switch off for 10–12 seconds to reset the unit.

There is no sound

- Make sure the volume is turned up.
- Make sure the volume on your third party device is turned up.

Cassette does not play

- Function Switch is not set to Tape.
- The cassette tape is blank.
- Try to play another side of the cassette tape.

FCC Statements

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference, and this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.