 


Quick Start Guide

HyperX CloudX Stinger 3 Wireless
Gaming Headset XBOX

Overview

[\[Reference images:](#)

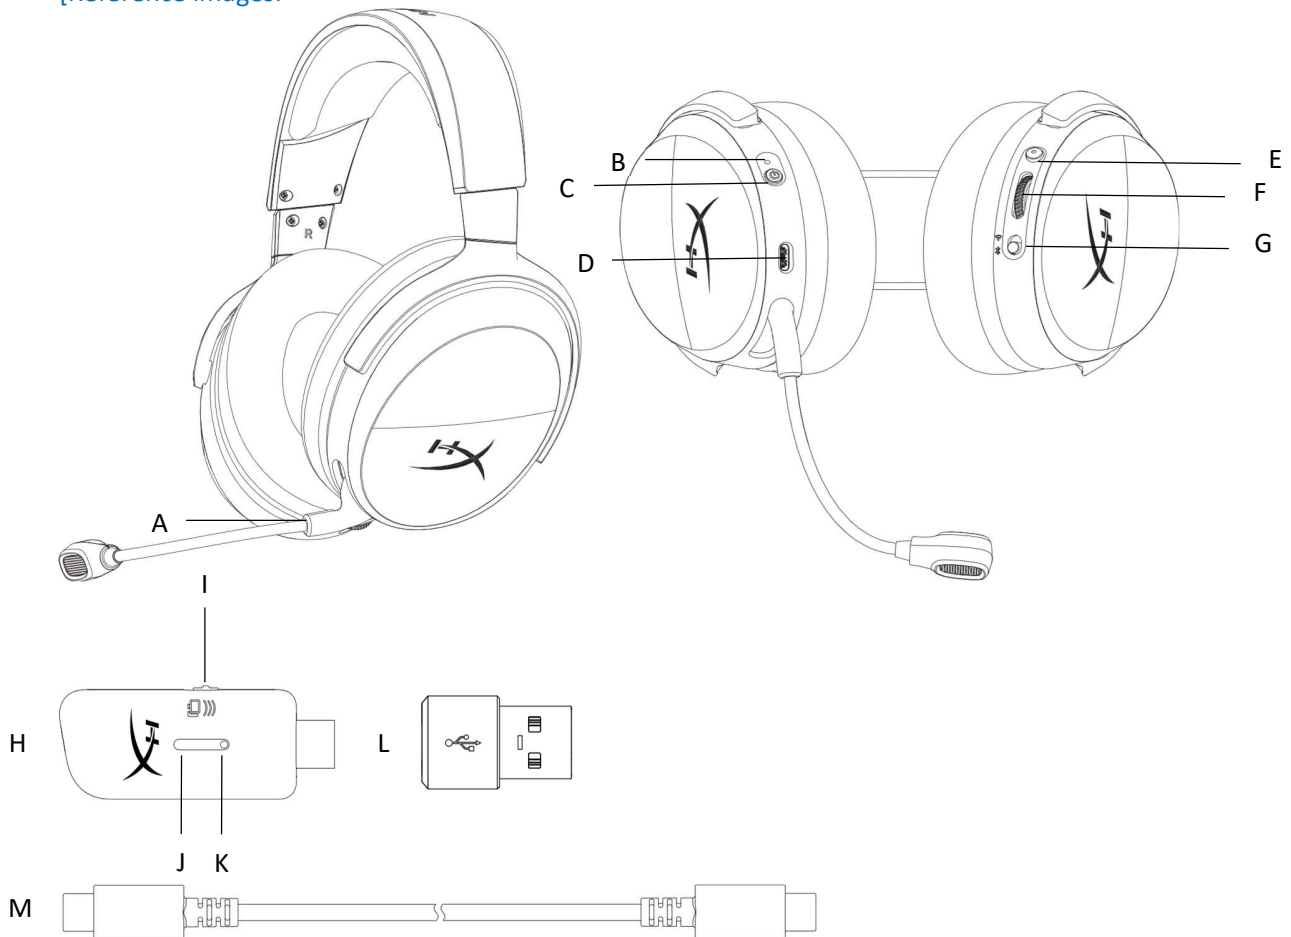

]

 
- A. Swivel-to-mute microphone
- B. Status LED
- C. Power button
- D. USB-C charge port
- E. Multifunction button
- F. Volume wheel / headset chat mix
- G. Wireless mode switch
- H. USB wireless dongle
- I. USB dongle mode switch
- J. Dongle status LED
- K. Pairing pin hole
- L. USB-C to USB-A adapter
- M. USB-C charge cable

Charging

It is recommended to fully charge your headset before first use.

[Use the following line drawing:]

[Reference Image

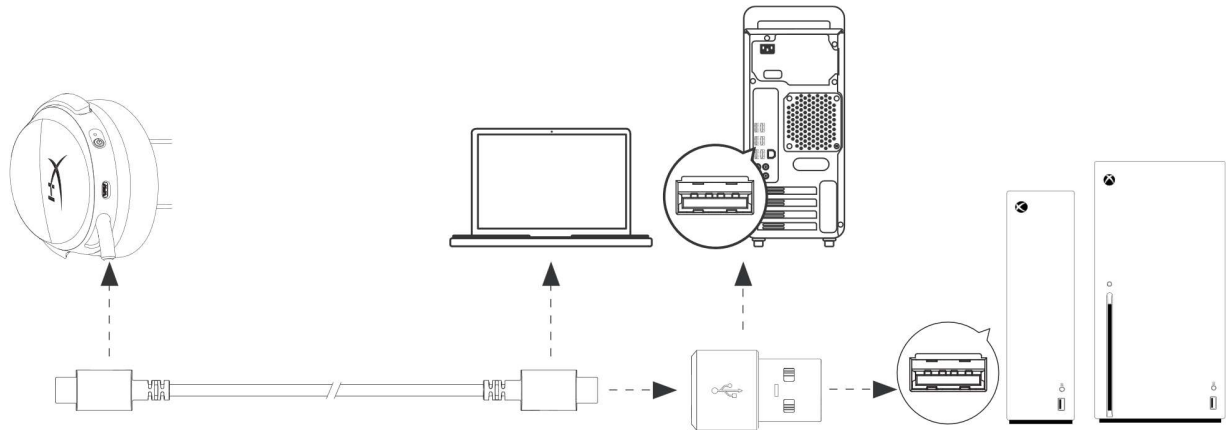


]

Charge Status	Status [LED]
Fully Charged	Solid green
61% — 99%	Breathing green
21% — 60%	Breathing yellow
< 20%	Breathing red

Usage


XBOX Mode

 1. Slide the headset wireless mode switch to .
2. Set USB dongle mode switch to **Xbox mode**.
3. Connect the USB wireless dongle to your device.
4. Power **ON** the headset.

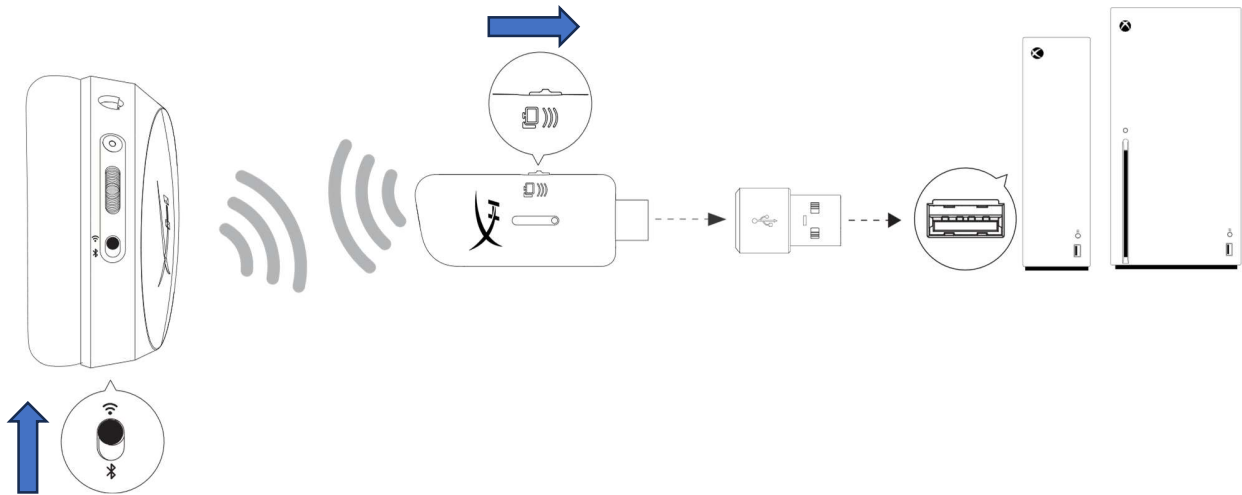

Adapter Mode (2.4GHz)

 1. Slide the headset wireless mode switch to .
2. Set USB dongle mode switch to **adapter mode**.
3. Connect the USB wireless dongle to your device.
4. Power **ON** the headset.

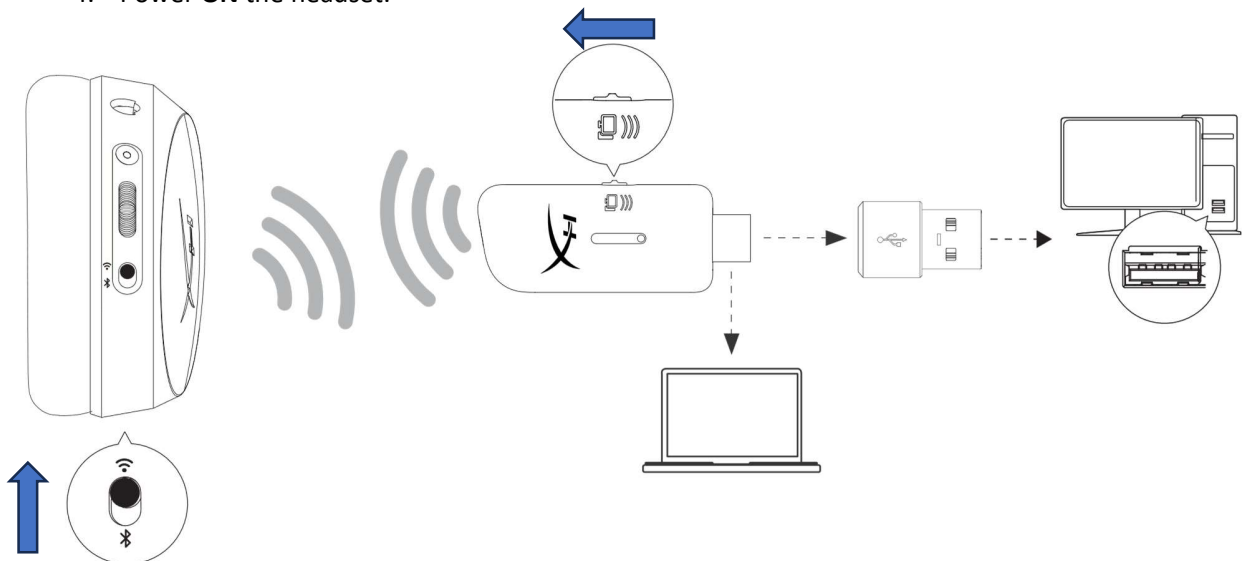


Bluetooth Mode

1. Slide the wireless mode switch to . The headset will enter Bluetooth pairing on the first setup.
2. Go to your device Bluetooth settings, search, and connect to **“HyperX CloudX Stinger 3 Wireless”**.

[Use the following line drawing:]

 [Reference Image

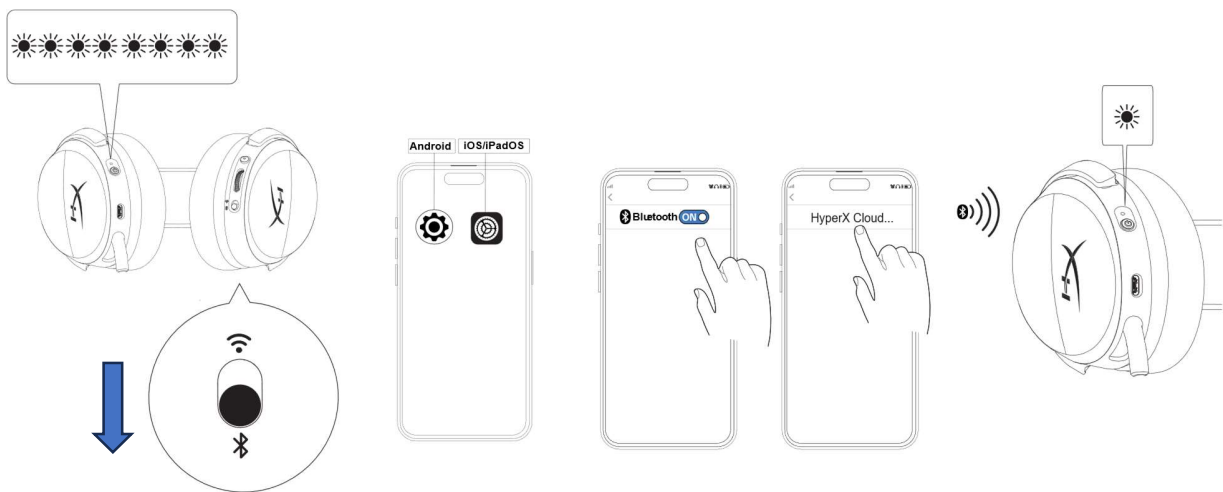


]

Bluetooth Pairing

1. Slide the wireless mode switch to .
2. Press and hold both the power button and the multifunction button for 2s. Pairing mode is active when the LED blinks blue and the voice prompt says, "Bluetooth pairing".
3. Go to your device's Bluetooth settings and connect to **"HyperX CloudX Stinger 3 Wireless"**.

[Use the following line drawing:]

 [Reference Image

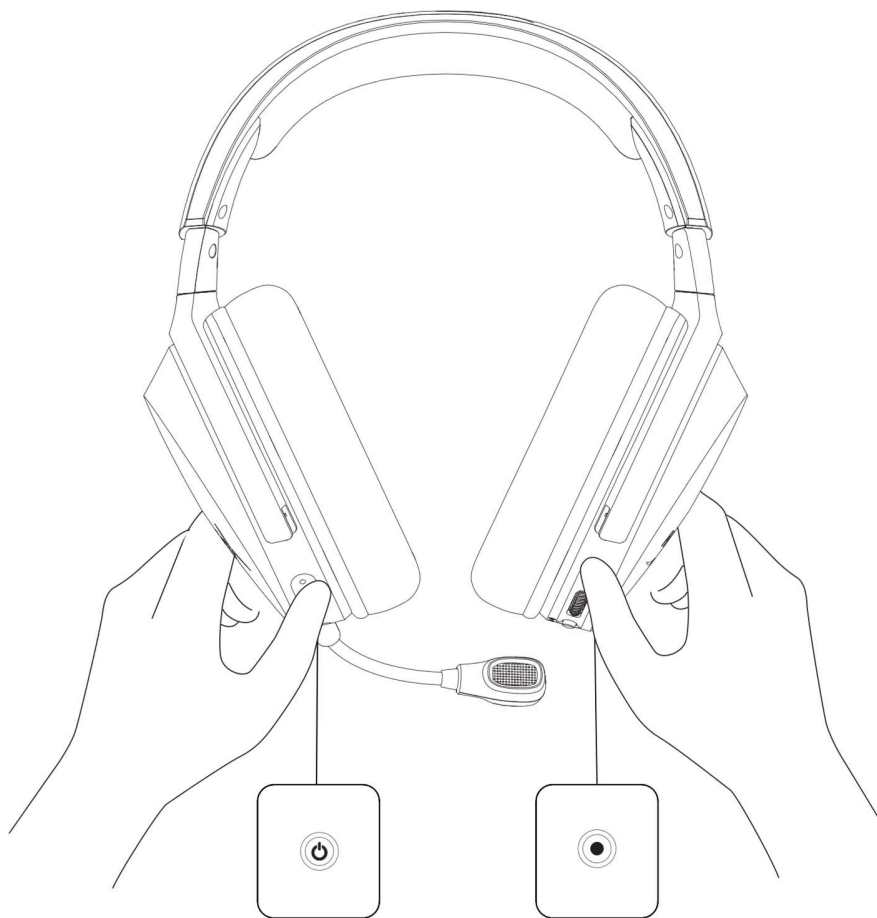


]

Setup

[\[Reuse Cloud III S Wireless Assets\]](#)

Windows 11

 1. Right-click on the sound icon in the system tray and select Sound Settings.

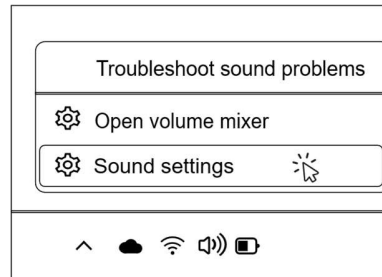

2. Set the output device to Headphones [**HyperX CloudX Stinger 3 Wireless**].
3. Set the input device to Microphone [**HyperX CloudX Stinger 3 Wireless**].

Headset Controls

Status LED

Status	Adapter Mode	Bluetooth Mode
Pairing	Fast blinking white	Fast blinking blue
Searching	Blinking white	Blinking blue
Connected	Solid-fade white for 5s	Solid-fade blue for 5s

Power button

- Power on/off – Hold button for 2 seconds to power headset on/off.
- Battery level status – Press button to check the battery level.

The status LED will automatically turn off to conserve battery life.

Battery Level	Headset Status LED
61% to 100%	Solid-fade green
21% to 60%	Solid-fade yellow
10% to 20%	Solid-fade red
< 10%	Short-blink red

Multifunction button

Single Press	Double Press	Triple Press	Long Press (2s) [Translate in time]
Play / Pause Answer Call	Skip Track End Call Reject Call	Previous Track	Activate Voice Assistant

Note: Button functionality can vary between devices and apps.

Volume wheel

- Scroll wheel to adjust volume level.

Headset chat mixer*

- Press down on the volume wheel to enter/exit chat mixer mode.
- Scroll wheel to adjust balance between game and chat audio.

*Supported only on Xbox consoles in Xbox configuration.

[add in image of the game/chat balance scale as below reference]

 


Swivel to Mute Microphone

[Use the following line drawing:

- Left view of headset left earcup with boom microphone swiveled downwards
 - Add dotted outline of boom microphone swiveled upwards
 - Add mic enable  & mic muted  icons with curved arrows in between. Use CloudX Stinger headset QSG microphone mute section for reference.

[Reference image:

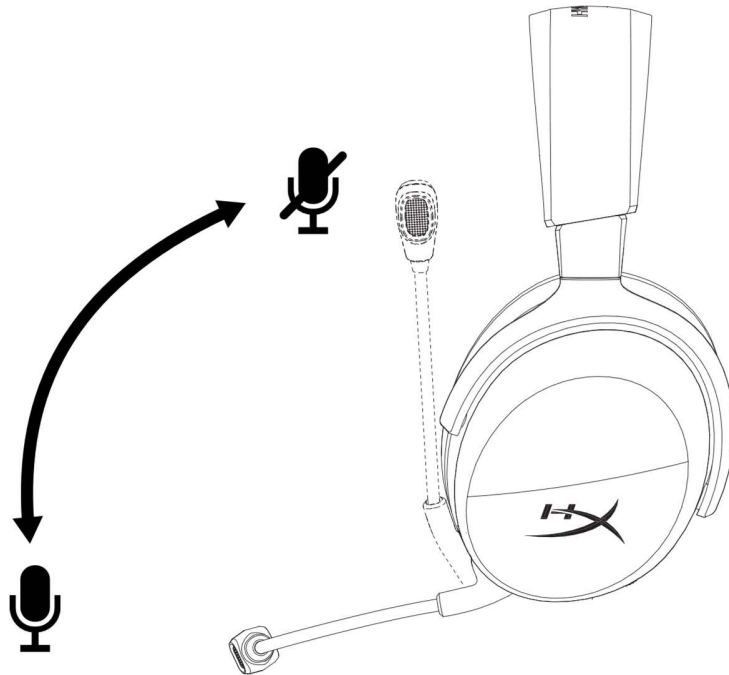

]

HyperX NGENUITY Software

Go to hyperx.com/ngenuity to download the NGENUITY software. NGENUITY software features include:

- Adjustable auto shut-off behavior
- Battery level indicator
- Mic monitoring

Questions or Setup Issues?

Contact the HyperX support team at hyperx.com/support

WARNING: Permanent hearing damage can occur if a headset is used at high volumes for extended periods of time.

Battery Replacement

1. Power **OFF** the headset.
2. Carefully pull the left ear cushion from the headset.
3. Unscrew the 4x Philips screws to separate the driver cover from the left earcup.
4. Gently separate the cover from the earcup to avoid any damage.
5. Locate and remove the battery secured with a connector.
6. Place new battery matching correct pin orientation.
7. Close the driver cover and earcup. Reverse steps 3 and 2. Make sure to push cushion into the slot all around the earcup.
8. Power **ON** the headset and test for functionality.