
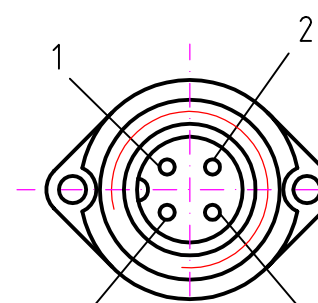
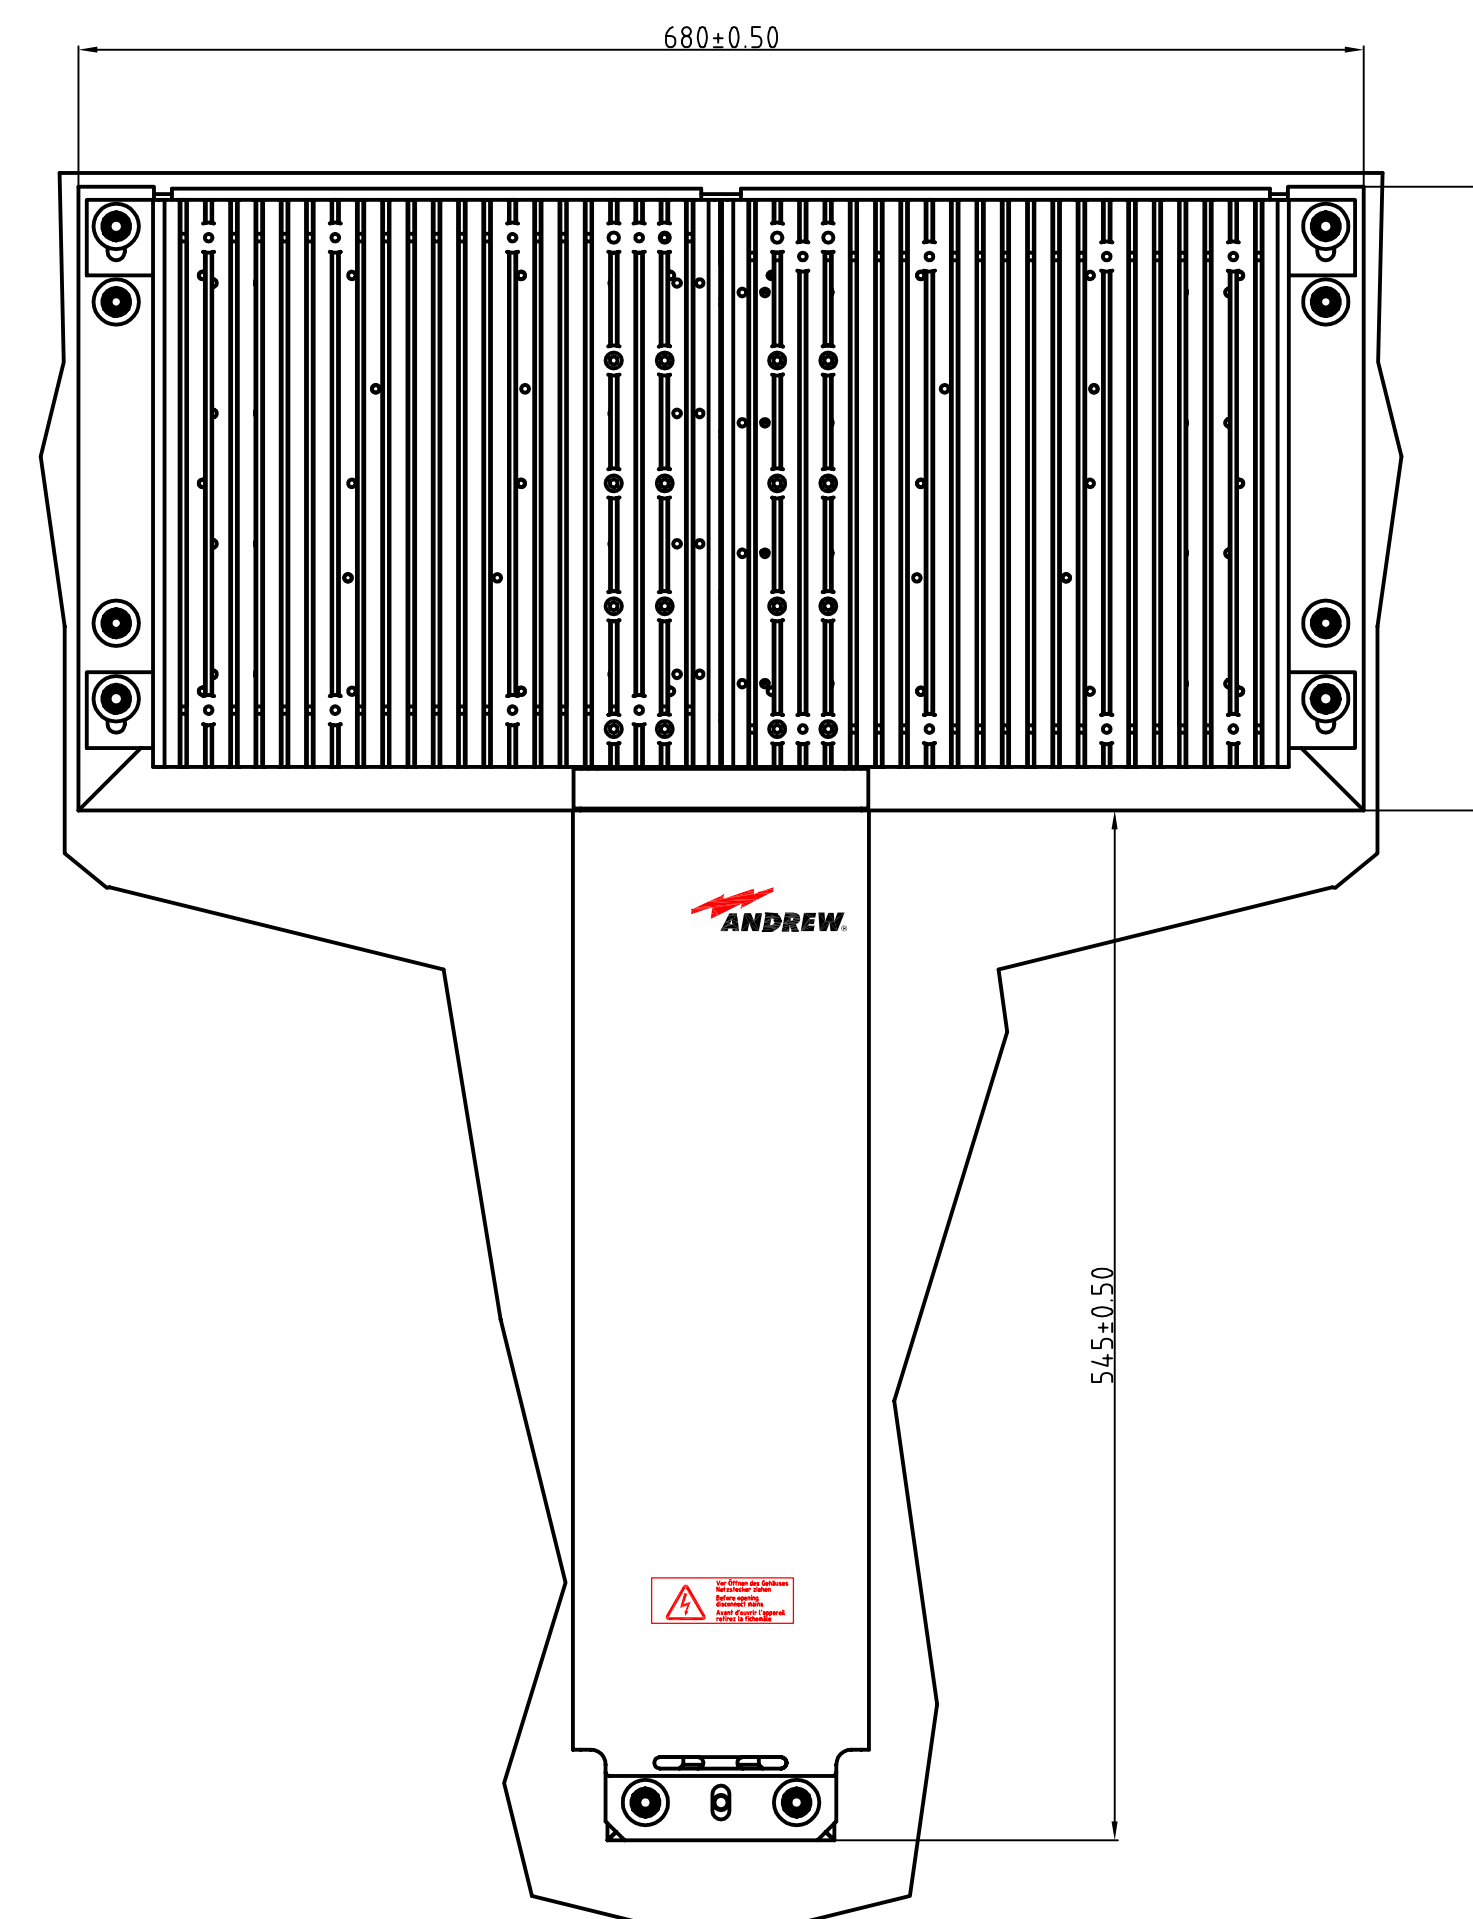


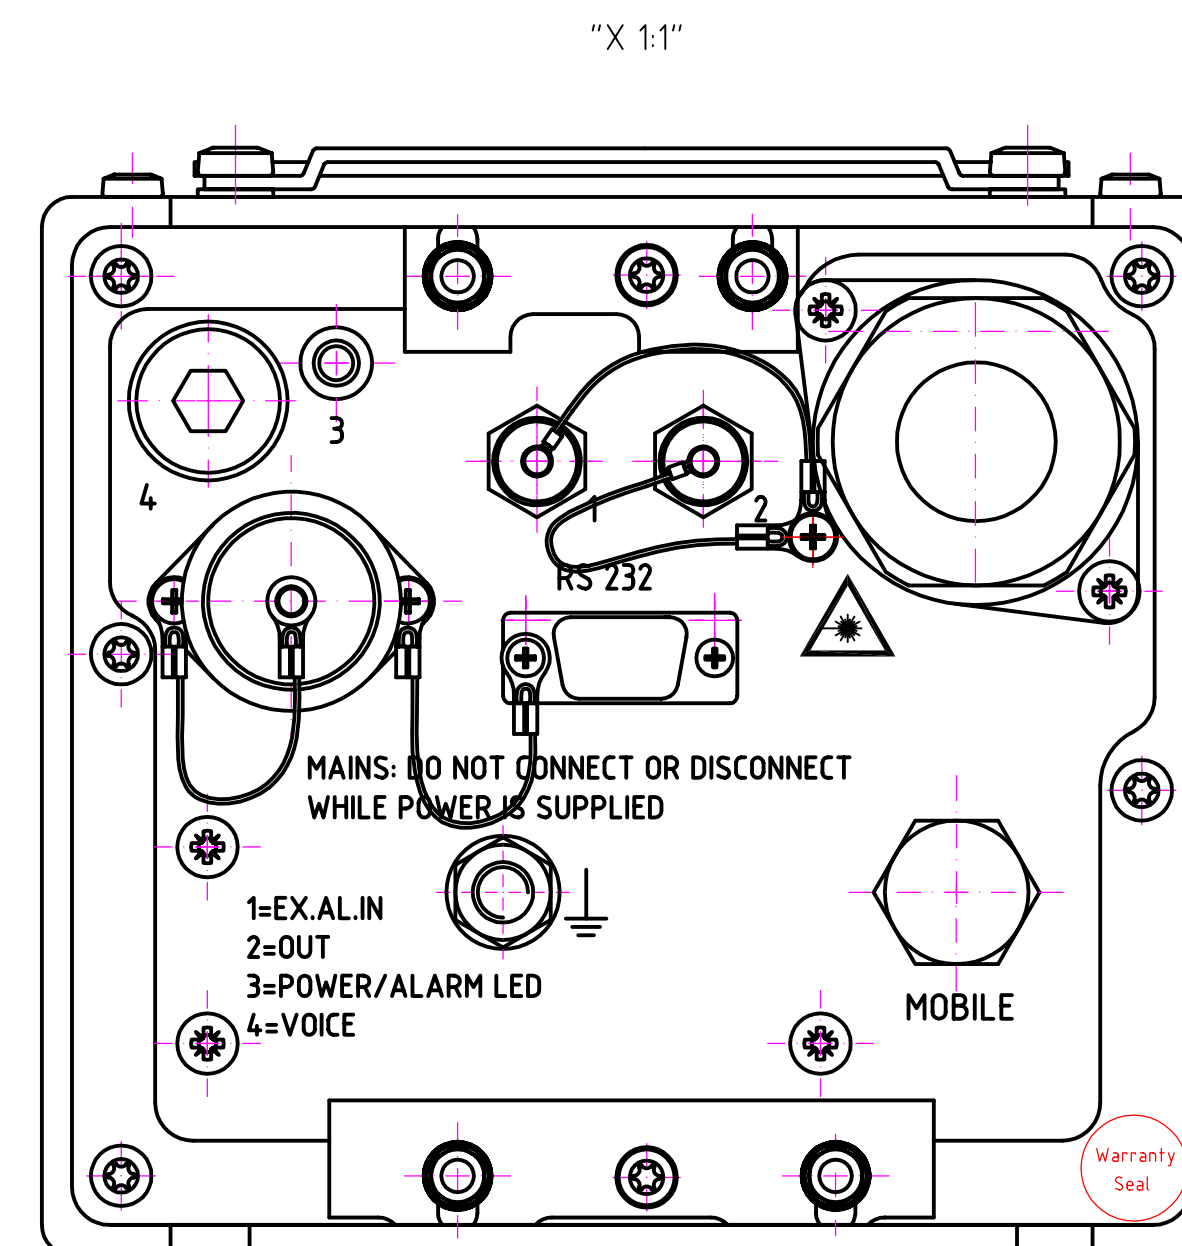

Flangeconnector 380V/16Af.

Pin 1= Phase 1 (brown)
Pin 2= Neutral (blue)
Pin 3= n.c.
⬇ = PE (green/yellow)

Vor Öffnen des Gehäuses
Netzstecker ziehen
Before opening
disconnect mains
Avant d'ouvrir l'appareil
retirez la fiche mètre