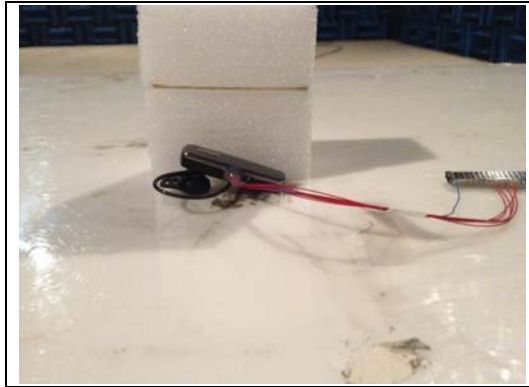
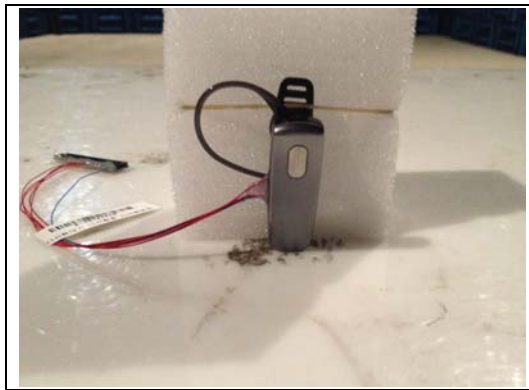
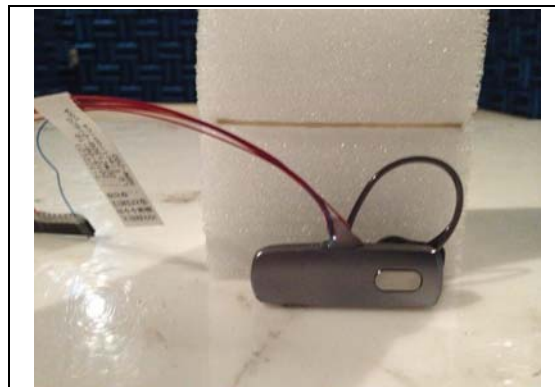

EUT Position



EUT Position: X-axis

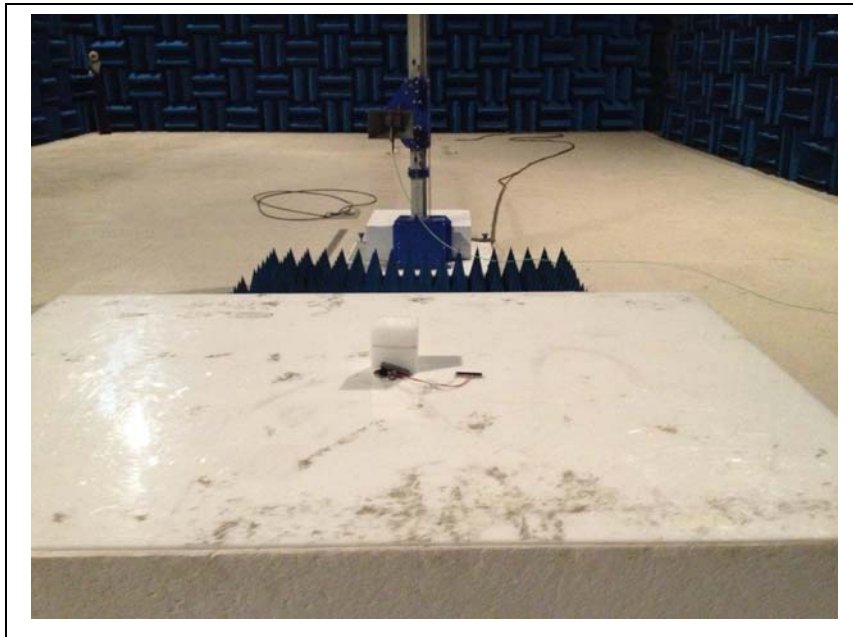


EUT Position: Y-axis



EUT Position: Z-axis

View



EUT Position: X-1 axis