 


LG Electronics

BLUETOOTH® Headset HBM-700

User's Manual

English
Spain

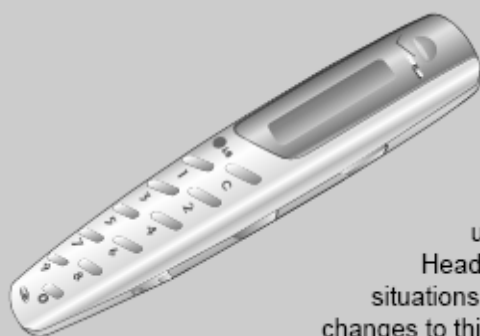

This manual is published by LG Electronics Inc. in order to provide useful information on using the LG Bluetooth Headset HBM-700 at various situations. Any improvements or changes to this manual as a result of typographical errors inaccuracies, or software/equipment upgrades may be made by LG Electronics Inc. at any time and without advanced notice. However, such changes will be incorporated into future editions of this manual.
All rights reserved. LG Electronics 2005

The Bluetooth official mark and logos are owned by the Bluetooth SIG Inc. and any use of this mark by LG Electronics is under license.

For full functions of the LG Bluetooth Headset HBM-700, read carefully all the information included in this manual.



Introduction

The LG Bluetooth Headset HBM-700 is a light weight wireless Headset which utilizes Bluetooth technology. This product can be used as an audio accessory for devices that support either the Headset or Handsfree Profiles.

Package contents



Bluetooth Headset



 
User's Manual



Additional Information




Charger




Neck cord

Parts Description

 
Front

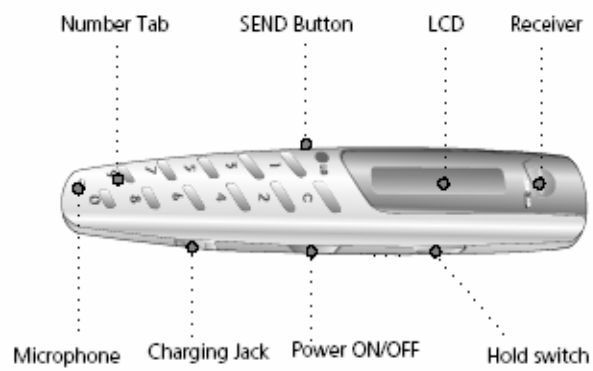

Back

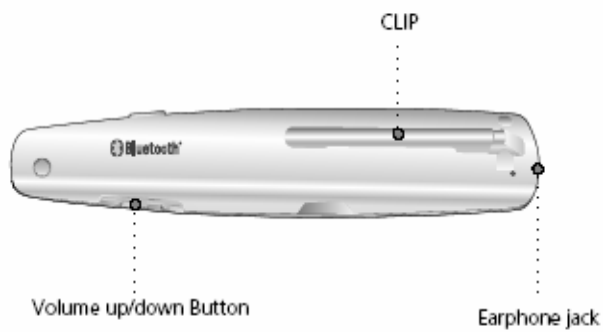 

LCD Indicator

 

Back

Start

Charging HBM-700

Please ensure that your new HBM-700 is fully charged before your initial use.

1. Open the Charging port cover on the side of the HBM-700.
2. Plug the charger into the Charging port outlet.
 - The "Charging" message appears at the LCD indicator of the Headset when it is charged properly.
 - The "Charging completed" message appears at the LCD indicator of the Headset when it is full charged.
 - It takes about three hours to fully charge the HBM-700.
 - If the LCD indicator shows "Pls try again", check whether the charger is plugged properly into the Headset.

Hint The sign "Low Battery" appears and the battery icon blinks on the LCD when the battery is low. Also, the warning noise will beep every thirty seconds when the HBM-700 needs to be recharged.



- Always use the charger that comes with the HBM-700 or that is authorized by LG Electronics Inc. Beware that other unauthorized chargers may cause explosions or breakdown of the product.
- Long term use of the product may decrease the battery life.
- Unplug the charger from the wall socket. Remove the HBM-700 from the charger when the battery is fully charged.

Power on

In order to turn the HBM-700 on, press the ON/OFF button located on the right side of the product for at least 2 seconds. You will hear beep sound and see the message "LG Electronics" at the LCD indicator when the power is on.

Hint • For longer use of the battery, the LCD automatically turns off when no action is made in one minute. Press any button in order to turn the LCD indicator on.
• Beware that any button pressed is disregarded when the LCD indicator is off. Press once more in order to activate the function properly.

Power off

In order to turn the HBM-700 off, press the ON/OFF button located at the right side of the product for at least 2 seconds. You will hear beep sound and see the message "Power off" at the LCD indicator when the power is off.

How to USE HBM-700

Registering HBM-700 to Bluetooth Handset (Bluetooth Pairing)

Before using your Headset for the first time, you must pair it with another Bluetooth device, such as a mobile phone.

1. Place the LG Bluetooth Headset HBM-700 in Pairing Mode.
 - Pairing Mode is automatically activated when you turn the product on for registering.
 - Also, Pairing Mode is activated when you turn the power on. Press the C(Clear) button for at least 5 seconds.
2. Set your LG Bluetooth Headset HBM-700 to "discover"
 - Refer to the instruction guide of your phone and search for the Bluetooth Device.
 - This usually involves going to a "set up", "connect", or "Bluetooth" menu on your phone and then selecting the option to "discover" or "add" a Bluetooth device.
3. Your phone will find "HBM-700"
 - You will be prompted to accept the pairing by pressing "YES" or "OK" on the Handset and to confirm with the passkey or PIN4=0000(4 Zeros). You will receive confirmation when pairing is completed.
4. Your phone will be paired with the LG Bluetooth Headset HBM-700.
 - "Connected" message appears at the LCD indicator on the Headset, when the Pairing is completed.

How to USE HBM-700

- "Pairing" message appears at the LCD indicator of the Headset when Pairing Mode is activated.
- In order to cancel Pairing Mode, press the C(Clear) button for at least 5 seconds.
- Pairing with another Bluetooth device is necessary only for the first time the HBM-700 is used. No other registering is needed unless the registration of the Handset is deleted.
- If the HBM-700 has been already paired with your current Bluetooth Handset, it will automatically connect with the Handset when the HBM-700 is turned on.
- The HBM-700 automatically disconnects the Handset when two devices are out of range. To turn the HBM-700 on, place the Handset near the HBM-700 and press SEND button briefly. For more information regarding the connection, refer to the instruction guide of the Handset.

Adding multiple Bluetooth mobile phones

- The LG Bluetooth Headset HBM-700 stores maximum 3 different Handset registrations in
- If you add a 4th Handset, the LG Bluetooth Headset HBM-700 will automatically remove the registration information of the first stored or the least used Handset.
- When you want to change the priority of the Handset, try to connect manually from the Handset.

Answering a call

Press "Send" to answer a phone call.

- The phone number is indicated on the LCD indicator and a bell rings when you receive a call.

Hint

- Aware that the phone number is indicated on the LCD indicator only when you have registered the CID service.
- Beware that not all Handset Models support CID function.

Making a call

Press the phone numbers and press "Send" button to make a call.

Hint

- For "*" or "#" symbols, press "9" or "0" respectively for at least 2 seconds.
- Press "Clear" button to erase the phone number. One number will be erased at a time.
- Press "End" button briefly to erase the phone number. All number will be erased at a time.

Redialing to the latest phone number

Press "Send" button for at least 2 seconds in order to redial to the latest phone number.

Making a phone call by using the Short-Dial function

Insert at least one-digit number which is registered and press "Send".

Ending a call

Press "End" button to end a call when it is over.

Call waiting

Press "Send" button briefly in order to answer a second call without hanging up the first call.

- Press "Send" button once more to return to the first call.

Rejecting a call

Missed a call

"Missed call" message appears at the LCD indicator when you have missed a call.

Press "Send" button to check the CID. Press "Send" button once more in order to connect to the missed call.

Hint

- Beware that only the latest missed CID is indicated at the LCD indicator.
- This function is available only to Bluetooth Handsets which support this function.

Voice Recognition

Press "Send" button briefly in order to activate Voice recognition.

Press "Send" button briefly once more in order to deactivate Voice recognition.

Hint

- Voice recognition function is available only to Bluetooth Handsets which support this function.
- Refer to the instruction guide of your phone to use this function.

Volume control

Press the "Volume Up" or "Volume Down" to increase or decrease the speaker volume.

Microphone volume control / Mute function

The Mic Gain status is indicated such as 'Mic Gain:3' at the LCD indicator when you press C(Clear) button for at least 2 seconds.

Press Volume control button (Up/Down) to select the Mic Gain status. There are six stages of the Mic Gain; Mute, 1, 2, 3, 4, 5.

Transferring a call

Press "Send" button for at least 2 seconds to transfer a call from the Handset to the HBM-700, and vice versa.

Using a earphone

1. Open the earphone jack cover.
2. Insert the earphone jack plug to the earphone jack of HBM-700.
3. No other additional keys are required during a telephone call.

Hint

- Use the 2.5Ø, 3-pole type earphones to connect with the HBM-700. Beware that no functions of the buttons attached to the earphone are available.

Hold switch

All functions of the buttons are locked when slipping the "Hold" switch upwards. The "Hold" switch is located on the right side of the HBM-700.

Hint

- Place "Hold" switch to hold position when HBM-700 is not used.

Summary of button functions

Function	HBM-700 Status	Action
Power on	Power off	Press END Button for at least 3 seconds
Power off	Power on	Press END Button for at least 3 seconds
Pairing	Waiting	Press Clear Button for at least 5 seconds
Cancel Pairing	Pairing	Press Clear Button for at least 5 seconds
Voice Recognition Activation	Waiting	Press Send Button briefly.
Voice Recognition Deactivation	Voice Activation	Press Send Button briefly.
Last Number Dial	Waiting	Press Send Button for at least 2 seconds.
Speed Dial	Waiting	Insert at least one-digit number. Then press Send Button.
Connection with last connected device	Disconnect	Press Send Button briefly.
Answering Call	Incoming Call	Press Send Button briefly.
Rejecting Call	Incoming Call	Press End Button briefly.
Call Waiting	Calling	Press Send Button briefly.
Ending Call	Calling	Press End Button briefly.
Audio Transfer to HBM-700	Calling	Press Send Button for at least 2 seconds.

Audio Transfer to Handset	Calling	Press Send Button for at least 2 seconds.
Delete 1-Digit	Waiting	Press Clear Button briefly.
Delete All Digits	Waiting	Press End Button briefly.
Dialing Number	Waiting & Calling	Press 0~9 Button briefly.
Dialing *, #	Waiting & Calling	* = Press "9" Button for at least 2 seconds. # = Press "0" Button for at least 2 seconds.
Mic Gain Control	Waiting & Calling	Press Clear Button for at least 2 seconds

Trouble shooting

Does not turn on.	• Check whether the battery of the HBM-700 is fully discharged. • Check whether the power of the HBM-700 is on. • Check whether the Hold Switch is locked.
Poor transmitting/receiving. The phone frequently cuts off during a phone call	• The communication condition is not stable. Move to another place and try again.
Unable to charge the battery.	• Check whether the charger is plugged properly into the Headset.
Unable to transmit/receive a phone call through HBM-700	• Check whether the microphone is at Mute stage. • Check whether the volume is too low.
Unable to pair the HBM-700 with the Bluetooth device.	• Check whether the Headset is placed in Pairing mode. • Pair the HBM-700 while it is near the Handset.
The buttons do not function.	• Check whether the Hold Switch is locked. • If the buttons still do not function properly, press the Reset Button back of the HBM-700 and then turn the power on. (Beware that all registered numbers may be deleted when you press the Reset Button.)

LCD indication

LCD status	HBM-700 status
Paring	
waiting	
Connecting	
Connected	
Calling	

Precautions

Do not drop the product from a high place.

Do not modify, repair or take apart at discretion.

Do not expose directly to water, alcohol, benzene, etc for cleaning.

Do not place or keep the product near the flammables. It may cause explosion.

Do not place heavy object on the product.

Keep away from direct light or heat.

Do not place the heavy objects on the unit.

Keep away from direct light or heat.

- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the instructions.

Specifications

ITEM	DESCRIPTION
Bluetooth Specification.	V1.2
Supported Profile	Handsfree / Headset Profile
Frequency Range	2.402 ~ 2.480 GHz
Battery	3.7V / 180mAh Li-ion
Standby Time	
Talking Time	
Charging Time	3 Hours
Operating Temperature	

Declaration of Conformity

FCC ID BEJHBM700

This device complies with part 15 of the FCC rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE : To comply with FCC RF exposure compliance requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate the device.

Note : The antenna used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.



CE 0197

