

TIP

- When the memory card is formatted, the data stored in the memory card will be deleted. Check whether there are important data before formatting the memory stick.
- To format a memory card, right-click the memory card drive and select Format. When the Format window appears, press Start to continue.
- If the write protection tab of memory card is locked, the user cannot format the memory stick nor write or delete the data.
- **microSD** memory cards can be used only as storage devices and do not support the copyright protection feature.


Removing Memory Card

Push the card with your finger to make the card spring out of the slot. Remove the memory card.

TIP**To safely remove a microSD card:**

The figures herein may differ by language selection and are subject to change without prior notice.

- 1 Click **Safely Remove Hardware and other Media** icon on the right side of the taskbar.

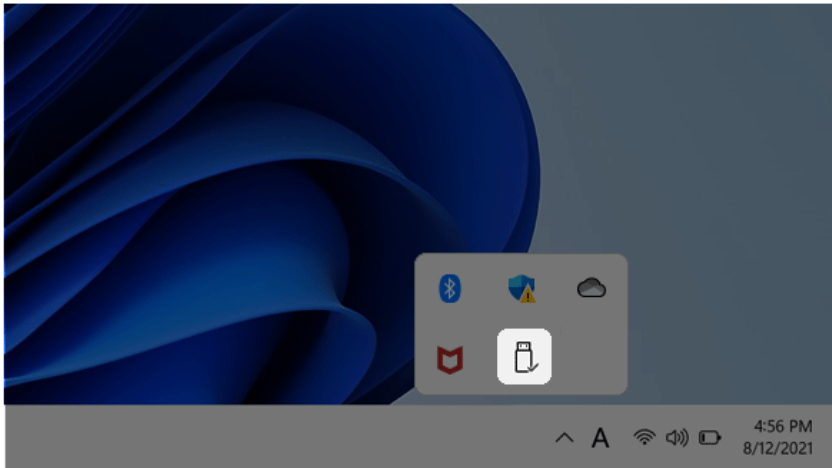

- 2 Select **Remove Multi-Card USB Device** to safely remove hardware.

Using Software

LG Smart Assistant

LG Smart Assistant allows you to easily change the settings of your PC according to your needs.

TIP


Menus and supported functions may differ depending on the model.

Please update the program to the latest version through **LG Update & Recovery** (or **LG Update**).

The figures herein are subject to change without prior notice.

Running LG Smart Assistant


Select the Start button [] > [All apps] and run [LG Smart Assistant].

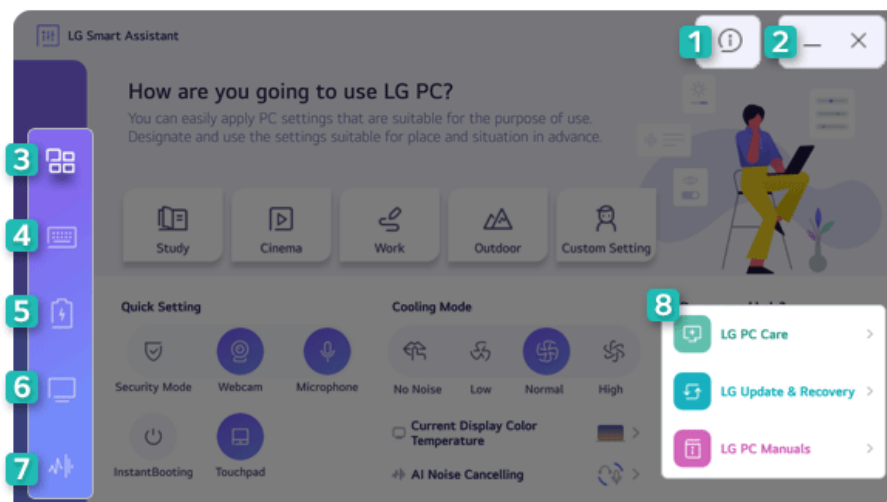

- 1 **Information Button:** Runs Help or displays information about the software.
- 2 **Minimize/Exit Button:** Minimizes the size of the window, or exits the software.
- 3 **Dashboard:** Allows you to specify PC settings suitable for the purpose of use and apply them at once, or to set key PC functions easily.

- 4 **Keyboard Setting:** Allows you to set Fn key lock settings, NumLock key status indicator and your own hot keys.
- 5 **Power Setting:** Allows you to check the battery status and extend the battery life, set the power and sleep settings, and set the USB-C™ port charging function.
- 6 **Display Setting:** Allows you to set the color temperature of the display or use the reader mode.
- 7 **AI Noise Canceling:** Allows you to set the noise canceling function for the microphone input and the speaker output.
- 8 **Go to LG Software:** Allows you to run LG Update & Recovery (or LG Update) and LG PC Manuals directly.

Dashboard

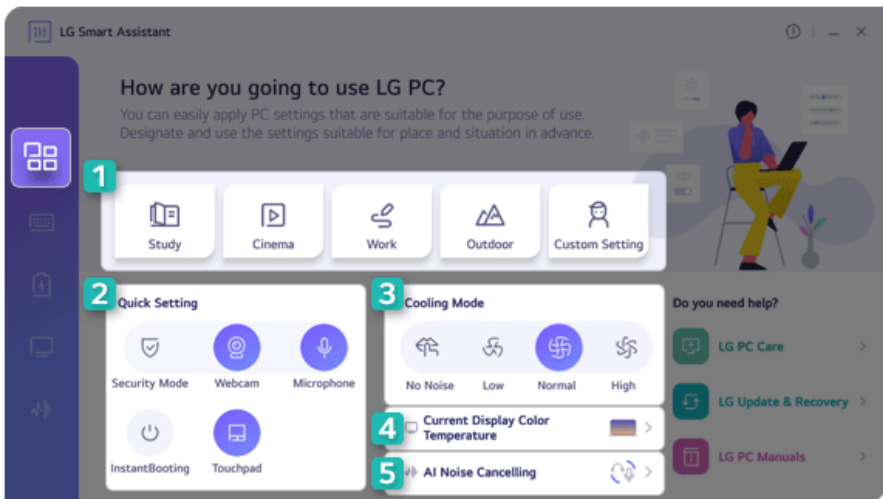

- 1 **User Mode:** Allows you to set the user mode according to the PC environment.
- 2 **Quick Setting:** Allows you to set the PC settings easily.
 - **Security Mode:** Allows you to turn off the webcam and the microphone.
 - **Webcam:** Allows you to turn off or on the webcam.
 - **Microphone:** Allows you to turn off or on the microphone.
 - **Instant Bootting:** Allows you to set the system to turn on automatically when you open the cover of the notebook PC.
 - **Touchpad:** Allows you to turn off or on the touchpad.

3 Cooling Mode: Allows you to set the fan mode of the PC according to the PC environment.

- **Low Mode:** Minimizes fan speed so that you can use the PC in a quiet environment. (This may degrade your PC performance. It automatically changes to the **Normal Mode** upon reboot.)
- **Normal Mode:** Optimizes PC performance, heat and noise.
- **High Mode:** Sets to the tasks that require high performance. (This may result in increased PC surface temperature and noise, and shorter battery life. It automatically changes to the **Normal Mode** upon reboot.)


CAUTION

When using for a long term, use **Normal Mode**.

4 Current Display Color Temperature: Go to the [Display Setting] menu.

5 AI Noise Canceling: Go to the [AI Noise Canceling] menu.


Keyboard Setting

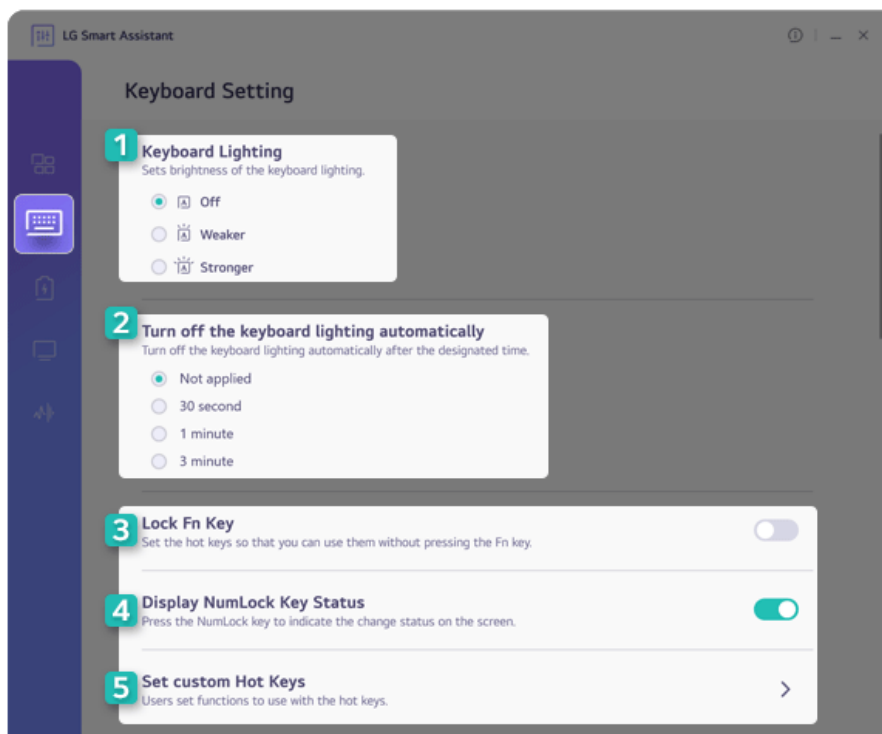

- 1 **Lock Fn Key:** Allows you to set the hot keys (F1 - F12) to operate even without pressing Fn.
- 2 **Display NumLock Key Status:** Allows you to set the screen to display the status change when you press the NumLock key.

3 Set custom Hot Keys: Allows you to register an app or internet address to a custom hot key.


- On the Hot Keys Settings List, select the navigation icon [] or the internet icon [] to register the desired app or Internet address to a hot key.

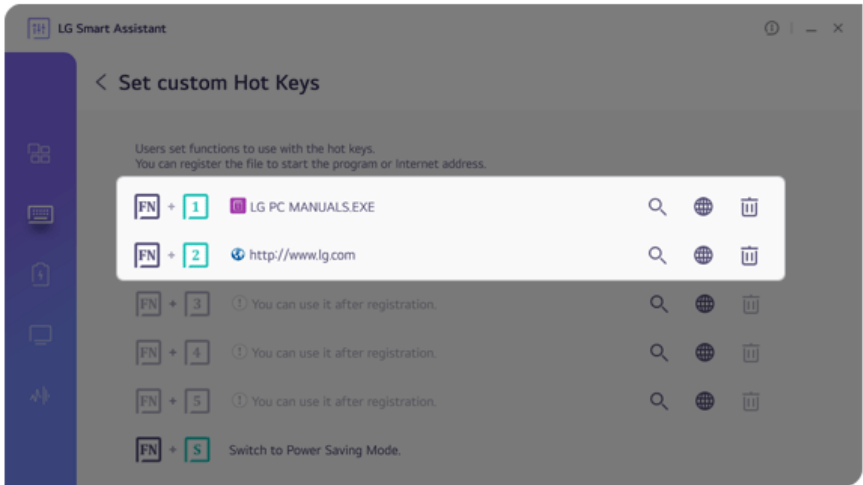


TIP

- Some abnormal program files (exes) and Internet addresses (links) may not be linked.
- Hot keys can be set from 1 to 5, and the [Fn] + [S] Sleep Mode cannot be changed.

- After selecting the app-running file, right-click the mouse and use the [Show more options] > [Set functions to use with user Hot keys] menu to register the app quickly.

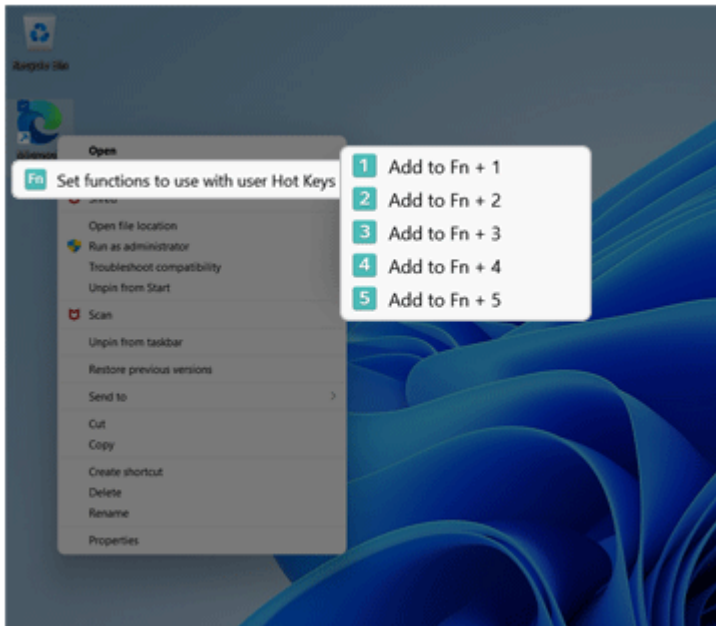


Power Setting

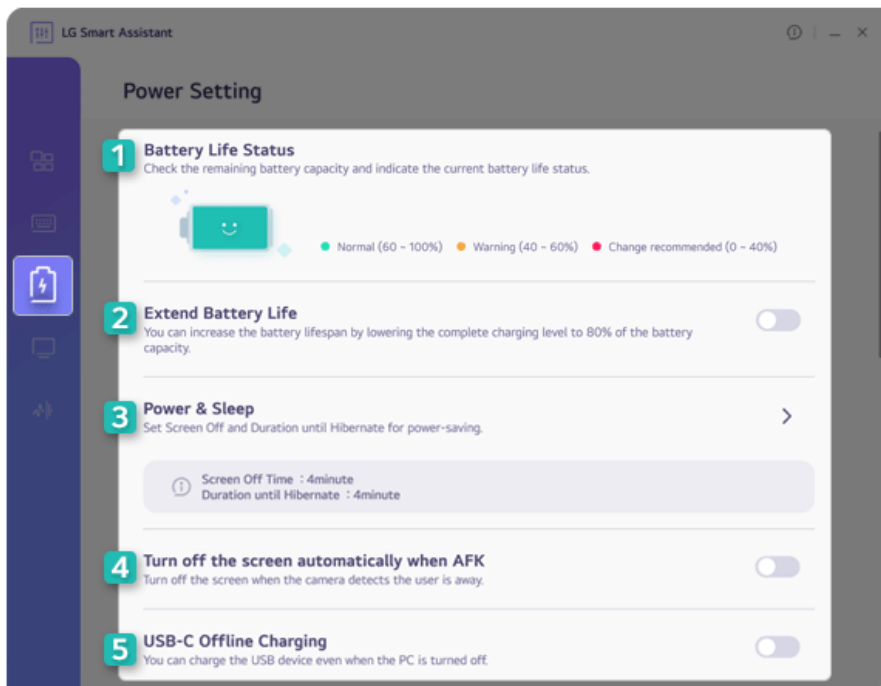

- 1 **Battery Life Status:** Displays the battery status so that you can replace the battery timely.
- 2 **Extend Battery Life:** Allows you to lower the max. battery charge level to 80% to extend the battery lifespan.
- 3 **Power & Sleep:** Displays the screen off time and the sleep mode entry time. You can go to Windows settings and set the time.
- 4 **Turn off the screen automatically when AFK:** Allows you to set the screen to automatically turn off when you are away from the keyboard for a certain amount of time.
- 5 **USB-C™ Offline Charging:** Allows you to set the PC to charge external devices via the USB-C™ port even when the PC is turned off.

Display Setting

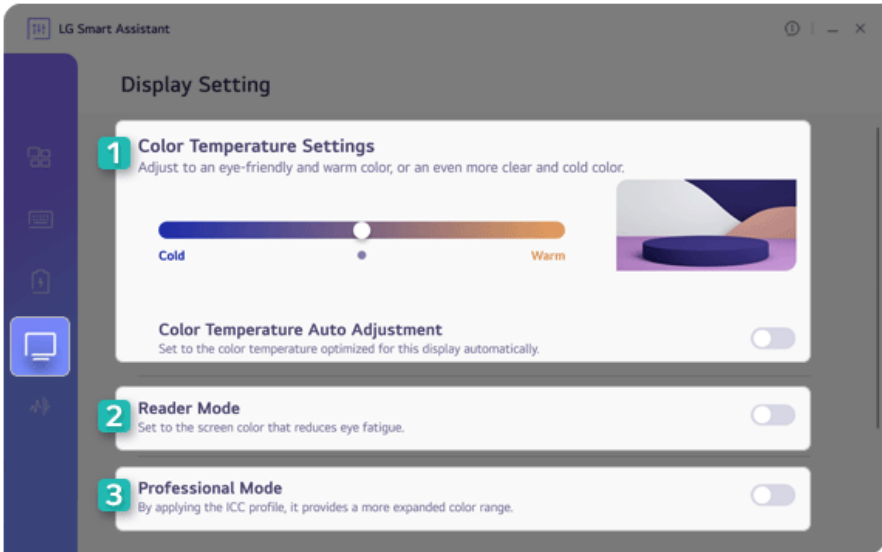

- 1 **Reader Mode:** Allows you to set the Reader Mode to reduce eye fatigue when reading documents.

CAUTION

Using the **Reader Mode** and the **Night light** at the same time can cause color distortion. When you use the **Reader Mode**, turn off the **Night light**.


- You can turn [Night light] on or off in the Start button [] > [Settings] > [System] > [Display].

TIP

You can use hot keys to use the **Reader Mode** function more conveniently.

- Press the [Fn] + [F9] keys to switch the PC screen to **Reader Mode**. Press them again to turn off **Reader Mode**.

AI Noise Canceling

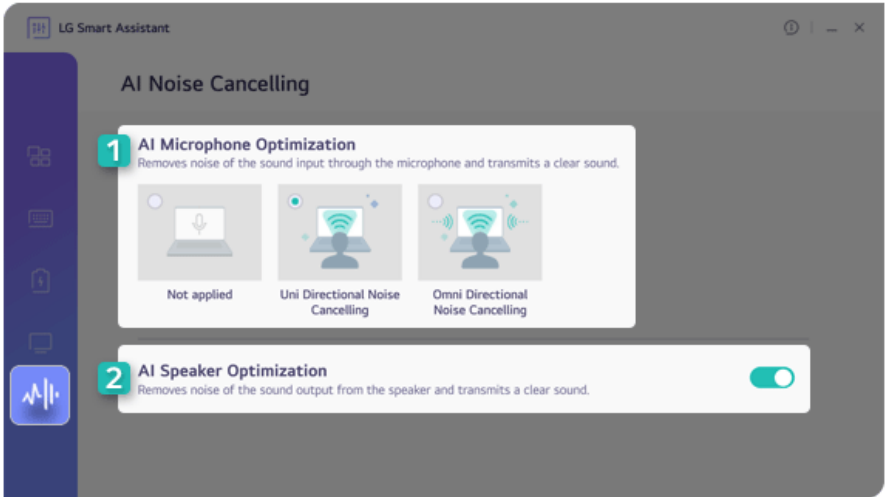

- 1 **AI Microphone Optimization:** Cancels out the noise input to the microphone to deliver clear sound.
- 2 **AI Speaker Optimization:** Cancels the noise output from the speakers to deliver clear sound.

LG Update & Recovery

LG Update & Recovery performs updates to keep the system in an optimal state, and backs up and recovers data in case a problem occurs so that you can safely use your PC.

TIP

For some models without the **Recovery** function, only the **LG Update** function is provided.

Menus and supported functions may differ depending on the model.

It may not work properly depending on user environment (security tools, etc.) and the network status.


You can use **LG Update & Recovery** (or **LG Update**) to install the deleted drivers or the latest drivers easily and quickly.

Use **LG Update & Recovery** (or **LG Update**) to keep your system current and optimized.

The figures herein are subject to change without prior notice.

Running LG Update & Recovery (or LG Update)

Select the Start button [] > [All apps] and run [LG Update & Recovery] or [LG Update].

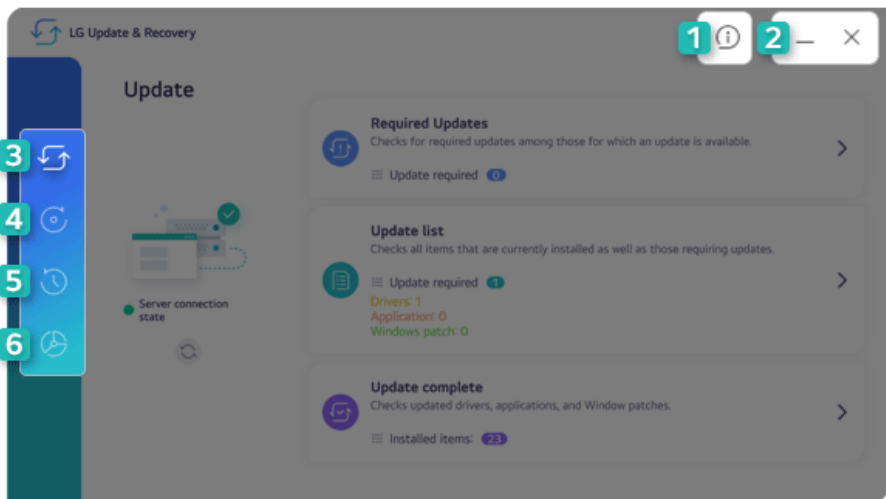

- 1 **Information Button:** Runs Help or displays information about the software.
- 2 **Minimize/Exit Button:** Minimizes the size of the window, or exits the software.

- 3 **Update:** Allows you to install various PC drivers, applications and Windows patches easily and quickly.
- 4 **Backup:** Allows you to back up Windows, disk environment, and data safely.
- 5 **Recovery:** Allows you to recover backup data or reset your PC.
- 6 **Tools:** Partitions the disk installed with Windows or the data disks.

TIP


For details on backup and recovery, see [Recovering the System].

LG Update does not support [Backup], [Recovery], and [Tools] menus.


Update

If an item that needs updating is displayed, you can select it and update it.

- 1 Select [Required Updates] or [Update list] from the [Update] menu.

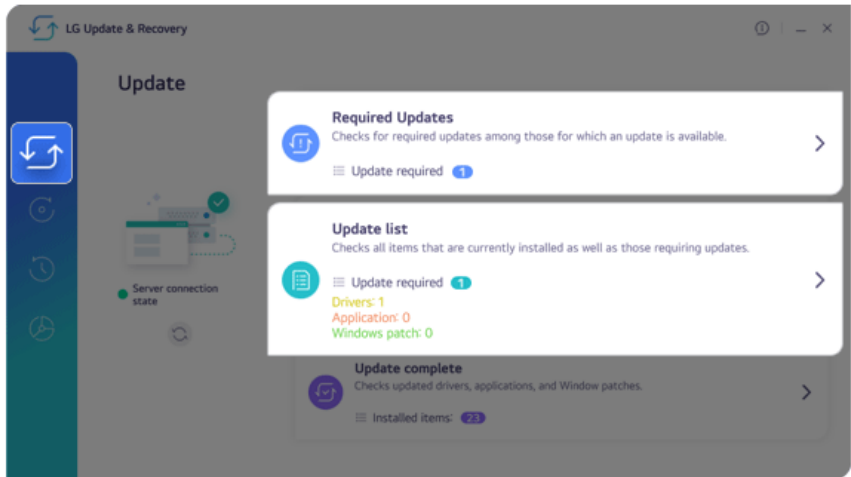

- 2 After selecting the items to update, select [Installation].

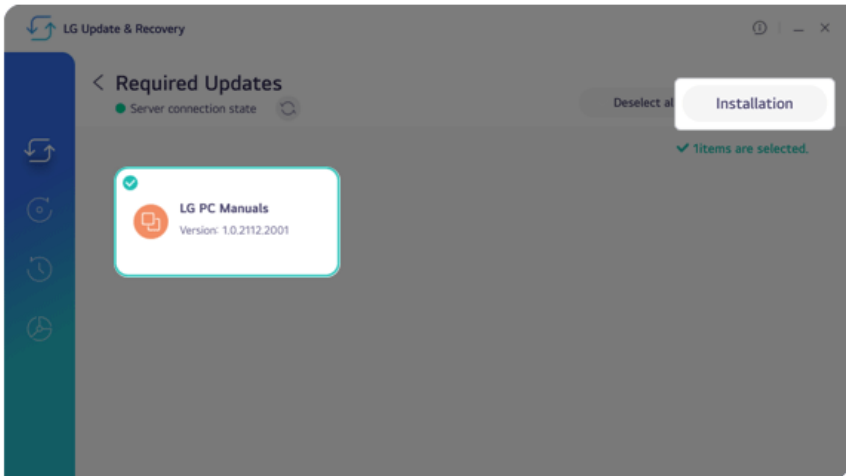

Disk Partitioning

Partitions the disk installed with Windows or the data disks.

TIP


LG Update does not support the disk partitioning function.

The data disk partitioning function is only available on models with two or more storage devices.


CAUTION

You are encouraged to back up your personal files to avoid data loss when partitioning.


- 1 Select [Partitioning the Windows disk] or [Partitioning the data disk] from the [Tools] menu.

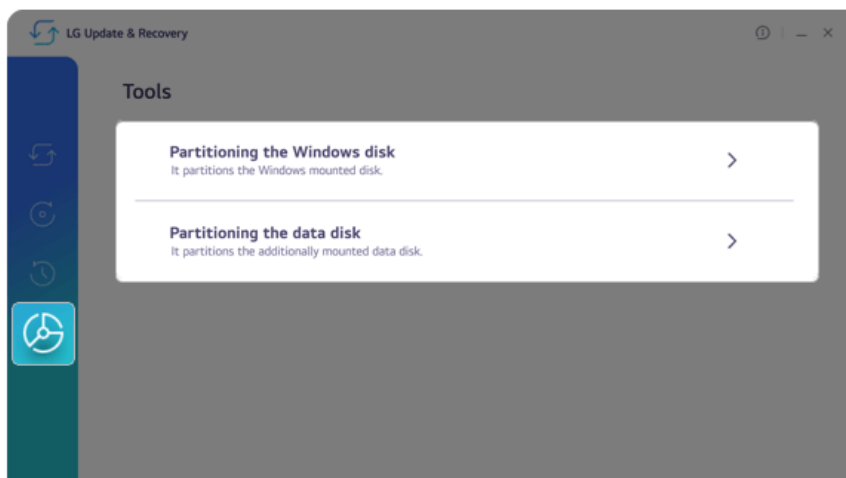

- 2 If you select the desired disk partition, the [Partitionable minimum volume] menu appears.

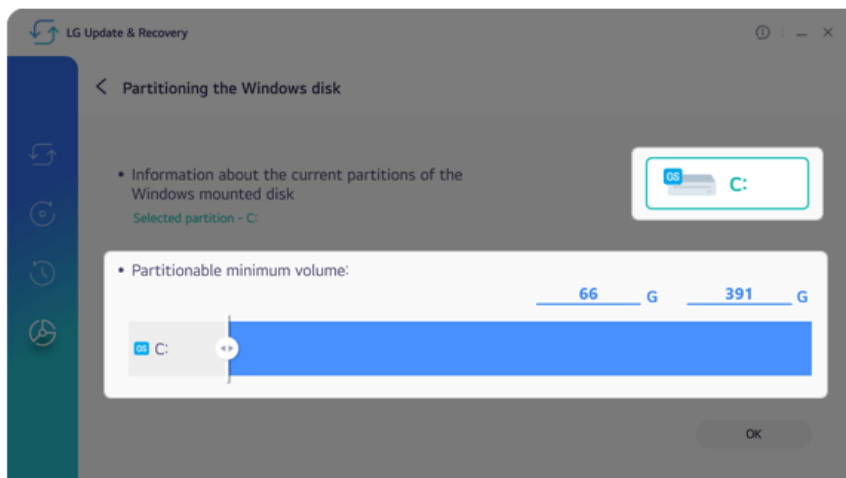

- 3 Set the capacity of the disk to be partitioned and select [OK].

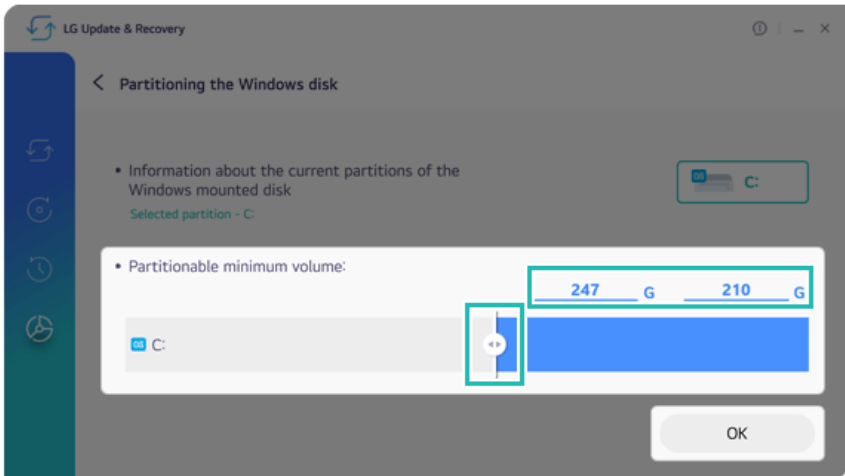

- 4 The disk will be partitioned.

DTS:X Ultra

DTS:X Ultra provides rich, sonorous sound when you listen to music, watch videos or play games in the PC.

DTS:X Ultra may not be applied depending on the model.

The figures herein are subject to change without prior notice.

Running DTS:X Ultra

- 1 Select the Start button [] > [All apps] and run [DTS:X Ultra].
- 2 The default is **Internal Speakers** Mode, and it works in **Headphones** Mode when the earphone is connected.

DTS:X Ultra Tour



- 1 **Power:** DTS:X Ultra Turns the power on/off.
- 2 **Automatic:** Provides an environment that is automatically optimized for the running application.

- 3 **Music:** Provides an optimized environment for music playback.
- 4 **Voice:** Provides an optimized environment for voice playback.
- 5 **Movies:** Provides an optimized environment for movie playback.
- 6 **Strategy, RPG and Shooter:** Provides an optimized environment for each game.
- 7 **Custom Audio:** Selects the spatial model and adjusts the expansion power, and it is optimized for each setting.
- 8 **Device:** Allows you to select the connected earphone/headphone. (Provides headphone mode only)
- 9 **Personalized EQ:** Sets an equalizer optimized for your personal hearing. (Provides headphone mode only)
- 10 **Graphic EQ:** Sets the equalizer.

TIP

If you want to remove Audio Driver or DTS:X Ultra , remove [DTS:X Ultra] and [Realtek(R) Audio Driver] in the order specified and restart the system.

If you want to reinstall Audio Driver or DTS:X Ultra, remove [DTS:X Ultra] and [Realtek(R) Audio Driver] in the order specified and install [Realtek(R) Audio Driver]. Then restart and install [DTS:X Ultra].

- If you do not remove or install them in the order specified, an error may occur.

Virtoo by LG

Virtoo by LG is software that allows you to connect your smartphone and PC to check your phone's notifications, make phone calls, send and receive text messages, use media, use mirroring, etc. on your PC.

TIP

If **Virtoo by LG** is not installed, connect to the **Microsoft Store** and search for **Virtoo by LG**.

Also, your smartphone must have the **Virtoo by LG** app installed.

You can search for and install the **Virtoo by LG** smartphone app from **Google Play** or **App Store**.

It is recommended to disconnect from the app after using on a public PC.

Virtoo by LG's service may be suspended without prior notice due to the company's circumstances.

The app may not work properly on some smartphone models and upgrading the operating system of a smartphone may prevent some features from working properly.


In order to use a dialer with a Microsoft **user's mobile phone**, you need to uninstall **Virtoo by LG** app and driver.

The figures herein are subject to change without prior notice.


Virtoo by LG Connect

- 1 Select the Start button [] > [All apps] and run [Virtoo by LG].

- 2 Select [Get Started], and then follow the instructions to connect your smartphone to the PC.

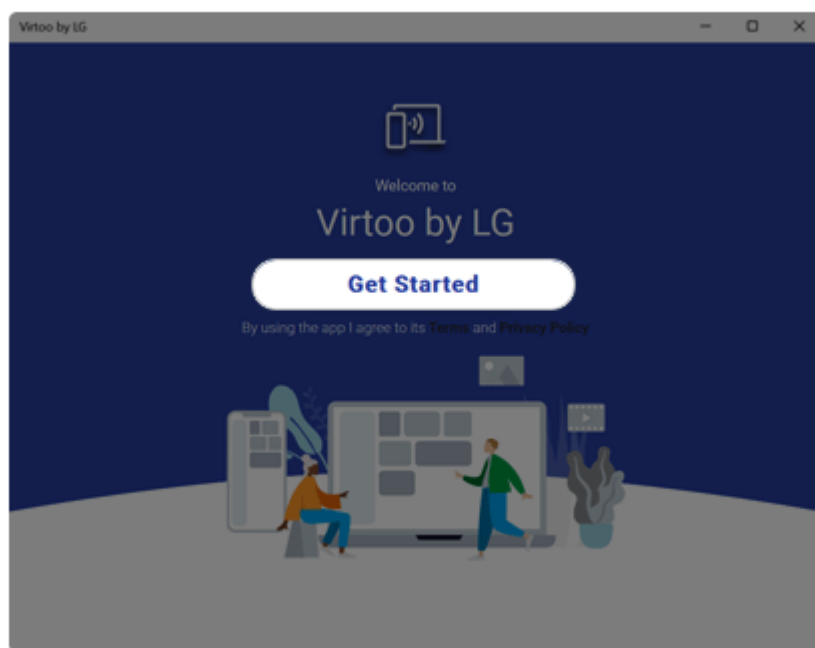

Virtoo by LG Tour

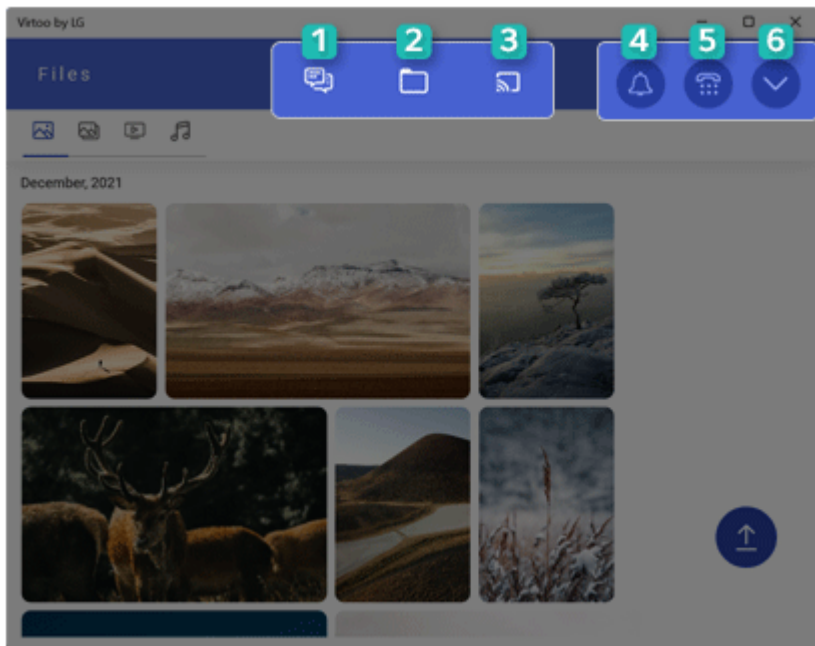

- 1 **Messages:** Allows you to send and receive text messages interactively.
- 2 **Files:** Displays files (photos, albums, videos, audio) on your smartphone, and you can share files between your smartphone and the PC.
- 3 **Mirroring:** Allows you to display the screen of the connected smartphone on your PC and access it from the PC.
- 4 **Notifications:** You can check your phone's notifications on the **Virtoo by LG** app screen.
- 5 **Dialer:** Allows you to browse the contacts stored in your smartphone and send text or make a phone call to the contacts.
- 6 **Expand:** Allows you to check the battery status of your smartphone and use the Do Not Disturb, Settings, and Disconnect features.

Sharing files (photos, albums, videos, and audio)

TIP

Transferring large files can take some time.

If you want to use the Share File function on your iPhone, you need to connect the iPhone and the PC to the same router.

iPhone does not support the sharing of audio files.

Sending files to your smartphone


- 1 Select the [Upload] icon from the [Files] menu.

TIP

Android: The transferred files are classified by file type in [] > [My received files] of the **Virtoo by LG** app.

iPhone: The transferred files are saved in the album.

You can drag & drop files to share files from your PC to your smartphone.

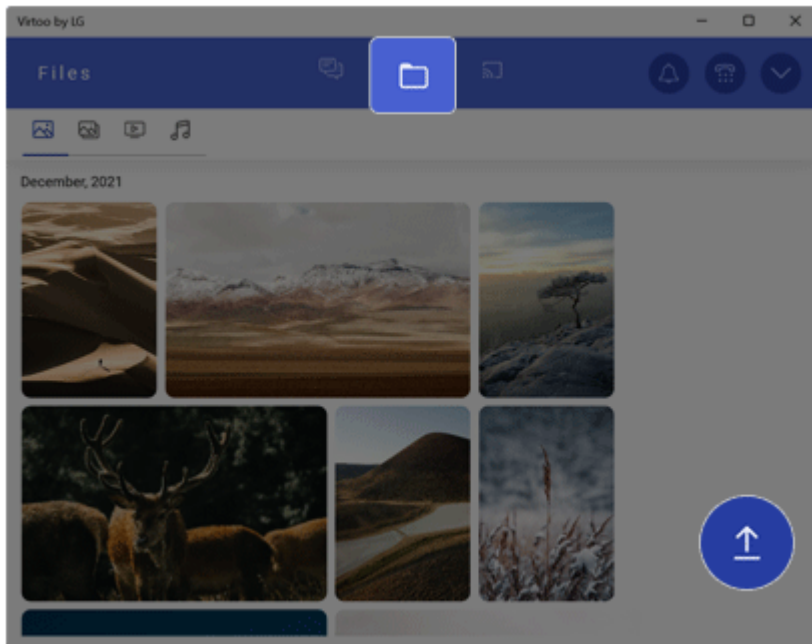

- 2 Select the file you wish to send to your smartphone and select [Open].


Importing files from your smartphone to your PC

- 1 Select the desired file from the [Files] menu.


TIP

You can select multiple files to import, and select the [] icon to directly import the files.

Imported files will be saved in [This PC] > [Pictures] > **[Virtoo by LG]** folder on the PC.

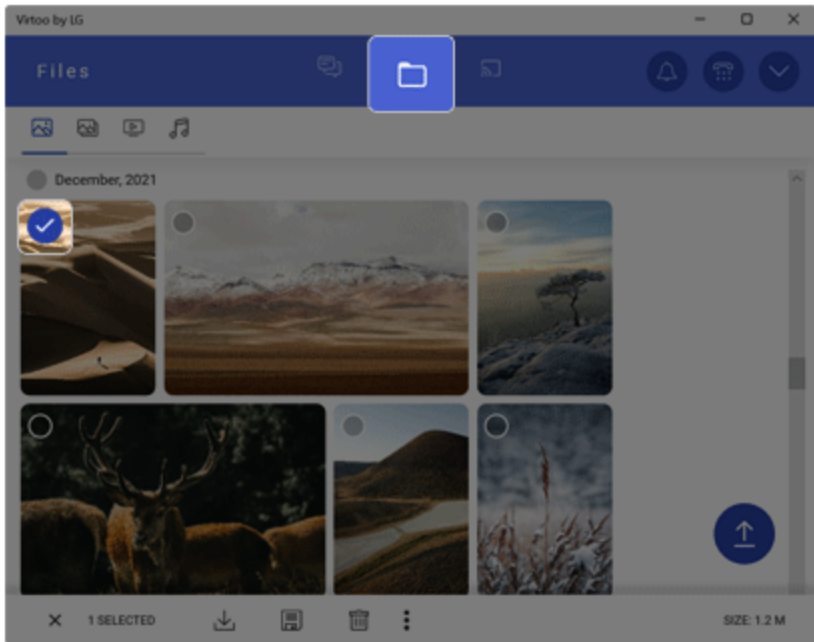


- 2 Select [GET FILE].

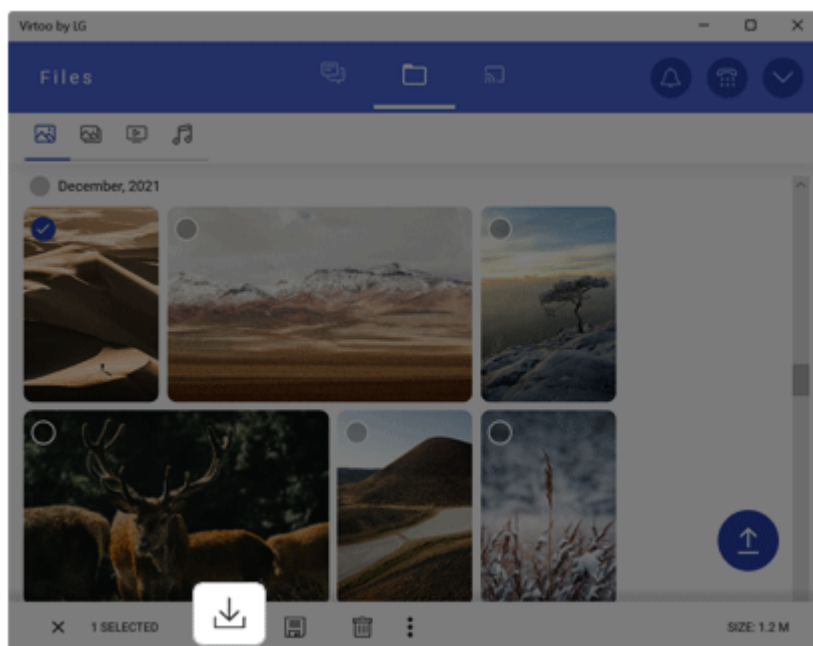


Sending files from your smartphone

- 1 Select [Share File].

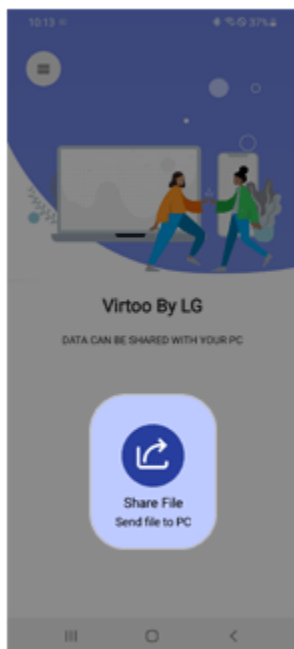

- 2 When the [Share File] menu appears, select the desired option to send the file.

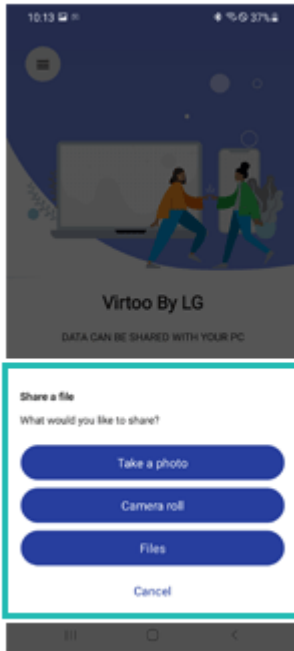

File Sharing with Mirroring

TIP

Mirroring must be enabled to use the file sharing with mirroring feature.

Only Android smartphones support the file sharing feature through mirroring.


Only one file can be transferred at a time and it may take a while if the file is big.

Depending on the wireless environment, the mirroring screen may suffer a buffering problem or the file transmission speed may be lowered.


The keyboard and mouse on the PC acts on the smartphone as if Bluetooth keyboard and mouse are connected to it.

You can drag & drop files to share files from your PC to your smartphone.

- 1 Select the [Activate] in the [Mirroring] menu and connect the smartphone to the PC according to the instructions.

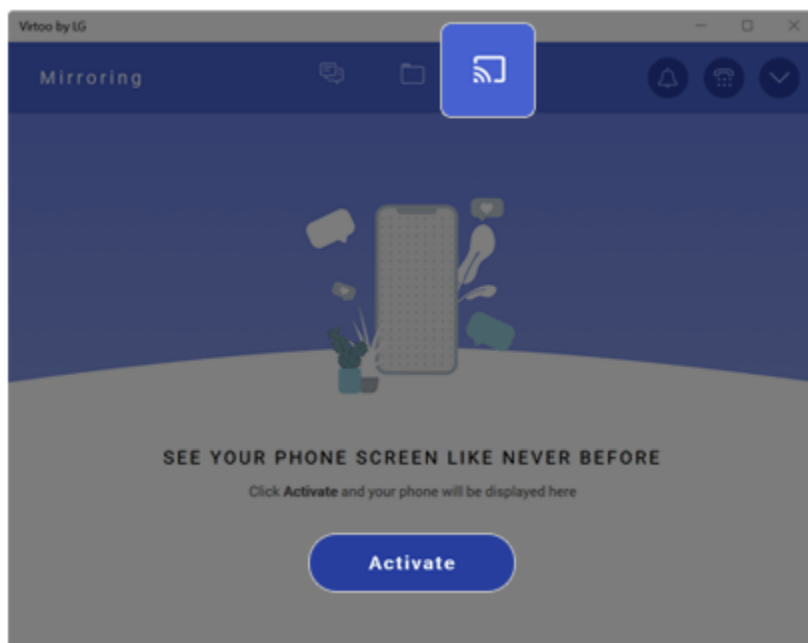


- 2 When the smartphone screen appears on the PC, select the [Share] icon.

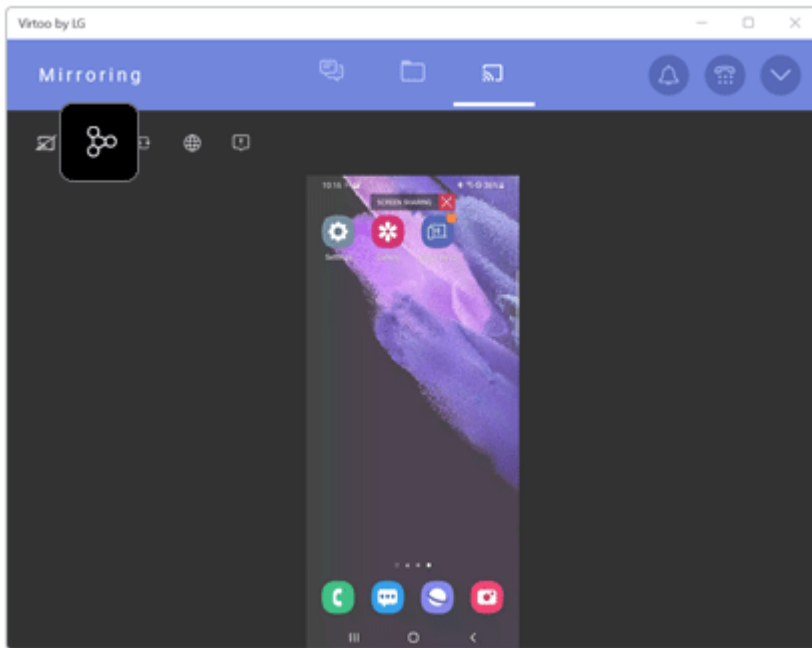


- 3 Select the file you wish to share to your smartphone and select [Open].

4 When the Share menu appears on the smartphone, select the desired app to share the file.

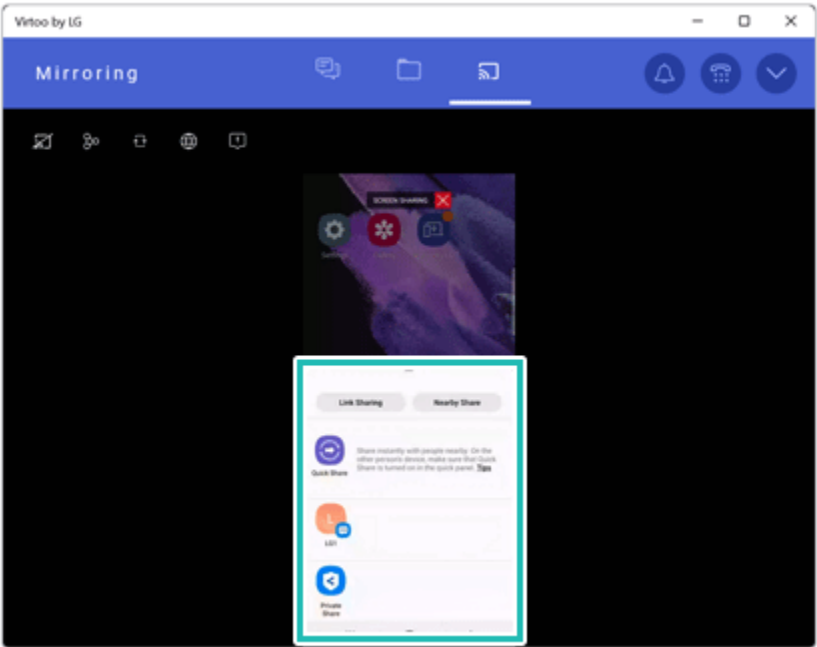

Displaying Notification Messages

When your smartphone receives a notification, phone call, text message, app notification message, or email, a notification message is displayed on the PC screen.

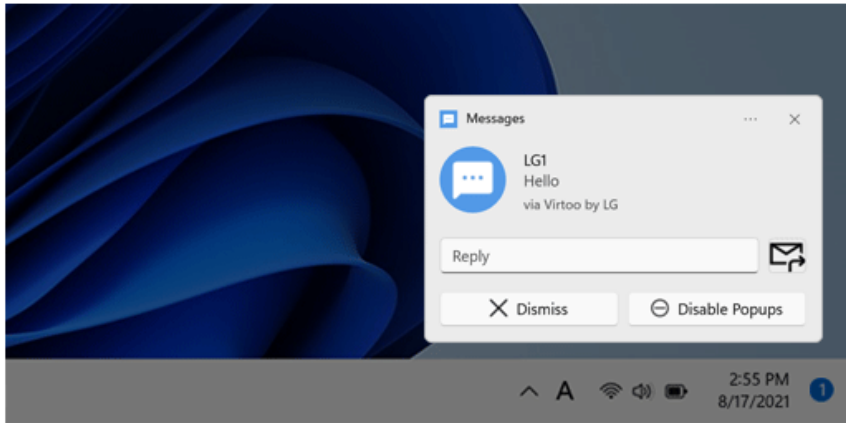**TIP**

If the smartphone notification does not appear on the PC, allow notification access authority of the Virtoo by LG app in the smartphone settings.

- The actual menu structure may differ by smartphone model. Refer to the smartphone manual for more information on menu structure.

Virtoo by LG Update

Some functions may not work properly if the version of an app installed on your PC or mobile device (Android or iPhone) is out of date. You can update your PC and mobile device as below:

Please initialize your app after it is updated.

- PC app: In **Microsoft Store**, search for and update the **Virtoo by LG** app.
- Smartphone app: In **Google Play** or **App Store**, search for and update the **Virtoo by LG** app.

LG Glance by Mirametrix®

LG Glance by Mirametrix® uses AI-based attention detection technology to improve PC productivity and enhance security.

TIP

LG Glance by Mirametrix® basically operates with the power connected, and connecting an external monitor makes it possible to utilize various functions more efficiently.

The figures herein are subject to change without prior notice.

Running LG Glance by Mirametrix®

- 1 Select the Start button [] > [All apps] and run [LG Glance by Mirametrix®].
- 2 The tutorial (help on how-to-use) for LG Glance by Mirametrix® appears.

Exploring LG Glance by Mirametrix®

Select the [] (Show hidden icons) icon on the right side of the taskbar, and then select the [

] icon to run LG Glance by Mirametrix®.

TIP

To always display the LG Glance by Mirametrix® icon [] on the taskbar, right-click on the taskbar, select [Taskbar settings] > [Taskbar Corner overflow], and set [Glance.exe] to [On].



- 1 **Presence Detection:** If the user does not look at the screen or leaves the screen for a certain period of time, the screen is locked or darkened.
- 2 **Snap Window:** (When an external monitor is connected) Click and hold the title bar of the desired window, move your head to the external monitor or the notebook PC screen to move the window to the screen you are looking at.
- 3 **Smart Pointer:** (When an external monitor is connected) Move your head to the external monitor or the notebook PC screen to move the mouse pointer to the screen you are looking at.
- 4 **Smart Display:** (When an external monitor is connected) Dims the screen of an external monitor or the notebook PC screen that the user is not looking at.
- 5 **Privacy Guard:** Blurs the notebook PC screen if someone is looking at your screen from behind.
- 6 **Privacy Alert:** Alerts you with an icon if someone is looking at your screen from behind.
- 7 **Smart Player:** Pauses the audio or video playback of a specific app when the user is away and automatically resumes playback when the user returns.
- 8 **Digital Wellness:** Tells you to look at an object far away for 20 seconds every 20 minutes to protect your eyesight. If you crouch too close to the screen, it tells you to correct your posture.
- 9 **Video Conferencing:** (During video conferencing) Displays a video of the presenter on the Desktop or automatically mutes the microphone when the user moves away from the screen. **Virtual Camera** hides the background of the camera or automatically adjusts the frame of the camera

according to the user's movement and compensates the face or the lighting to make your face look more beautiful.

- 10 Settings:** Provides the settings menu and tutorial (help on how to use) of LG Glance by Mirametrix®.

PCmover Professional

PCmover Professional transfers applications, files (pictures, music, videos, and documents) and settings from your old PC to your new PC.

TIP

The old and new PCs must be connected under the same network.


For details on how to use **PCmover Professional**, see the [User Guide] of **PCmover Professional**.

The figures herein are subject to change without prior notice.

PCmover Professional Running

Select the Start button [] > [All apps] and run [PCmover Professional].

PCmover Professional Tour

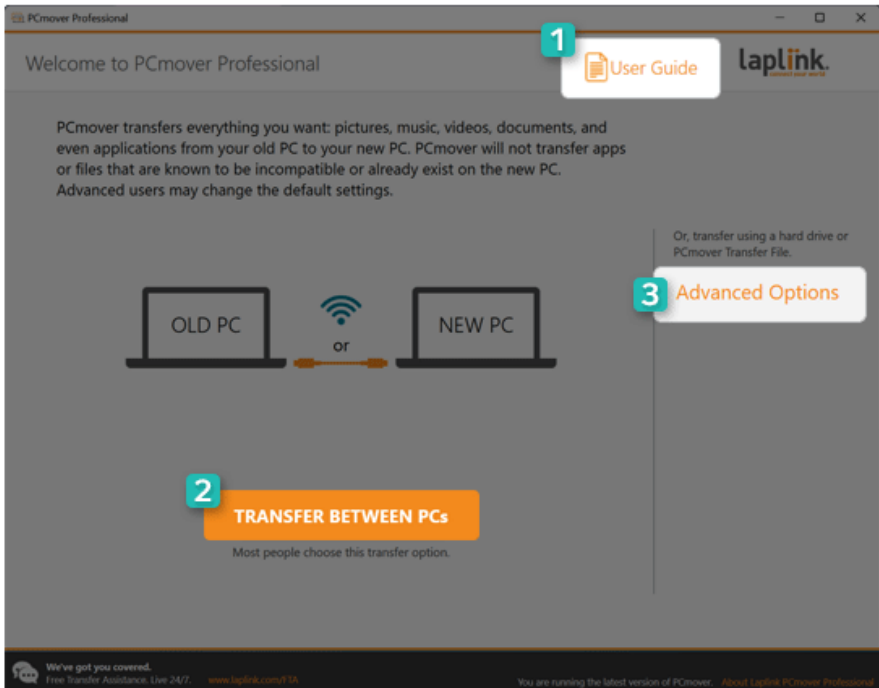

- 1 **User Guide:** You can find out more about how to use **PCmover Professional**.
- 2 **TRANSFER BETWEEN PCs:** Starts the process of transferring data (apps, files, settings, etc.) between the old PC and the new PC.
- 3 **Advanced Options:** Allows you to create a transfer file on an external media (USB disk, etc.) and transfer it to a new PC, or to transfer it to a new PC using a disk image backed up from the old PC. Also, you can transfer apps, files and settings between user accounts of the same PC.

Recovering the System

Backing up/Recovering My Windows

You can back up and recover the disk partition where Windows is installed.

This content only applies to the models provided with LG Update & Recovery.

CAUTION


Partitions other than the disk partition where Windows is installed are not backed up.
For backup or recovery, the AC adapter must be connected to the PC.

TIP


You can perform backup only on an external disk (USB memory, HDD, etc.).

My Windows Backup

- 1 Connect the external disk where the backup file will be saved to the PC.
- 2 Select the Start button [] > [All apps] and run [LG Update & Recovery].
- 3 Select [Backup] > [My Windows Backup] > [OK] to reboot the PC.
- 4 When the [LG Recovery] screen appears, check the language you want to use and select [Next].

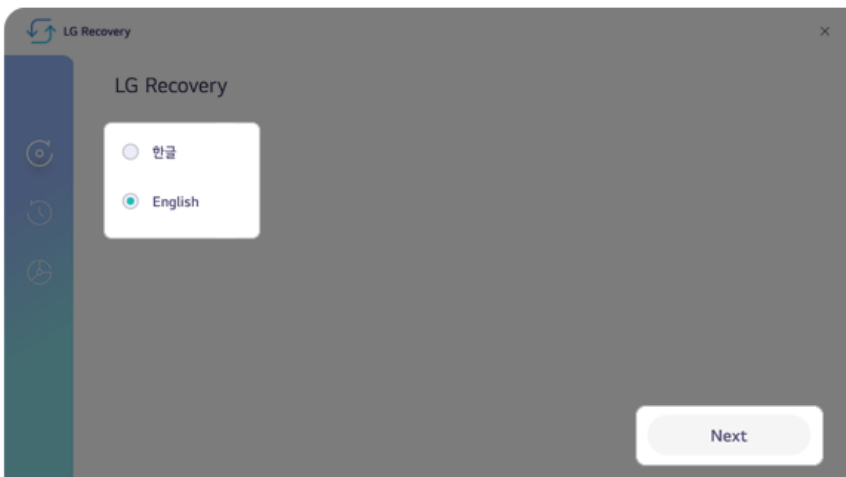

- 5 Select [Backup] > [My Windows Backup].
- 6 Select the external disk and click [OK].

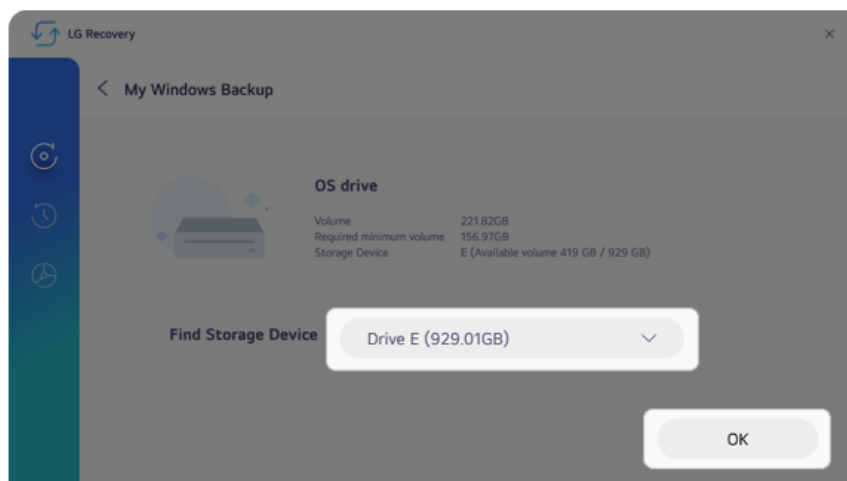

- 7 When the backup is complete, click [OK].
- 8 Select the Exit button [X] to reboot the PC.

My Windows Recovery

CAUTION


All user data on the partition where Windows is installed will be deleted, so you must backup all important data in advance.

- 1 Connect the external disk where the backup file is saved to the PC.
- 2 Select the Start button [] > [All apps] and run **[LG Update & Recovery]**.
- 3 Select [Recovery] > [My Windows Recovery] > [OK] to reboot the PC.

- 4 When the **[LG Recovery]** screen appears, check the language you want to use and select **[Next]**.



- 5 Select **[Recovery]** > **[My Windows Recovery]**.
- 6 Select the backup file on the external disk and click **[OK]**.

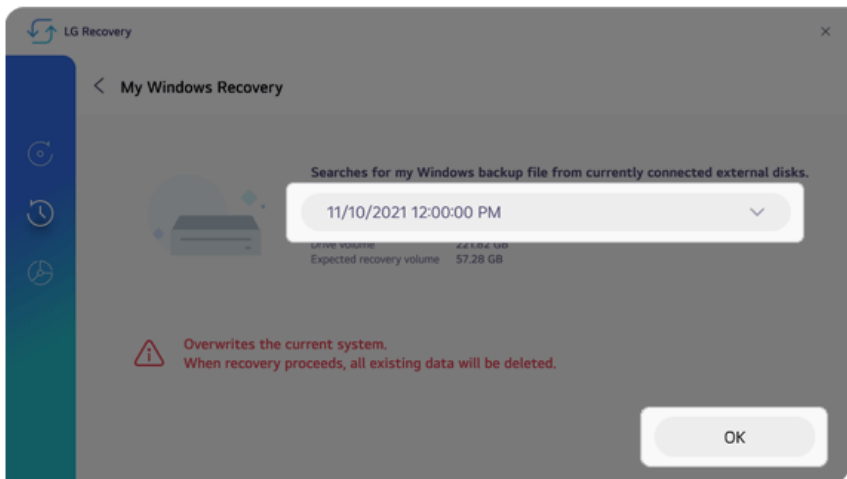

- 7 When the recovery is complete, click **[OK]**.

- 8 Select the Exit button [] to reboot the PC.

Backing up/Recovering Disk

You can back up and recover the entire disk (all partitions) where Windows is installed.

This content only applies to the models provided with LG Update & Recovery.

CAUTION


For backup or recovery, the AC adapter must be connected to the PC.

TIP

You can perform backup only on an external disk (USB memory, HDD, etc.).


Disk Backup

- 1 Connect the external disk where the backup file will be saved to the PC.
- 2 Select the Start button [] > [All apps] and run [LG Update & Recovery].
- 3 Select [Backup] > [Disk Backup] > [OK] to reboot the PC.
- 4 When the [LG Recovery] screen appears, check the language you want to use and select [Next].

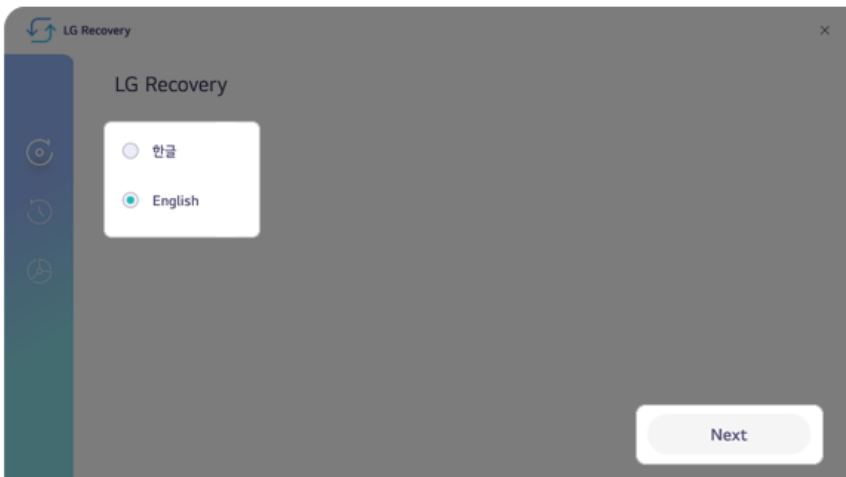

- 5 Select [Backup] > [Disk Backup].

- 6 Select the external disk and click [OK].

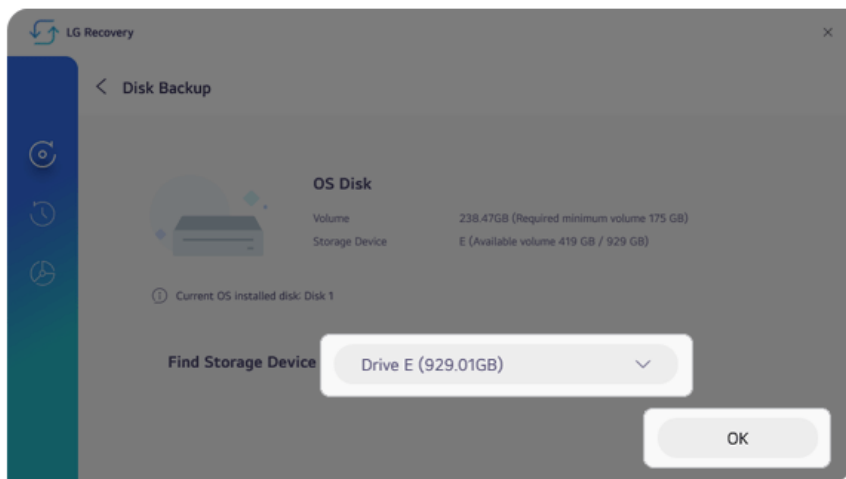

- 7 When the backup is complete, click [OK].
- 8 Select the Exit button [X] to reboot the PC.

Disk Recovery

CAUTION

All user data on the disk to be recovered will be deleted, so you must back up all important data in advance.

Recovering a disk other than the one where Windows is installed will result in the deletion of user data on all disks.

- 1 Connect the external disk where the backup file is saved to the PC.
- 2 Select the Start button [Windows logo] > [All apps] and run [LG Update & Recovery].
- 3 Select [Recovery] > [Disk Recovery] > [OK] to reboot the PC.

- 4 When the **[LG Recovery]** screen appears, check the language you want to use and select **[Next]**.



- 5 Select **[Recovery]** > **[Disk Recovery]**.
- 6 Select the backup file on the external disk and the disk to recover, and click **[OK]**.



- 7 When the recovery is complete, click **[OK]**.

- 8 Select the Exit button [] to reboot the PC.

Backing up/Recovering Data

You can back up and recover the data in the Downloads, Videos, Documents, Desktop, Photos and Music folders in Windows.

This content only applies to the models provided with LG Update & Recovery.

CAUTION

Any data other than those in these folders are not backed up/recovered.

All user data on the disk to be recovered may be deleted, so you must back up all important data in advance.


For backup or recovery, the AC adapter must be connected to the PC.

TIP

You can perform backup only on an external disk (USB memory, HDD, etc.).

Data Backup


- 1 Connect the external disk where the backup file will be saved to the PC.
- 2 Select the Start button [] > [All apps] and run [LG Update & Recovery].
- 3 Select [Backup] > [Data Backup].
- 4 Select the external disk and click [OK].

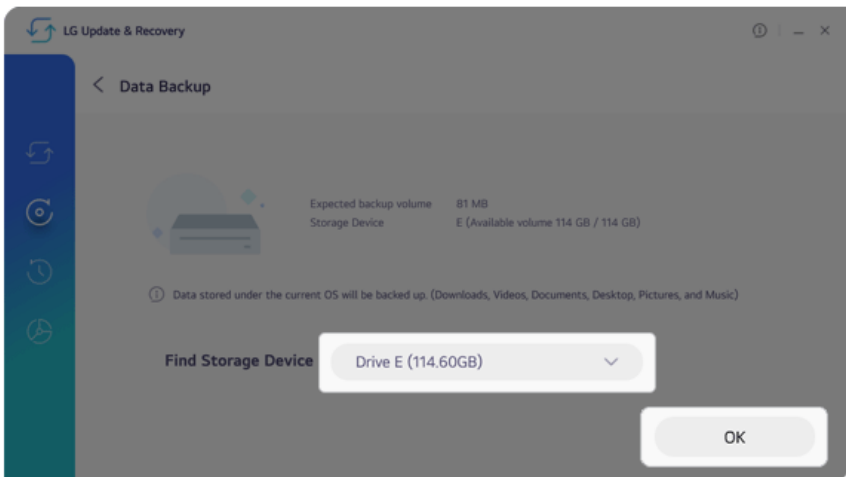

- 5 When the backup is complete, click [OK].

Data Recovery

- 1 Connect the external disk where the backup file is saved to the PC.
- 2 Select the Start button [] > [All apps] and run [LG Update & Recovery].
- 3 Select [Recovery] > [User Data Recovery].
- 4 Select the backup file on the external disk and click [OK].

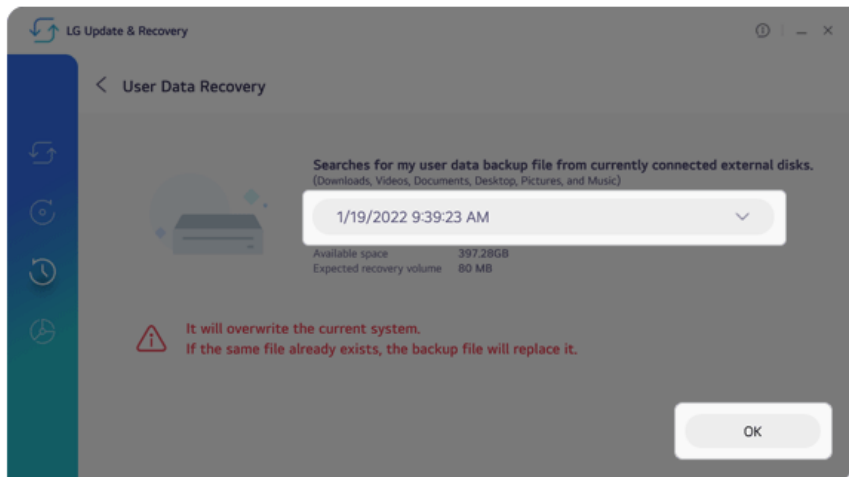

- 5 When the recovery is complete, click [OK].

Factory Reset


This function resets your PC to the factory default state at the time of purchase.

This content only applies to the models provided with LG Update & Recovery.

CAUTION

All data is lost during the initialization so you must backup all critical data in advance.
For factory reset, the AC adapter must be connected to the PC.

- 1 Select the Start button [] > [All apps] and run **[LG Update & Recovery]**.
- 2 Select [Recovery] > [Factory Reset] > [OK] to reboot the PC.
- 3 When the **[LG Recovery]** screen appears, check the language you want to use and select [Next].

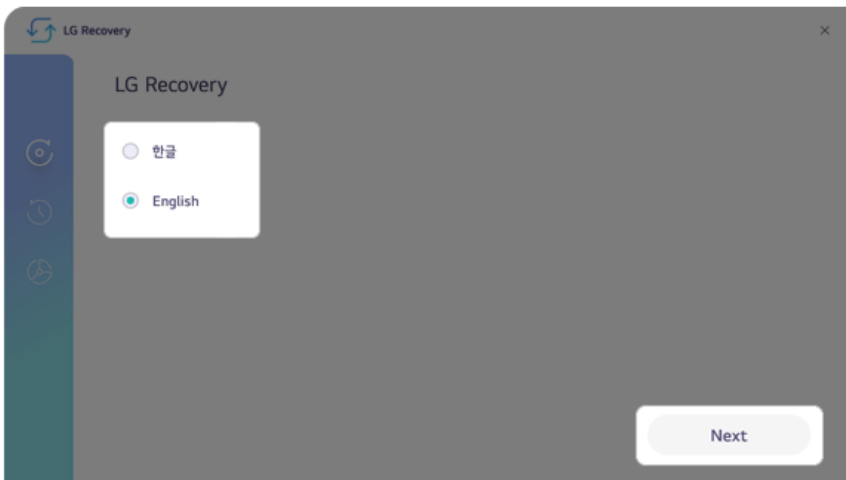

- 4 Select [Recovery] > [Factory Reset] > [Next] to execute the factory reset.



- 5 When the factory reset is complete, click [OK] to reboot the PC.

Creating Recovery Disk

Once you create a recovery disk, you can use **LG Recovery** to recover the system even when the system fails to boot due to a problem.

This content only applies to the models provided with LG Update & Recovery.


CAUTION

Creating a recovery disk will delete all data on the external disk, so please back up important data in advance.

TIP

You can create the recovery disk only on an external disk (USB memory, HDD, etc.).

- 1 Select the Start button [] > [All apps] and run [LG Update & Recovery].
- 2 Select [Recovery] > [Create Recovery Disk].
- 3 Select the external disk and click [OK].

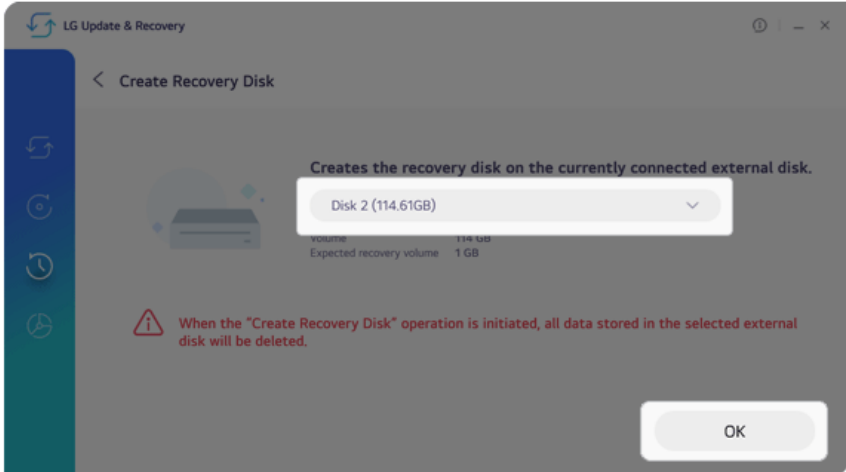

- 4 Once the recovery disk has been created, click [OK].

Recovering from a Boot Failure

If the system cannot boot due to a serious error with the system, you can recover the system using the method shown below.

This content only applies to the models provided with LG Update & Recovery.

CAUTION

All data is lost during the initialization so you must backup all critical data in advance.


For recovery, the AC adapter must be connected.

If you have deleted the recovery data in the protected area of the hard disk, the recovery function may not work.

TIP

You can create the recovery disk only on an external disk (USB memory, HDD, etc.).


- 1 Turn on the PC and press [F11] multiple times.
- 2 When the **[LG Recovery]** screen appears, check the language you want to use and select [Next].

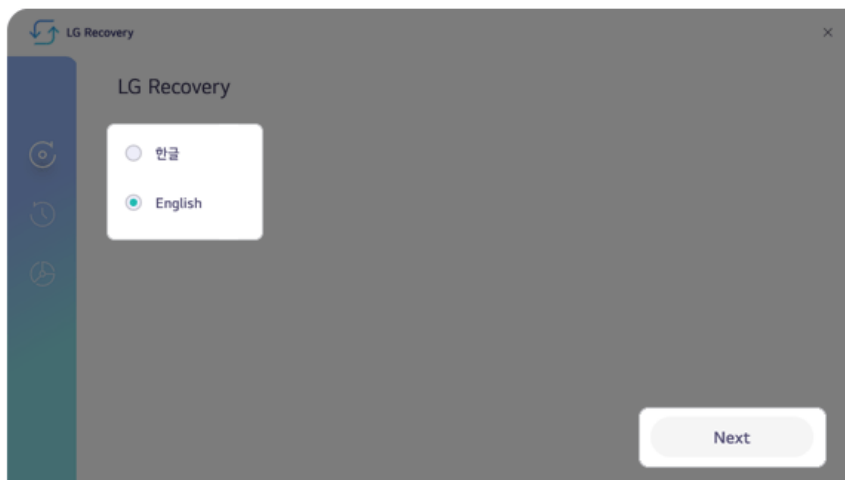

- 3 In [Recovery], select the desired recovery method to recover the system.

TIP

[My Windows Recovery] or [Disk Recovery] can be performed only when you have the backup data. If you have no backup data, you can recover it through [Factory Reset].

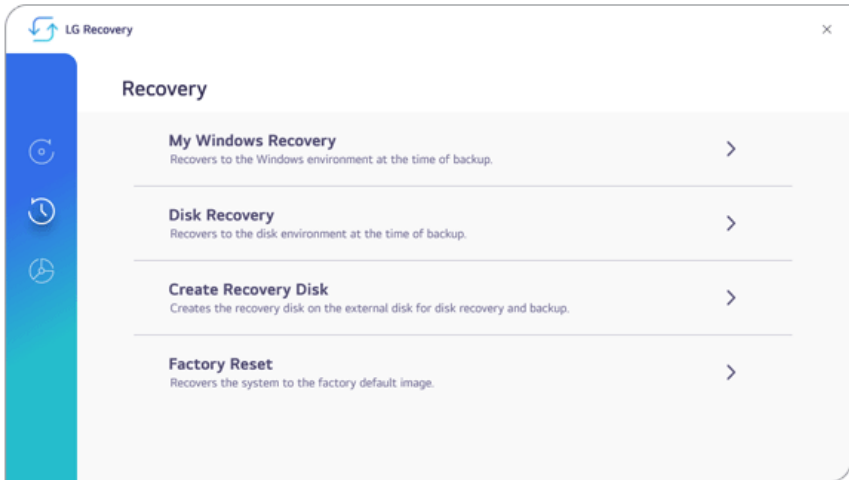


Using Recovery Disk

If you can't execute **LG Recovery**, you can recover your system with a recovery disk.

- 1 Connect the recovery disk to your PC.
- 2 Turn on the PC and press [F10] multiple times.
- 3 When the screen for selecting the boot device appears, select the connected recovery disk and press [Enter].


- 4 When the **[LG Recovery]** screen appears, check the language you want to use and select **[Next]**.

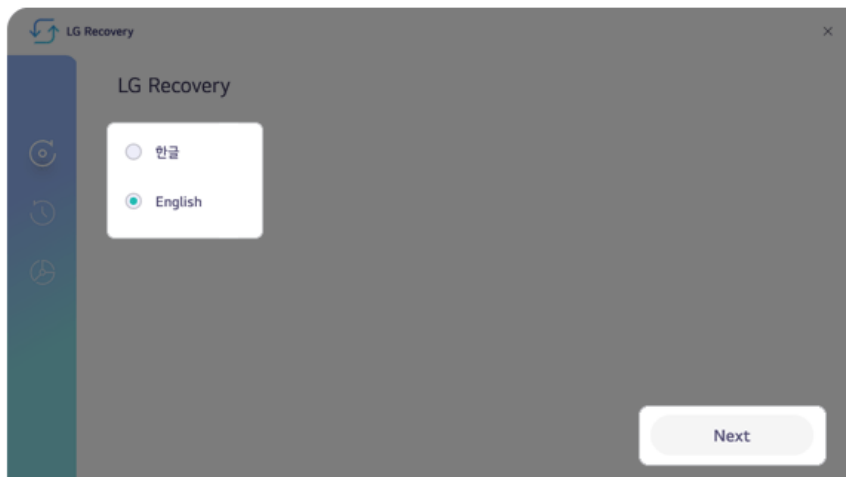

- 5 In **[Recovery]**, select the desired recovery method to recover the system.

TIP

[My Windows Recovery] or [Disk Recovery] can be performed only when you have the backup data. If you have no backup data, you can recover it through [Factory Reset].

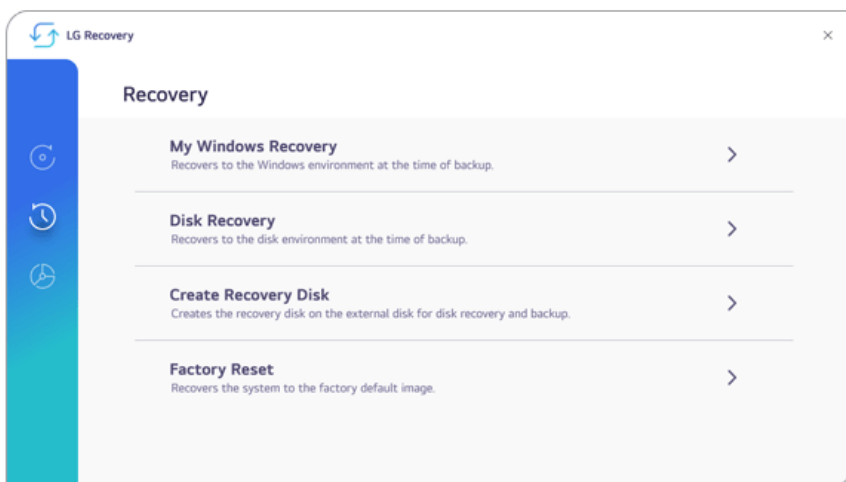


Setup and Upgrade

Installing the Driver

The figures herein may differ by language selection and are subject to change without prior notice.

Using **LG Update & Recovery** (or **LG Update**) to Install the Drivers

- 1 Select the Start button [] > [All apps] and run [**LG Update & Recovery**] or [**LG Update**].
- 2 Select [**Required Updates**] or [**Update List**] to install the driver.

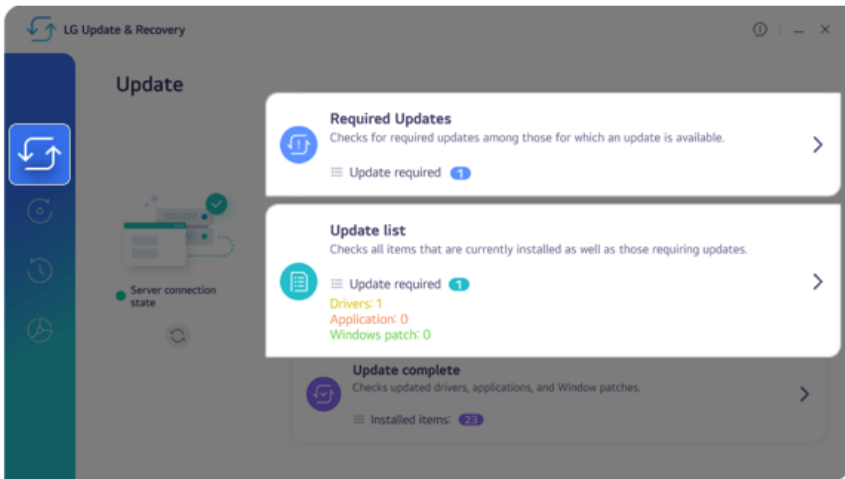

TIP

You can use **LG Update & Recovery** (or **LG Update**) to install the deleted drivers or the latest drivers easily and quickly.

Use **LG Update & Recovery** (or **LG Update**) to keep your system current and optimized.

Downloading **LG Update & Recovery** (or **LG Update**)

You can download and install **LG Update & Recovery** (or **LG Update**) from LG Electronics website (www.lg.com).

Starting System Setup

System setup means storing the hardware configuration information of the PC in the flash memory. Through system setup, the PC retrieves various information including current date and time, memory capacity, and storage device (HDD, SSD, eMMC) capacity and type.

You setup the system when you set passwords, change the boot order, and add new peripheral devices to the machine.

Items displayed on the Setup screen may differ by model type and specification.

TIP

To use the system setup (F2), booting device selection (F10), or recovery (F11), you need to restart the system (click [Restart] in the system power menu) and then immediately press the corresponding function key due to the fast booting speed.


CAUTION

- Do not change the system setup unless necessary. Incorrect system setup may cause errors during system operation. Use caution when changing the system setup.
- For performance improvement, the system setup menu configuration and the initial setup status may be changed and may become different from images included in the user manual.

- 1 Reboot the system and press [F2] multiple times.



2 In a few moments, the system setup screen appears.

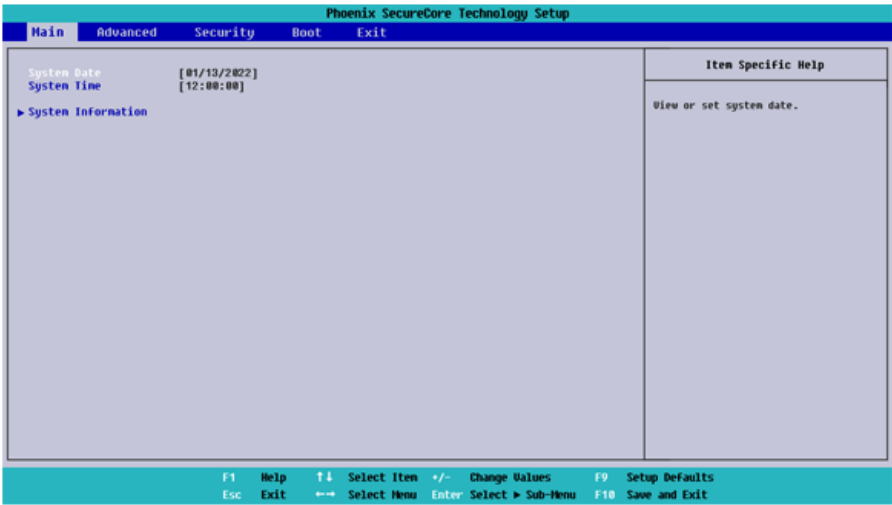

Keys Used in System Setup

Keys	Function
Enter	Selects the current item.
Esc	To deselect the current item or to move to the previous screen.
▲, ▼, ◀, ▶ (Arrow keys)	Moves the cursor up, down, left, and right.
+, −	Increases or decreases the item value.
F10	Saves the new settings or exits the system setup.

Setting the Boot Password

This process is to set a password so that other people cannot use the computer or change the settings.

The user can set a password while booting the system or setting up the system.

The model in the example can differ from actual models and is subject to change for performance improvements, without prior notice.

CAUTION

Without the registered password, access to the system will be denied. Write down and keep the password in a safe place.

Set Supervisor Password

The password prevents unauthorized people from accessing the PC. By default, no password is set for the machine. If an unauthorized person changes the password in the System Setup, you will be unable to access the system.

TIP

With **[Set Supervisor Password]**, you are authorized to set all items in the System Setup and to set **[Password on boot]**. In case other people also use the computer, it is recommended to set the **[Set User Password]**.

- 1 Reboot the system and press [F2] multiple times.



- 2 When the System Setup screen appears, go to **[Security]** > **[Set Supervisor Password]** using the arrow keys and press the [Enter] key.



- 3 When the Password Setting screen appears, enter a password and press the [Enter] key. The password should not exceed 12 characters and should consist of English letters (A - Z), numbers (0 - 9), and special characters or a combination of them.



- 4 When a pop-up window appears, press the [Enter] key.



- 5 To save the changes in system setup, press [F10]. When a pop-up window appears, select **[Yes]** and press the [Enter] key.



- 6 The PC will restart.

Set User Password

The password set in **[Set User Password]** is of a lower level than the one set in **[Set Supervisor Password]**, so you can set a user password only after setting a password in **[Set Supervisor Password]**.

TIP

[Set User Password] allows limited access to the items in the System Setup screen compared to the **[Set Supervisor Password]** items.

- 1 Execute the System Setup screen, go to **[Security]** > **[Set User Password]** using the arrow keys and press the **[Enter]** key.




- 2 When the Password Setting screen appears, enter a password and press the **[Enter]** key. The password should not exceed 12 characters and should consist of English letters (A - Z), numbers (0 - 9), and special characters or a combination of them.



- 3 When a pop-up window appears, press the **[Enter]** key.



- 4 To save the changes in system setup, press [F10]. When a pop-up window appears, select [Yes] and press the [Enter] key.

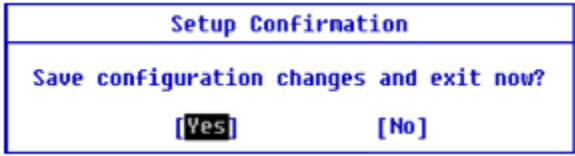


- 5 The PC will restart.

Password on boot

[Password on boot] protects your system by requiring during booting to enter the password set in [Set Supervisor Password] or [Set User Password].

To set [Password on boot], you first need to set [Set Supervisor Password] or set both [Set Supervisor Password] and [Set User Password].

- 1 Execute the System Setup screen, go to [Security] > [Password on boot] using the arrow keys and press the [Enter] key.

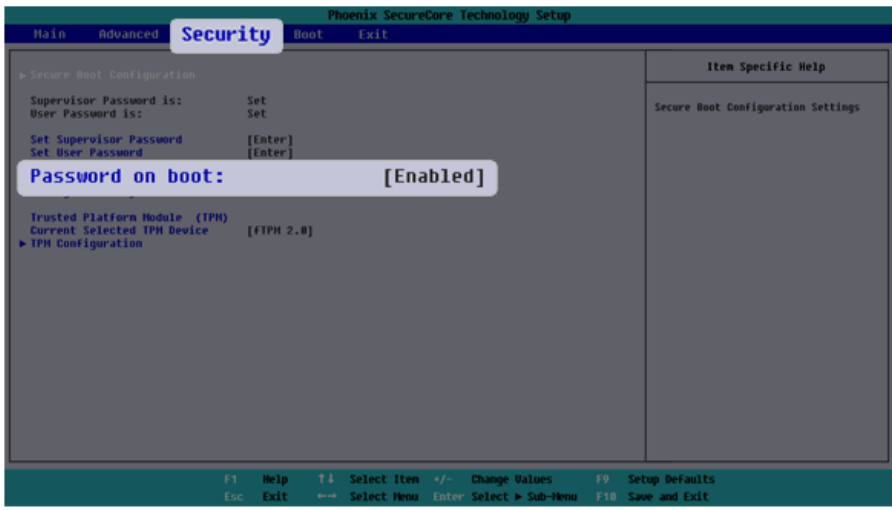

- 2 Select [Enabled] and press the [Enter] key to complete the [Password on boot] setting.

Storage Security Features

The password for **[Storage Security Features]** is to set the password directly on the storage device separately from **[Set Supervisor Password]**.

TIP

- Some models with built-in NVMe™ may not support the password setting function.
- For the models equipped with two storage devices, you can set a password for each device. If passwords are set for both devices, the password input window appears twice during the booting process. The order in which the password input windows appears is according to the **[Boot Priority Order]** of the **[Boot]** menu.

CAUTION

If you lose the password for a storage device, you cannot recover the storage device.

- Please note that replacement of a storage device due to the loss of the password of the storage device is excluded from the product warranty.


- 1 Execute the System Setup screen, go to **[Security]** > **[Storage Security Features]** using the arrow keys and press the **[Enter]** key.




- 2 Go to the desired device and press the [Enter] key.




- 3 Press the [Enter] key in **[Set Password]**.
- 4 When the Password Setting screen appears, enter a password and press the [Enter] key. The password should not exceed 12 characters and should consist of English letters (A - Z), numbers (0 - 9), and special characters or a combination of them.

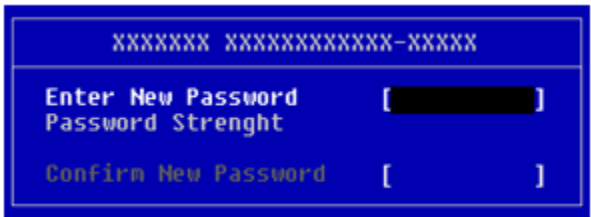

- 5 When a pop-up window appears, press the [Enter] key.

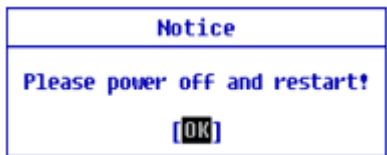

- 6 To save the changes in system setup, press [F10]. When a pop-up window appears, select **[Yes]** and press the [Enter] key.

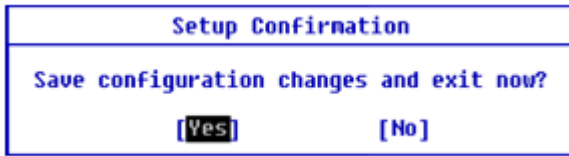

- 7 The PC will restart.

Deleting/Changing the Boot Password

You can delete or change the password only after entering the current password.

The model in the example can differ from actual models and is subject to change for performance improvements, without prior notice.

Changing the Boot Password

- 1 Execute the System Setup screen, enter the password, and press the [Enter] key.



- 2 Change the password in the same way as setting one.

Deleting the Boot Password


- 1 Execute the System Setup screen, enter the password, and press the [Enter] key.



- 2 When the System Setup screen appears, go to **[Security]** > **[Set Supervisor Password]** using the arrow keys and press the **[Enter]** key.



- 3 When the Password Setting screen appears, enter the current password in the **[Enter Current Password]** field.

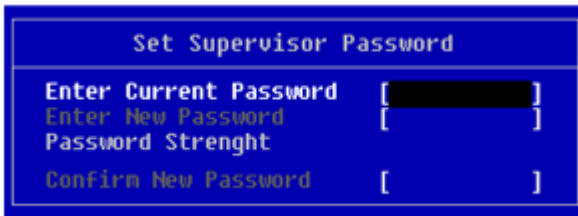

- 4 Press the [Enter] key in **[Enter New Password]** and again in **[Confirm New Password]**.




The image shows a blue screen with white text titled "Set Supervisor Password". It contains four input fields: "Enter Current Password" with "****" inside, "Enter New Password" with a blacked-out field, "Password Strenght" (misspelled) with a blacked-out field, and "Confirm New Password" with a blacked-out field.

- 5 When a pop-up window appears, press the [Enter] key.



The image shows a white pop-up window with a blue border. The title bar says "Notice". The main text says "Changes have been saved." and there is an "OK" button at the bottom.

- 6 To save the changes in system setup, press [F10]. When a pop-up window appears, select **[Yes]** and press the [Enter] key.

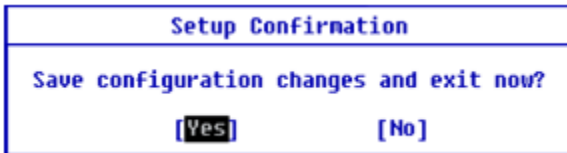


The image shows a white pop-up window with a blue border. The title bar says "Setup Confirmation". The main text says "Save configuration changes and exit now?". There are two buttons at the bottom: "Yes" and "No".

- 7 The PC will restart.

Deleting the Boot Password (Storage Security Features)

 - 1 Execute the System Setup screen, enter the password, and press the [Enter] key.




The image shows a blue screen with white text. At the top, there is a line of text: "XXXXXXXX XXXXXXXXXXXXX-XXXXX". Below it, there is a label "Enter Password" followed by a blacked-out input field.

- 2 When the System Setup screen appears, go to **[Security]** > **[Storage Security Features]** using the arrow keys and press the [Enter] key.




- 3 Go to the desired device and press the [Enter] key.

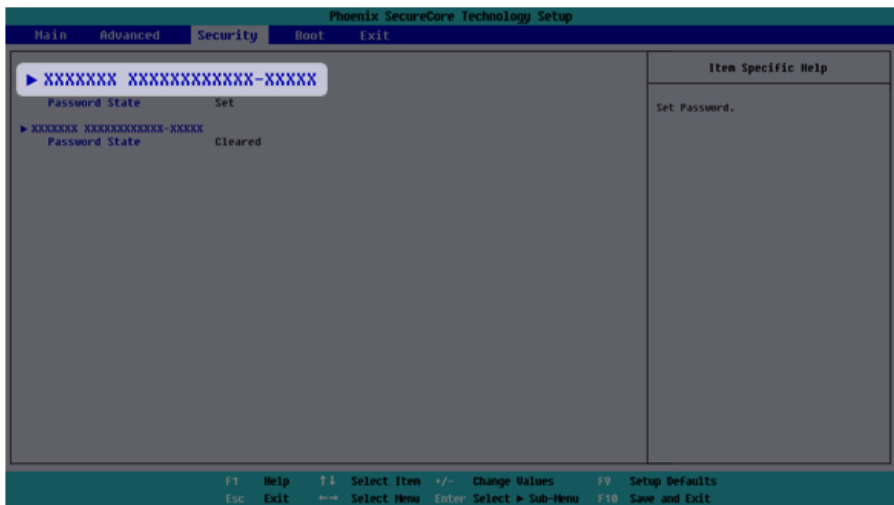

- 4 Press the [Enter] key in **[Set Password]**.

- 5 When the Password change screen appears, enter the current password in the **[Enter Current Password]** field.

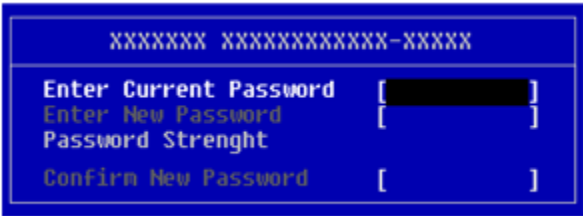


- 6 Press the **[Enter]** key in **[Enter New Password]** and again in **[Confirm New Password]**.



- 7 When a pop-up window appears, press the **[Enter]** key.



- 8 To save the changes in system setup, press **[F10]**. When a pop-up window appears, select **[Yes]** and press the **[Enter]** key.

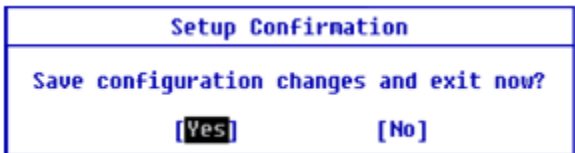

- 9 The PC will restart.

Initializing System Setup


If you have changed the system setup by mistake, you can restore the default settings.

The model in the example can differ from actual models and is subject to change for performance improvements, without prior notice.


- 1 Execute the System Setup screen, go to **[Exit]** > **[Load Setup Defaults]** using the arrow keys and press the **[Enter]** key.

TIP


You can press the **[F9]** key to use the **[Load Setup Defaults]** item.

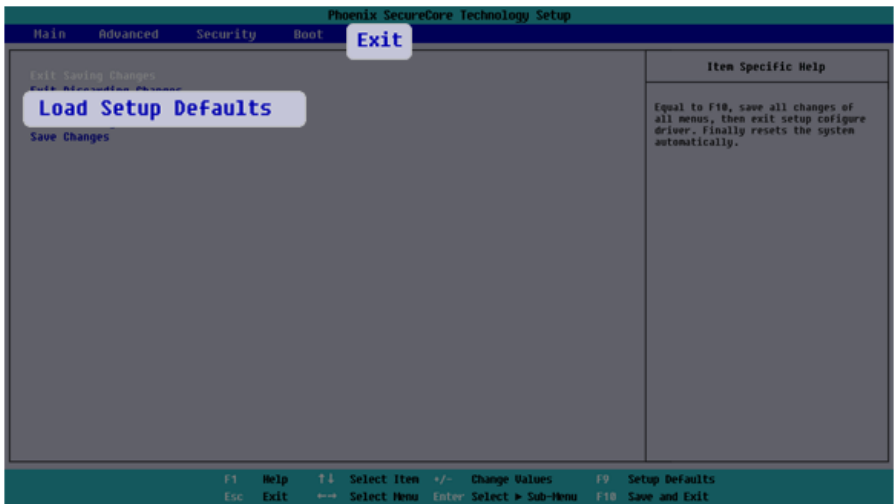

- 2 When a pop-up window appears, select **[Yes]** and press the **[Enter]** key. The settings will be reset to the factory default.

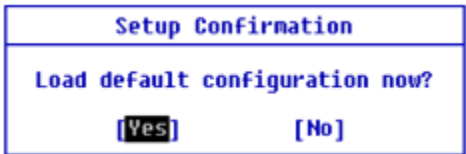

- 3 To save the changes in system setup, press [F10]. When a pop-up window appears, select **[Yes]** and press the [Enter] key.

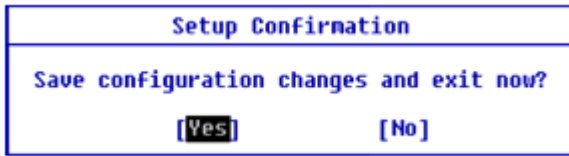

- 4 The PC will restart.

Changing the Boot Order

The user can change the boot order according to his or her needs, or select a boot device

The model in the example can differ from actual models and is subject to change for performance improvements, without prior notice.

TIP

To use the system setup (F2), booting device selection (F10), or recovery (F11), you need to restart the system (click **[Restart]** in the system power menu) and then immediately press the corresponding function key due to the fast booting speed.


Changing the Boot Order

- 1 Reboot the system and press [F2] multiple times.




- 2 Go to the **[Boot]** menu using the arrow keys when the system setup screen appears.

- 3 Go to **[Boot Priority Order]** and press **[F5]** or **[F6]** to change the booting order.

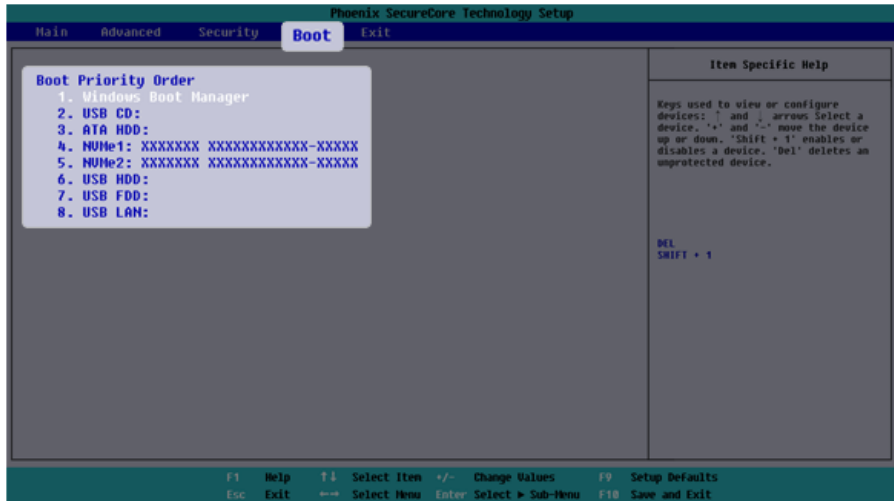

- 4 To save the changes in system setup, press **[F10]**. When a pop-up window appears, select **[Yes]** and press the **[Enter]** key.

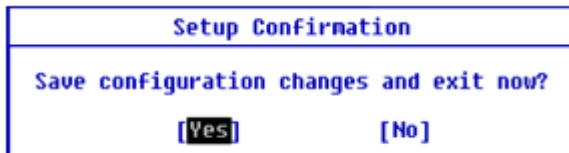


- 5 The PC will restart.

Selecting a Booting Device to Use

- 1 Reboot the system and press [F10] multiple times.



- 2 When the Select Boot Device screen appears, go to the desired device using the arrow keys and press the [Enter] key.

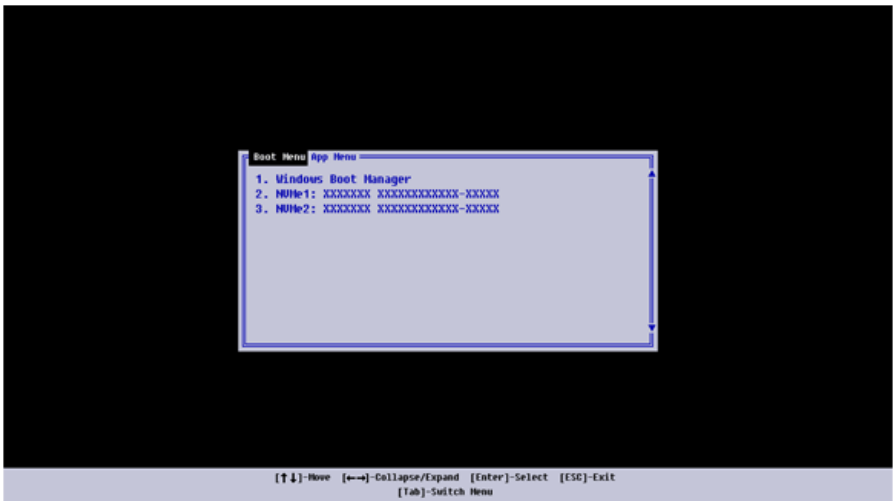

- 3 Boots using the selected device.

Setting Auto Scaling


The Windows **Auto Scaling** feature for user's convenience may partially blur the screen or display some icons and texts larger.

Refer to the following information to change the DPI scaling to suit your needs.

- 1 Select the Start button [] > [Settings].


TIP

Press the [] key or [Ctrl] + [Esc] on the keyboard to display the Start screen.

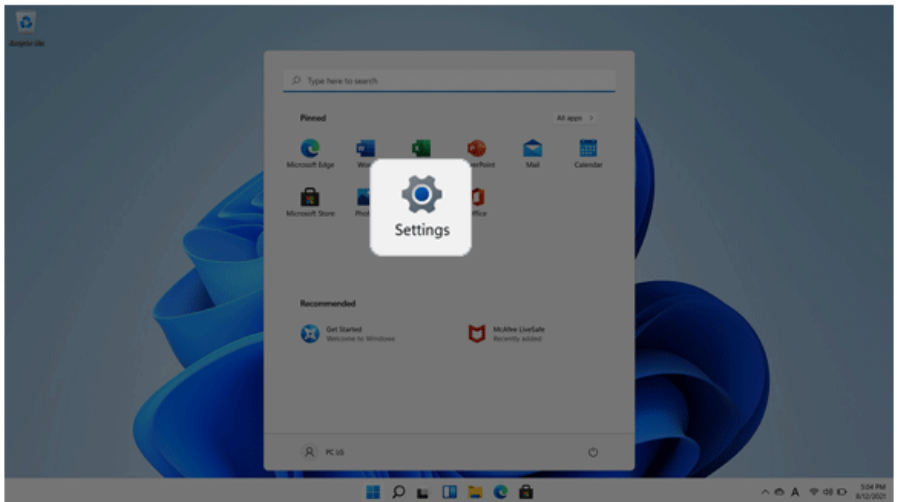

- 2 Select [System] > [Display].

3 Changing the [Scale] item value changes the auto scaling settings.

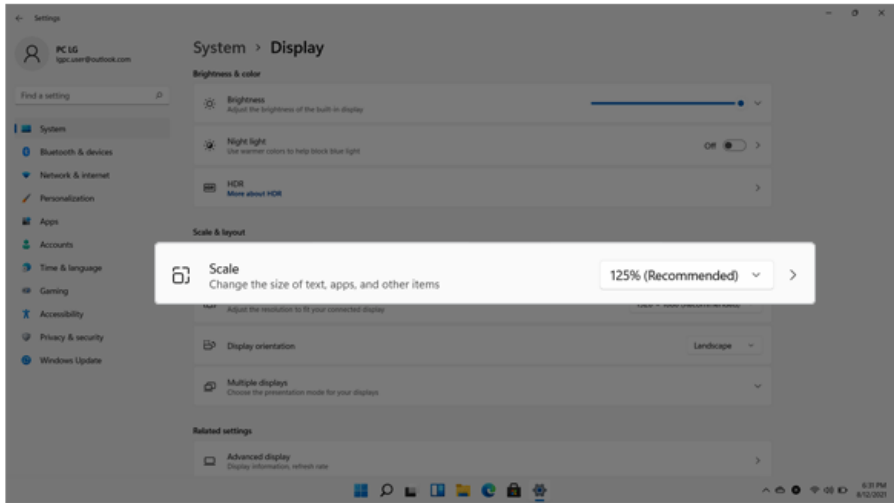


TIP

After changing the Auto Scaling settings, some apps must be shut down and restarted for the scaling and layout to take effect.

Using Instant Booting

Instant Booting allows the system to boot automatically when the notebook PC cover is opened, so that you can use the system without pressing the power button.

- 1 Select the Start button [] > [All apps] and run [LG Smart Assistant].
- 2 Turn on [Instant Booting].

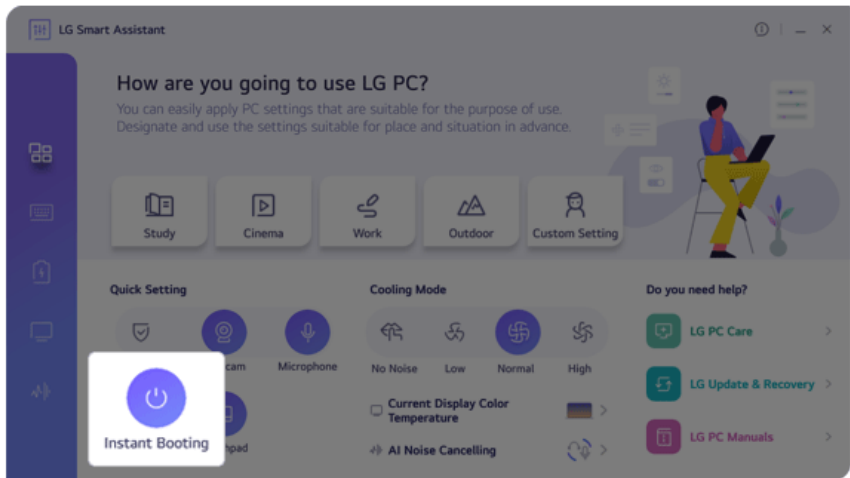

- 3 Shutdown the system and close the notebook PC cover.
- 4 When the cover is opened, the notebook PC turns on and the system starts to boot automatically.