




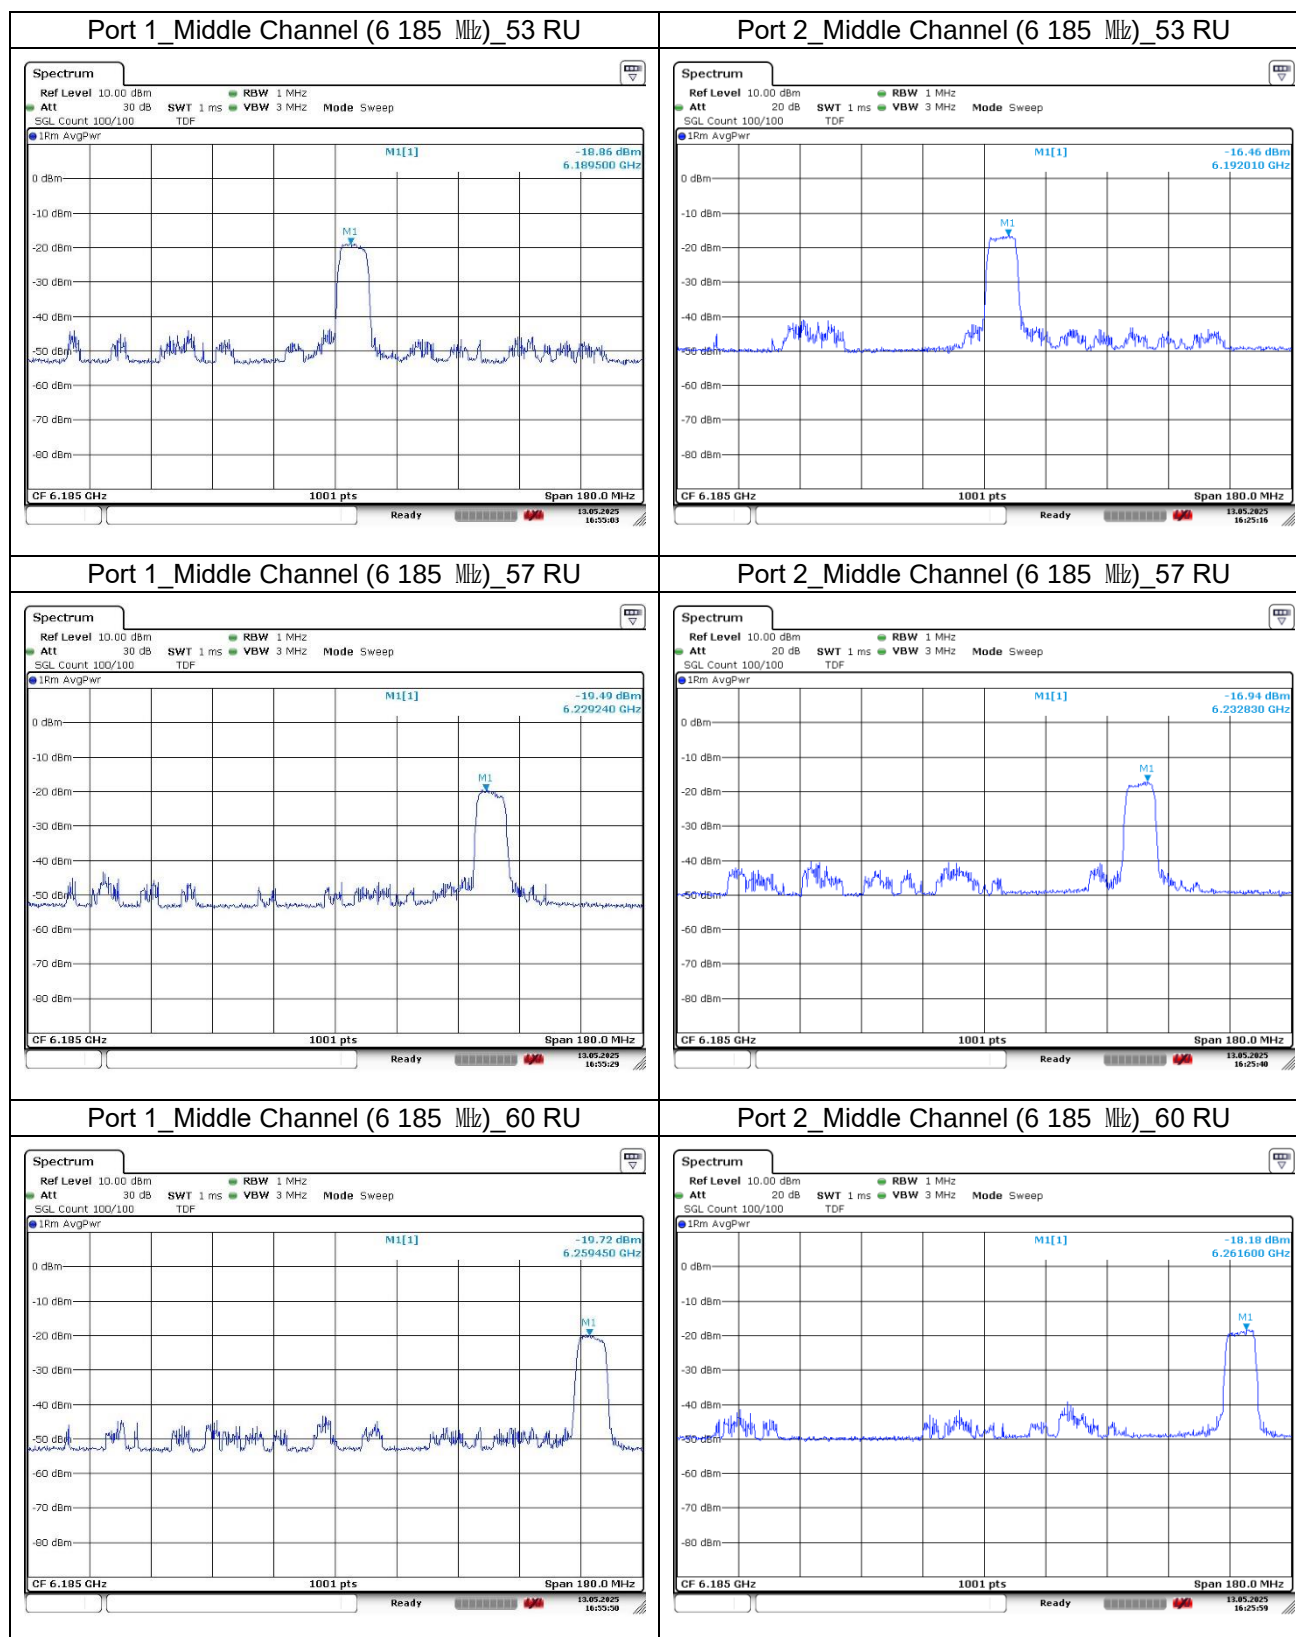


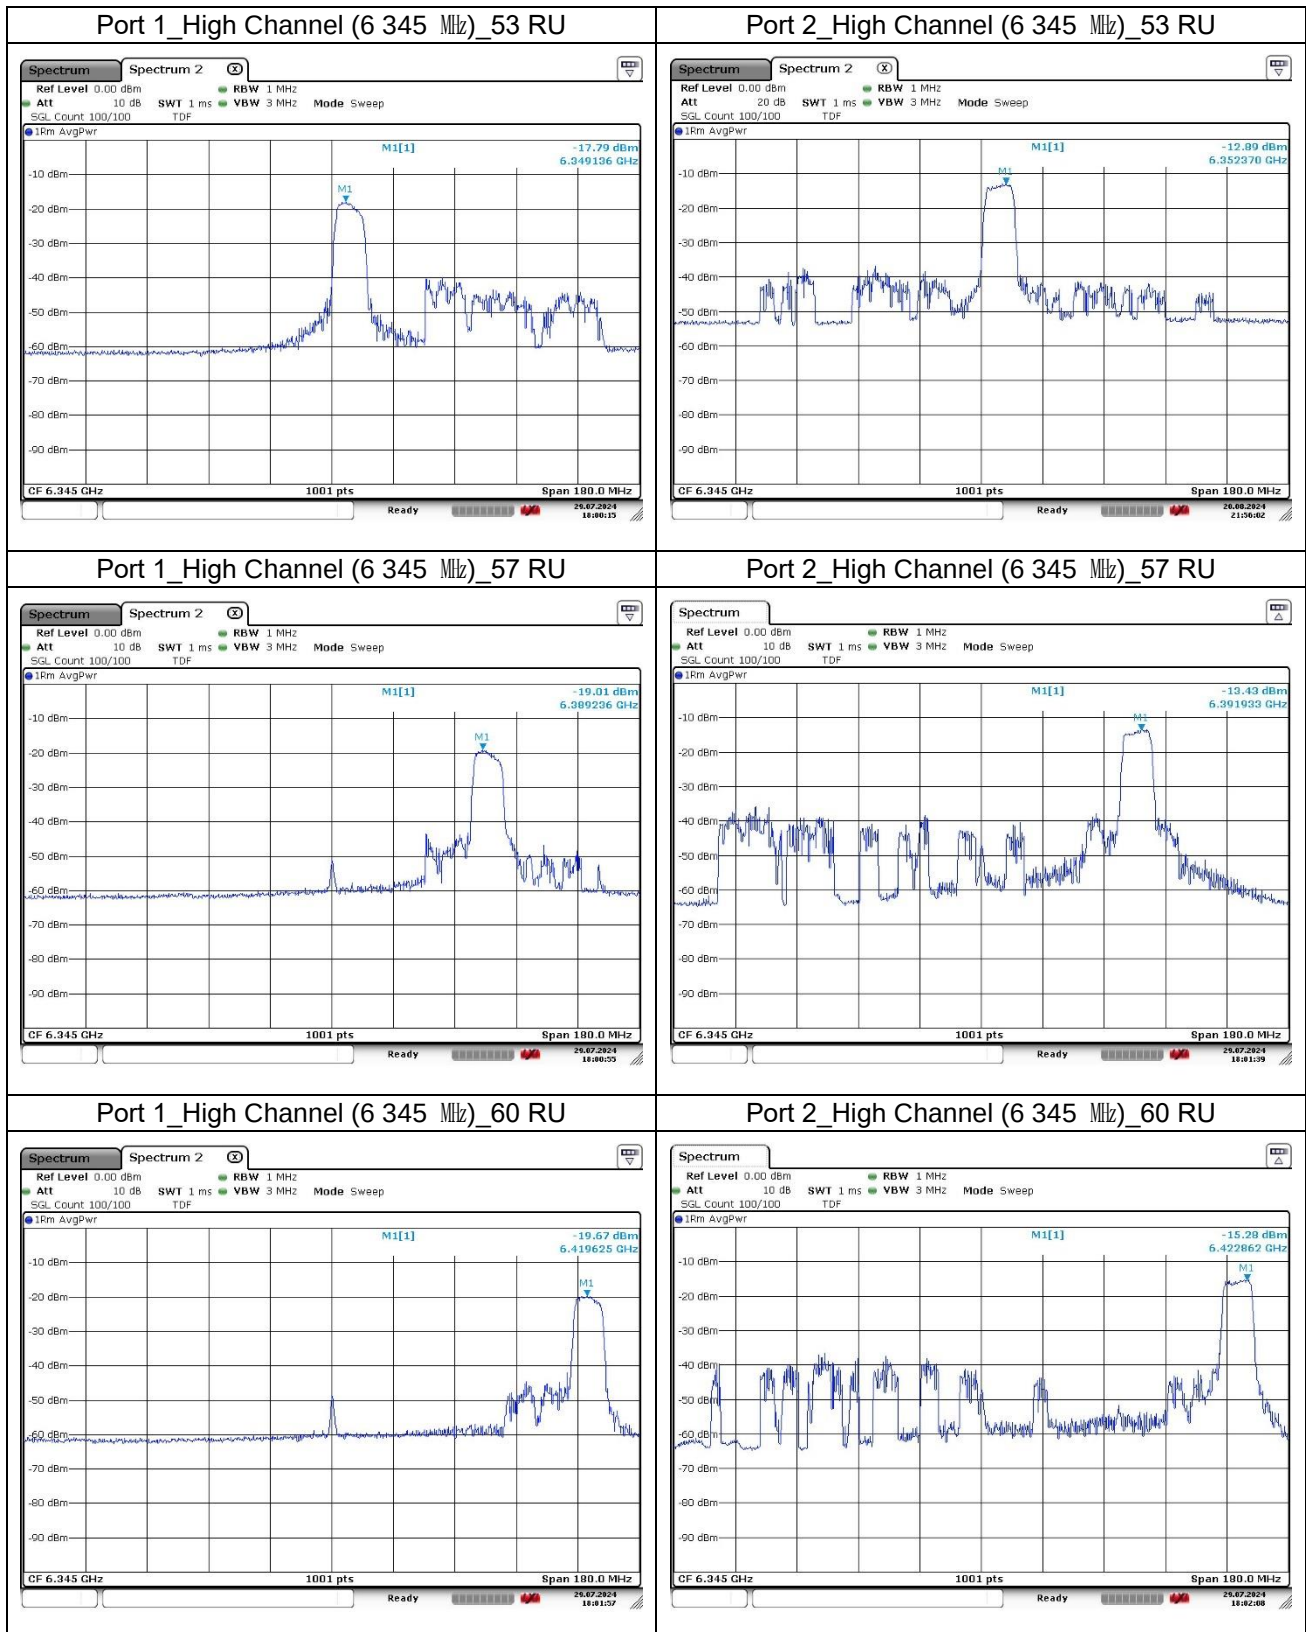


11ax_HE80U_106T (Band 7)

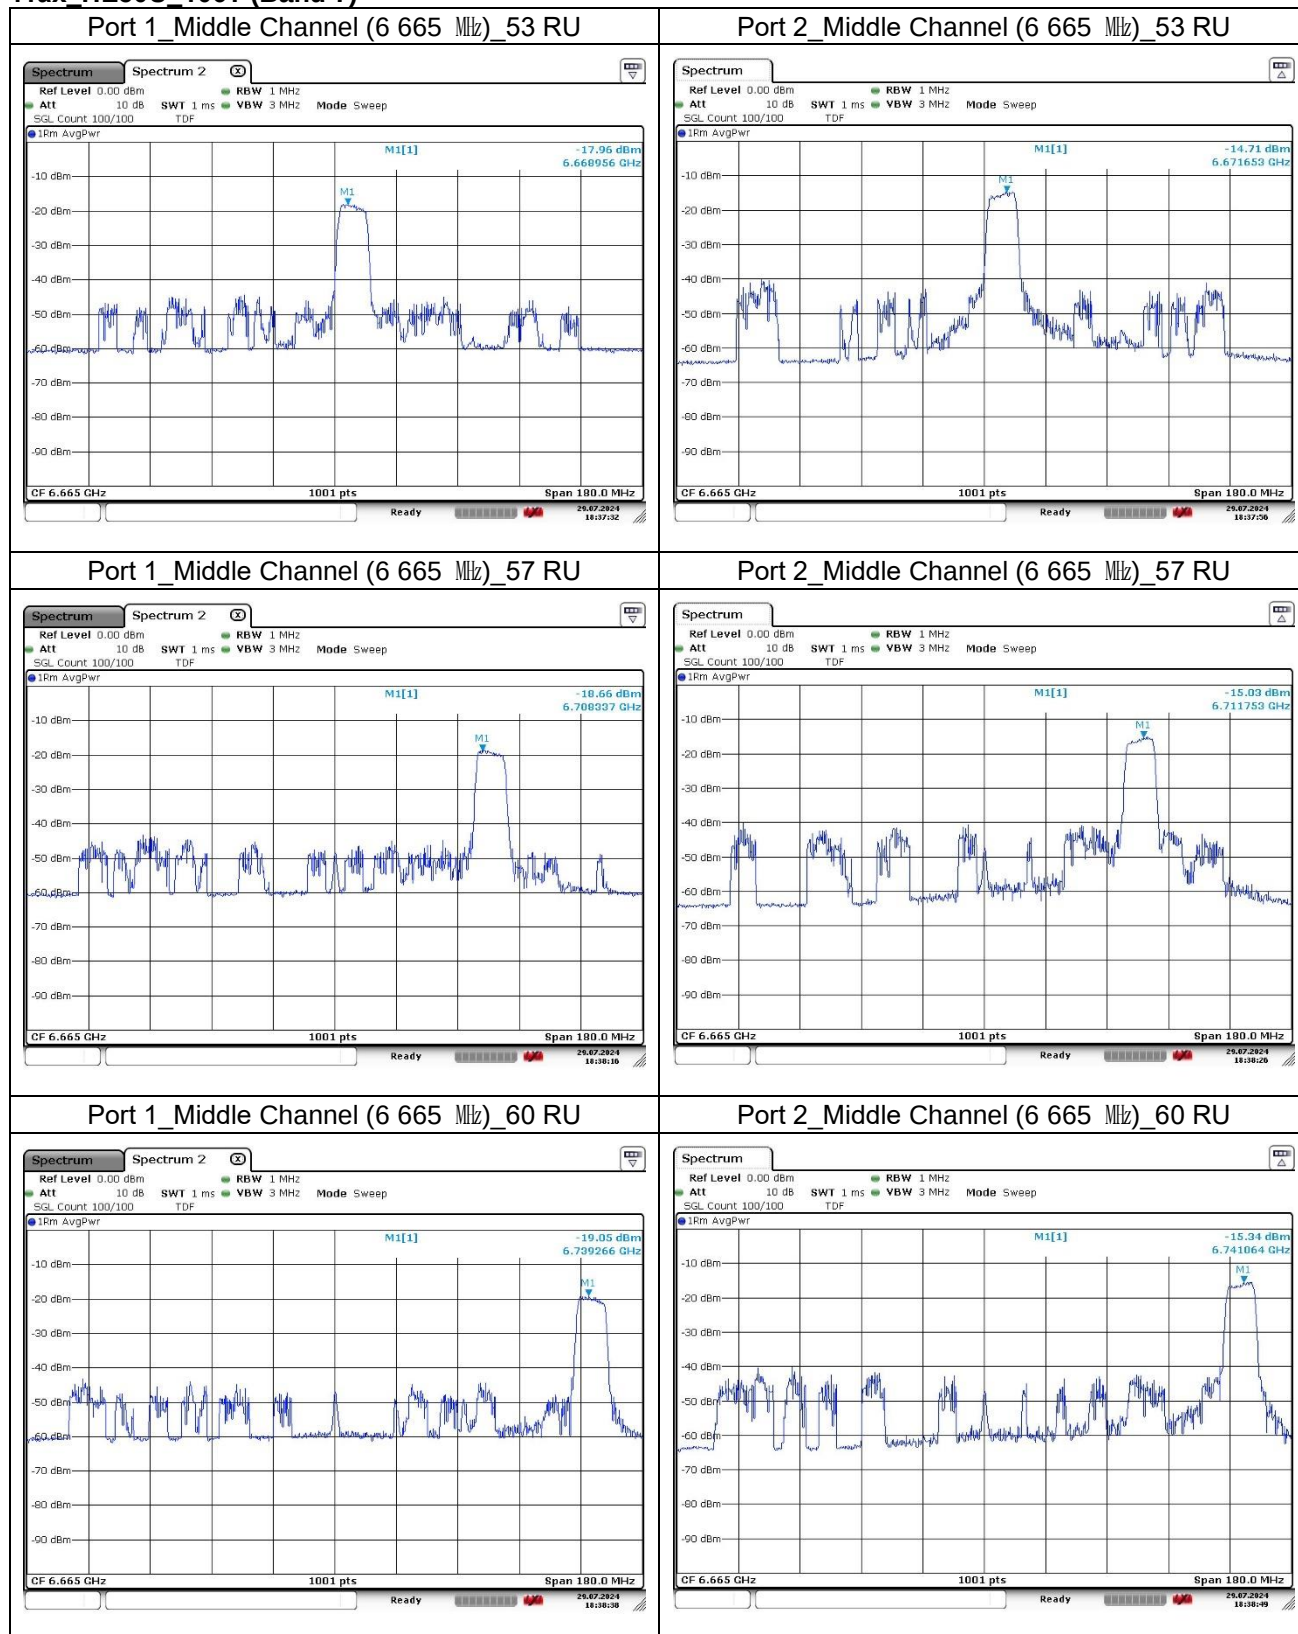



11ax_HE80U_106T (Band 8)

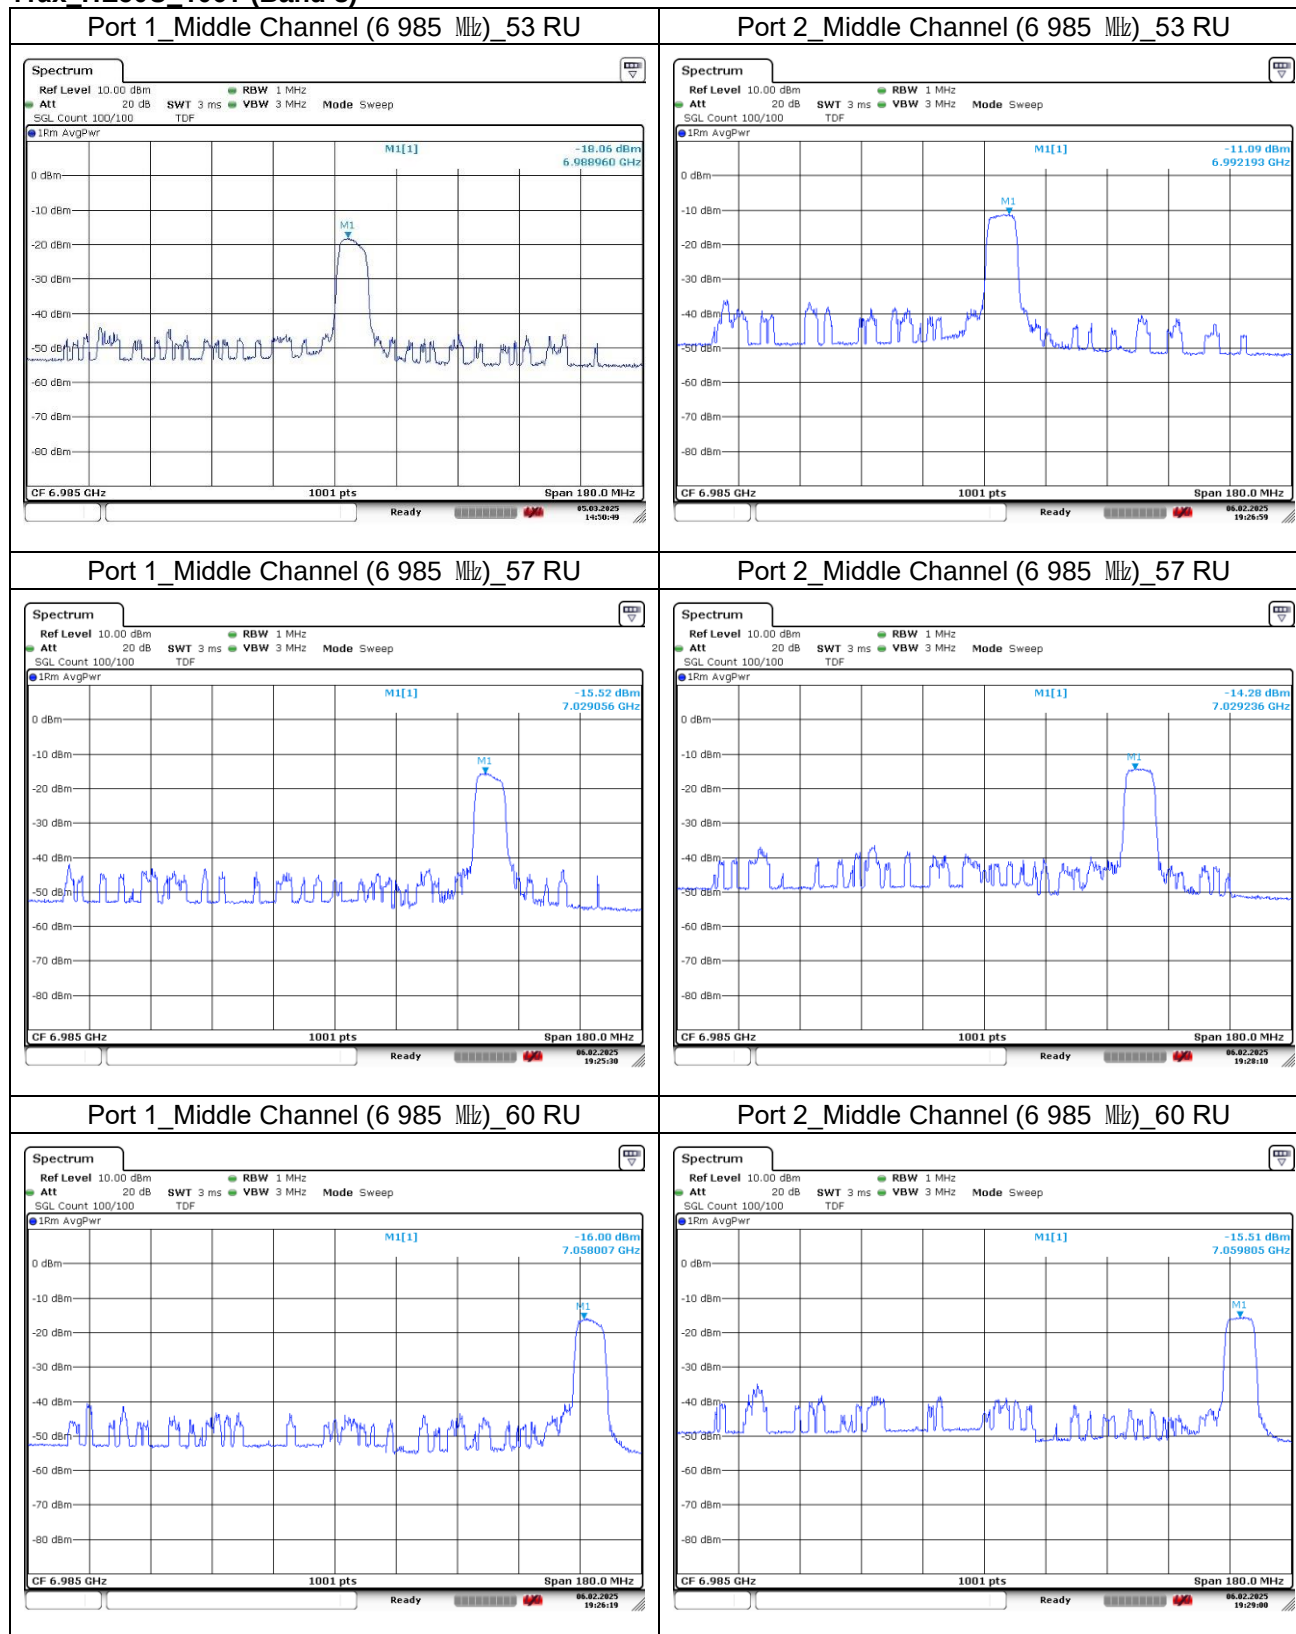


11ax_HE80U_242T (Band 5)

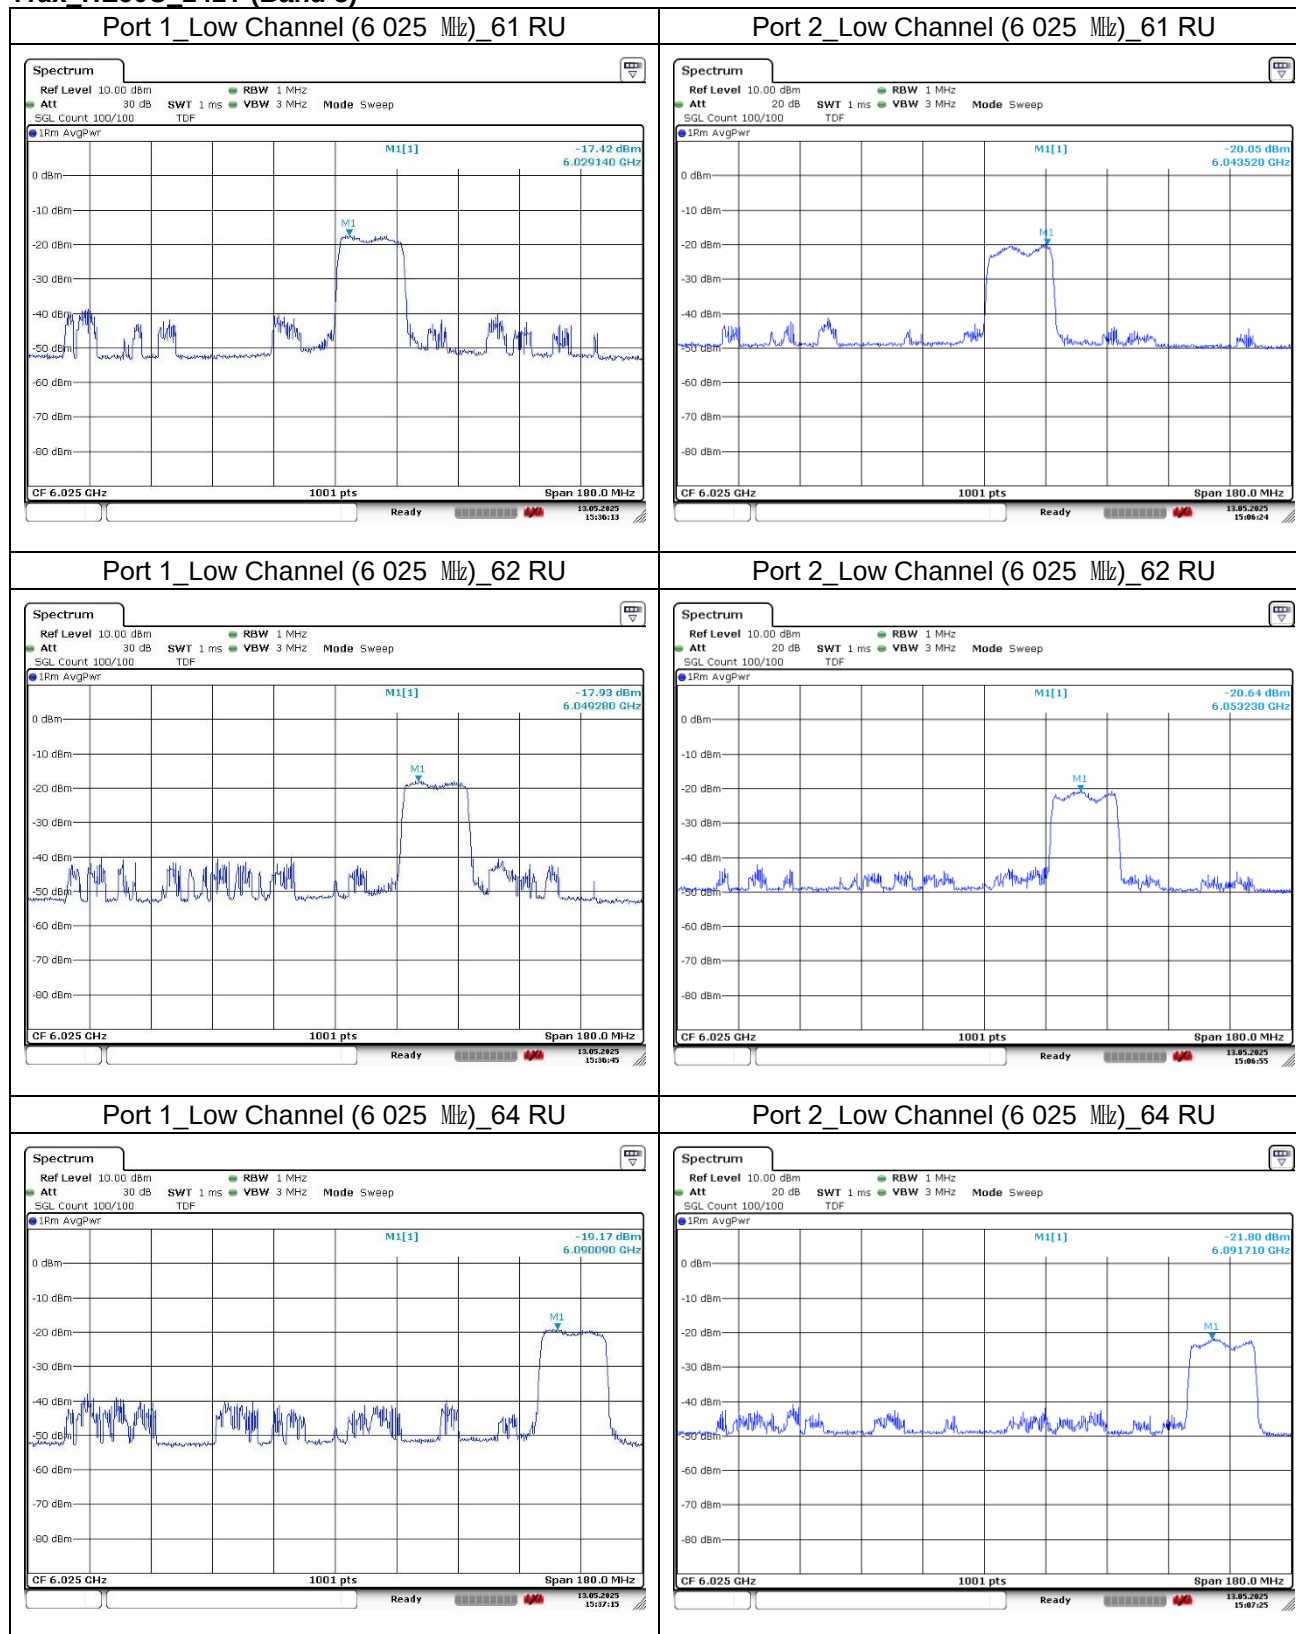

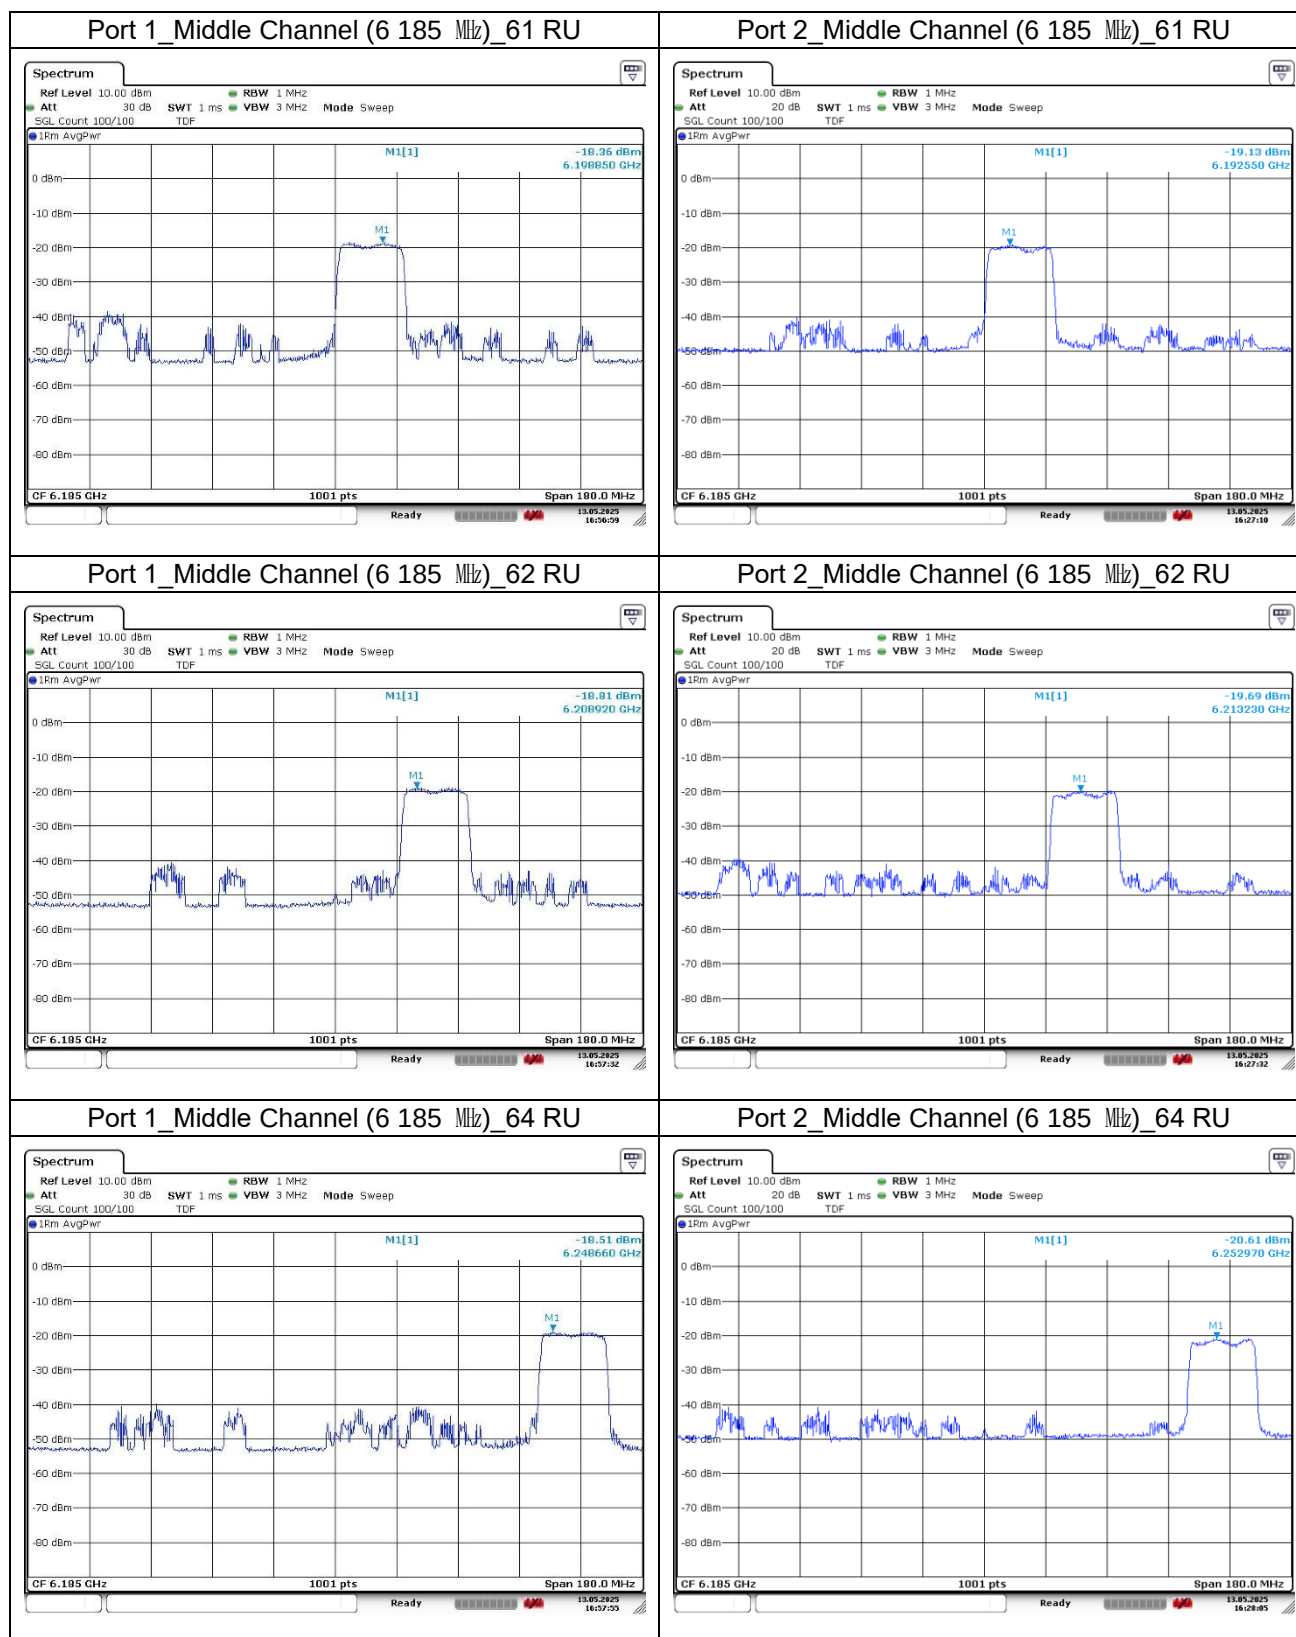


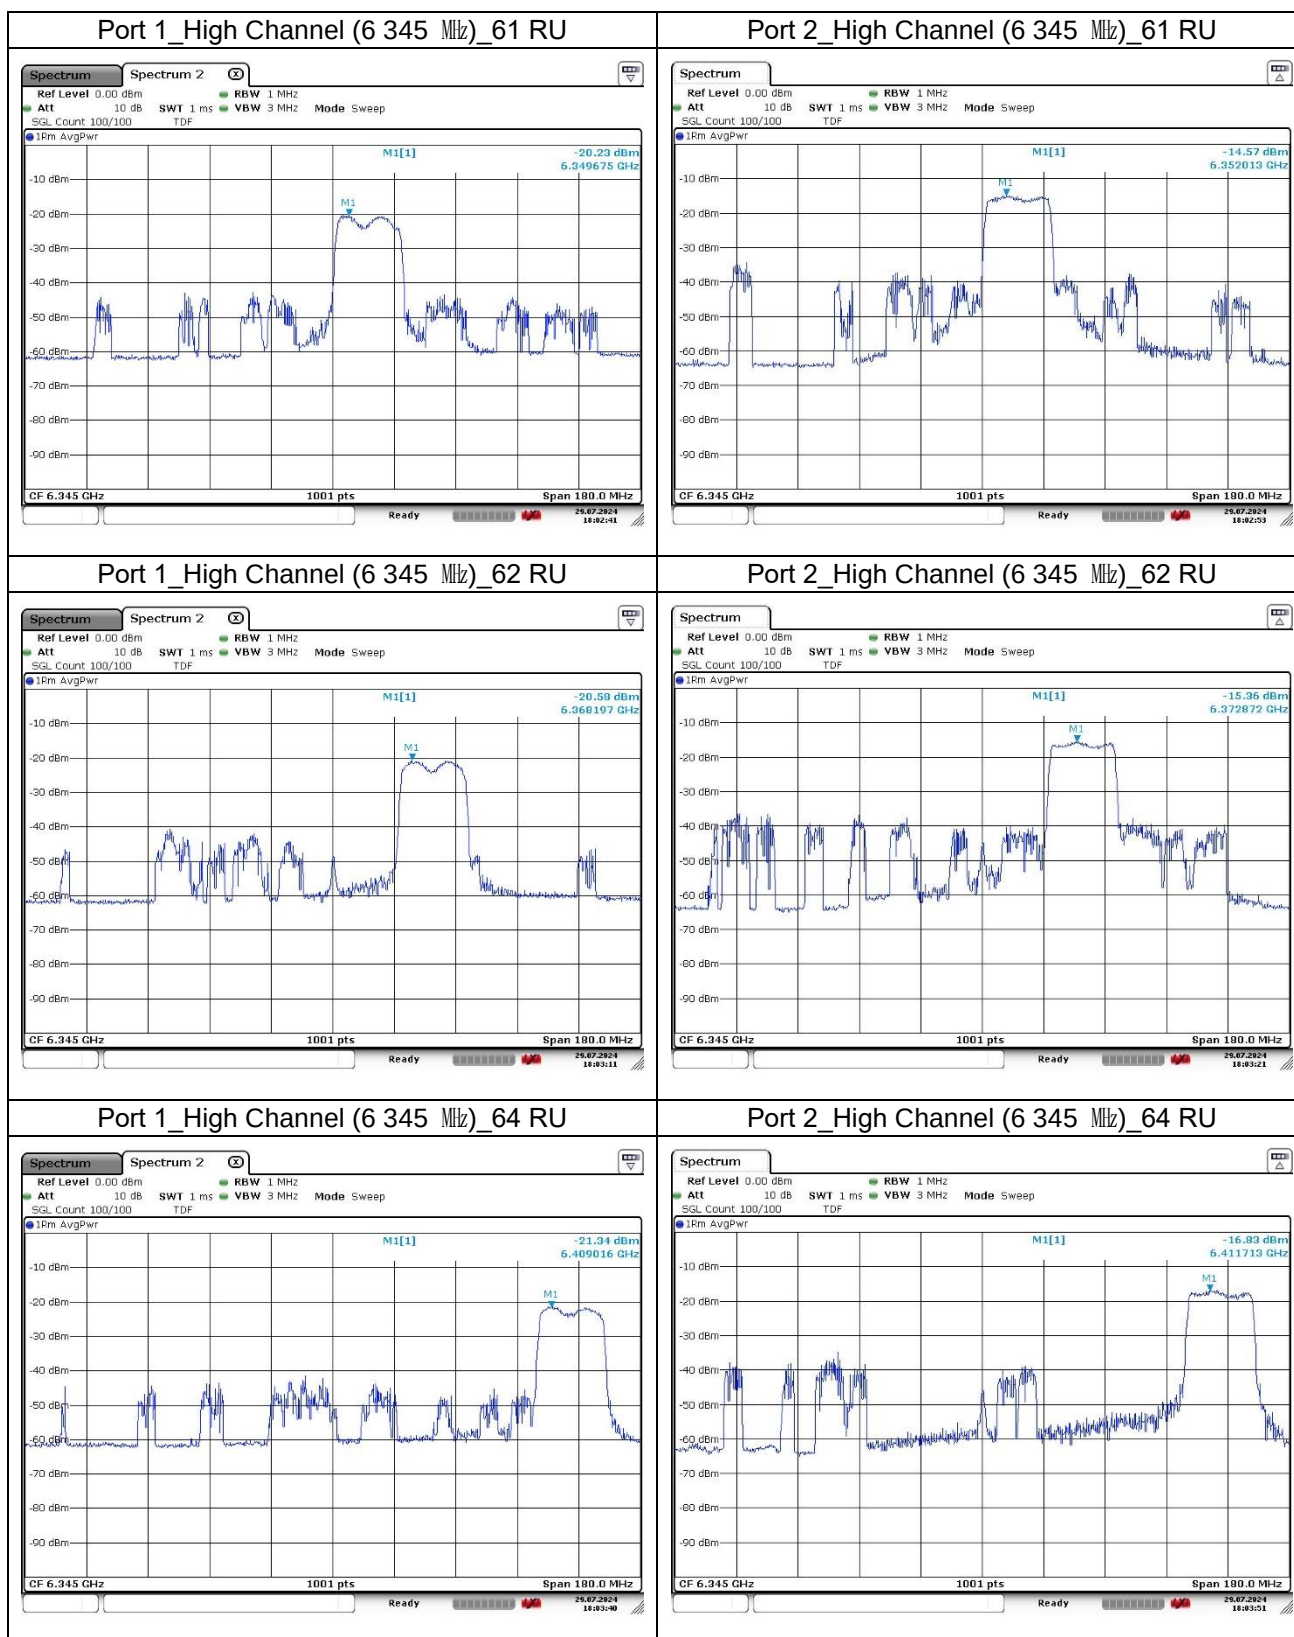


11ax_HE80U_242T (Band 7)

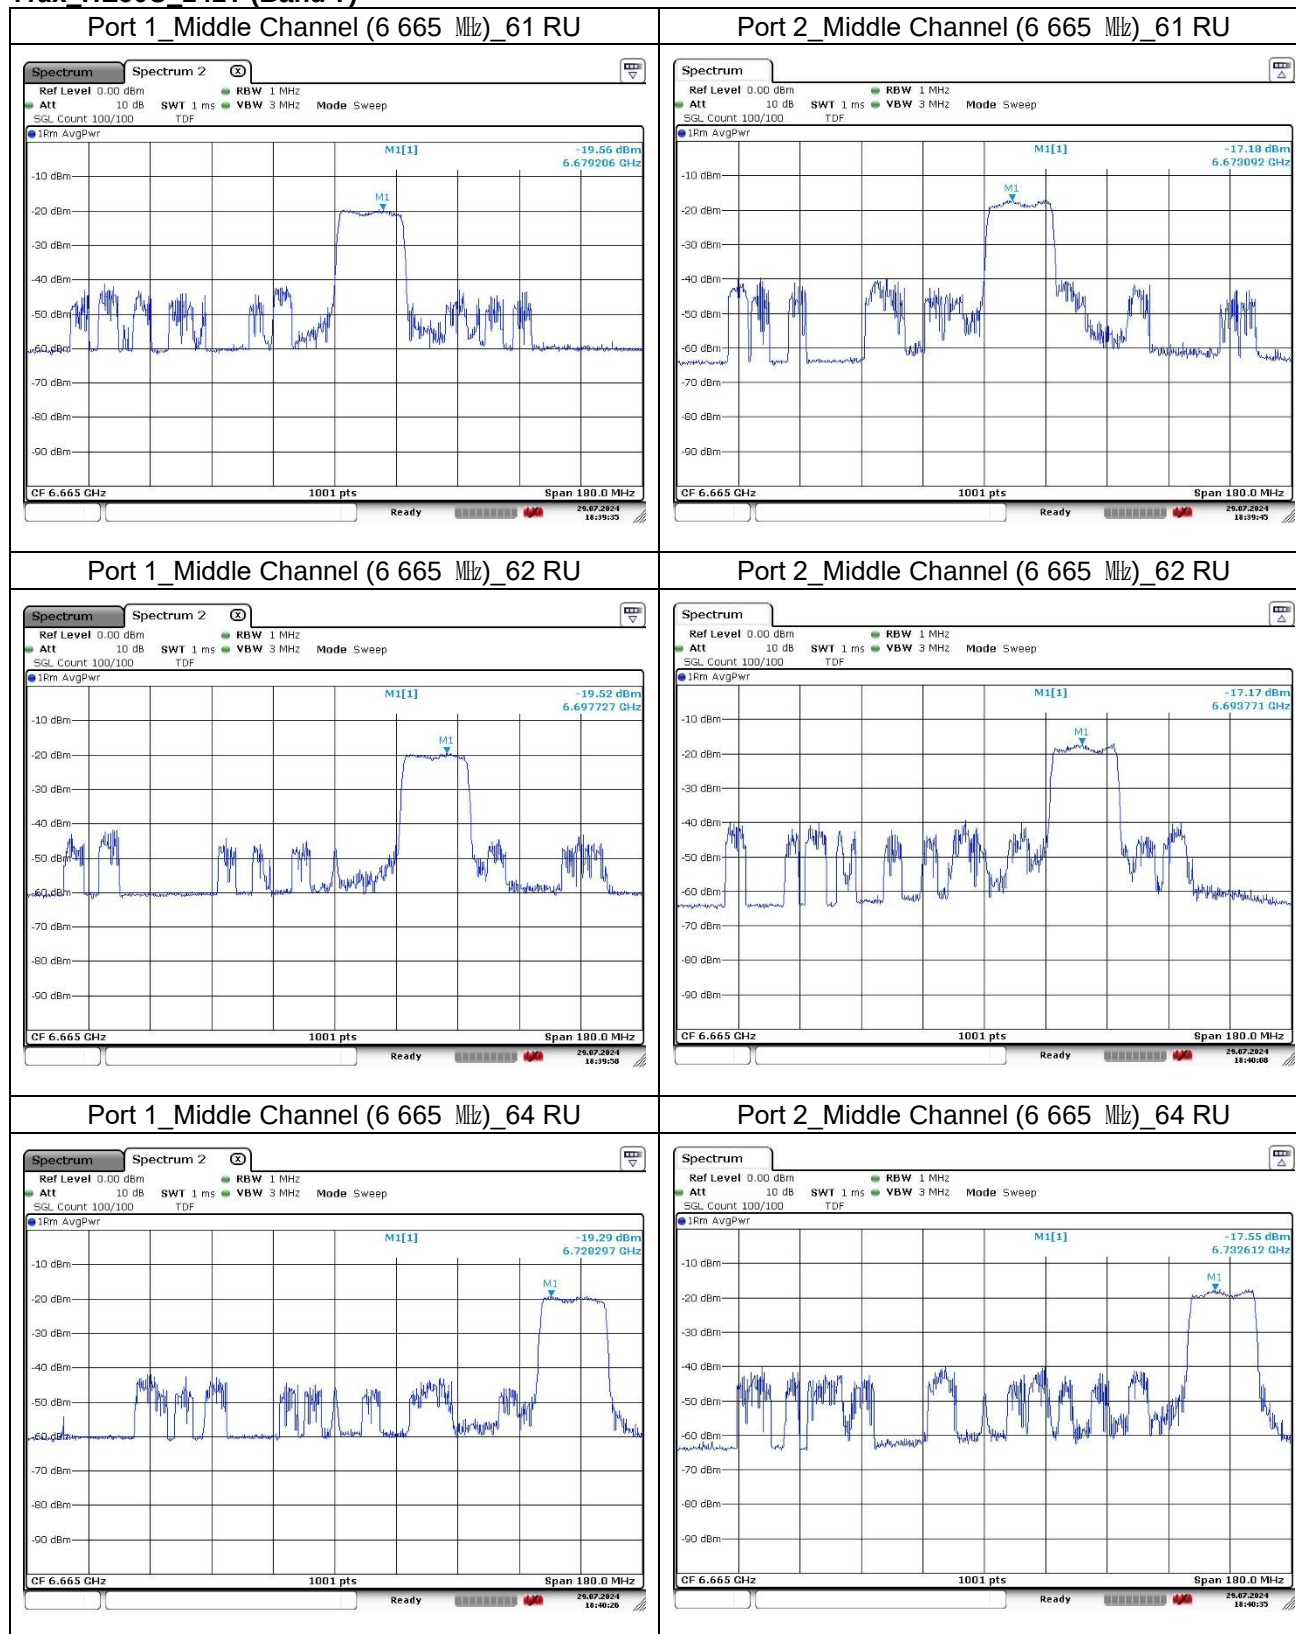



11ax_HE80U_242T (Band 8)

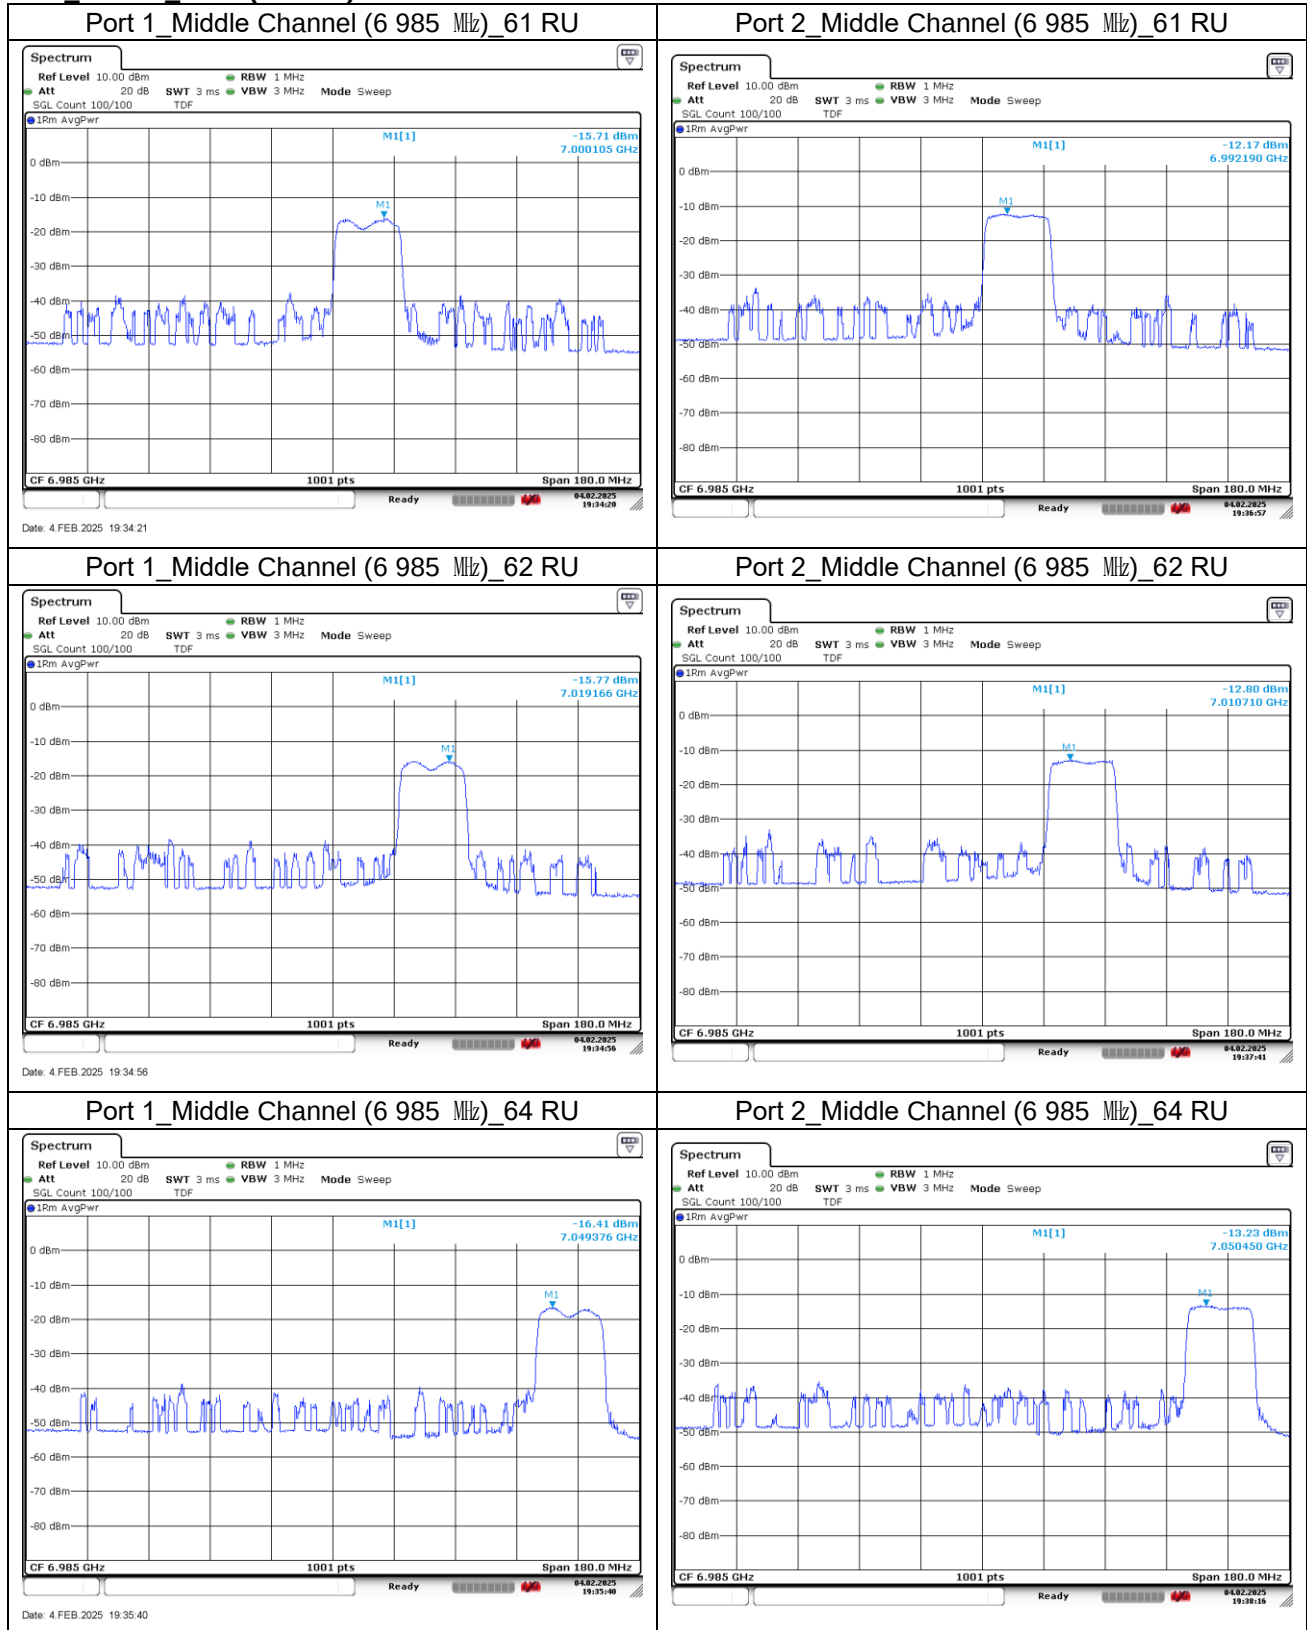


11ax_HE80U_484T (Band 5)

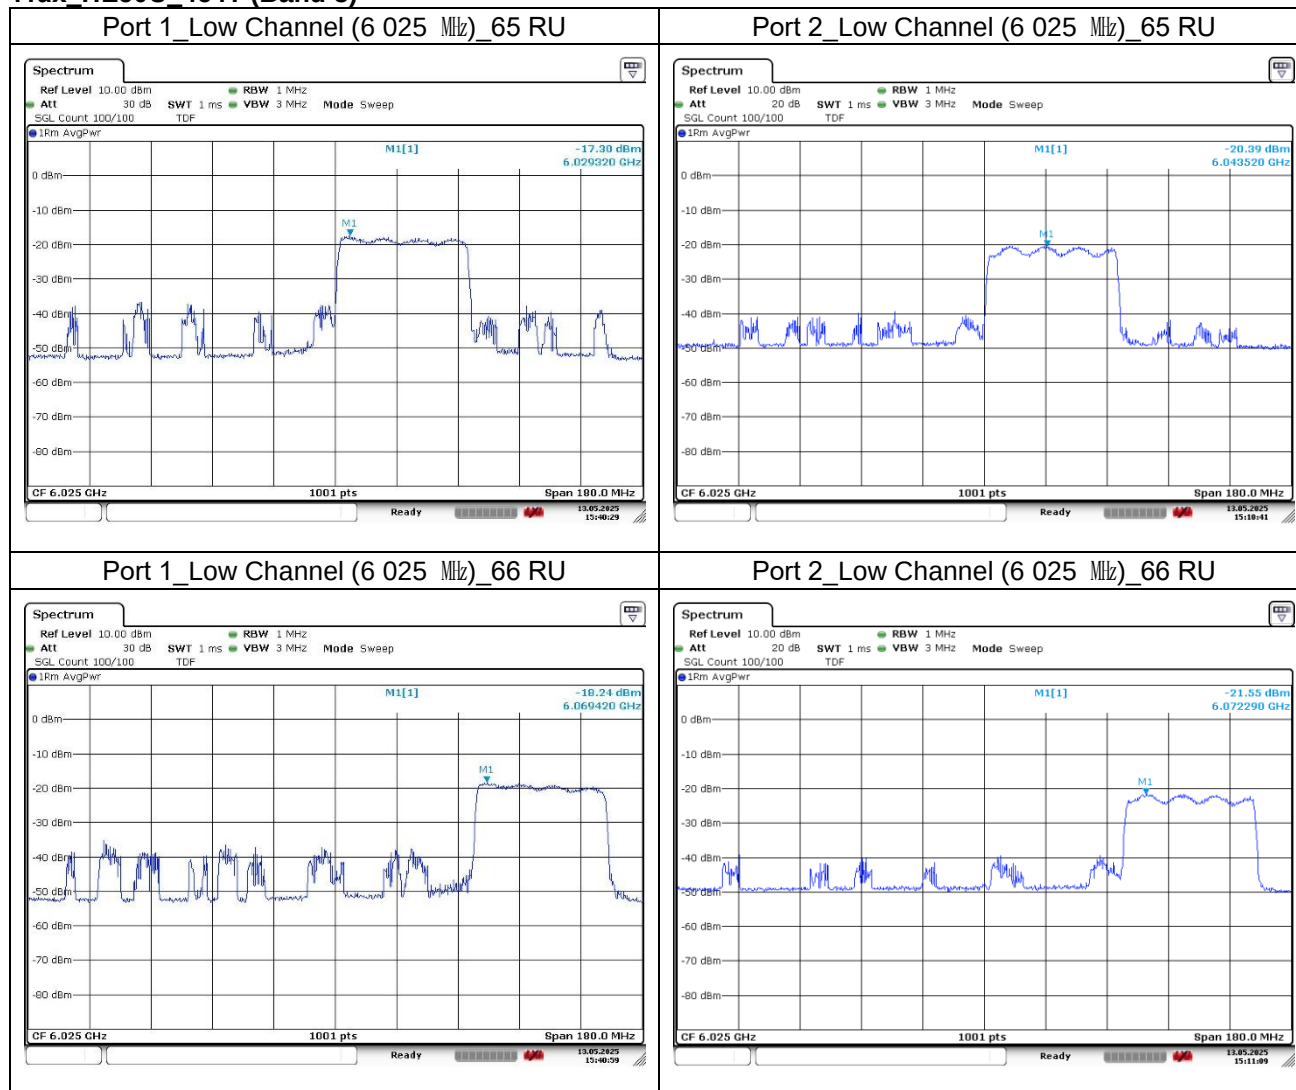

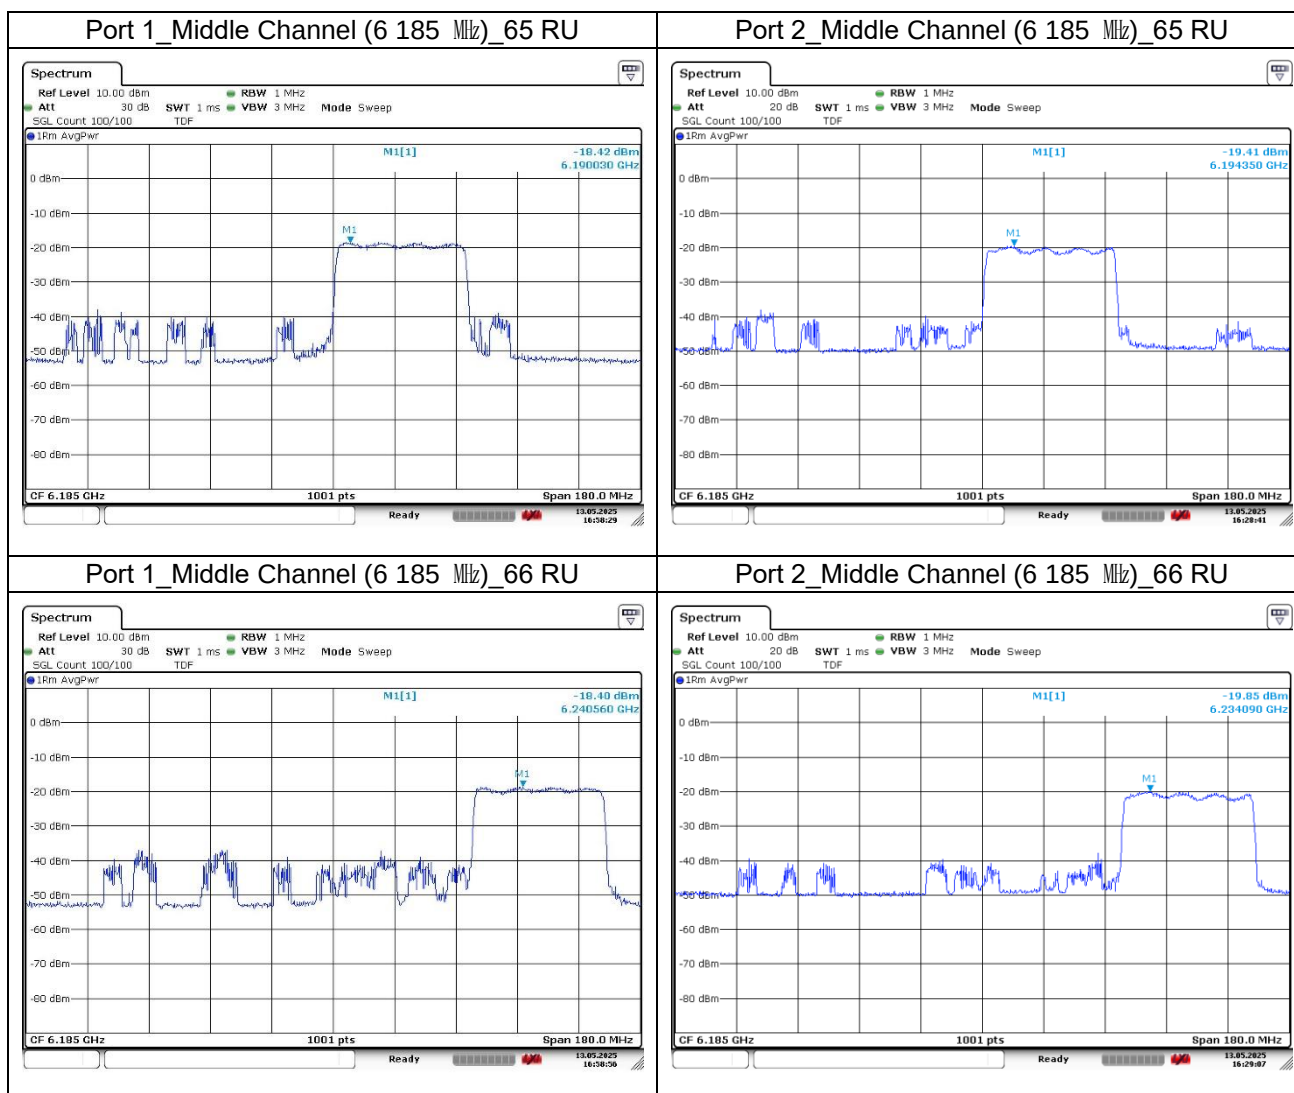


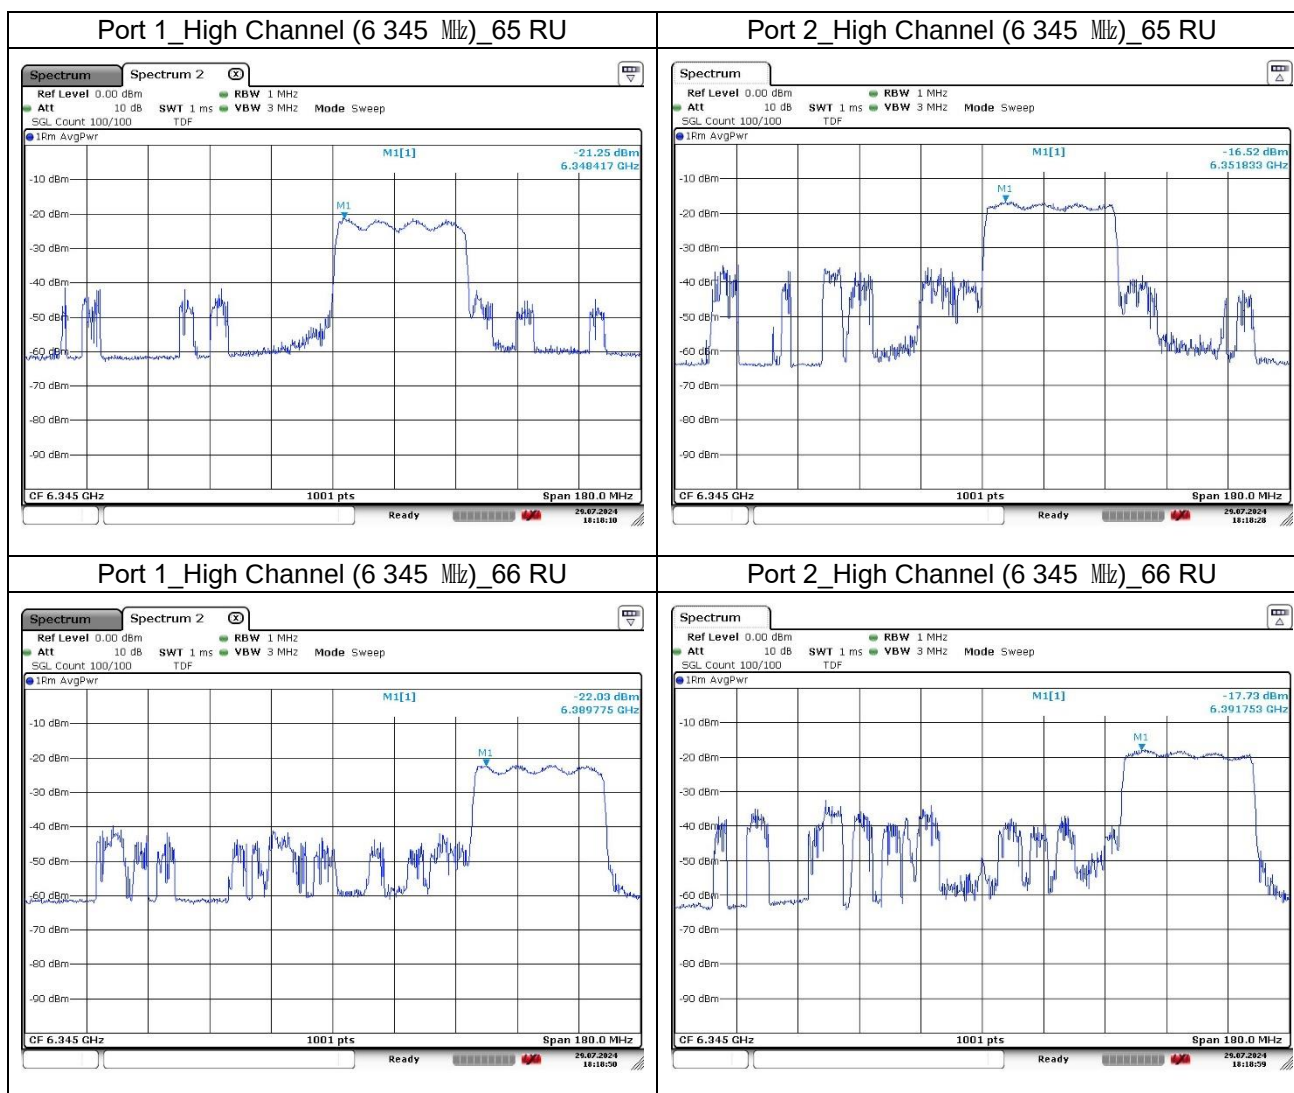


11ax_HE80U_484T (Band 7)

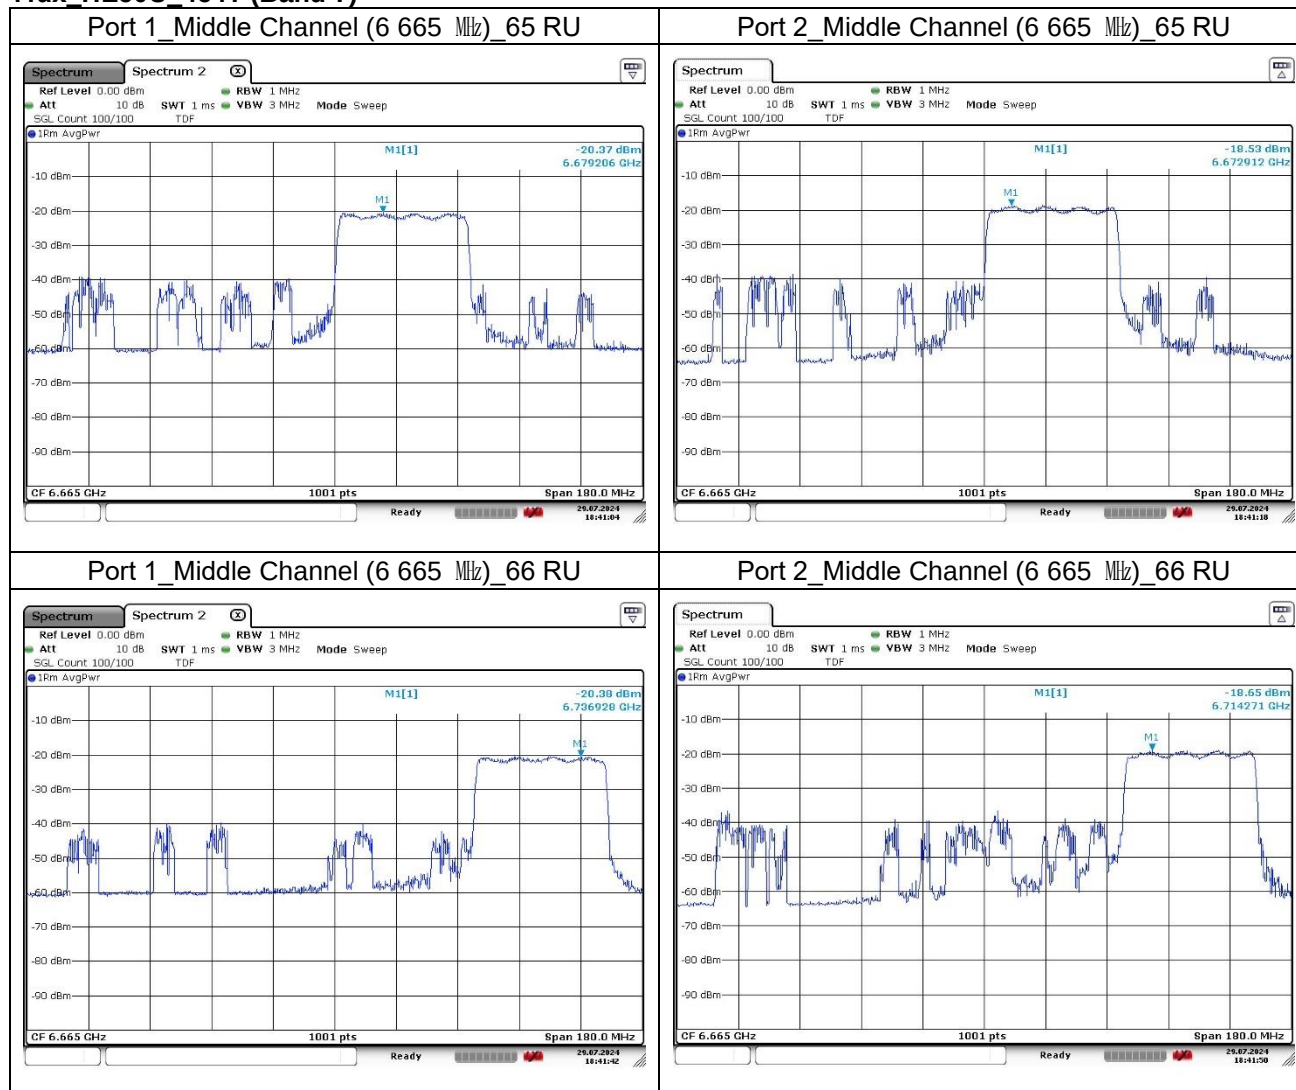


11ax_HE80U_484T (Band 8)

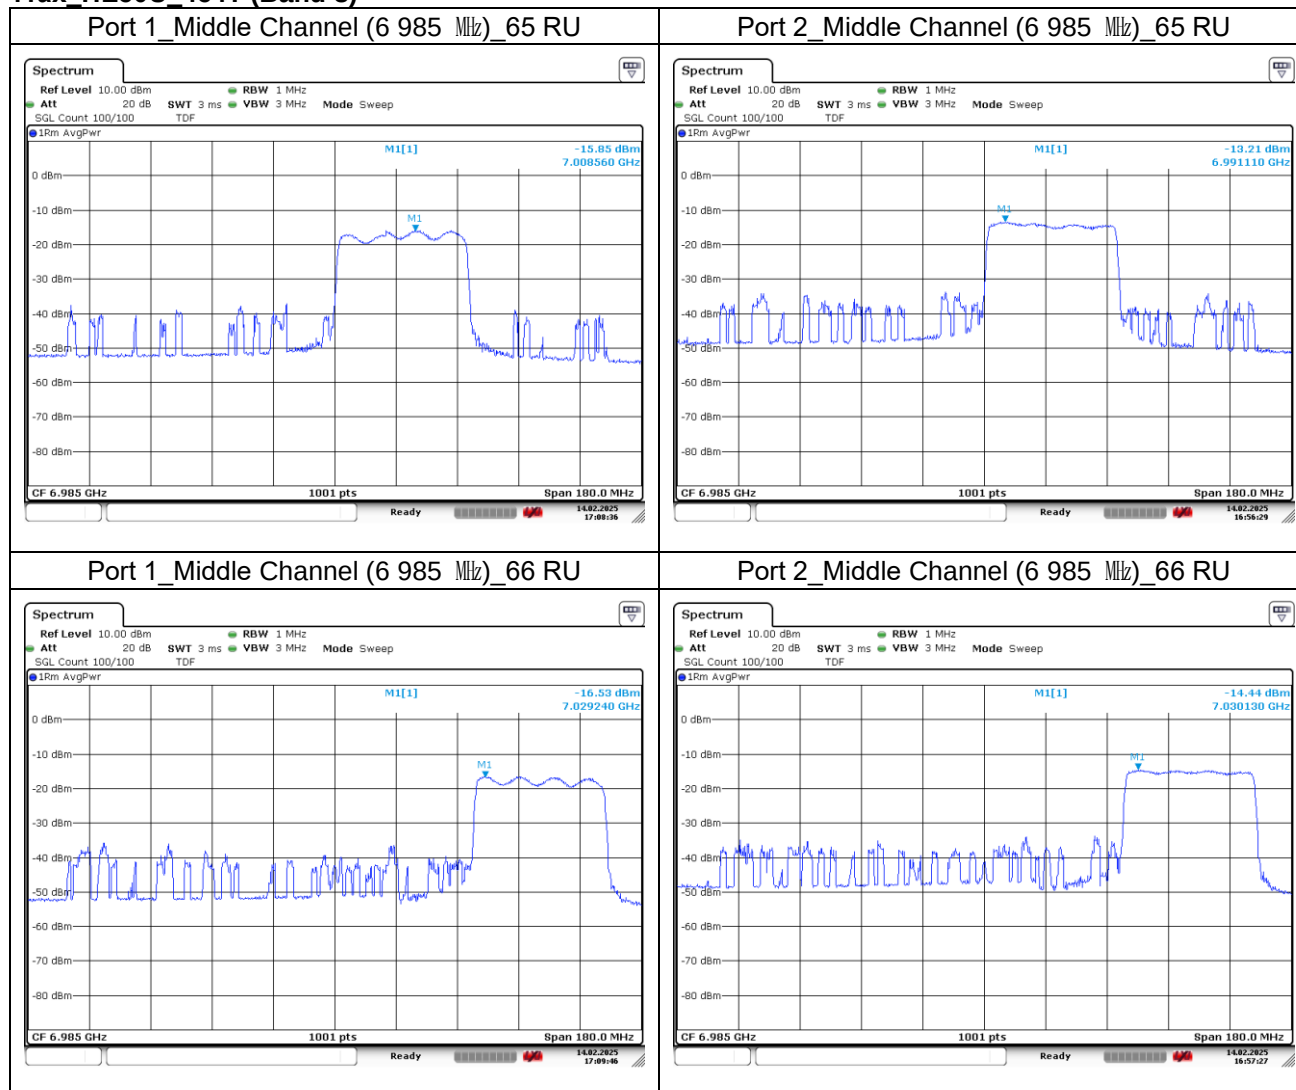


11ax_HE80U_996T (Band 5)

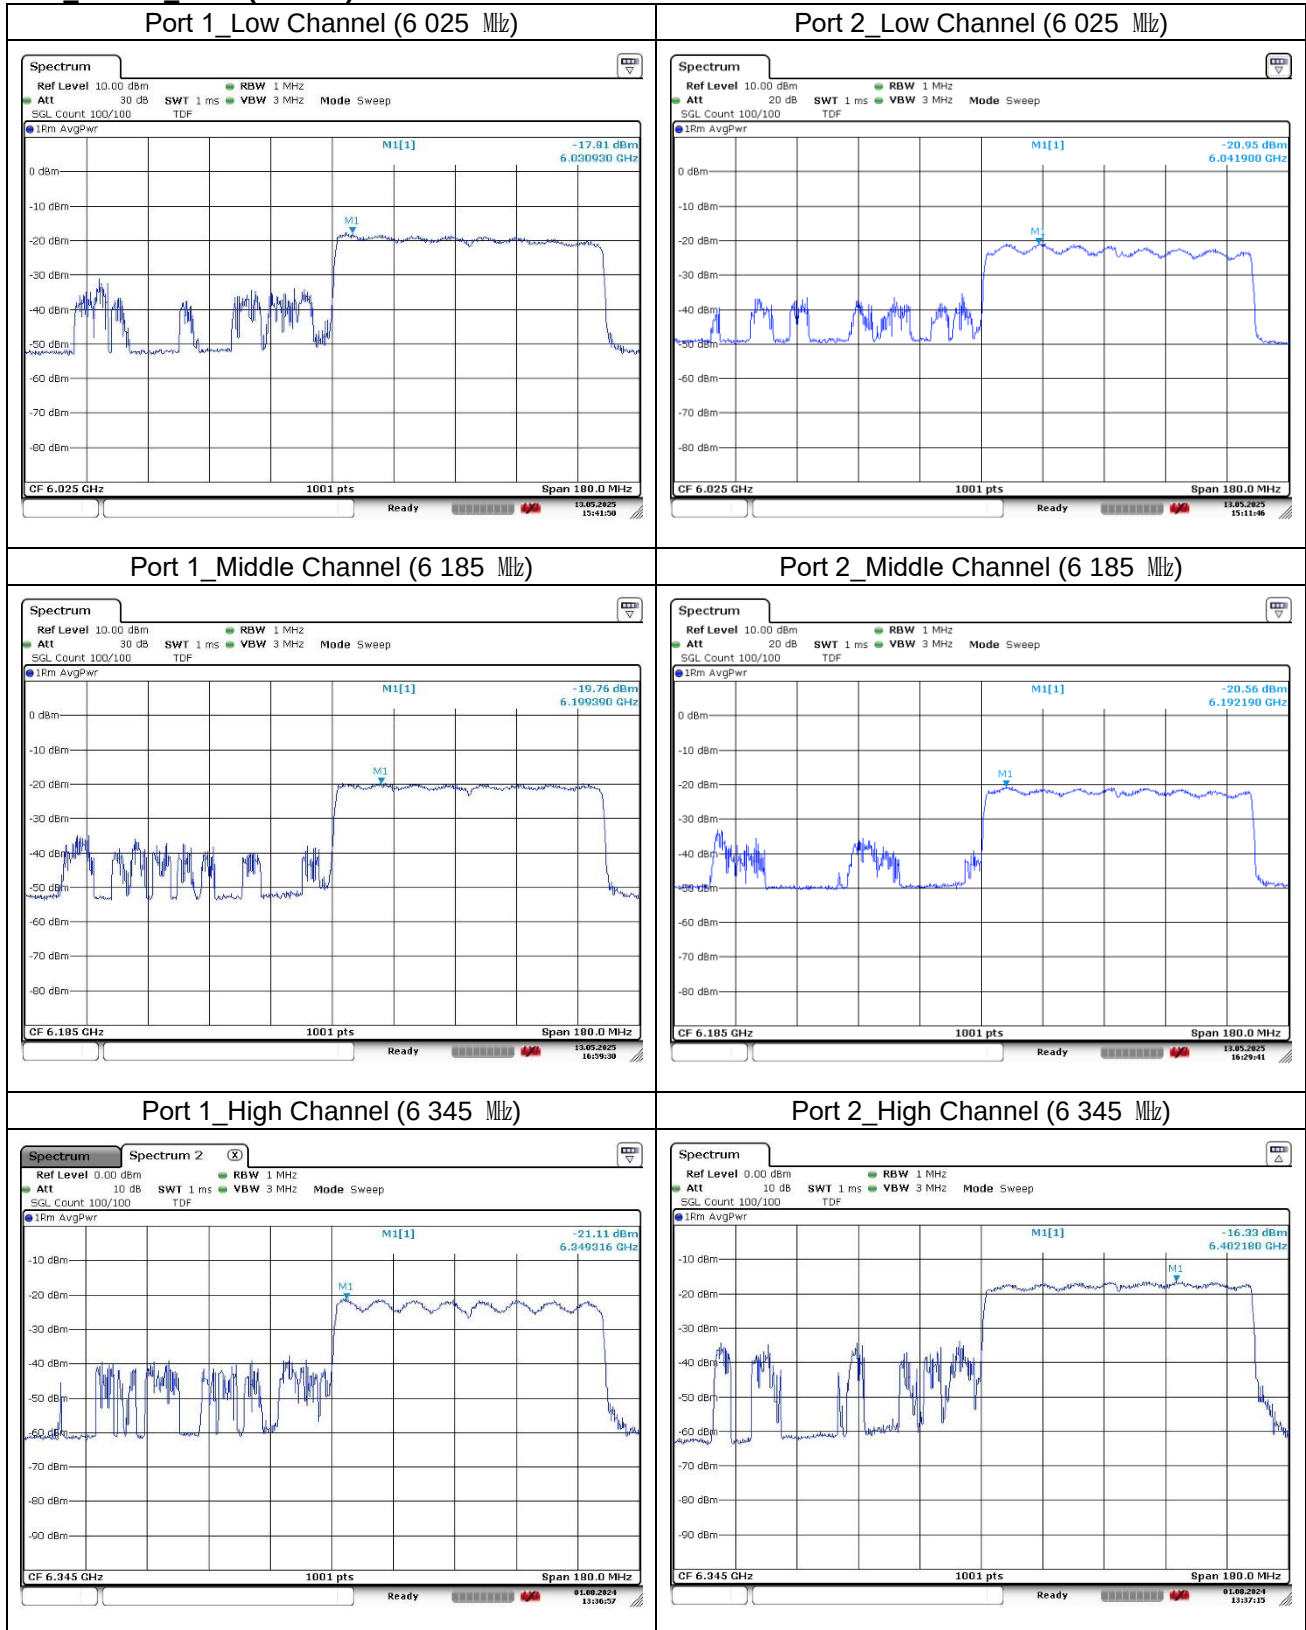


11ax_HE80U_996T (Band 7)

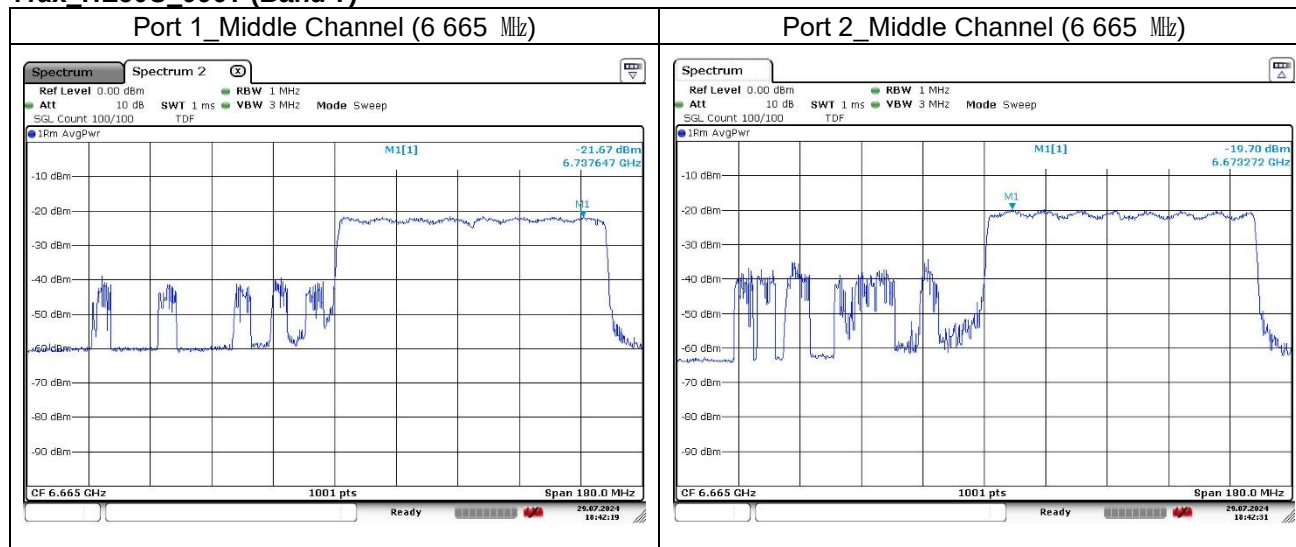


11ax_HE80U_996T (Band 8)

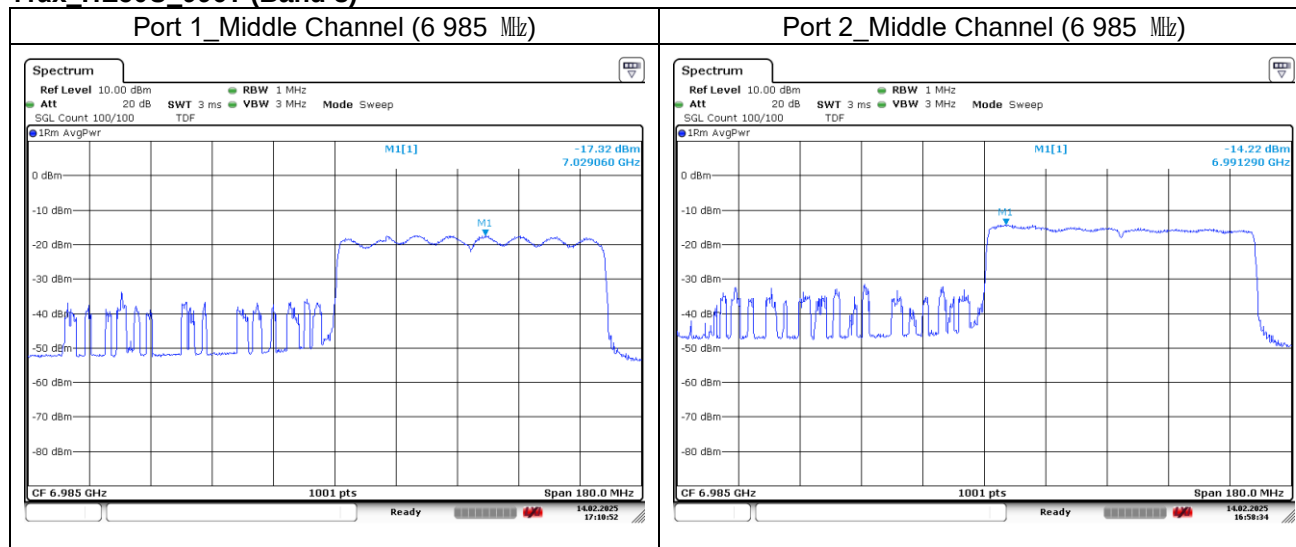


11ax_HE160_2x996T (Band 5)

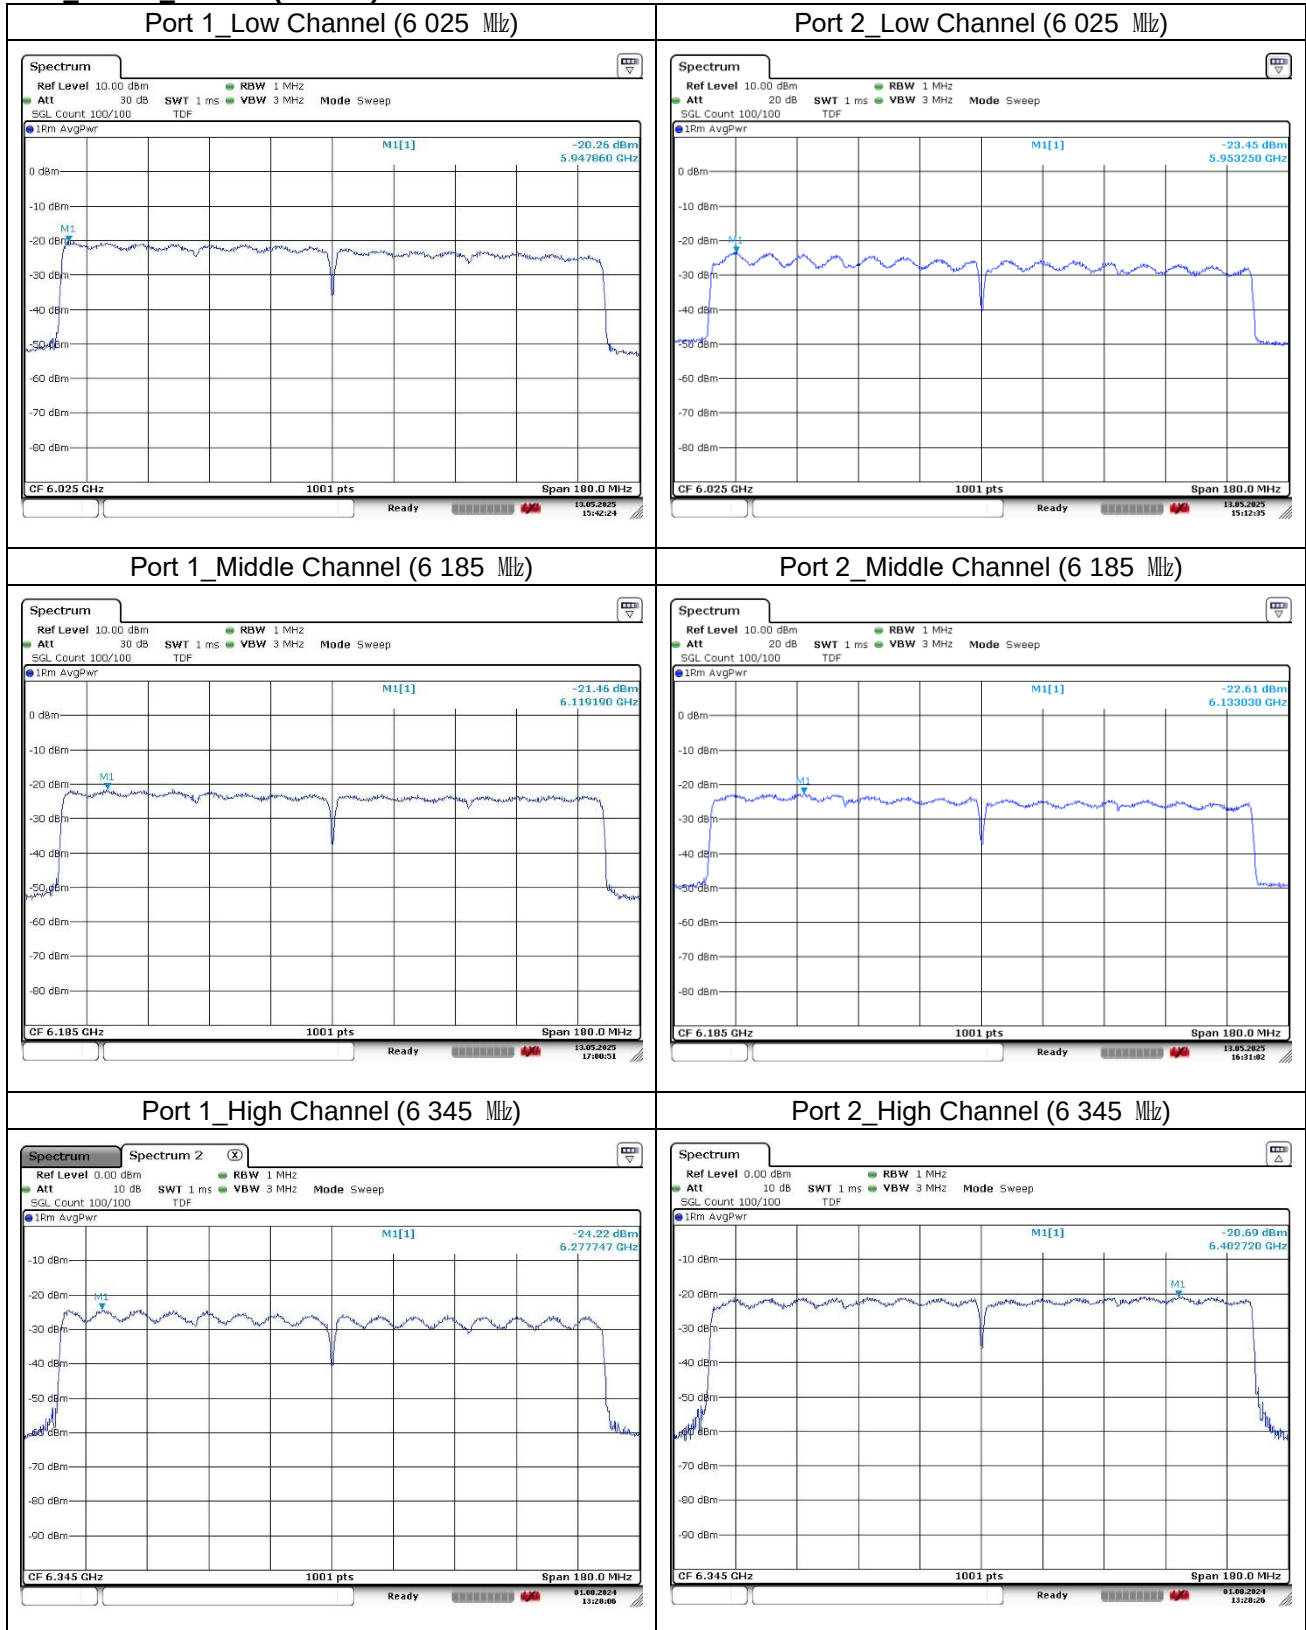


11ax_HE160_2x996T (Band 7)

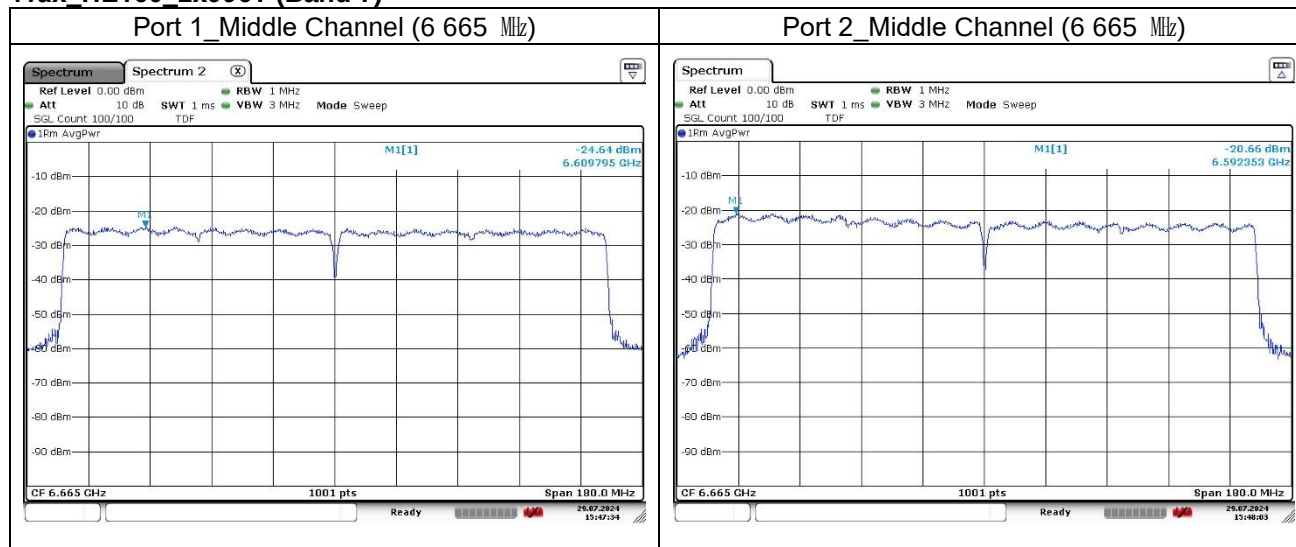


11ax_HE160_2x996T (Band 8)

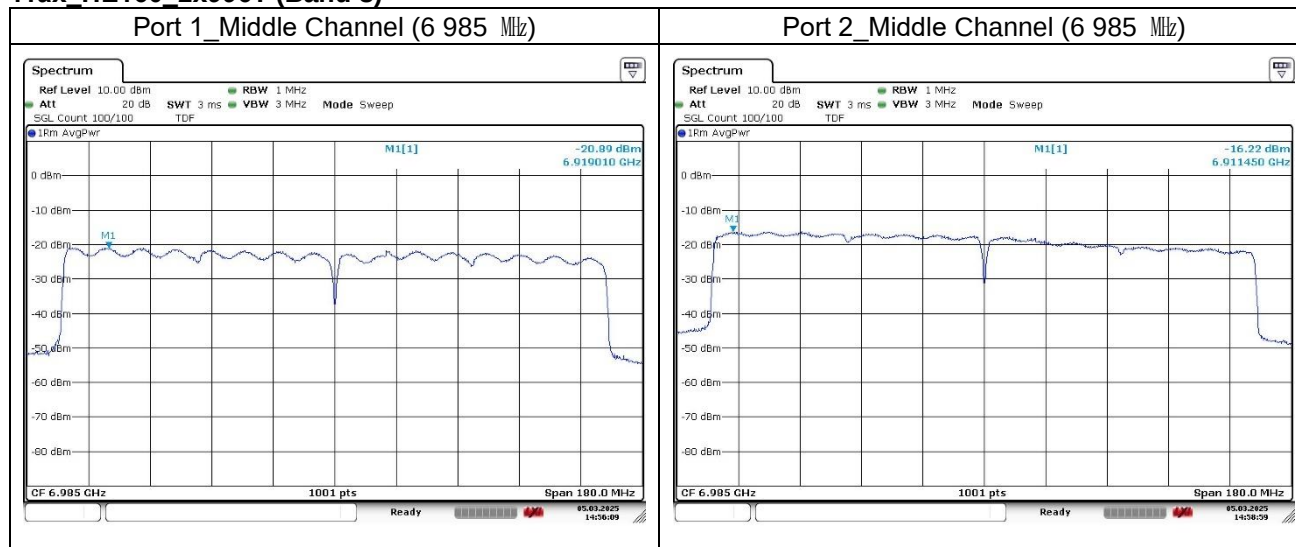


11ax_HE160_SU (Band 5)

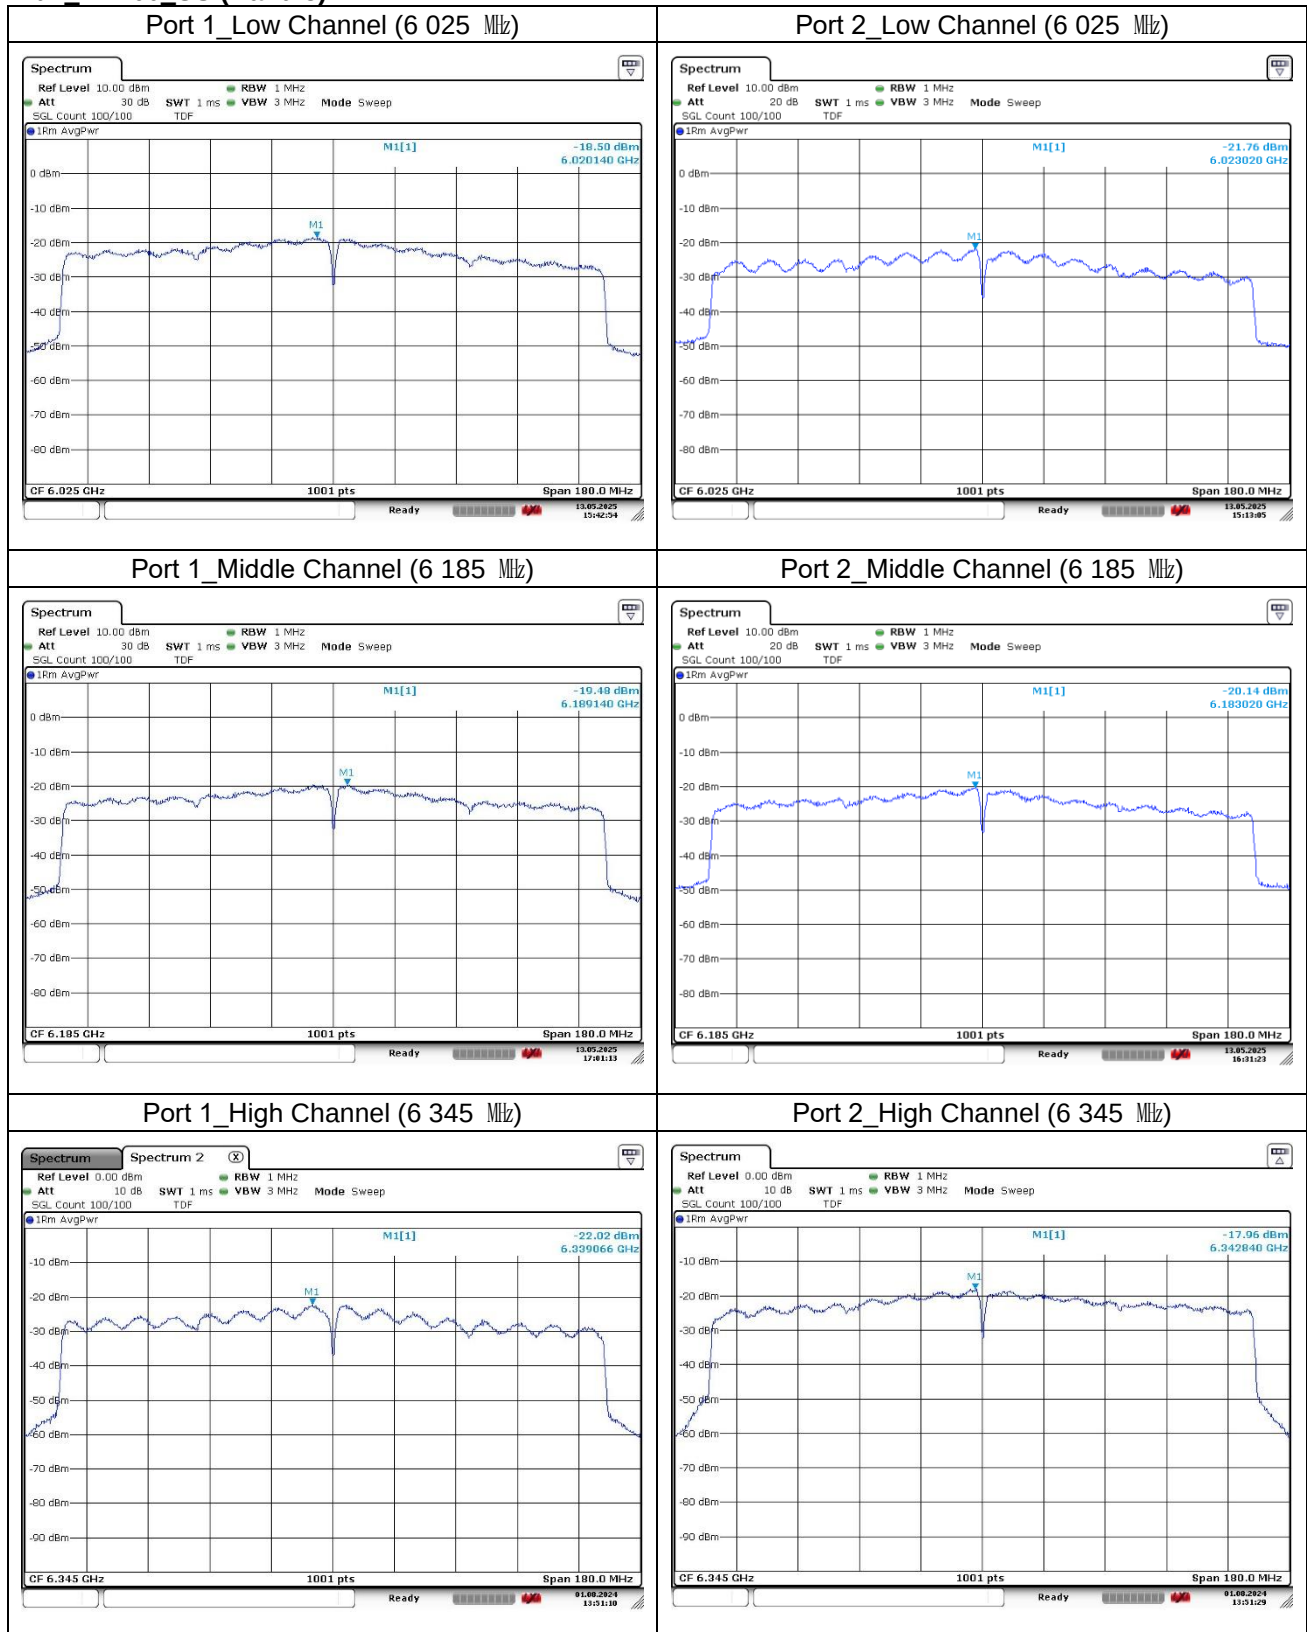

11ax_HE160_SU (Band 7)

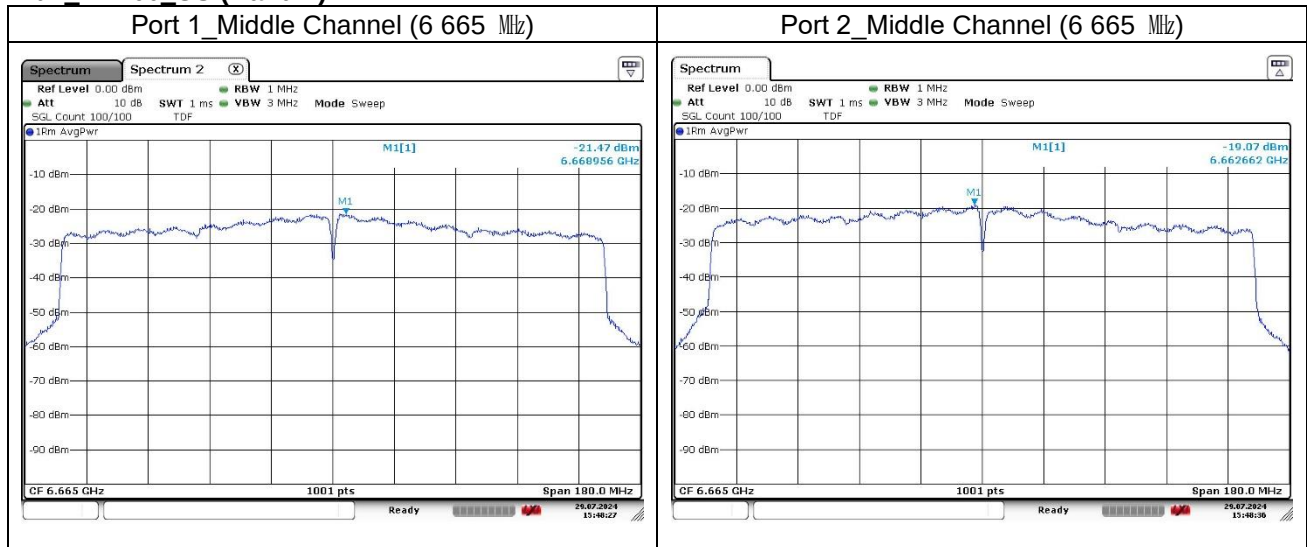

11ax_HE160_SU (Band 8)

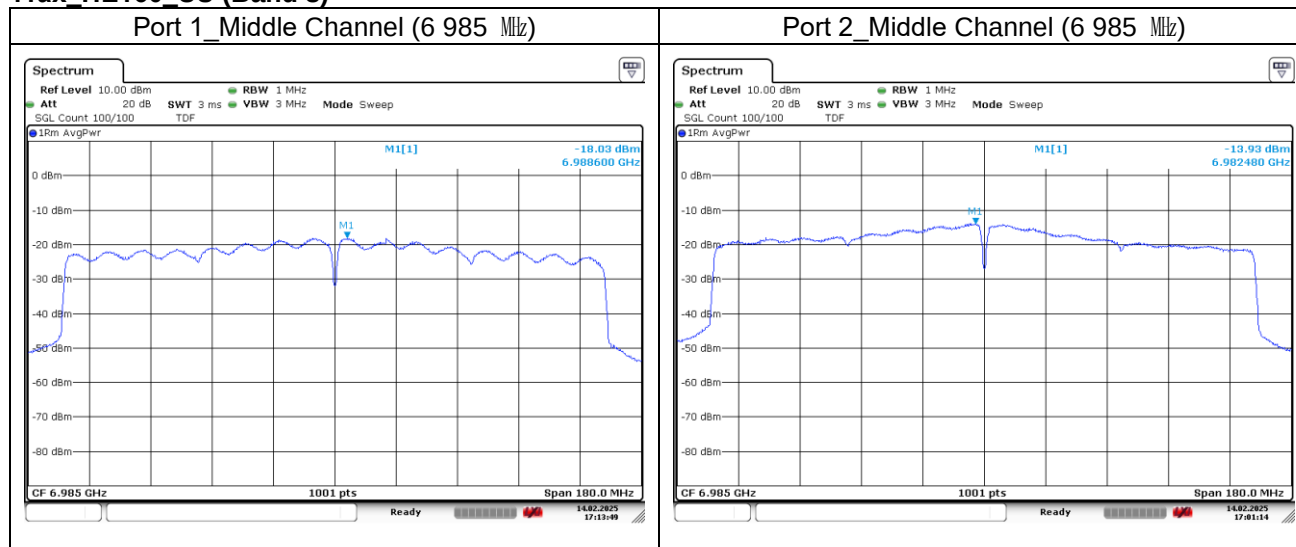

Band-crossing channel

11a

