 


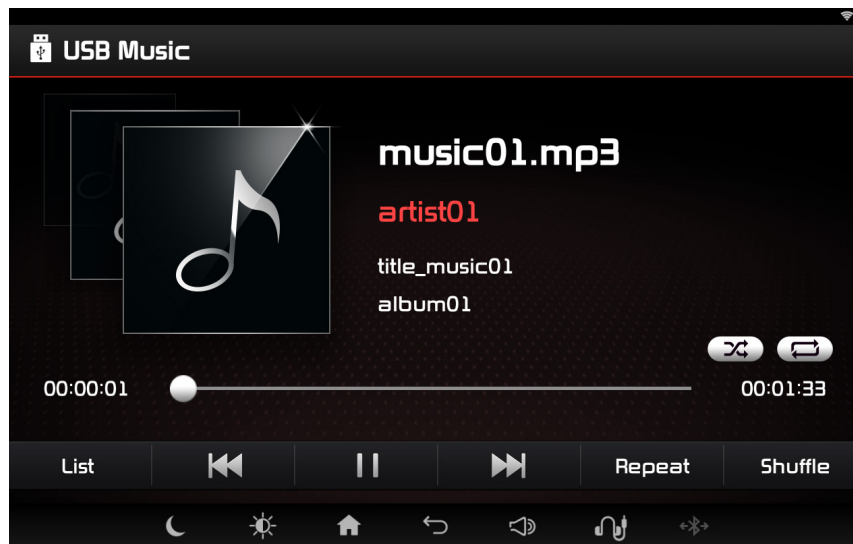

Press the  button to play.

Press the  button to pause.

Playing the Previous/Next File

While playing → Press the   button to play the previous/next file.

After 3 seconds of playing, pressing  will play the current file from the beginning.

Fast-forwarding/Rewinding

Drag or touch the slider along the play bar in the music screens to jump to the point that you want to play from.

USB Music

Shuffle

Press the **Shuffle** button.

Each time the button is pressed, the option is changed from Shuffle On () → to Shuffle Off.

 
Repeat

Press the **Repeat** button.

Each time the button is pressed, the option is changed from Repeat All () → Repeat One () → Off.


List

Press the **List** button to display the USB Music list screen.

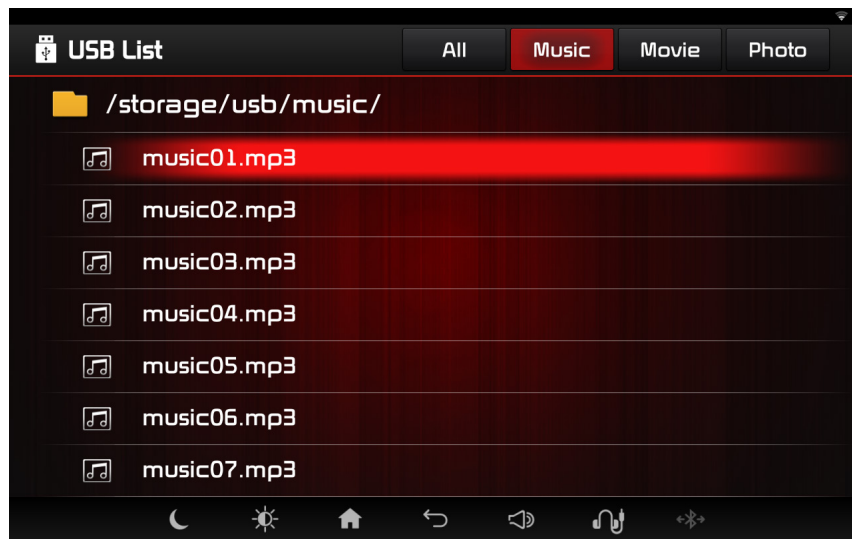


Press the directory name to move to the higher directory.

 Basic Screen

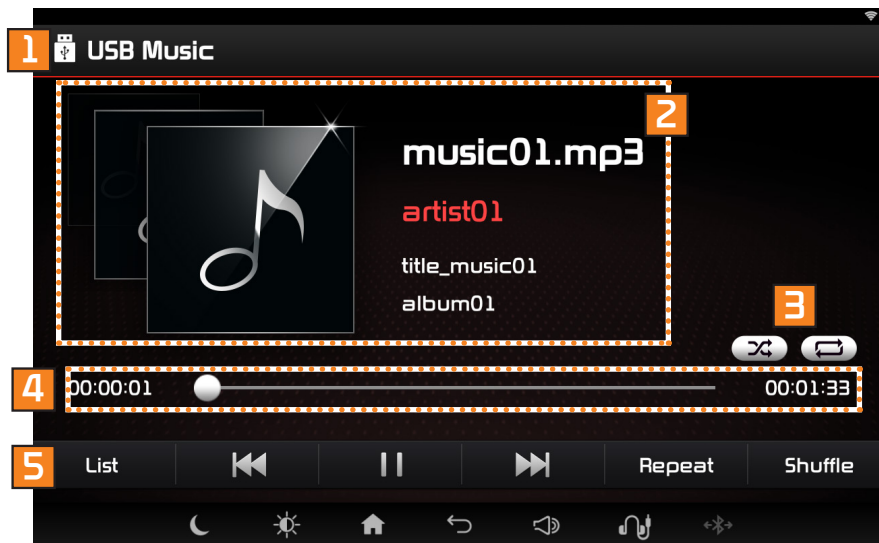

Name and Icon	Details
1 Mode	Displays current mode.
2 File Info	• Displays file name/title/artist/album info of the current file. • Clicks the album to display the list of album arts.
3 Play Mode	Displays current play mode feature.
4 Play Time/ Play Bar	• Displays the current play time. • Drag/touch the playback bar to move to the desired position and play.
5 List	Moves to the list screen.

 Basic Screen


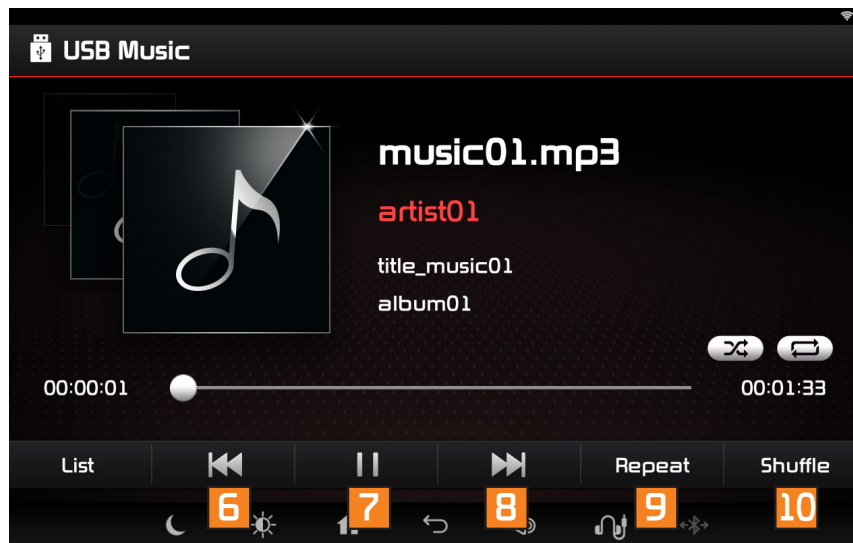


Name and Icon	Details
6 Previous File	• When play time is under 3 seconds : Moves to the previous file. • When play time is over 3 seconds : Plays the current file from the beginning.
7 Play/ Pause	Plays/pauses the current file.
8 Next File	Moves to the next file.
9 Repeat	Repeats the current file or all files in the folder.
10 Shuffle	Plays files in random order.

Album Screen

Selects the album art.

  
Moves left/right to select the album you want to listen to.

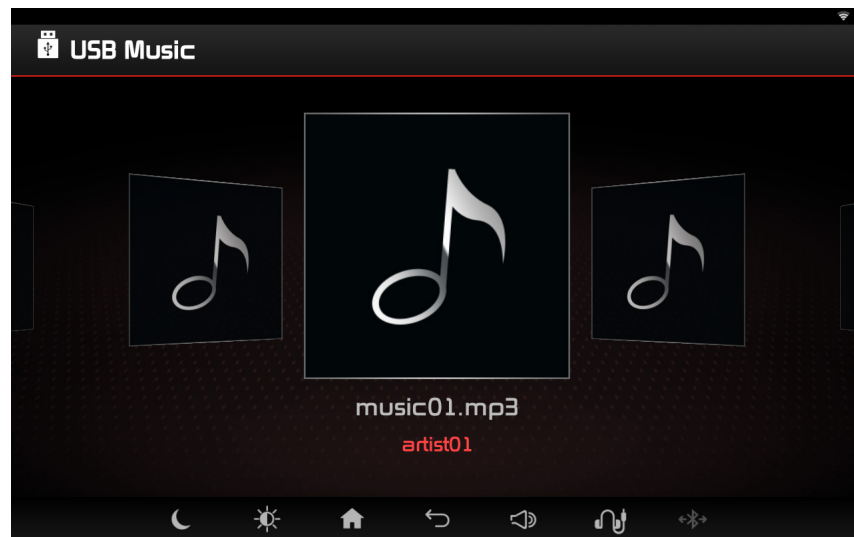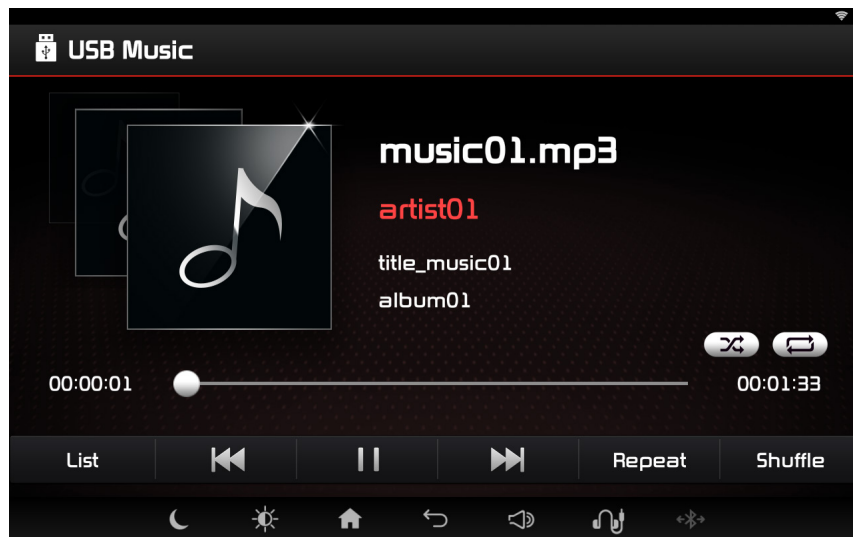


USB Movie

Playing USB Movie

 Press the **Home** button → Press **USB** → Press **Movie** → Press the desired file.

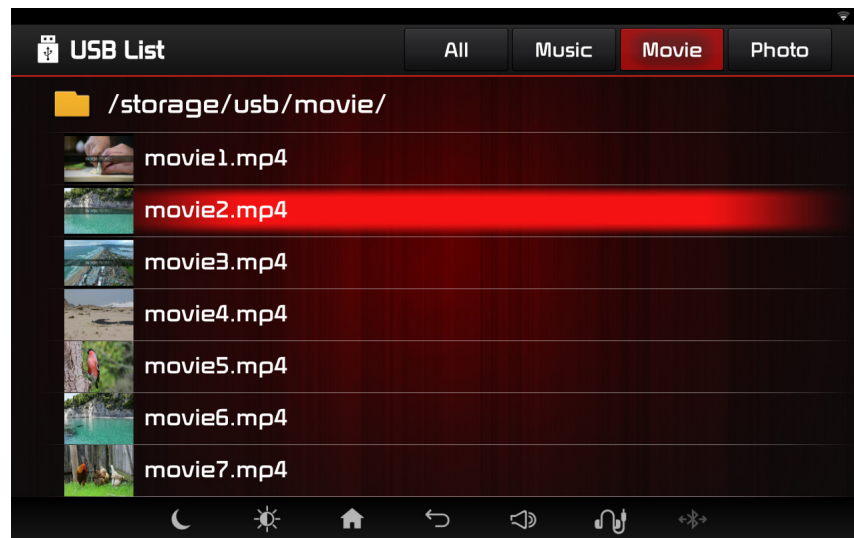

USB Movie

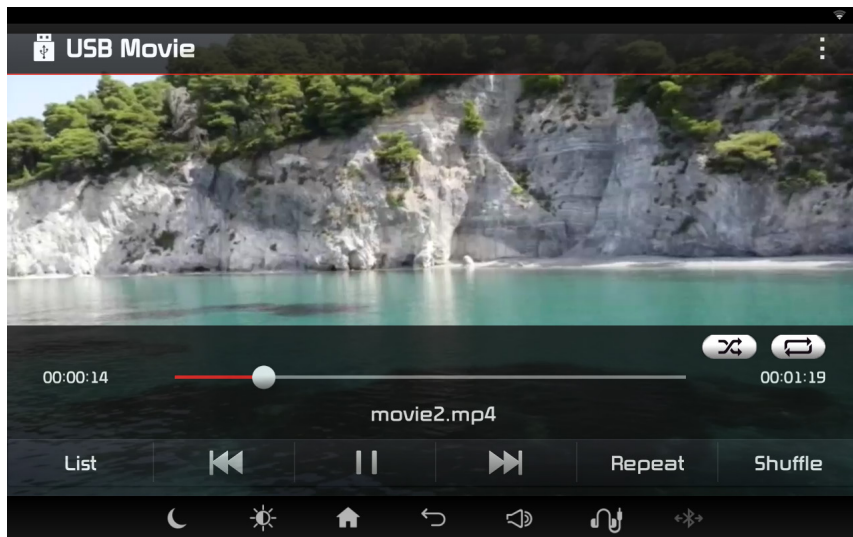 

Press the  button to play.

Press the  button to pause.

Displaying Control Panel

Touch anywhere in the play screen to display control panel.

The control panel will disappear if operations are not made for 5 seconds while the control panel is showing.

Playing the Previous/Next File

While playing → Press the   button to play the previous/next file

 
 
Press the  button after 3 seconds of playback time, will play the current file from the beginning.

Fast-forwarding/Rewinding

Drag or touch the play ball to start playing from 5 seconds before the selected position.

Subtitles

Press the **:** button → Press **Subtitles** to set the subtitle language or Select the desired option.

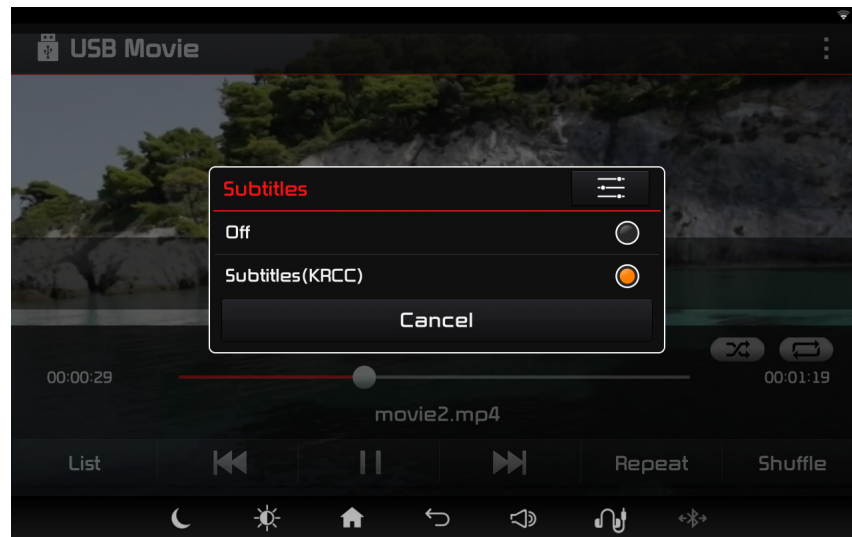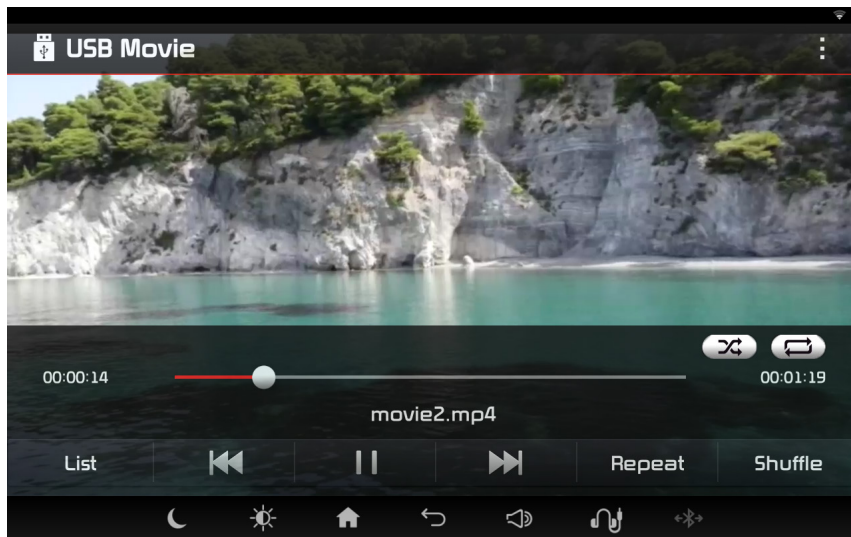


Note

- If subtitles do not exist, then the Subtitles button will be disabled.

USB Movie

Voice

 Press the **:** button → Press **Voice** to set the voice language.

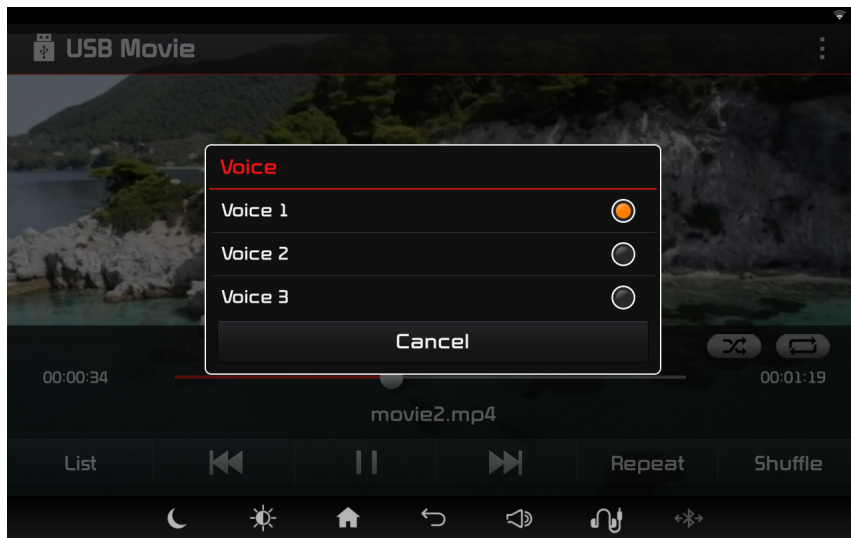


Note

- If Voice files do not exist, then the Voice button will be disabled.

List

 
Press the **List** button to display the USB Movie list screen.

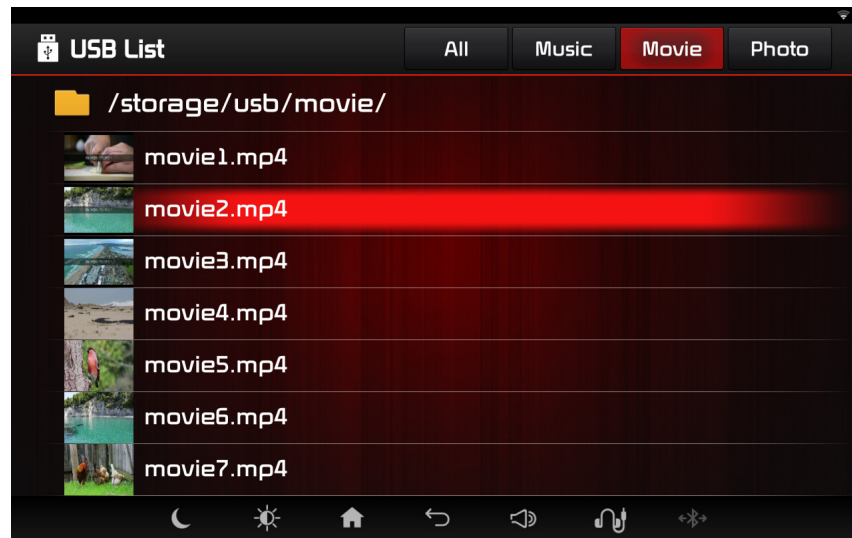

Press the directory name to move to the parent directory.

USB Movie

 Basic Screen

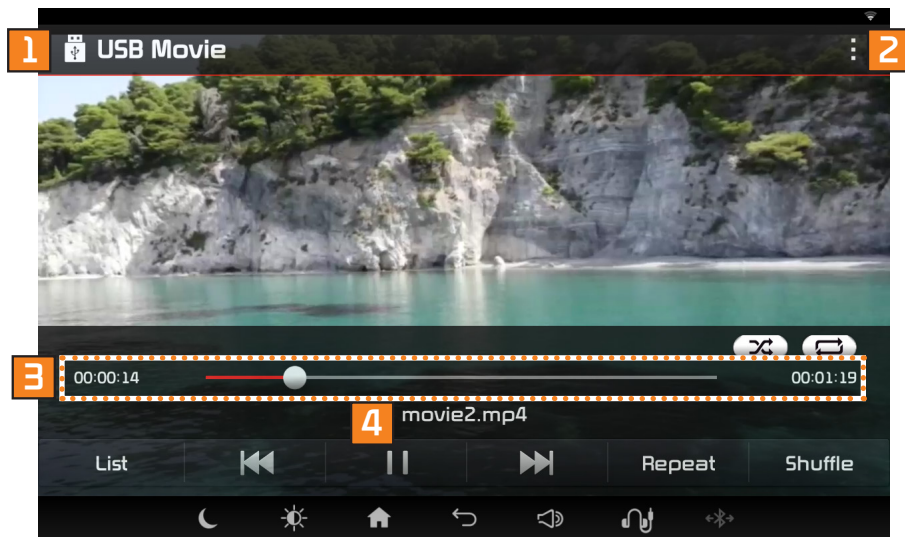


Name and Icon	Details
1 Mode	Displays current mode.
2 Menu	Displays the USB Movie settings menu.
3 Play Time/ Play Bar	• Displays the current play time. • Drag/touch the playback bar to move to the desired position and play.
4 File Info	Displays currently file name.

Note

- The 2 Menu feature is available only when a video file supports subtitles or voice features.

 Basic Screen

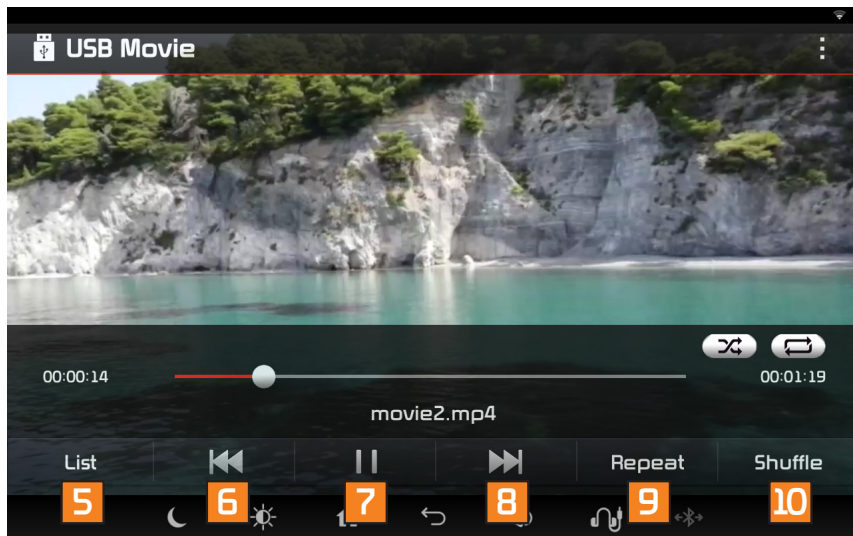

Name and Icon	Details
5 List	Moves to the list screen.
6 Previous File	• When play time is under 3 seconds : Moves to the previous file. • When play time is over 3 seconds : Plays the current file from the beginning.
7 Play/ Pause	Plays/pauses the current file.
8 Next File	Moves to the next file.
9 Repeat	Repeats the current file or all files in the folder.
10 Shuffle	Plays files in random order.