

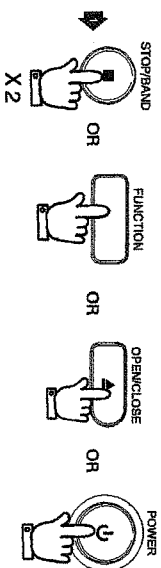



CANCELING THE PROGRAM PARA CANCELAR LA REPRODUCCIÓN DEL PROGRAMA POUR ANNULER LA LECTURE DU PROGRAMME

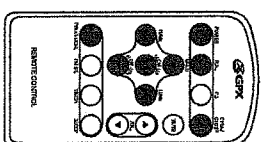


REPEAT PLAY FUNCIÓN DE REPETICIÓN FONCTION DE RÉPÉTITION

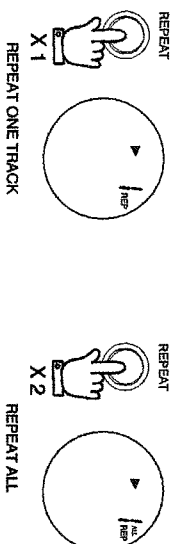


5 SLEEP TIMER TEMPORIZADOR PARA DORMIR MINUTERIE D'ARRÊT

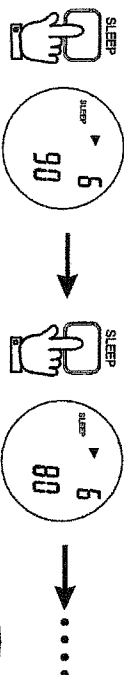


 
AS YOU PRESS THE SLEEP BUTTON
IT COUNTS DOWN IN INCREMENTS OF 10.
ONCE IT REACHES 00 THE SLEEP MODE CANCELS




CANCELING SLEEP

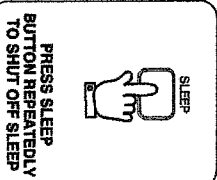

 
6 SETTING KITCHEN TIMER AJUSTAR EL CONTADOR DE TIEMPO DE LA COCINA RÉGLAGE DU TEMPORISATEUR DE CUISINE

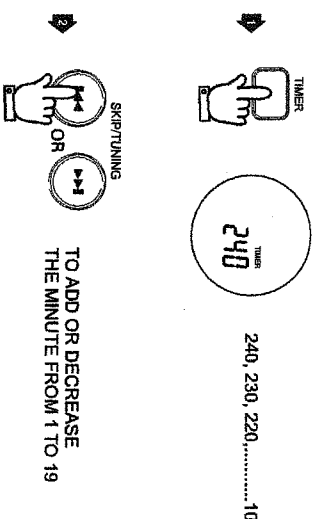

7 EQ EQUALIZADOR ÉQUALISEUR

 

8 AUX AUXILIAR EXTÉRIEURE

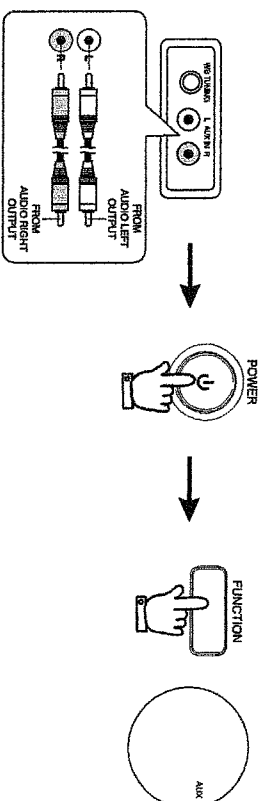

CHANNEL 7

1	182.550 MHz
2	182.000 MHz
3	182.075 MHz
4	182.450 MHz
5	182.450 MHz
6	182.000 MHz
7	102.020 MHz

1. Stations marked (P) operate less than 24 hours per day, however, hours are extended when possible during severe weather.
2. Occasionally the frequency of an existing or planned station must be changed because of unexpected radio frequency interference with adjacent NOAA Weather Radio stations and with other government or commercial operations within the area.

1. Las estaciones que trabajan 24 horas, sin interrupción, las horas son estándar durante todo el año.
2. De vez en cuando, debido a una estación atípica o estación pluvial, la demanda de energía puede ser excesiva. El sistema de energía debe ser capaz de manejar la demanda de energía con estaciones de radio meteorológicas NOAA, con otras operaciones comerciales o gubernamentales durante el día.

1. Les stations qui marquent l'heure continuent pendant 24 heures, cependant les heures sont éliminées pendant temps sévère quand il est possible.
2. De temps en temps la fréquence d'une station existante ou la station principale d'une chaîne a cessé de fonctionner de fréquence de radio indépendante avec des stations de radio météorologiques NOAA, et/ou avec d'autres opérations commerciales ou gouvernementales dans la zone.

PRESS REPEATEDLY

**PUSH OPEN/CLOSE BUTTON
TO OPEN/INSERT CD
PUSH OPEN/CLOSE BUTTON
TO CLOSE**

 


Diagram illustrating the sequence of button presses to add up to 20 tracks:

- Press **PROG./MEM.** (0)
- Press **SKIP/TUNING** (3)
- Press **OR** (3)
- Press **PLAY/PAUSE** (3)
- Repeat steps 2-3 to add up to 20 tracks.

XXXXXXXXXXXXXXXXXXXX

STOP/BAND

23

PROG./MEM.

3

SKIP/TUNING

OR

REPEAT 2-3 TO EDIT THE PROGRAMMED TRACKS