



sobro

smart side table



user manual

SOSTB300_20180521_v4





welcome to the future of furniture

Get Started

These are the essential steps to unlocking the features of your Sobro Smart Side Table

①

Unpack and assemble the table

②

Connect Bluetooth

③

Download and connect the Sobro App



Scan the QR code to learn more about your Sobro Smart Side Table



sobro

smart side table

Important Safeguards	6-7
Parts and Features	8-11
Using Bluetooth.....	12
Features and Controls.....	14-15
Assembly.....	16-17
Installing the Power Cord.....	18-19
Connecting the Sobro App.....	22-26
Adding a Guest to your Sobro	28-30
Cleaning & Maintenance.....	32
Troubleshooting & Customer Support.....	33
Warranty	34
FCC Statement.....	35



IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION MANUAL

When using electrical appliances, basic safety precautions should be followed, including:

- Read all instructions.
- Do not use appliance for other than its intended use. For household use only. Do not use outdoors.
- Remove all bags and packaging from appliance before use.
- For maintenance other than cleaning, please contact StoreBound directly at: 1-800-898-6970 from 7AM-7PM PST Monday-Friday or by email at support@storebound.com
- StoreBound shall not accept liability for damages caused by improper use of the appliance.
- The safety and operating instructions should be retained for future reference.
- Heed all warnings. All warnings on this product and in the operating instruction manual should be adhered to.
- Refrain from using attachments that are not recommended by the appliance manufacturer, as this may result in fire, electric shock, or personal injury.
- Do not use the product near water and/or moisture, for example: near a bathtub, sink, in a wet basement, or near a swimming pool.
- Clean only with a slightly damp, lint-free cloth. Unplug this product from the wall outlet before cleaning.
- Do not block any ventilation openings. Install the appliance in accordance with the manufacturer's instructions.
- Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating.
- This product should never be placed near or above a radiator or heat source. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided and the manufacturer's instructions have been adhered to.
- The cord to this appliance should be plugged into a 3-prong electrical wall outlet.
- A short power supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance. The extension cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
- Do not operate this appliance with a damaged cord, damaged plug, after the appliance malfunctions, is dropped, or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- Always unplug the appliance when not in use for an extended period of time.
- Upon completion of any service or repairs to this product ask the service technician to perform safety checks to determine that the product is in proper operating condition.
- The product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.

- Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
- Never push objects of any kind into the product as they may touch dangerous voltage points or short out parts that could result in fire or electric shock. Never spill or spray any type of liquid on the product.
- Do not attempt to service this product yourself. Contact StoreBound directly at 1-800-898-6970 from 7AM-7PM PST Monday-Friday or by email at support@storebound.com.
- When replacement parts are required, be sure the service technician uses replacement parts specified by the appliance manufacturer, or those that have the same characteristics as the original part.
- **WARNING** - Please refer to the information on the inside of the drawer for electrical and safety information before installing or operating the appliance.

Location

Place the Sobro Side Table in a dry and well-ventilated room.

Do not place the appliance near a heat source (e.g. radiators, water heaters or similar devices) and do not expose the appliance to direct sunlight.

Ventilation

Do not cover the Cooler Drawer Vent on the back of the Sobro Side Table, as this may result in overheating.

ATTENTION: it is dangerous to use the same multipurpose power outlet for the Sobro table and other home appliances. Please do not use the same power outlet for the table along with any other home appliances.



Before installing your Sobro, choose the location carefully. Avoid placing the Sobro in direct sunlight or close to a heat source. Avoid locations subject to vibrations and excessive dust, cold, or moisture.

Do not open the Circuit Board Cabinet as this will result in damage to the circuitry or electrical shock. If a foreign object should get into the appliance, contact customer service. When removing the power plug from the wall outlet, always pull directly on the plug, never pull the cord.

IMPORTANT SAFEGUARDS: PLEASE READ AND SAVE THIS INSTRUCTION MANUAL

INDOOR USE ONLY.

- The light source contained in this luminaire shall only be replaced by our service agent or a qualified person.
 - Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
 - This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments.
 - farm houses and by clients in hotels, motels and other residential type environments.
 - catering and similar non-retail applications.
 - This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. Children aged from 3 to 8 years are allowed to load and unload refrigerating appliances.
 - This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
 - If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
- WARNING:** When positioning the appliance, ensure the supply cord is not trapped or damaged.
- WARNING:** Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- DANGER:** Risk of child entrapment. Before you throw away your old refrigerator or freezer:
- Take off the doors.
 - Leave the shelves in place so that children may not easily climb inside.
- DANGER:** Risque d'enfermer les enfants. Avant de jeter votre vieux réfrigérateur ou congélateur:
- Retirer les portes.
 - Laisser les tablettes en place de façon à empêcher l'accès aux enfants.
- WARNING:** Keep flammable materials and vapors, such as gasoline, away from refrigerator.
- Fail to do so can result in death, explosion, or burns.
 - To ensure proper ventilation for your refrigerator, allow for 200mm space on each side between wall, 100mm space between back of your refrigerator and the wall, and 300mm space between counter top and the roof or ceiling.
 - If you are installing your refrigerator next to a fixed wall, leave sufficient space on the hinge side to allow for the door to swing open.
 - Never install your refrigerator near heat source and direct sun shines.
- Visit us on the web at <https://sobrodesign.com> to register your product, download product guides, additional troubleshooting resources and up-to-date information.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude as to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



Meaning of crossed out wheeled dustbin: Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the ground and water then get into the food chain, damaging your health and well-being.

CE statement

Hereby, STOREBOUND LLC declares that this audio device is in compliance with the essential requirement and other relevant provisions of RED Directive 2014/53/EU. The full text of the EU declaration of conformity is available following the link <http://www.sobrodesign.com/>

To avoid contamination of food, please respect the following instructions:

- Opening the door for long periods can cause a significant increase of the temperature in the compartments of the appliance.
- Clean regularly surfaces that can come in contact with food and accessible drainage systems.
- If the refrigerating appliance is left empty for long periods, switch off, defrost, clean, dry, and leave the door open to prevent mould developing within the appliance.

Food Storage suggestions:

The cooler drawer is super-versatile. Use it anywhere to store food, drinks, beer, snacks, breast milk, insulin, skincare and medications. The drawer can hold up to twelve 12-oz. cans or nine 500-mL bottles.

- With proper use, this thermo-electric cooler unit can preserve the temperature of food, warm or cold all day.

NOTE: Ambient temperature refer to the temperature of the surrounding air. For example, if unit is used for cooling, and your immediate surroundings is 23°C, then the unit will keep contents cool anywhere between 8° - 11°C.

- When storing fresh food that is not prepackaged, be sure to wrap or store food in airtight and moisture proof material unless otherwise noted. This will ensure proper shelf life and prevent the transfer of odours and tastes.
- Hot food should be allowed to cool before storing in the refrigeration. This will prevent unnecessary energy use.
- Wipe containers before storing to avoid needless spills.
- Never place spoiled foods in the refrigerator.

DISPOSING OF YOUR OLD APPLIANCE

The refrigerator system of the appliance is filled with refrigerant and insulating substances which should be separately treated and processed. Call your nearest authorized service agent or specialized servicing centre. If you are unable to locate one, contact your local authorities or your distributor. Be careful not to damage any tubes that may be on the rear wall of the appliance.

 
to prevent mould developing within the appliance.



Parts and Features




Parts and Features

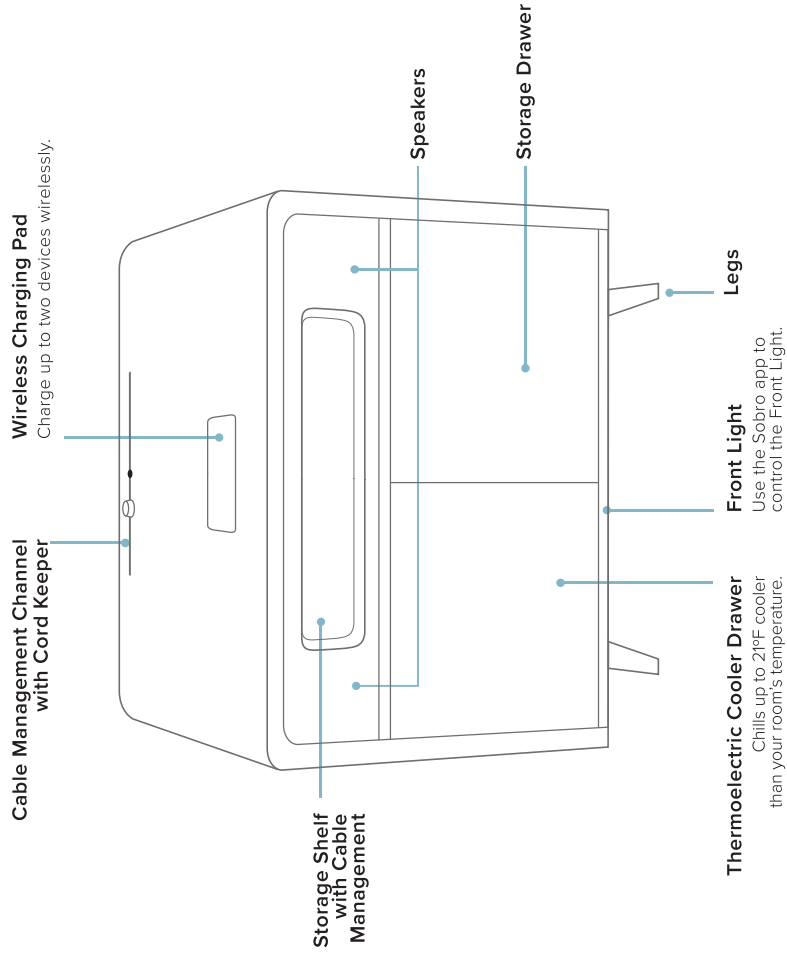


Dimmers

 Adjust the brightness of the Back Light, or press to turn the Back Light On or Off.

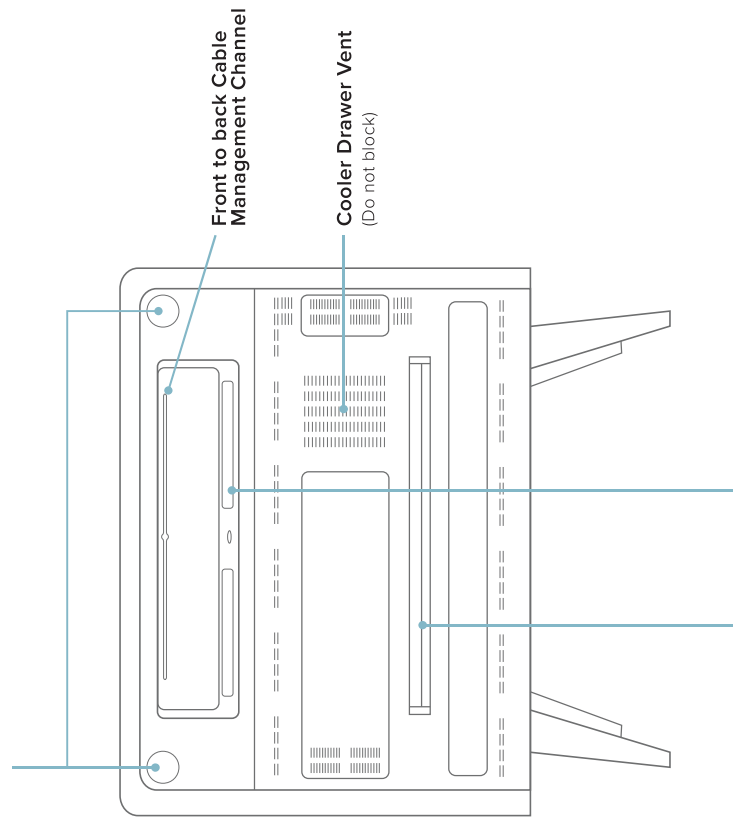



Charging Station Detail

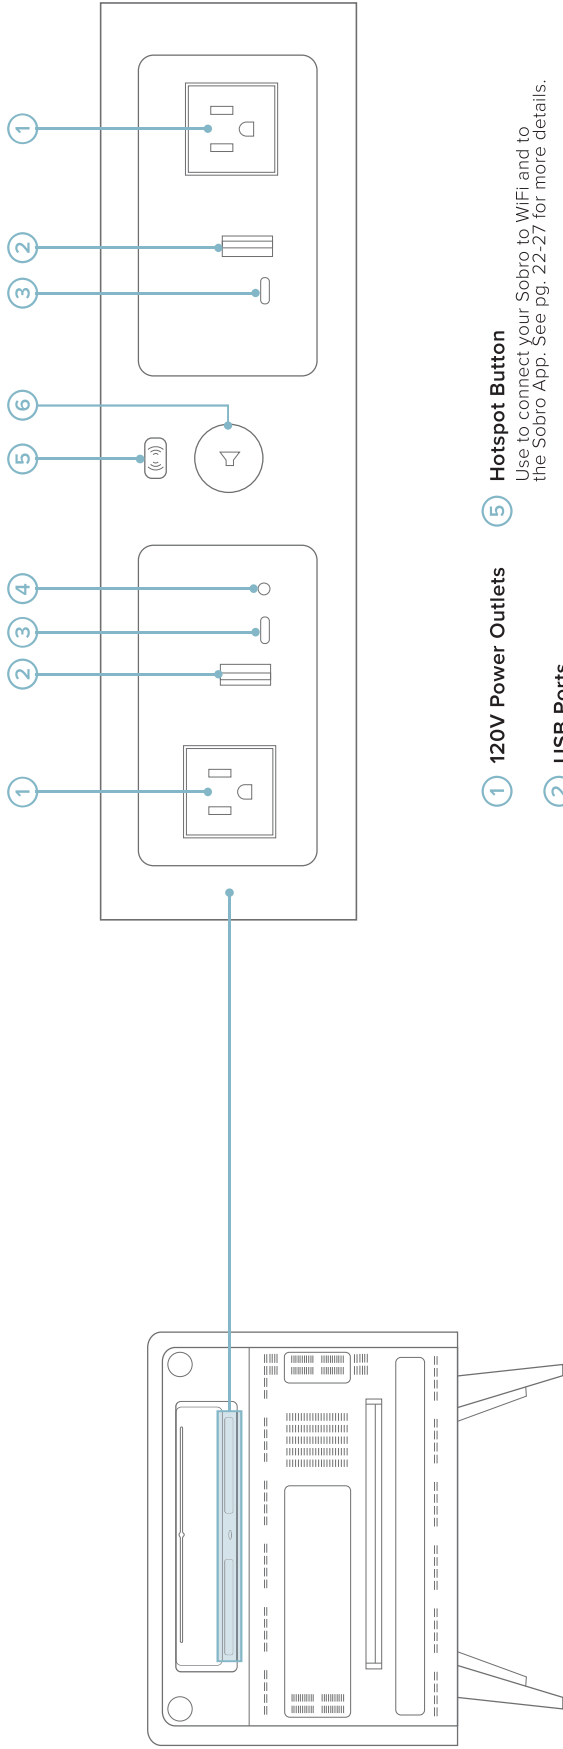 

1 120V Power Outlets

Use to connect your Sobro to WiFi and to the Sobro App. See pg. 22-27 for more details.

2 USB Ports

3 USB-C Ports

4 3.5mm Aux Input

5 Hotspot Button

Use to connect your Sobro to WiFi and to the Sobro App. See pg. 22-27 for more details.

6 Bluetooth Button

Use to turn the Bluetooth speakers on and off, connect/disconnect with a Bluetooth device or pair with the Bluetooth speakers of another Sobro Smart Side Table.

 Do not exceed 800 Watts between devices connected to the Sobro Side Table simultaneously.



Using Bluetooth

Connect to Bluetooth to play music, set an alarm, and more through the Sobro Smart Side Table's speakers.



Bluetooth

Connecting One Table

To connect a device to the Sobro Smart Side Table with Bluetooth, hold down the circular Bluetooth Button on the back of the Sobro for 3 seconds. A tone from the table will alert you that the Bluetooth functionality is turned on.

A device called "Sobro Smart Side Table (XX:XX)" should appear in the Bluetooth menu of your mobile device. Select this to connect the Sobro.

Pairing Two Tables Together

To pair two Sobro Smart Side Tables together, press the Bluetooth button two times on both tables. After 10-15 seconds, you should hear a tone that is synced between the two tables.

Disconnecting

To unsync your mobile device, press the Bluetooth button of the Sobro Smart Side Table to turn the Bluetooth off. This also works to disconnect two paired side tables from a phone—make sure to single-press the Bluetooth button of the table that is connected to your mobile device.

To unpair two side tables, double-press the Bluetooth button on one of the side tables.

NOTE: If you don't disconnect your Sobro Smart Side Table and the Bluetooth function on your phone is on, the Sobro will automatically connect when you are in range. Two synced Sobro Side Tables should remain connected to each other.





Sobro App & Bluetooth

These features require the Sobro App to be connected and Bluetooth to be on in order to use the Sobro speakers.



Alarm

Let the Sobro help you wake up more naturally. You can use the Sobro App as a standard Alarm or choose 'Wake Up Process' to gradually increase the volume of the alarm and the brightness of the Back Light.



Bedtime

Set your Bedtime and the Sobro Smart Side Table will automatically dim and/or play Sleep Sounds of your choice. Choose 'Bedtime Process' to ease into the program gradually.



Sleep Aid

Sleep Aid allows you to choose from a range of soothing Sleep Sounds for a better, more restful sleep.

Sobro App

These features can be controlled through the Sobro App and shared with a Guest.



Front Light & Motion Detector

Use the Sobro App to control the brightness and warmth of the Front Light. You can also access settings for the motion detector, which will turn on the Front Light automatically when you walk past.



Back Light

Turn the Back Light on and off using the dimmers on the back of the Sobro or through the Sobro App. Use the App to customize the color or choose from preset scenes.

With the Sobro App, you can also set the pattern of the Back Light to Pulse, Cycle, or Rhythmic, the latter of which will sync to music played through the Sobro Smart Side Table to the lights.

The Back Light can be paired with the Bedtime or Alarm functions for a simulated sunrise.



Cooler Drawer

 
The Cooler Drawer will turn on automatically when you plug in the Sobro Smart Side Table. **You can turn the Cooler Drawer on and off using the app.** Since the Cooler Drawer uses a thermoelectric cooling system to keep your Cooler Drawer up to 21°F cooler than the ambient temperature in the room, you never need to worry about setting the temperature.

Important: Do not store perishables (like milk) in the Cooler Drawer.
Notes: You can turn **ON** or **OFF** the cooler by switching the optional 'Cooler' of the Sobro App. The fan inside the Sobro Smart Side Table will start turning if the cooler is set to be **ON**.




Wireless Charging Pad

The rectangle at the top of your Sobro Smart Side Table is a wireless charging pad with two charging ports, one on each side. Place a compatible device on either side of the rectangle to wirelessly charge. You should see the lights on the Wireless Charging Pad illuminate to indicate that the device is charging.

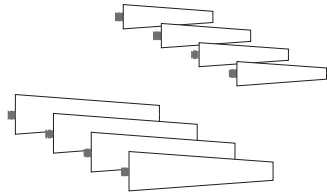


①

 The longer Legs will make your table 24" tall, while the shorter legs will make your table 21" tall. Choose the set of legs to attach accordingly.

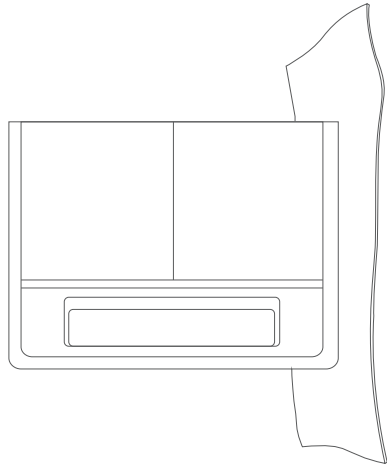


②

 When attaching four legs to your Sobro, use the foam shipping inserts or a blanket to serve as a cushion for the table to rest on. Carefully lift your Sobro Side Table and place it on its side.

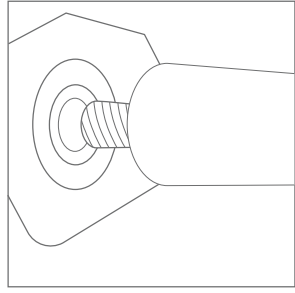

③

 Screw your desired set of legs into the Leg Bracket. Screw in each leg until it is fully secure.

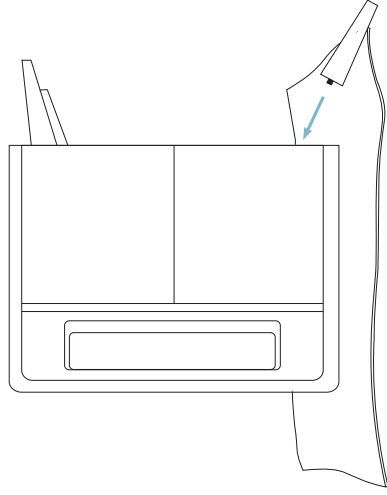

④

Repeat the process with the other three legs of the Sobro. Remember to always protect the corners without legs by using either one of the foam inserts or a blanket to avoid damaging the table.