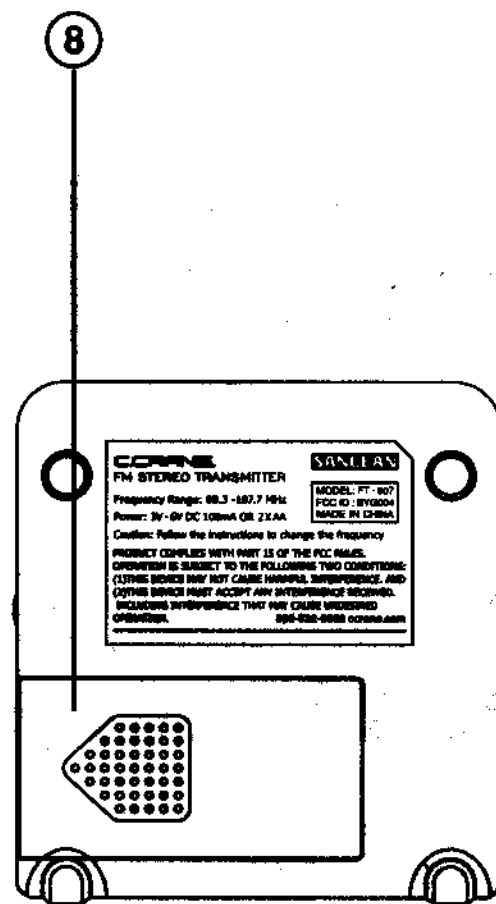 
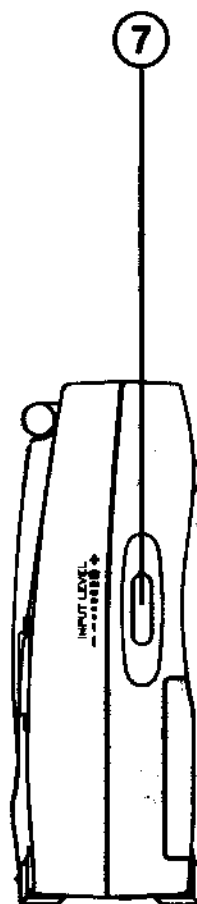 
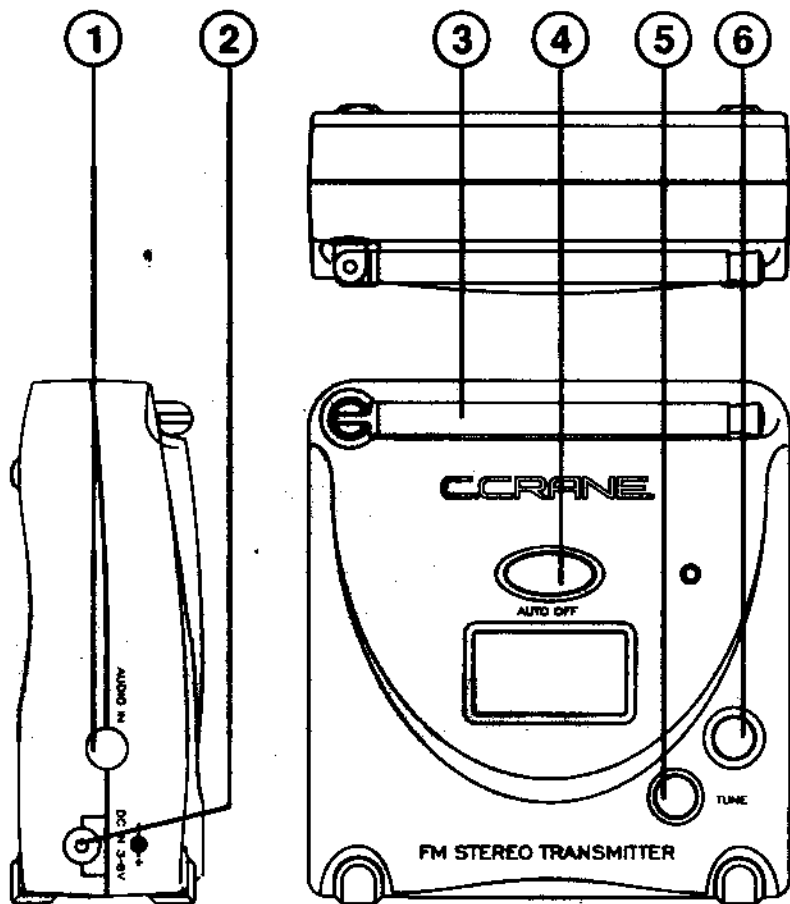 


1. AUDIO IN

3. ROD ANT.

5. TUNE DOWN


7. AUDIO LEVEL ADJ

2. DC ADAPTOR IN

4. POWER ON/OFF

6. TUNE UP

8. BATTERY

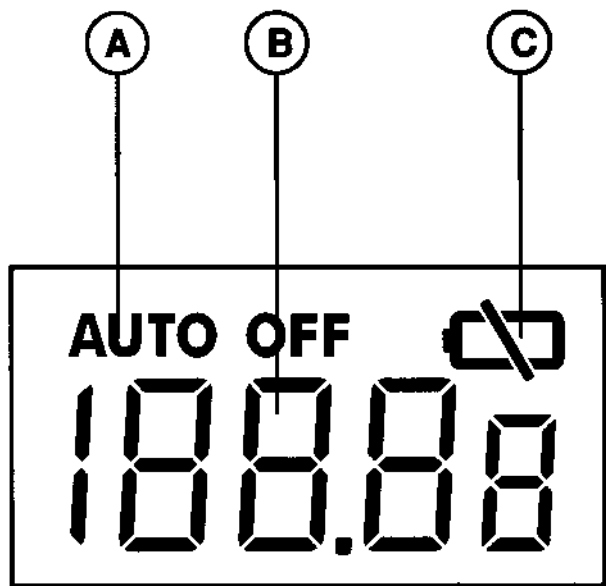

- A. AUTO POWER OFF
- B. FREQUENCY DISPLAY
- C. LOW BATTERY INDICATOR

OPERATION

Tuning:

1. Press the POWER button to turn on the TRANSMITTER.
2. A single press of the Up or Down tuning button will change the frequency up or down.



Specifications

Type: FM-Stereo TRANSMITTER

Output Power: 250 μ V MAX

Batteries: 3 volt(AAA/UM-4 size)X2

Dimension (W x H x D): 82x90x33mm

Weight: 128g

Notice: The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.