

EXHIBIT 5

Instruction Manual

Portable Transceiver System

PTS model 2001F

User Manual

Release: 2.0

WARNING: The FCC requires the user to be notified that any changes or modifications made to this device or any of the accessories provided with this unit that are not expressly approved by DESTRON-FEARING CORPORATION may void the user's authority to operate the equipment.

DESTRON◆FEARING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions. (1) This device may not cause harmful interference, and (2) this device must accept interference received, including interference that may cause undesired operation.

FCC ID: C5S2001F

Product of USA

TABLE OF CONTENTS

1. PRODUCT DESCRIPTION	1
2. READER OVERVIEW	3
2.1. LCD display	4
2.1.1. Level indicators	4
2.1.2. Reader status	4
2.1.3. Alarm indicator	4
2.1.4. File number	5
2.1.5. Tag number	5
2.2. Keyboard	6
2.2.1. Power key	6
2.2.2. Read key	6
2.2.3. Menu, Escape and Enter keys	6
3. SCANNING FOR TAGS	8
3.1. Manual scanning	8
3.2. Remote scanning	8
3.3. Automatic scanning	8
3.4. TAG ID detection	9
4. READER STATUS OVERVIEW	10
4.1. Indicators display	10
4.2. Alarm list	11
4.3. File summary	12
5. DATA LOGGING AND FILE MANAGEMENT	13
5.1. Data logging options	14
5.2. Using the file management utilities	14
5.2.1. Create File	15
5.2.2. Download file	15
5.2.3. Erase file	17
6. READER CONFIGURATION	18
6.1. Profile	18
6.2. Profile selection	19
6.3. Profile set-up	19
6.3.1. Antenna power	22
6.3.2. Store mode	22
6.3.3. Continuous mode	23

6.3.4. Toggle mode	23
6.3.5. Unique mode	23
6.3.6. Shutdown time.....	24
6.3.7. Comm speed	24
6.3.8. Send to CommPort.....	24
6.3.9. Antenna LED	25
6.3.10. Backlight mode.....	25
6.3.11. Beep sound.....	25
6.3.12. Click sound.....	25
6.3.13. Decimal tag (option).....	25
6.4. Typical operation	26
6.4.1. Hands-free tabletop operation.....	26
6.4.2. Hands-free pipe monitoring operation	27
6.4.3. Portable manual scanning with battery operation	28
7. SERIAL PORT OPERATION	30
7.1. COM port connections and configuration.....	30
7.2. General command format	30
7.3. Reader prompt.....	31
7.4. Help (H or ?).....	31
7.5. File Create (FC).....	31
7.6. File Download (FD).....	32
7.7. File Erase (FE)	32
7.8. Display Status (DS).....	33
7.9. Change profile (CP)	33
7.10. Send TAG on Comm Port (ST)	33
7.11. Reader Active (RA).....	34
7.12. Test reader Efficiency (TE)	34
7.13. Kill parameters (KP).....	34
7.14. Exception messages.....	35
8. SELF TESTS AND DIAGNOSTICS.....	36
8.1. Main battery replacement.....	37
9. READER SOFTWARE UPDATE.....	38
9.1. Vbflash program installation.....	38
9.2. Vbflash program operation.....	38
9.3. Reader software update procedure	39
10. WATERPROOF CONNECTOR REPLACEMENT PARTS LIST	42
10.1. 2001F Chassis connectors	42

10.2. Antenna connector	42
10.3. Cable connectors	42
10.4. Tajimi distributor information	42
Direct Sound Corporation	42
11. FCC CERTIFICATION AND USER'S INFORMATION.....	43
Modifications	43
Cables	43
Declaration of Conformity	43

LIST OF FIGURES

Figure 1 : PTS Model 2001F reader with 7" portable and tabletop antennas	2
Figure 2 : PTS front panel	3
Figure 3 : LCD display with LED indicator	4
Figure 4 : Keyboard.....	6
Figure 5 : Reader status overview.....	10
Figure 6 : Empty memory.....	13
Figure 7 : Filling file #0.....	13
Figure 8 : Filling file #1.....	13
Figure 9 : File management utilities	14
Figure 10 : Selecting a reader profile	19
Figure 11 : Key usage	20
Figure 12 : Profile parameters.....	21
Figure 13 : Effect of the antenna current on the read range.....	22
Figure 14 : Unique delay editing.....	24
Figure 15 : Hands-free tabletop operation	26
Figure 16 : Hands-free tabletop operation	27
Figure 17 : Portable manual scanning	28
Figure 18 : Power-up sequence.....	36
Figure 19 : Battery discharge curve.....	37
Figure 20 : Vbflash program icon	38
Figure 21 : Vbflash program window	38
Figure 22 : File menu	39

LIST OF TABLES

Table 1 : Reader alarms.....	11
------------------------------	----

Table 2 : Profile settings.....	18
Table 3 : Profile settings for Hands-free tabletop operation	26
Table 4 : Profile settings hands-free pipe monitoring operation	27
Table 5 : Profile settings for portable manual scanning with battery operation	29
Table 6 : COM1 port connections (DB9 connector).....	30

TRADEMARKS AND NOTICES



This manual contains valuable proprietary information. It should not be published, copied or communicated to any person without Destron-Fearing authorization.

Windows is a registered trademark of Microsoft Corp.

1. PRODUCT DESCRIPTION

The 2001F Portable Transceiver System (PTS) is a high performance unit specifically designed for portable operation. The unit includes one serial port that may be connected to a computer, for controlling the reader, monitoring the installation, and logging the RF tag numbers.

The PTS main features are the following:

- 2 lines by 16 characters backlight LCD display.
- 5 key keyboard that allows local operation and reader's configuration.
- EIA 232 communication port for connection to a computer for maintenance, menu functions, installation monitoring, and data logging activities.
- Field upgradable software.
- Data logging memory for up to 6,400 tags.
- Internal battery or external AC/DC power operation.
- Detachable antenna.
- Sturdy shockproof case.
- Water-resistant.

WARNING: When connecting the antenna cable, the end marked transceiver (Ferrite) must be connected to the 2001F. The RS232 cable, if used, must be attached to a grounded connector. Failure to comply may result in the exceeding of FCC limits and undesirable operation of the unit.

The next figure illustrates the Model 2001F PTS unit with the 7" portable and tabletop


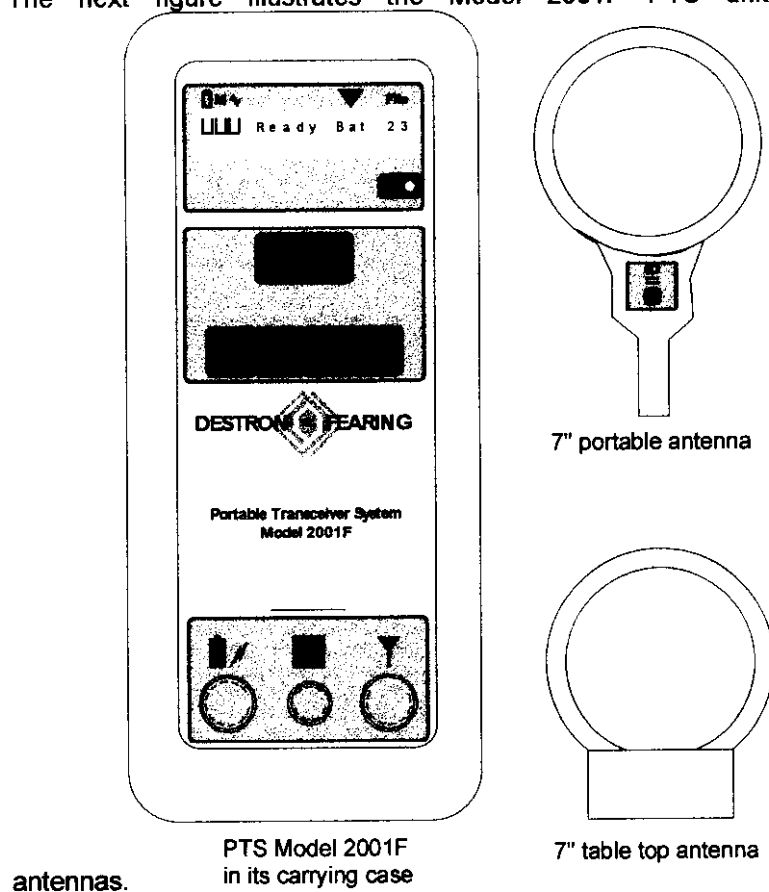


Figure 1 : PTS Model 2001F reader with 7" portable and tabletop antennas

2. READER OVERVIEW

The PTS main unit is illustrated in the next figure, showing the main components:

- LCD display
- LED indicator
- Context sensitive keyboard
- Audible alarm
- System connectors

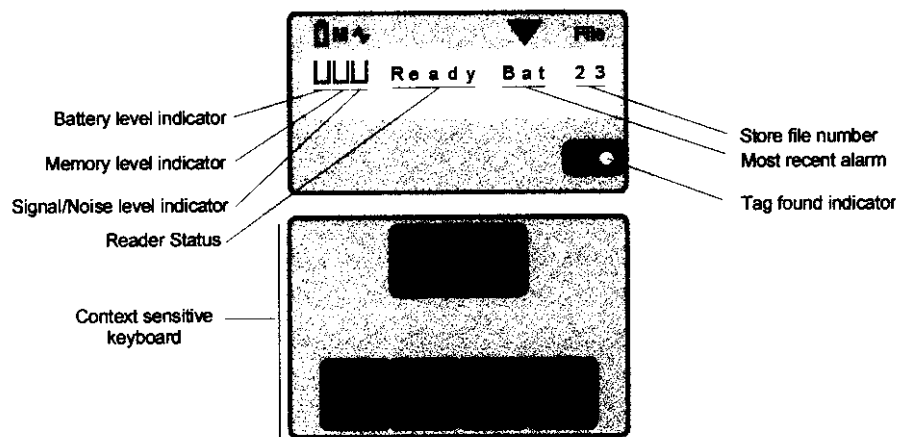

Portable Transceiver System
Model 2001F

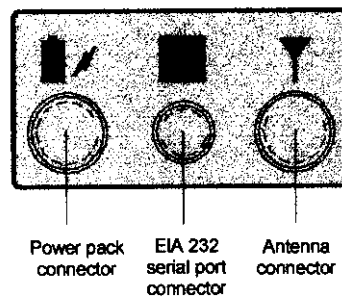


Figure 2 : PTS front panel

2.1. LCD display

The LCD display is a 2 line by 16-character backlit unit that displays TAG IDs and reader's status information. The backlight can be turned on, off or be controlled automatically to save battery energy.

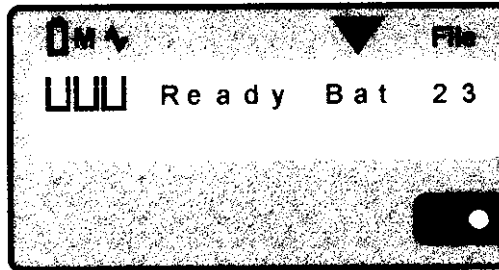


Figure 3 : LCD display with LED indicator

The LED indicators  located below the display and on the antenna keyboard indicate the presence of a tag in the antenna field. The LED is turned on each time a tag message is decoded successfully.

2.1.1. Level indicators

On the first line of the LCD, the unit features 3 level indicators that provide information about:

-  Battery voltage level. It should be noted that when the power is fed from the external power pack, the level indicator is replaced by the  "plug" symbol, indicating the unit power is fed by an external source. The battery percentage is based on a linearization of the battery discharge curve.
- M** Data logging memory use. Up to approximately 6,400 tags (records) can be stored in the data logging memory. The memory is partitioned as variable length "files" (a single file can occupy the entire memory) that are extended as new tag IDs are stored. Up to 32 different files can be created and managed using the file management utilities.
-  Signal or noise level detected by the reader. When the reader detects an excessive level of noise, an alarm is indicated. The level changes in less than 1 second using an accumulating averaging function.

The level indicators are animated from low to high  , providing a quick overview of the reader status.

2.1.2. Reader status

The next display field is used to display the reader activity and the tag search result. The unit can display:

Ready: The reader is inactive, waiting for a user command from the keyboard or from the computer port. When the automatic shutoff feature is active, the unit will automatically turn off after the delay time setup by the user expires.

Scan: The reader is active and searching for a tag. The unit is finding no tag.

Found: the unit has found a new tag. The tag number found by the unit is different from the previous one found by the unit.

Same: The unit has found a tag but its number is the same as the last one detected by the unit.

2.1.3. Alarm indicator

The next 3 character zones designated by the warning indicator  are used to indicate the presence of an alarm. The alarms are:

ANT:	No antenna:	Antenna failure (disconnected or failed)
ANC:	Analog comm:	Analog board communication problem (disconnected or failed)
POW:	Low battery:	Low power level in the internal battery. It should be recharged as soon as possible.
LIT:	Low lithium:	Low voltage level at the memory/real-time clock back-up lithium battery. The back-up lithium battery has an expected shelf life of 5 years, which is reduced when the unit is powered off for a long period of time since current is drawn from it in order to preserve the RAM memory and the real-time clock content. The back-up battery compartment is located on the MPU board. It should be replaced with a CR2016 type lithium battery (Eveready, Toshiba or any other battery manufacturer).
ANF:	Analog fail:	The reader has detected a failure on the analog board. The user should check for the presence of metal around the antenna. If it's not the case, the unit should be returned to the supplier for repair.
MML:	Memory low:	The data logging memory is filled up to 90% of its capacity. Files must be downloaded to the computer or erased from the reader memory. Up to approximately 6,400 tags can be stored in the memory.
MMF:	Memory full:	The data logging memory is full. New tag IDs will not be stored.
OVR:	Overrun:	Environmental noise is detected and the reader is unable to read tags. The antenna should be relocated at a different position using the $\blacktriangledown$ signal level indicator, to find the lowest possible interference level $\square$.

The alarm messages are sent on the serial port as they occur. A complete alarm list can be displayed on the LCD using the system summary feature available by pressing the Enter key from the main display. Alarms will not be displayed during file downloading.

2.1.4. File number

The last field on the first LCD line displays the file number in which the tags are stored if the Store option is enabled. Up to 32 different files can be created on the reader using the file management utility (file 0 to 31).

2.1.5. Tag number

The second line of the LCD displays the tag ID in hexadecimal form as following (manufacturer ID followed by universal identification code, capital letters):

333 Found 3D9.1748D0293F

When the unit stops scanning without finding a tag, the unit displays "No tag found".

Tag ID can also be displayed in decimal form using the "Decimal tag" option. The display will then show the tag number as following (manufacturer ID followed by universal identification code):

333 Found 985.100006080033

2.2. Keyboard

The unit is equipped with a 5-key context sensitive keyboard, which means that the use of the keyboard is adapted to the information being displayed on the LCD (see figure 4).



Figure 4 : Keyboard

2.2.1. Power key

The unit is activated/deactivated using the POWER key. When applying power, the unit performs self-diagnostics and either starts scanning for tags ("Continuous" scanning mode active) or waits for a user command ("Continuous" scanning mode inactive). Once active, pressing the POWER key again can turn off the unit. Please refer to the "Power-up sequence" section for more details.

2.2.2. Read key

The READ key is used to activate/deactivate the scanning of tags. In order to configure the reader for a specific application, it is important to understand the following Scan mode options:

Toggle: The *Toggle mode* defines the operating mode of the READ key. When the *Toggle mode* is Off, the READ key has to be pushed and held for the reader to scan for tags (push-to-read operation). This option is normally used for handheld operation. When the *Toggle mode* is On, pushing READ momentarily will start the tag scanning and pushing it again will stop the scanning mode and return it to the Ready state. The *Toggle mode* is used for Hands-free operation such as in a fish tagging session using the tabletop antenna.

Continuous: The *Continuous mode* defines the action of the reader if a valid TAG ID is found. When the *Continuous mode* is Off, the reader will stop its scanning and return to the Ready state if a valid TAG ID is found. When the option is *Continuous mode* is On, the reader will not stop scanning if a valid TAG ID is found. This is the normal operating mode for a pipe monitoring installation or hands-free operation.

Unique: The *Unique mode* defines the reaction of the reader when the same tag is detected several times. When the *Unique mode* is Off, the tag will be enunciated as long as it remains in the detection range of the reader. When the *Unique mode* is On, the TAG ID will only be enunciated if it is different from the previous TAG ID detected. Therefore, the TAG ID will only be enunciated once even if it remains in the detection range of the reader. When the Unique mode is in *Delay mode*, the tag will be re-enunciated until the delay is expired. Therefore, the tag will be enunciated immediately when it is first presented in the detection field, and will be re-enunciated at the expiration of the delay when it remains in the detection field.

The Scan options can be configured from the keyboard.

2.2.3. Menu, Escape and Enter keys

The MENU, ESCAPE and ENTER keys are context sensitive navigation keys used to access:

- the reader overview that provides detailed information about the reader operation;
- the file management utilities that allows creation, deletion and downloading files to a computer using the COM port;

- The configuration menu that allows the setup of up to 3 different user profiles.

The key usage is described in the next chapter.

3. SCANNING FOR TAGS

The tag scanning process can be started and stopped in different ways:

- **Manually** using the READ key;
- **Remotely** using the serial port commands;
- **Automatically** by the reader, defined by the configuration set-up.

3.1. Manual scanning

Manual scanning is done from the PTS front-panel keyboard using the READ key.

With the *Toggle mode* Off:

- Push and hold the READ key to scan for tags. Releasing the READ key will set the reader back to the *Ready* mode.

With the *Toggle mode* On:

- In the *Ready* mode, momentarily push the READ key to *Scan* for tags;
- During the tag *Scan*, momentarily push the READ key to return to the *Ready* mode.

3.2. Remote scanning

The RA command can be used to start and stop the scanning from the serial port. Regardless of the *Toggle mode*, RA1 will start the *Scan* mode and RA0 will return the reader to the *Ready* mode. RAZ will shutdown the reader. Please refer to the "Reader Active (RA)" section for more details.

RA command structure

RA{1|0|Z} Reader Active ON|OFF|RESET

Example

```
01> RA0.
MESSAGE: Reader is idle
01> RA1.
MESSAGE: Read mode
01> RAZ.
MESSAGE: Shutdown!
```

3.3. Automatic scanning

The reader will automatically start the *Scan* mode after a reset or a power-up when the *Continuous Scan* option is selected. The scanning process can then be stopped and resumed using the READ key or the RA serial port command.

3.4. TAG ID detection

When scanning, the following annunciation process occurs upon detection of a valid TAG ID:

1. The TAG ID is displayed on the second LCD line (manufacturer ID followed by universal code in hexadecimal format unless the Decimal tag option is selected). If the tag number is different from the preceding tag found, the first line would show "Found". If the number is the same as the preceding tag, the display will show "Same".

333 Found 3D9.1748D0293F

2. The LED indicators (below the display and on the antenna) are illuminated each time a valid TAG message is detected. Therefore, the LED will continue to flash until the tag is removed from the antenna detection range.
3. The beeper is activated briefly if the "Beeper" option is turned On.
4. The TAG ID message is sent on the COM if the "Send to COM port" is enabled. This option can be turned on or off from the keyboard menu or the serial port.
5. If any of the *Store* options are selected (*All* or *Search*), the TAG ID is stored in the memory file.
6. If the *Continuous mode* is off, return the reader to the *Ready* state, otherwise the unit will continue searching for tags.

If the scanning is interrupted manually or remotely without finding a new TAG ID, the following message will be displayed:

333 Ready No TAG found

4. READER STATUS OVERVIEW

The system status overview will allow the user to examine detailed reader status from the display, including:

- Battery level, memory use and tag signal level;
- Complete list of alarms existing on the reader;
- Record count in files.

The system status overview consists of 3 different screens and can be accessed from the main display using the ENTER key as in the following figure.

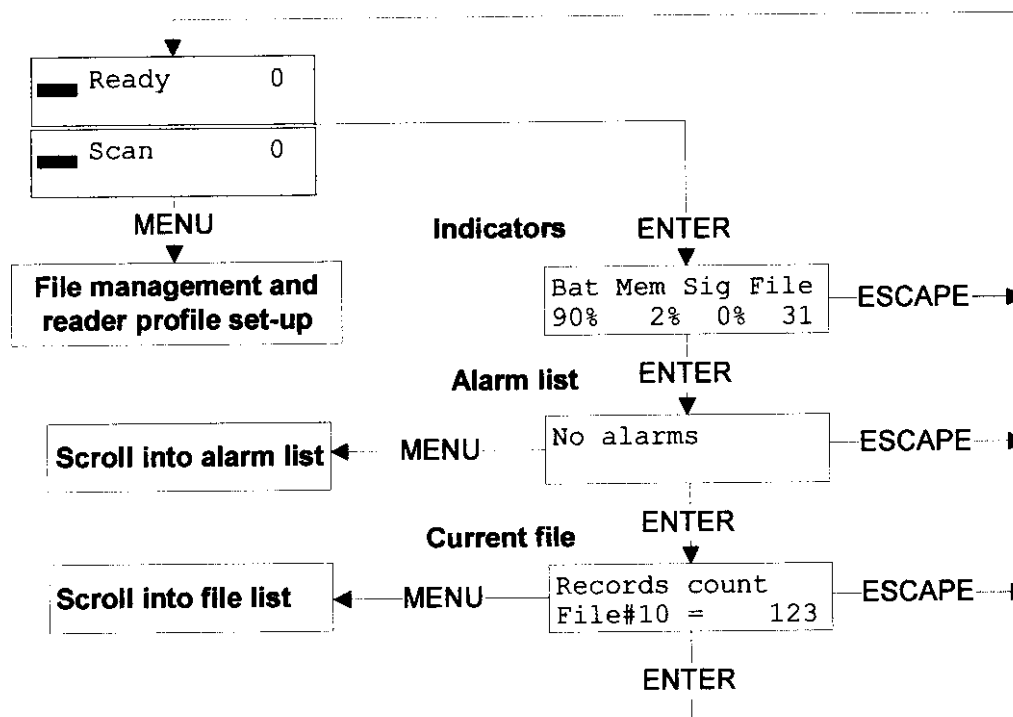


Figure 5: Reader status overview

4.1. Indicators display

The indicator's display shows the following information:

- Bat** Voltage level (%) of the battery (when operated from internal battery) or from the external supply (when operated from the power pack or from any other external source of supply). It should be noted that the battery voltage is susceptible to temperature changes, and a 5% voltage difference can be seen when the battery is cold or warm.
- Mem** Total data logging memory use (%). The reader can store up to approximately 6,400 tags.
- Sig** Level of signal at the reader input (%). When the reader is in *Ready* mode, the signal level should be 0% since the antenna is not active. However, when the reader is in *Scan* mode, the signal level should reflect the TAG or the noise signal level. For best operation, when operating the reader near a CRT or a TV, the user should use the indicator and move the antenna until the signal level is minimized.

File Indicates the current file number in which the TAG IDs are stored. The File field is empty when none of Store options are selected.

Pressing the ENTER key again will show the Alarm list, or ESCAPE will return to the main display.

4.2. Alarm list

The alarm list allows the user to see a detailed description of the alarms present in the reader. When a new alarm is detected, the reader will beep twice, a detailed alarm message will be sent on the COM port and an abbreviated alarm message will be displayed on the main screen. The detailed alarm message can also be seen on the alarm's list. Under normal conditions, the following message is displayed on the alarm list screen:

No alarms

The following alarm messages can be displayed:

Table 1 : Reader alarms

Main display Message	Alarm Message	Description
	No alarms	Normal operating conditions
ANT	No antenna	Antenna failure (disconnected or failed)
POW	Low battery	Low power level in the internal battery (10 to 20 minutes remaining). It should be recharged as soon as possible.
LIT	Low lithium	Low voltage level at the memory/real-time clock back-up lithium battery. The back-up lithium battery has an expected shelf life of 5 years, which is reduced when the unit is powered off for a long period of time since current is drawn from it in order to preserve the RAM memory and the real-time clock content. The back-up battery compartment is located on the MPU board. It should be replaced with a CR2016 type lithium battery (Eveready, Toshiba or any other battery manufacturer).
ANC	Analog comm	The reader is not able to communicate with the analog board. The reader is either overloaded or the analog board has failed.
ANF	Analog fail	The reader has detected a failure in the analog board. It should be returned to the supplier for repair.
MML	Memory low	The data logging memory is filled up to 90% of its capacity. Files must be downloaded to the computer or erased from the reader memory. Up to approximately 6,000 tags can be stored in the memory.
MMF	Memory full	The data logging memory is full. The new tag IDs are not stored any more.
OVR	Overrun	Environmental noise is detected and the reader is unable to read tags. The antenna should be relocated at a different position using the  signal level indicator which should be as low as possible  .

A down arrow (↓) is displayed in the right upper corner side of the display when more than one alarm exists. The user must then press the MENU key (↓) to see all the existing alarms.

Memory low



Pressing the ENTER key again will show the file summary, or ESCAPE will return to the main display.

4.3. File summary

The file summary displays:

- The file number in which TAG IDs are stored if any of the *Store* options enabled;
- The number of TAG IDs present in the file.

To view the status of the other files, use the **MENU** key (↓).

At this point, pressing the **ENTER** or **ESCAPE** keys will return to the main display.

A file can store up to approximately 6,400 TAG IDs (limited by the memory size).

5. DATA LOGGING AND FILE MANAGEMENT

The PTS reader has a data logging memory that can store up to approximately 6,400 TAG IDs. Like a computer disk, the data logging memory is partitioned as "files". Up to 32 files can be created (file #0 up to #31), and the file size is limited by the data logging memory capacity.

The file management utilities allow the user to create, erase and download files to a computer. After erasing the entire memory using the Erase All File command, the file #0 is automatically created by the reader as the **Current** file. The entire memory space is then available to that file for data logging as in the following figure.

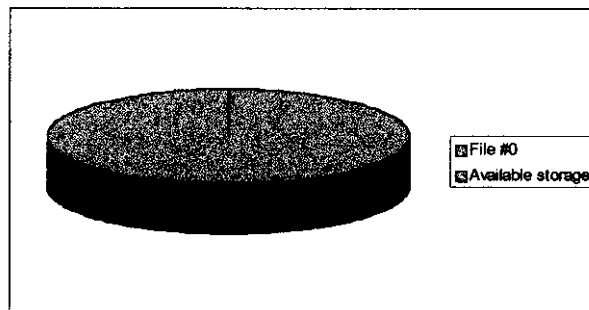


Figure 6 : Empty memory

As TAG IDs are stored in file #0, the file size will increase, the capacity is only limited by the available storage memory. (Figure 7)

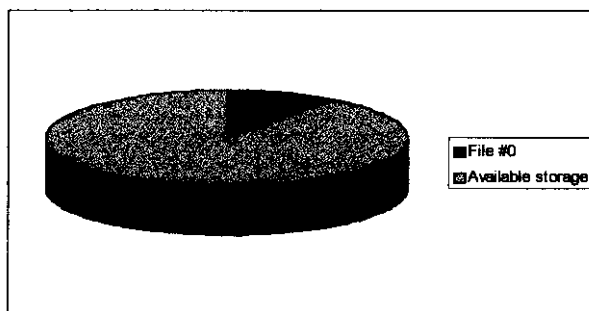


Figure 7 : Filling file #0

By creating a new file, the current file will close, and the remaining memory is now available to the new **Current** file (in this case, file #1). (Figure 8)

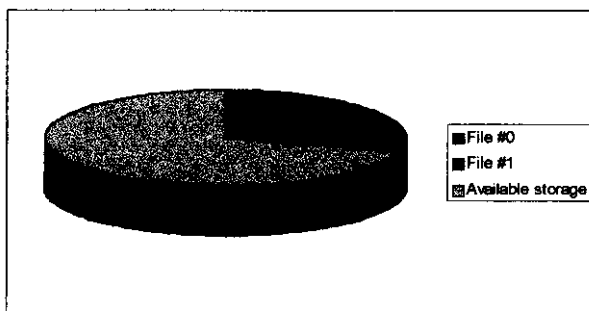


Figure 8 : Filling file #1

It should be noted that each time a file is created, memory space is reserved for the file handling (approximately 54-tag memory location for each file created).

The data logging memory is protected by a lithium back-up battery that prevents accidental data lost when the main battery is low or replaced. This button style back-up battery is located on the MPU board and has an expected life of 5 years (CR2016 made by Eveready, Toshiba or any other battery manufacturer).

5.1. Data logging options

The PTS reader offers the following data storage options:

Off: The reader data-logging feature is disabled.

All: All the tag IDs found by the reader are stored in the current file number selected by the user.

Search: Only the tag IDs not found in the current file selected by the user are stored. This option prevents the multiple storage of the same tag ID in the file.

It should be noted that these store options are conditioned by the "Unique mode" option which prevents the processing of a tag when it remains in the antenna field for a long period of time (more than one ID message detected from the same tag processed as a single message). The setting of the different Store options is covered in the next chapter.

5.2. Using the file management utilities

The file management utilities can be accessed using the MENU key from the main display as in figure 9.

To access one of the file management utilities, keep the MENU key activated (automatically will scroll, or step through the menu by pressing it several times) until the desired function is displayed and then use the ENTER key to select it. If you go beyond the file management utilities, you can always use the ESCAPE key to start over.

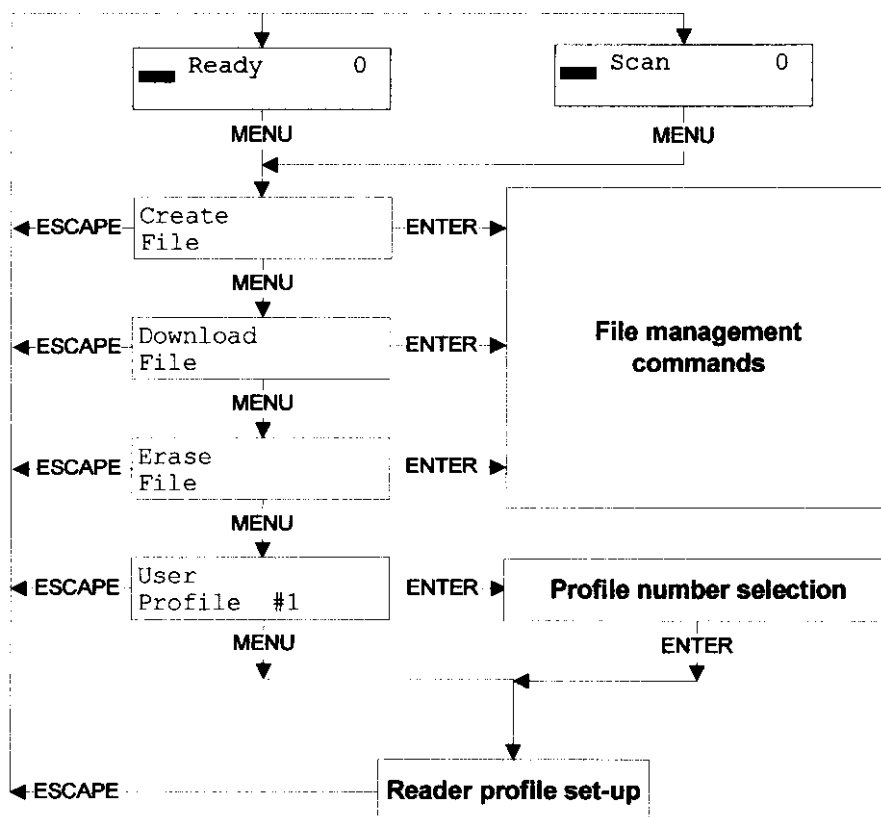


Figure 9 : File management utilities

5.2.1. Create File

The Create file function allows you to close the current file and create a new one. It should be noted that the file number 0 is automatically created by the reader when you erase all files, so that it is not necessary to create a file after you erase all of them.

From the main screen, press the MENU key until "Create File" is displayed, and then use the ENTER key to select the function. The following screen will then be displayed:

```

Create
File  * No  ↑

```

The star symbol "*" indicates the current selection (No : you don't want to create a new file). The up arrow "↑" on the right side invites you to press the up arrow key (ESCAPE key) since more options are available. Pressing the up arrow key will show the next selection:

```

Create
File      Yes ↓

```

If you want to create a new file, then press the ENTER key. Otherwise the reader shows you to use the down arrow "↓" key (MENU key) to display the next choice (which will be No). Simply then use the ENTER key to avoid the creation of the new file.

After the ENTER key is pressed, the reader will return to the menu choices:

```

Create
File

```

At this point, pressing:

- ENTER will re-enter in the Create File utility;
- MENU will display the next menu item (Download File);
- ESCAPE keys will return to the main display.

5.2.2. Download file

The Download file function allows you to download the current file selection (Curr.) or all the files within the reader (All) to a computer connected on the COM port. Also any individual file may be downloaded (Ex. Fd0,fd1,fd2.....fd31)

In order to download a file, you must prepare the reader and the computer as following:

1. Connect the communication cable between the reader connector identified with the computer symbol  and the computer serial COM port (use a DB9-DB25 adapter if necessary);
2. Make sure that both the computer and the reader are at the same baud rate;
3. Use any standard communication programs such as Terminal  or ProComm .

Destron-Fearing Corp.**User manual**

The format of a file download "All" is as following ("Curr." would have only one file):

File #0
 3D9.1748D3AD9F
 3D9.1748D3AE8B
 3D9.1748D3AF8E
 3D9.1748D3AE21

File #1
 3D9.1748D3B273
 3D9.1748D3AFBD
 3D9.1748D3AE66
 Done!

A file number indicator followed by the TAG IDS within that file separates each file. The "Done!" message indicates that the download command is terminated.

To download a file from the main screen, press the MENU key until the "Download File" menu is displayed and then use the ENTER key to select the function. The following screen will then be displayed:

Download		
File	*No	↑

The star symbol "*" indicates the current selection (No: you don't want to download a file). The up arrow "↑" on the right side invites you to press the up arrow key (ESCAPE key) since more options are available. Pressing the up arrow key will show the next selection:

Download		
File	Curr.	↑

If you want to download the current selected file, then press the ENTER key. Otherwise the reader shows you by the up/down arrow "↓" key to use either the up arrow "↑" key (ESCAPE key) to download All the files or the down arrow "↓" key (MENU key) to return to the preceding choice (No).

Download		
File	All	↓

To make your selection, simply use the ENTER key when it is displayed on the screen. When the Download command is executing, the reader will display the file being downloaded as following:

Downloading	
File	#00...

When the operation is terminated (it may take few seconds), the reader returns to the menu choices:

Download	
File	

At this point, pressing:

- ENTER will re-enter in the Download File utility;
- MENU will display the next menu item (Erase File);
- ESCAPE keys will return to the main display.

5.2.3. Erase file

The Erase File function allows you to erase the current file selection (**Curr.**) or all the files within the reader (**All**). It should be noted that a new file is automatically created after erasing the current one (the new file will have the same number) or all of them (the file number 0 is then automatically created by the reader when you erase **All** files).

From the main screen, press the MENU key until the "Erase File" menu is displayed and then use the ENTER key to select the function. The following screen will then be displayed:

Erase	
File	*No ↑

The star symbol "*" indicates the current selection (**No**: you don't want to erase a file). The up arrow "↑" on the right side invites you to press the up arrow key (ESCAPE key) since more options are available. Pressing the up arrow key will show the next selection:

Erase	
File	Curr. ↓

If you want to erase the current selected file, then press the ENTER key. Otherwise the reader shows you by the up/down arrow "↓" key to use either the up arrow "↑" key (ESCAPE key) to erase **All** the files or the down arrow "↓" key (MENU key) to return to the preceding choice (**No**).

Erase	
File	All ↓

To make your selection, simply use the ENTER key when it is displayed on the screen. When the Erase command is terminated, the reader returns to the menu choices:

Erase	
File	

At this point, pressing:

- ENTER will re-enter in the Erase File utility;
- MENU will display the next menu item (User Profile);
- ESCAPE keys will return to the main display.

6. READER CONFIGURATION

One of the exclusive features of the PTS Reader is its ability to be adapted to several types of operations and applications. The PTS operation can be tailored to the exact customer needs using the configuration setup menu operated from the front panel keyboard/display.

6.1. Profile

Instead of changing individual option settings when using the reader for a specific type of application (i.e. fish tagging session, pipe monitoring, hand-held operation, etc.), the user can define up to 3 different sets of parameters called "Profile" and recall a specific set at the time of use. Each of the 3 profiles includes 14 options that define the operation of the reader, such as store control, use of the COM port, etc. The profiles are stored in back-up battery protected RAM memory and therefore these settings are protected during power outage (such as when the internal battery is low and being replaced).

Once the profiles have been set up for specific operations, the user will need to recall the appropriate one at the time of use. Each profile includes the following settings:

Table 2 : Profile settings

Profile item	Available settings	Description
Antenna Power	10 to 100%	Antenna current setting, from 10 to 100%
Store Mode	No	No data logging in memory. TAG IDs are sent to the COM port according to the <i>Send to CommPort</i> and <i>Unique</i> settings.
	All	All TAG IDs detected are logged. When <i>Unique</i> is On, only TAG IDs different from the last one are logged.
	Search	Only TAG IDs not found in the current file are stored.
Continuous Mode	Off On	Reader returns to Ready mode when a TAG is detected. Must be turned off for manual Scan. Reader remains in Scan mode when a TAG is detected. Automatic scanning when reader is powered on. Must be turned on for hands-free operation.
Toggle Mode	Off	User must push READ to scan. Releasing READ returns to Ready mode. Must be turned off for manual scanning.
Unique Mode	On	READ used as Push-On/Push-Off. Must be turned on for hands-free operation.
	Off	All TAG ID messages from the same tag are processed
	Delay (1 to 9999 seconds) On	Tag detection based on the <i>Delay</i> setting. A new TAG ID will be detected immediately when placed in the detection field, but will only be re-enunciated after the <i>Delay</i> setting expires when it remains in the field. Only one TAG ID message from a tag is processed. Prevents a successfully scanned TAG from being read twice in a row.
Shutdown Time	0 to 5 minutes	Allow the reader to automatically shut down when not active (<i>Ready</i> mode) in order to save battery energy. A 0-minute setting will not cause the reader to shutdown automatically. The reader will not shut off when in <i>Scan</i> mode since it is active. The shutdown timer is rearmed each time a TAG ID is detected or a keypad activity is detected.
Comm Speed	2400, 9600, 19200, 57600	COM port baud rate setting. The reader must be turned Off and then back On for the new setting to be effective. It should be noted that the 19200 BPS setting is required for the software update using Vbflash.
Send to CommPort	Off	TAG IDs not sent on the COM port. Only alarm and status messages are sent.
	On	TAG IDs sent on the COM port according to the <i>Store Mode</i> setting.
Antenna LED	Off	The TAG detect LED on the antenna is active.
	On	The TAG detect LED on the antenna is inactive, causing no interference with the antenna. Should be turned ON when using the antenna on a pipe.
Backlight	Off	The LCD backlight is turned off in order to save battery energy.
	On	The LCD backlight is always on (requires more battery energy).
Beep Sound	Saving	The LCD backlight is only activated when there is keypad activity or when a TAG is detected.
	Off	The beeper is not activated when detecting a TAG.
Click Sound	On	The beeper is activated when detecting a new tag or when satisfying to the <i>Store Mode</i> setting.
	Off	No tactile feedback when pressing a key on the keypad.
Decimal tag (option)	On	Tactile feedback enabled when pressing a key on the keypad.
	Off	The TAG ID is processed in hexadecimal form (display and CommPort)
	On	The TAG ID is processed in decimal form (display and CommPort)

6.2. Profile selection

To select a profile for usage or modification, please refer to the next figure:

1. Press the **MENU** key until the "Use Profile #n" menu is displayed. If the desired profile number is displayed, use the **ESCAPE** key to return to the main screen.
2. If a profile number change is required, then use the **ENTER** key to change the setting.
3. Use the **MENU** or **ESCAPE** keys as indicated on the right side of the display to select a different profile number. The current setting is indicated with the "*" symbol preceding the number.
4. When the desired profile number is displayed, use the **ENTER** key to select it. The reader will then leave the profile *Edit* mode.
5. Use the **ESCAPE** key to return to the main screen or the **MENU** key to view or modify one of the profile items.

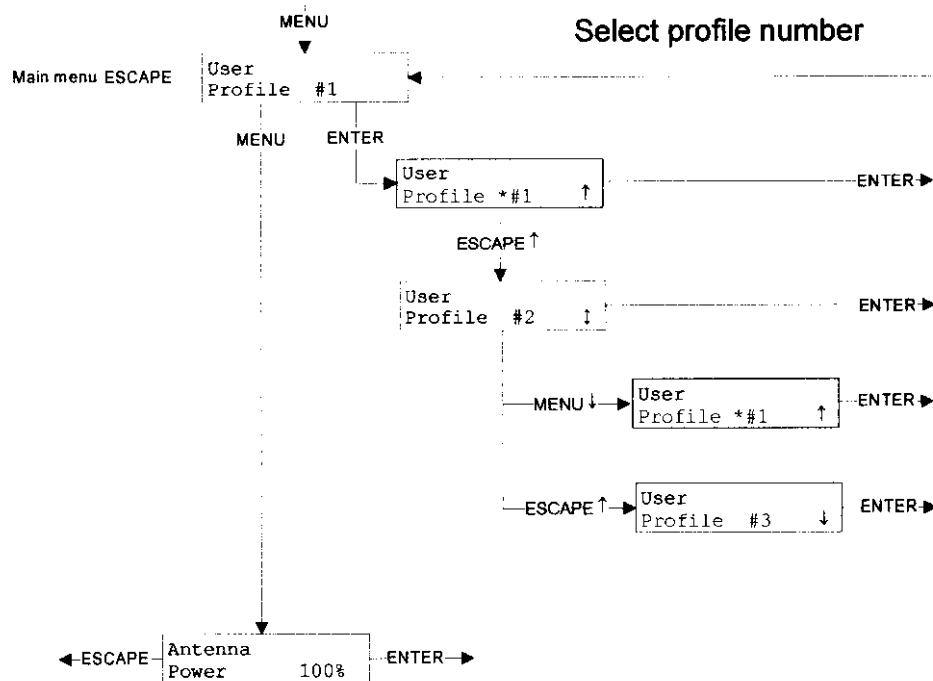


Figure 10 : Selecting a reader profile

6.3. Profile set-up

The reader profile settings may be changed from the keypad. The next figure illustrates the operation of the keys. It can be seen that:

- From the main screen, the **MENU** key is equivalent to a down arrow (↓) and allows the display of the various menu items without selecting them;
- The **ESCAPE** key is equivalent to an up arrow (↑), and allows the rapid escape from the current menu item the main screen.
- The **ENTER** key is equivalent to a computer enter key (↵), and allows the selection of the displayed menu item for modification.

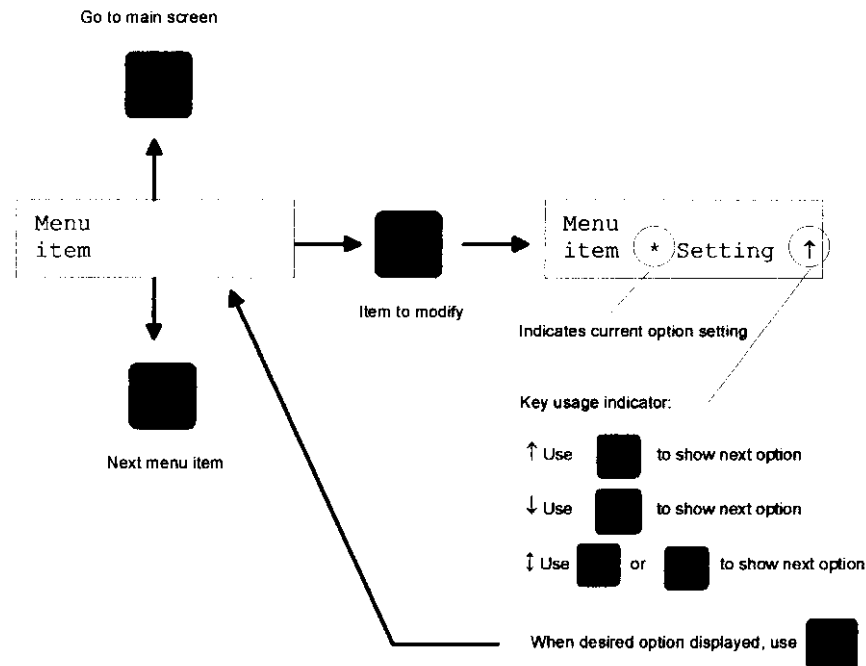


Figure 11 : Key usage

In order to change the content of a profile, use the following procedure illustrated on the following page.

1. Select the profile number as described in the preceding section if necessary.
2. Once done, press and hold the **MENU** key until the desired profile item is on the screen.
3. Use the **ENTER** key to enter in *Edit* mode. The reader will then display the current setting of the menu item (indicated by a "*" symbol on the left of the setting) and will show either :
 - an up arrow (↑), indicating that the **ESCAPE** key must be pushed to view the next available setting;
 - a down arrow (↓), indicating that the **MENU** key must be pushed to view the next available setting;
 - or an up/down arrow (↑↓), indicating that both the **ESCAPE** key and the **MENU** key can be used to view the next available setting.
4. Once the desired option setting is displayed on the screen, press the **ENTER** key to activate it and the reader will return to the menu display, leaving the *Edit* mode.

The following figure illustrates the list of profile parameters.

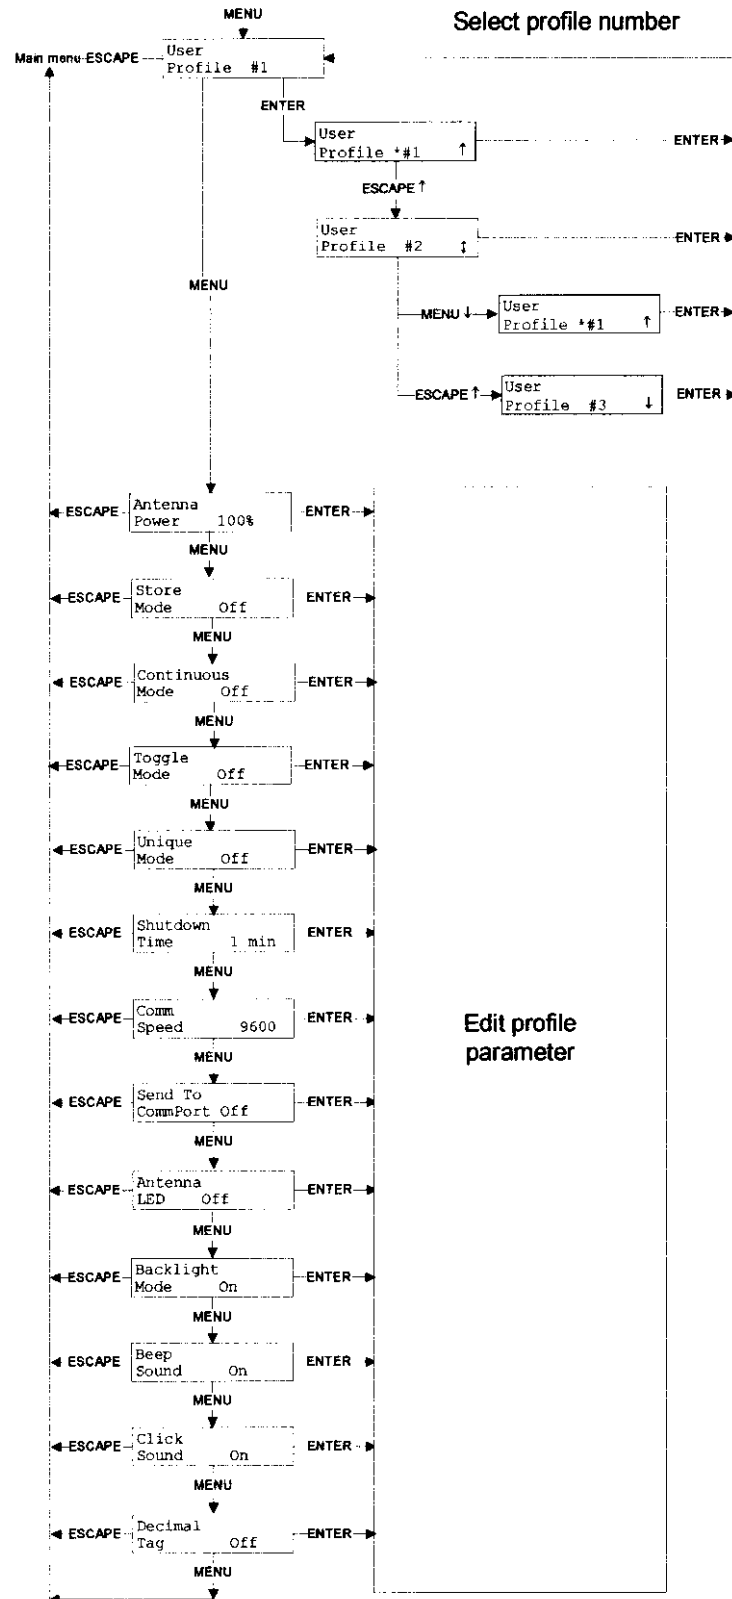


Figure 12 : Profile parameters

6.3.1. Antenna power

The *Antenna power* setting defines the current level in the antenna. It is adjustable from 20% to 100% of the nominal value. The Antenna power setting affects 2 important characteristics of the reader:

- the power consumption : using high power consumes more battery energy;
- the read range: the higher is the current, the better is the read range, especially for worst tag orientation (tags perpendicular to the antenna loop). However, high current also creates a dead spot (no detection) close to the antenna center since the tag is "saturated" (too much energy radiated in the tag which has then problems sending its message).

The effect of antenna current on the read range is illustrated in the next figure:

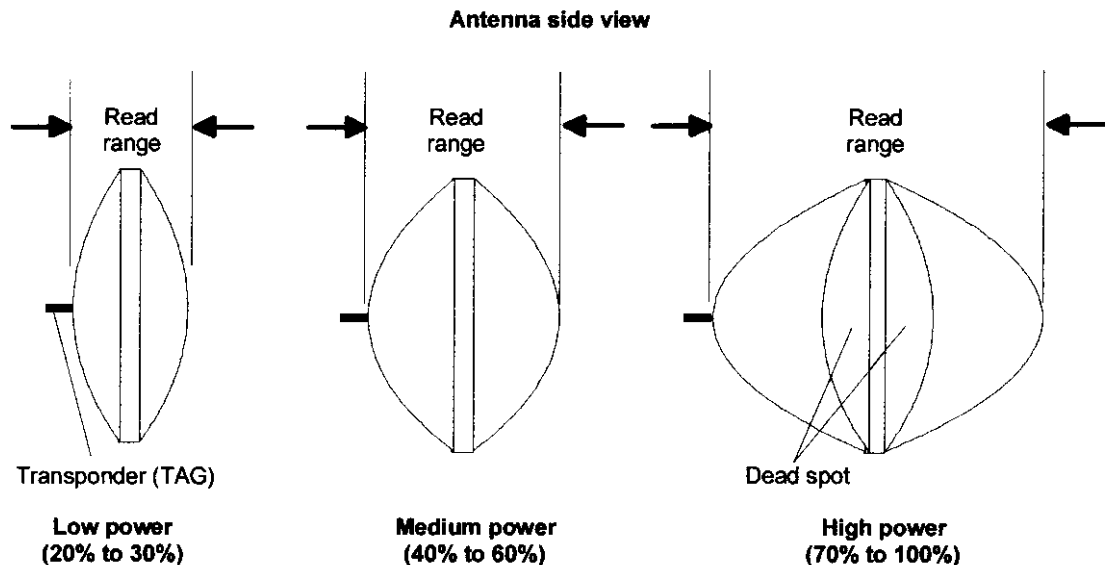


Figure 13 : Effect of the antenna current on the read range

Typically, you should use the following *Antenna power* settings according to the following applications:

- | | |
|----------------------------|--|
| Low power (20 to 30%): | Hand-held battery operation (manual scanning), where the prime criterion is battery energy conservation; |
| Medium power (40% to 60%): | Pipe monitoring (continuous hands-free operation), where the prime criterion is having the best read range without a dead spot in order to have the biggest number of good TAG messages when the fish is swimming through the antenna; |
| High power (70% to 100%): | Hands-free tabletop operation with external power (fish tagging session), where the prime criterion is the extended read range which will provide fast detection as the transponder approaches the antenna. |

6.3.2. Store mode

The PTS reader offers the following data storage options:

- Off:** The reader data-logging feature is disabled. However, when the "Send to CommPort" option is enabled, the TAG IDs are sent to the COM port according the "Unique mode" setting, allowing the same tag to be sent only once or several times in a row.
- All:** All the tag IDs found by the reader are stored in the **Current** file number selected by the user.
- Search:** Only the tag IDs not found in the **Current** file selected by the user are stored. This option prevents the multiple storage of the same TAG ID in the file. If enabled, the messages on the COM port are sent according to the "Search" setting.

It should be noted that the *Store mode* is affected by the *Unique mode* setting.

6.3.3. Continuous mode

The *Continuous mode* defines the action of the reader if a valid TAG ID is found. When the *Continuous mode* is Off, the reader stops scanning and returns to the *Ready* state if a valid TAG ID is found (manual scanning). When the *Continuous mode* is On, the reader will not stop scanning when a valid TAG ID is found. This is the normal operating mode for Hands-free operation.

6.3.4. Toggle mode

The *Toggle mode* defines the operating mode of the READ key. When the *Toggle mode* is Off, the READ key has to be pushed and held for the reader to scan for tags (push-to-read operation). This option is normally used for hand-held operation.

When the *Toggle mode* is On, pushing READ momentarily will start the tag scanning and pushing it again will stop the scanning mode and return it to the *Ready* state. The *Toggle mode* is used for Hands-free operation such as in a fish tagging session using the tabletop antenna.

6.3.5. Unique mode

The *Unique mode* defines the reaction of the reader when the same tag is detected several times (one read per TAG mode). When the *Unique mode* is Off, the tag will be enunciated as long as it remains in the detection range of the reader.

When the *Unique mode* is On, a TAG ID will only be enunciated if it is different from the previous TAG ID detected. Therefore, the TAG ID will only be enunciated once even if it remains in the detection range of the reader. The *Unique mode* also affects the COM port messages when the *Store mode* is disabled or when the *Store All* mode is selected.

When the *Unique mode* is set at Delay, a TAG ID will only be enunciated if it is different from the previous one. When it remains in the detection field, it will not be enunciated again until the *Delay* is expired. The *Delay* setting can be adjusted from 1 to 9999 seconds.

The *Delay* setting is only applicable when the *Unique Delay* mode is selected. It can be adjusted from 1 to 9999 seconds and prevent a same TAG ID to be detected again before the expiration of the delay. When editing the delay setting, it must be modified one digit at a time, beginning at the most significant one. To modify the delay setting, first select the Unique mode Delay option.

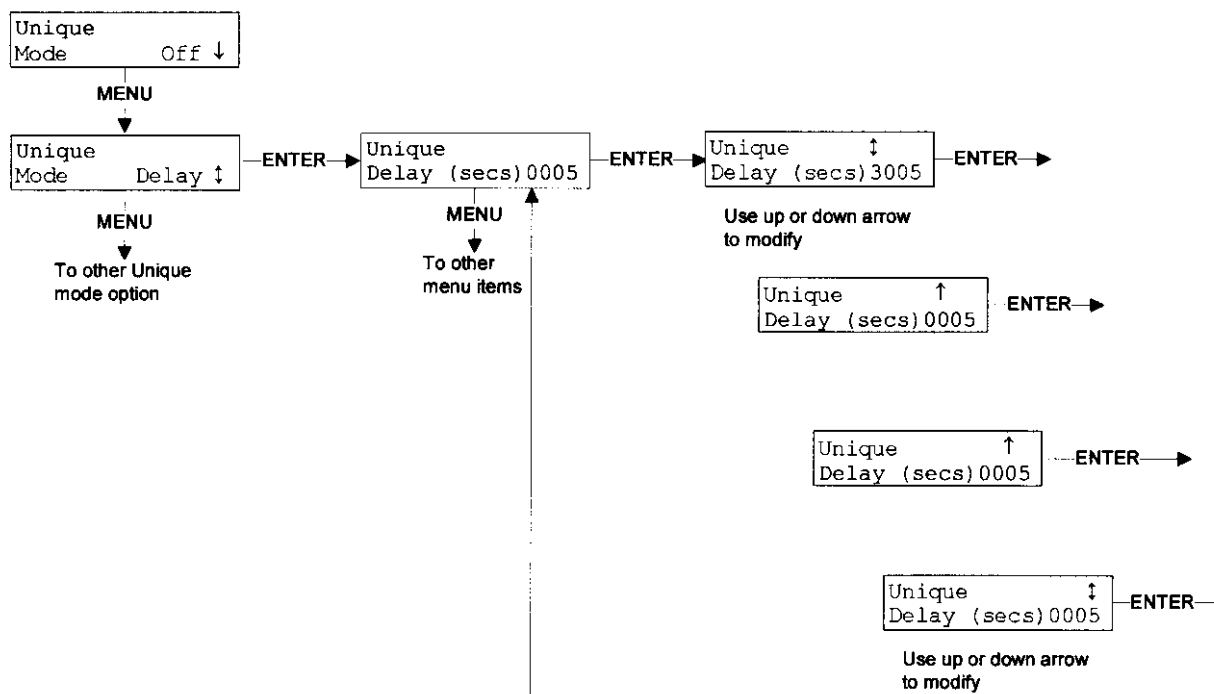


Figure 14 : Unique delay editing

An up/down arrow (↑,↓) will appear over the digit under modification, indicating to use the **ESCAPE** and the **MENU** keys to increase/decrease the digit. Once the appropriate value is displayed, use the **ENTER** key to proceed to the next digit modification until done.

6.3.6. Shutdown time

The Shutdown time allows the reader to automatically shut down when not active (*Ready* mode) in order to save battery energy. The *Off* setting will prevent the reader from shutting down automatically. The reader will not shutoff when in *Scan* mode since it is active. The shutdown timer is rearmed each time a TAG ID is detected or a keypad activity is detected.

6.3.7. Comm speed

The Comm speed setting defines the COM port baud rate setting at 2400, 9600, 19200 or 57600 BPS. After a modification, the reader must be turned Off and then back On for the new setting to be effective. It should be noted that the 19200 BPS setting is required for the software update using Vbflash. The 2400 BPS setting must not be used when the *Unique mode* is Off, since the data transmission time exceeds the TAG message duration time and can cause a reader communication overload.

6.3.8. Send to CommPort

The Send to CommPort setting allows the TAG ID messages to be sent to a computer connected to the reader serial port. The TAG IDs are sent on the COM port according to the *Unique Mode* and *Store Mode* settings:

- When the *Unique mode* is On, only the new TAG IDs different from the proceeding ones are sent on the COM port.
- When the *Unique mode* is set to *Delay*, a new TAG ID will be sent on the CommPort upon detection. It can also be sent back at the expiration of the delay if it remains in the detection field.
- When *Unique mode* is Off, all the tag messages are sent on the COM port. It may then cause a communication port overflow, since a new message will be sent at a rate of 33 milli-seconds when a tag remains in the reader detection range.

- When the *Store Search mode* is selected, only the tag IDs not found in the **Current** file selected by the user are sent on the COM port.

It should be noted that the message format is defined according to the Decimal tag option setting.

6.3.9. Antenna LED

The *Antenna LED* setting enables/disables the operation of the detect LED located on the antenna. When this LED is turned on upon the detection of a valid TAG message (*Antenna LED On*), a rapid change of current occurs in the antenna vicinity, therefore creating an electromagnetic interference (EMI) that may disturb the detection of the next TAG message. This disturbance is not important when manually feeding tags in the antenna vicinity since the interference occurs after the tag message is successfully detected. However, when monitoring a pipe, the interference may affect the detection of the next fish if it is grouped with the first one. In these applications, it is therefore important to deactivate the *Antenna LED*, which will prevent the LED to be activated. It should be noted that this setting does not affect the detect LED located under the display.

6.3.10. Backlight mode

The *Backlight mode* governs the operation of the LCD display. The settings are the following:

Off: The LCD backlight is always turned off, offering optimum battery energy consumption.

On: The LCD backlight is always turned on, which requires more energy.

Saving: The LCD backlight is only turned on momentarily upon detection of a TAG or keypad activity, offering a battery energy tradeoff.

6.3.11. Beep sound

The *Beep sound* governs the operation of the beeper. The settings are the following:

Off: The beeper is not activated upon detection of a TAG, offering optimum battery energy consumption.

On: The beeper is activated upon detection of a TAG.

6.3.12. Click sound

The *Click sound* governs the keypad tactile feedback. The settings are the following:

Off: The beeper is not activated upon activation of a key, offering optimum battery energy consumption.

On: The beeper is activated upon activation of a key.

6.3.13. Decimal tag (option)

The *Decimal tag* option governs the processing of the TAG IDs. When the option is turned *On*, the TAG ID display and messages on the CommPort are done in decimal format as following:

985.100006080033

When turned *Off*, the tag ID is displayed in hexadecimal format.

3D9.1748D3AD9F

6.4. Typical operation

The examples in the following sections describe typical reader profile settings for different types of operation.

6.4.1. Hands-free tabletop operation

This example covers an appropriate setting for a fish tagging session using a tabletop antenna. The reader is connected to a lap top computer for data logging and is also connected to an external power source. The user may want to store this setting in profile #1.

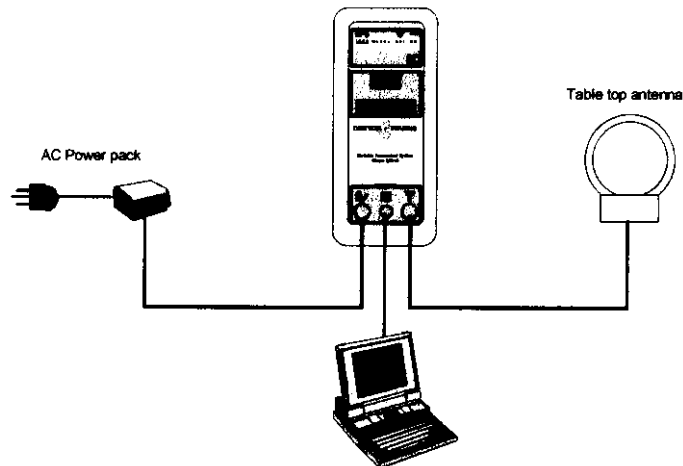


Figure 15 : Hands-free tabletop operation

Table 3 : Profile settings for Hands-free tabletop operation

Option	Setting	Comment
Antenna power	100%	Good range is preferable, probably under AC power anyway.
Store Mode	Off	No need to log the data inside the reader, a computer is attached to it
Continuous	On	The reader will continue reading if a tag is detected
Toggle	On	Push-on/Push-off operation for the tabletop antenna
Unique	On	Prevent the multiple detection of the same tag when it remains in the detection range
Shutdown time	0 min	We don't want the reader to shutdown by itself
COM speed	9,600 BPS	Budgets are low; we only have these slow 386 BW lap top computers for data logging.
Send to CommPort	On	Data logging to a computer is required
Antenna LED	On	Only used for pipe monitoring applications.
Backlight	On	No need to save battery energy, operated from AC power. Biologists work at night; they must see what they are doing!
Beep Sound	On	We want the audible indicator when we detect a fish
Click Sound	On	Tactile feedback for keyboard
Decimal Tag	On/Off	As preferred.

6.4.2. Hands-free pipe monitoring operation

This example covers an appropriate setting for a pipe monitoring operation using a portable antenna. The reader is connected to a lap top computer for data logging and is also connected to an external power source. The user may want to store this setting in profile #2.

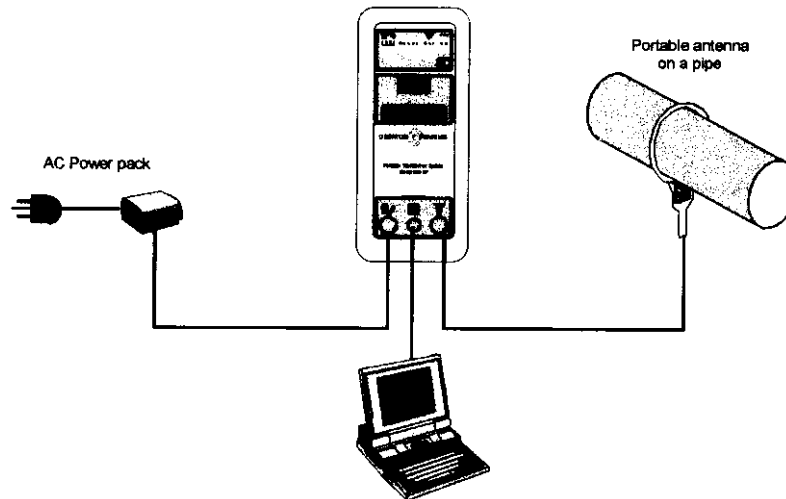


Figure 16 : Hands-free tabletop operation

Table 4 : Profile settings hands-free pipe monitoring operation

Option	Setting	Comment
Antenna power	50%	Good range without a dead spot is preferable
Store Mode	Off	No need to log the data inside the reader, a computer is attached to it
Continuous	On	The reader will continue reading if a tag is detected
Toggle	On	Push-on/Push-off operation for the tabletop antenna
Unique	On	Prevent the multiple detection of the same tag when it remains in the detection range
Shutdown time	0 min	We don't want the reader to shut down by itself
COM speed	19,200 BPS	We want the data to be sent as fast as possible for a Windows station.
Send to CommPort	On	Data logging to a computer is required
Antenna LED	Off	Only used for pipe monitoring applications. We don't want the detect LED on the antenna to cause misreads.
Backlight	On	No need to save battery energy, operated from AC power.
Beep Sound	Off	We don't want the audible indicator when we detect a fish.
Click Sound	On	Tactile feedback for keyboard
Decimal Tag	On/Off	As preferred.

6.4.3. Portable manual scanning with battery operation

This example covers an appropriate setting for a portable manual scanning operated on the internal battery. The prime criterion is energy conservation. The user may want to store this setting in profile #3.

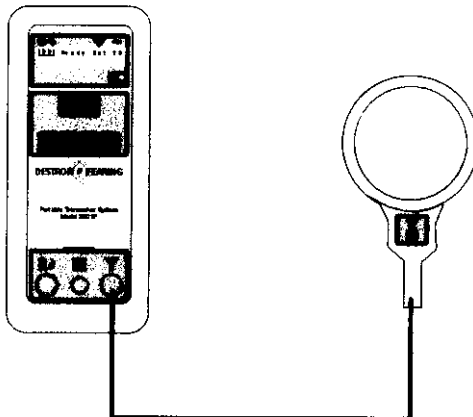


Figure 17 : Portable manual scanning

Table 5 : Profile settings for portable manual scanning with battery operation

Option	Setting	Comment
Antenna power	20%	Save battery energy!
Store Mode	Search	The reader is used as data logger, only searching for new tags.
Continuous	Off	The reader will stop reading if a tag is detected
Toggle	Off	Hand-held push-to-read operation with portable antenna
Unique	On	Doesn't matter since in search mode.
Shutdown time	1 min	We want to save battery energy.
COM speed	19,200 BPS	Irrelevant, since not using the Send to CommPort option.
Send to CommPort	Off	No data logging to a computer. We will use a file download when scanning done.
Quiet operation	Off	We want the LED to come on upon the detection of a TAG.
Backlight	Saving	Tradeoff situation, since we are working at night!
Beep Sound	On	We want a beep when we are detecting a fish.
Click Sound	Off	Save battery energy!
Decimal Tag	On/Off	As preferred.

7. SERIAL PORT OPERATION

The PTS reader can be fully operated and configured using a computer from the COM serial port. This RS-232 COM port can be used for:

- reader configuration (profile selection) and control;
- data file management, including file erase and creation and download to the computer;
- data logging on a computer;
- status and alarm display on a computer;
- Reader software upgrade.

7.1. COM port connections and configuration

The reader is optionally supplied with a 1-meter serial cable terminated on a DB9 female connector that mates most of the PC computer COM port. The pin assignment on the DB9 connector is as in the following table.

Table 6 : COM1 port connections (DB9 connector)

DB9 Pin number	EIA 232 signal name	Description	Reader signal direction	PC Computer connection (25 pin)	PC Computer connection (9-pin)
2	RD	Receive Data	Output	3	2
3	TD	Transmit Data	Input	2	3
5	GND	Signal Ground	None	7	5

When not used, the weather protective cap should be installed on the COM port connector identified by the computer symbol .

The serial port is operated with 8 data bits, no parity, 1 stop bit (N81) for ease of operation with most of the communication software packages such as Terminal  or ProComm , etc. The default baud rate for the COM port is 9,600 BPS.

7.2. General command format

The reader commands are made of 2 or more characters followed by Enter (Carriage Return, \$0d, 12d) as in the following example:

RA1.

The commands are not case sensitive and are echoed as they are typed. The backspace key can be used to correct an improper command.

Generally, the first two letters designate the command group and the remaining letters/digits designate the command parameters. The supported commands are the following, { } indicating a parameter (1 for On/Set, 0 Off/Reset or a value):

H or ?	Help command
CP{profile}	Change profile
DS	Display status and profile settings
FC	File closes and creates a new file
FE{C A}	File erase {C} current or {A} all files
FD{number A}	File download {number} or {A} all files
KP	Kill parameters
RA{1 0 Z}	Reader Active ON OFF SHUTDOWN
ST{1 0}	Send tag codes on COM
TE{1 0}	Test reader efficiency ON OFF

7.3. Reader prompt

After hitting the Enter key on the keyboard, the reader returns a prompt that indicates the profile number currently selected:

```
01>J01>
```

7.4. Help (H or ?)

The H or ? command displays the list of commands as follows:

```
01> hJ
CP{profile}      Change profile
DS               Display status and profile settings
FC               File closes and creates a new file
FE{C|A}          File erase {C} current or {A} all files
FD{number|A}     File download {number} or {A} all files
KP               Kill parameters
RA{1|0|Z}        Reader Active ON|OFF|SHUTDOWN
ST{1|0}          Send tag codes on COM
TE{1|0}          Test reader efficiency ON|OFF
01>
```

It should be noted that the execution of the Help command in series generates a heavy processor load (interrupt processing) and may cause temporary overload when scanning for tags.

7.5. File Create (FC)

The FC command closes the current file and creates a new file for data logging. The reader returns the new current file number that has been created.

```
01>FCJFile #19
01>
```

7.6. File Download (FD)

The FD command will download the specified file number (FDn) or all the files (FDA) to the computer. The following example illustrates the File Download All result when the reader has 2 files (Decimal Tag option is Off):

```
01>FD A
File #0
3D9.1748D3AD9F
3D9.1748D3AE8B
3D9.1748D3AF8E
3D9.1748D3AE21
```

```
File #1
3D9.1748D3B273
3D9.1748D3AFBD
3D9.1748D3AE66
Done!
01>
```

7.7. File Erase (FE)

The FE command will erase the current file (FEC) or all the files (FEA) in the reader's memory. The reader returns to the current file number that has been created. The following example illustrates the File Erase All command:

```
01>fe a
File #0
01>
```

7.8. Display Status (DS)

The DS command displays the reader operating status and the current profile setting as following:

01> **DS**.J

Reader info

S/W version:	PTS2001 2.0	Active:	On
Signal level:	0%	Power: AC OFF	80%
Memory:	0%		
Current file number:	0	Current file tag count:	0
Current profile:	#1		
Store mode:	Off	Continuous mode:	On
Toggle mode:	On	Unique mode:	Off
Unique delay:	1800s	Shutdown time:	1 min
Comm speed:	9600	Comm param:	8N1
Send tag to comm:	Yes		
Antenna power:	100%		
Antenna led:	On	Backlite:	On
Beep sound:	On	Click sound:	Off

Alarms

7.9. Change profile (CP)

The CP command changes the profile selection as follows:

01> **cp 2**.J

02>

You should note that the prompt has changed to the new profile number.

7.10. Send TAG on Comm Port (ST)

The ST command is used to enable (ST1) and disable (ST0) the tag message transmission on the COM port. The TAG ID message format is intended for direct ASCII terminal display as following:

01>

01>**ST1**.J

01>3D9.48D3AE26

The Manufacturer and ID are sent in the same format as defined on the LCD.

7.11. Reader Active (RA)

The RA command is used to start (RA1) and stop (RA0) the scanning process. It is also used to shutdown the reader remotely as in the following example.

```
01> RA0.␣  
MESSAGE: Reader is ready  
01> RA1.␣MESSAGE: Reader is scanning  
01> RAZ.␣  
MESSAGE: Shutdown!
```

7.12. Test reader Efficiency (TE)

The TE command is used to start (TE1) and stop (TE0) the reader efficiency test which allows the estimation of the read range and the percentage of tag message recovery for a given transponder position. When this test is activated and a transponder is presented in the read range, the reader will periodically send the tag recovery hit rate (%) as in the following example. The test is based on a 4 seconds update where approximately 131 tag messages should be read (100% recovery).

```
01> TE1.␣  
Hit rate: N/A  
3D9.48D3AE26  
Hit rate: 90  
Hit rate: 96  
Hit rate: 100  
TE0.␣  
01>
```

7.13. Kill parameters (KP)

The KP command is used to reset the non-volatile memory (files and profile settings) to the factory defaults. The command should be used each time the reader software is updated using the Vbflash Windows application.

7.14. Exception messages

Exception messages are issued by the reader on the serial ports when alarm conditions are detected or when the status of the reader has changed. The messages are in ASCII format. These messages are the following:

Exception message	Description
MESSAGE: Reader is scanning	Reader mode has changed from <i>Ready</i> to <i>Scan</i>
MESSAGE: Reader is ready	Reader mode has changed from <i>Scan</i> to <i>Ready</i>
MESSAGE: System reset!	Reader powered on or reset
MESSAGE: Lithium low	Low voltage level at the memory/real-time clock back-up lithium battery. The back-up lithium battery has an expected shelf life of 5 years, which is reduced when the unit is powered off for a long period of time since current is drawn from it in order to preserve the RAM memory and the real-time clock content. The back-up battery compartment is located on the MPU board. It should be replaced with a CR2016 type lithium battery (Eveready, Toshiba or any other battery manufacturer).
MESSAGE: Analog fail	The reader has detected a failure in the analog board. The user should check for the presence of metal around the antenna. If it's not the case, the unit should be returned to the supplier for repair.
MESSAGE: Analog comm	The reader has detected a failure with the analog board communication. The failure may be caused by temporary reader overflow.
MESSAGE: Memory low	The data logging memory is filled up to 90% of its capacity. Files must be downloaded to the computer or erased from the reader memory. Up to approximately 6,400 tags can be stored in the memory.
MESSAGE: Memory full	The data logging memory is full. The new tag IDs are not stored any more.
MESSAGE: System shutdown!	The reader is turned off.
MESSAGE: Power low	Low power level in the internal battery or at the external supply. It should be recharged as soon as possible.
MESSAGE: No antenna	Antenna failure (disconnected or failed)
MESSAGE: Buffer overrun	Environmental noise is detected and the reader is unable to read tags. The antenna should be relocated at a different position using the  signal level indicator which should be as low as possible  .
MESSAGE : Parameters reloaded	Indicates that default values are supplied for parameters. This should happen if the lithium battery is weak. The file system is also emptied at this time.

8. SELF TESTS AND DIAGNOSTICS

The PTS unit has integrated self-tests that are used to verify the integrity of the hardware. Two types of tests are performed on the unit:

- power-up diagnostics that are performed each time the unit is turned on;
- periodic self tests that are performed while the unit is active.

The detailed power-up sequence is illustrated in the next figure. When applying power, the LCD is turned on (series of black squares) and the processor performs a "BootLoader" memory verification. The "BootLoader" is a section of program included in the Flash memory (electrically erasable reprogrammable memory) that can never be erased and which initialize the reader hardware. If the "BootLoader" program is invalid, the system is halted and need to be returned to the supplier.

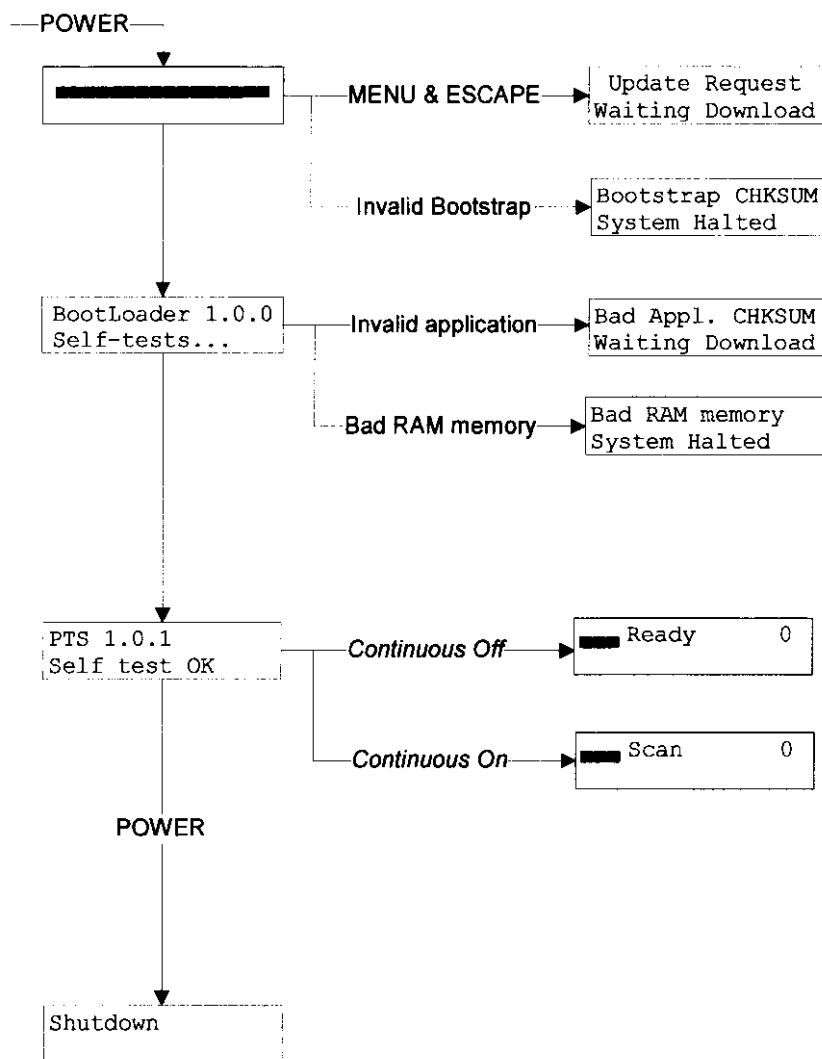


Figure 18 : Power-up sequence

Once this verification is completed, the unit checks if there is a valid application program. The application program governs the operation of the reader and can be updated in the field using the VBFLASH program running on any PC compatible computer with Microsoft Windows. In order to start

the software update process; the user must press both MENU and ESCAPE keys simultaneously immediately after pressing the POWER key. It should be noted that the "BootLoader" and the application program version/revision numbers are displayed during the power-up sequence.

If there is no valid application program, the reader will automatically enter in the software update mode, waiting for a download from VBFLASH. When the Flash memory is verified, the reader proceeds with the RAM memory verification. The system is halted if the RAM memory is defective and should be returned to the supplier.

If no hardware or firmware errors are found, the unit automatically searches for tags ("Continuous" scanning mode On) or waits for a user command ("Continuous" scanning mode Off).

8.1. Main battery replacement

When new, the battery has a charge duration of 6 hours at 100% power. The battery discharge curve is illustrated in the next figure. The reader uses the battery voltage as a reference for the battery level indicator. Since it is relatively flat for most of the time, the battery level indicator is only an approximation of the remaining capacity.

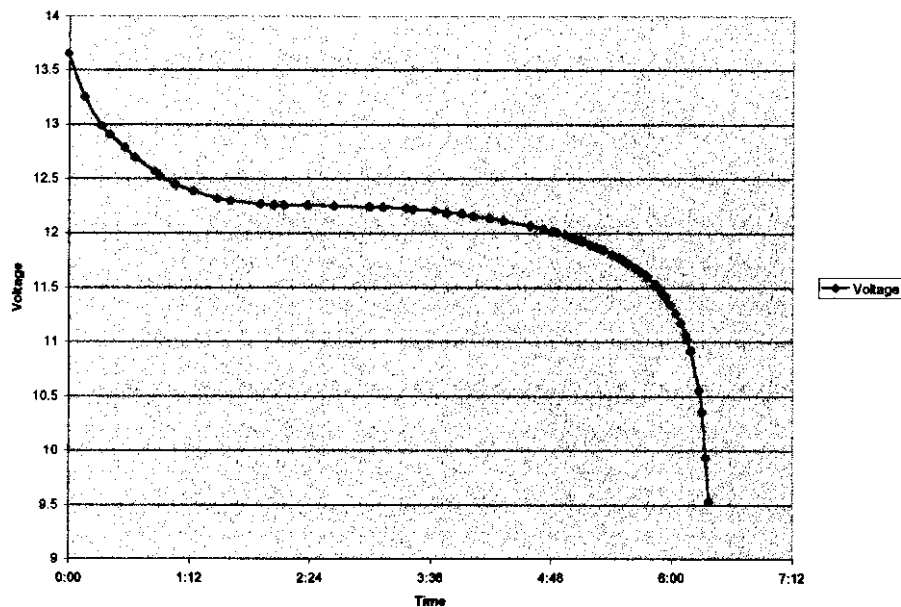


Figure 19 : Battery discharge curve

The main battery can be field-replaced using a Philips screwdriver. In order to replace the battery, use the following procedure:

1. Remove the 4 Philips screws securing the bottom end cap to the unit;
2. Disconnect the white Molex connector on the battery;
3. Slide the battery plate out of the unit;
4. Slide the new battery in the unit;
5. Reconnect the Molex connector;
6. Reinstall the 4 Philips screws, applying equal pressure on each of them, alternating to the furthest screw that was not previously tightened. Do not overtighten!

9. READER SOFTWARE UPDATE

The reader software can be updated from the Vbflash application program running under Microsoft Windows (version 3.1 or newer).

9.1. Vbflash program installation

The Vbflash program can be installed on your computer using the **Setup.exe** program on the installation disk. To install, start Setup from Windows and follow the instructions.

9.2. Vbflash program operation

The Vbflash application program can be started from the following icon:



Figure 20 : Vbflash program icon

When started, the application program appears as following:

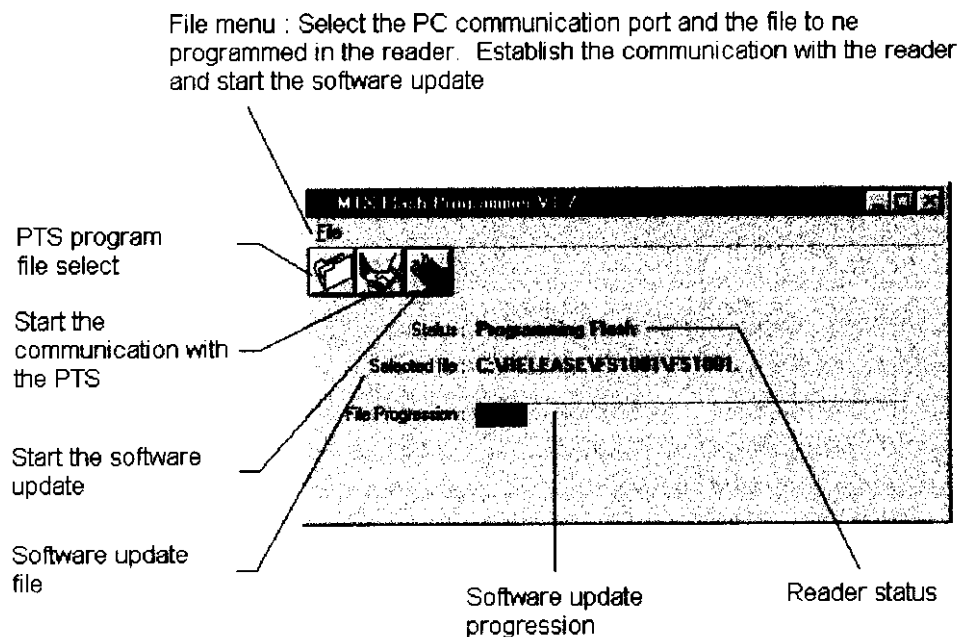


Figure 21 : Vbflash program window

When opened, the File menu is as following:

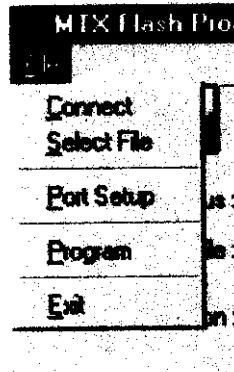


Figure 22 : File menu

The commands are as following:



Connect : Allows the PC to start the communication with the reader.



Select file : Allows the user to select a file to be programmed in the reader (*.hex extension).

Port setup : Allows the user to select the PC communication port to which the reader is connected.



Program : This function starts the software update in the reader from the selected file. This function is equivalent to the push-button.



Exit : Exit the Vbflash application program.



The Reader power must not be turned off when doing a software update!!!

9.3. Reader software update procedure


The **step-by-step reader software update procedure** is the following:

1. Connect the communication cable between the PC communication port and the reader port located identified by the computer symbol . The PC communication port must not be already attached to any application program such as Windows Terminal. Baud rate is not relevant as the reader automatically adjusts to match the computer rate.
2. Turn the reader power off and then back on using the POWER key. When black squares are displayed, the user must push and hold both MENU and ESCAPE keys until the following message is displayed:


Update request
Waiting download



3. Start the Vbflash application program.
4. From the Vbflash **Port Setup** command, select the PC communication port connected to the reader. By default, COM2 is selected.

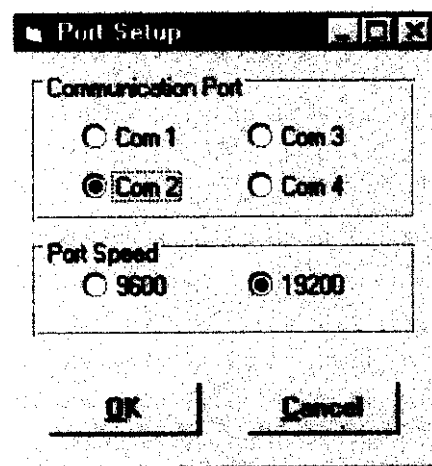

If the communication port is used by another application or not available on the computer, the following message will appear on the screen:

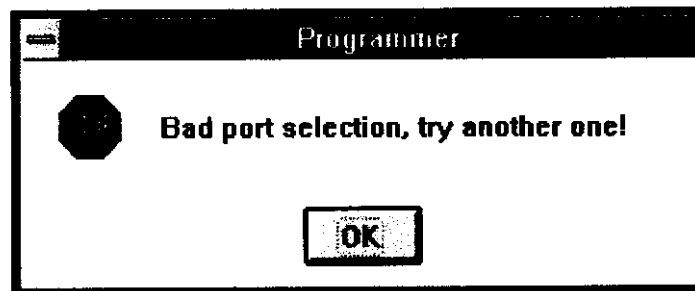


Once connected, the Status will be updated as following:

Status: **Target Connected**

If the computer has problem establishing the communication with the reader, the Status will be updated as following:

Status: **Target Not Connected! (TimeOut)**

5. Using the  **Select file** command, select the program file to be stored in the reader as following:

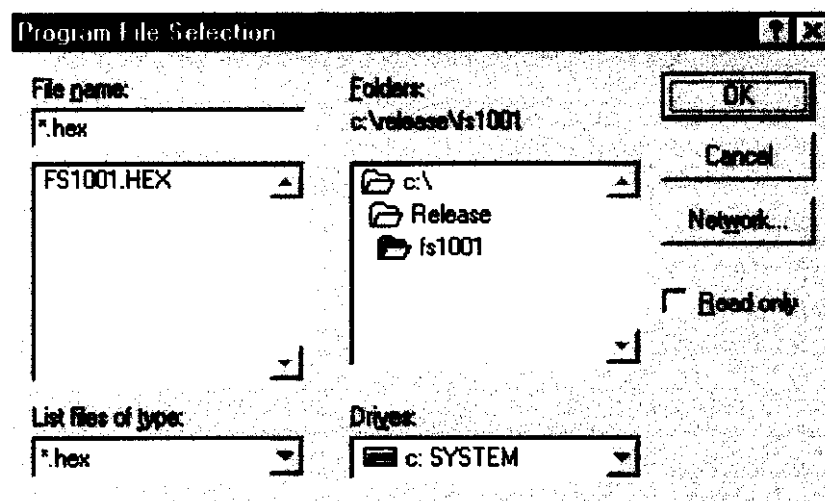

The file must have a **.hex** extension. Once selected, the file name will appear on the Vbflash window as following:

Selected file: **C:\RELEASE\FS1001\FS1001.**

6. Using the  **Program** command, start the reader software update. The Vbflash program will:

- Calculate the program checksum:

Status: **Calculating checksum**

- Set the Reader in program mode. The LCD display will be as following:

Loading program
Please wait

- Erase the Flash EPROM program memory:

Status: **Erasing Flash**

- Program the Flash EPROM program memory:

Status: **Programming Flash**
Selected file: **C:\RELEASE\FS1001\FS1001.**
File Progression: 

- The completion of the software update will be indicated as following:

Status: **Successful Software Update!**

7. The Reader will automatically restart after the completion of the software update, showing the firmware revision number.

PTS 1.0.9 Self test OK

8. Close the Vbflash application using the Exit command (or).
9. Using an application such as Terminal  or ProComm , reset the reader configuration by using the KP command.
10. Set the desired profile parameters from the keypad.

10. WATERPROOF CONNECTOR REPLACEMENT PARTS LIST

10.1. 2001F Chassis connectors

Power input receptacle	Tajimi R04-R6F
RS232 input receptacle	Tajimi R04-R5F
Antenna input receptacle	Tajimi R04-R8F

10.2. Antenna connector

Antenna receptacle	Tajimi R04-R8F
--------------------	----------------

10.3. Cable connectors

Power cable plug	Tajimi R04-P6M (6.8)
RS232 cable plug	Tajimi R04-P5M
Antenna cable plug	Tajimi R04-P8M (6.8)

10.4. Tajimi distributor information

Direct Sound Corporation

Park Square Building

31 St. James Ave., Suite 901

Boston, Mass 02116-4101

TEL: 1-800-372-1616

11. FCC CERTIFICATION AND USER'S INFORMATION**Modifications**

The FCC requires the user to be notified that any changes or modifications made to this device, or any of the accessories provided with this device, that are not expressly approved by Destron-Fearing Corporation may void the user's authority to operate the equipment.

Cables

Connections to this device must be made with the manufacture's cables only in order to maintain compliance with the FCC Rules and Regulations.

WARNING: When connecting the antenna cable, the end marked transceiver (Ferrite) must be connected to the 2001F. The RS232 cable, if used, must be attached to a grounded connector. Failure to comply may result in the exceeding of FCC limits and undesirable operation of the unit.

Declaration of Conformity

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions. (1) This device may not cause harmful interference, and (2) this device must accept interference received, including interference that may cause undesired operation.

FCC ID: C5S2001F

Product of USA

For questions regarding this product, contact:

DESTRON-FEARING CORPORATION

490 Villaume Ave.

South Saint Paul, Minnesota 55075

Or call:

1-800-328-0118

For questions regarding this FCC declaration, contact:

DESTRON-FEARING CORPORATION

490 Villaume Ave.

South Saint Paul, Minnesota 55075

Or call:

1-800-328-0118

Please have model and serial number available.