 

Change wallpaper

Slide it to the edit control page, choose the wallpaper option,

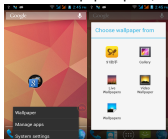

Add a shortcut to the desktop

Slide it to the edit control page, choose the add option, The Add screen, click the application icon you want to the target page



 
Add contacts to your desktop

In the widgets space -long press the contact widget -" choose a contact



Add URL to the desktop

In the widgets space -long press the Bookmark widget -" choose a bookmark



Delete the desktop icon

 
Slide it to the edit control page, choose the arrange option ,then the shortcuts converted to delete state, which you want to delete ,click on the upper left corner of the delete icon



Music Function


Play music

Music player into the main interface, select the song you want to play,

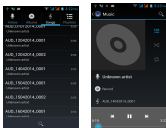

Switch the display mode

 The default is the grids shows that if you want to switch to the list shows, left to enter the Options menu, select list mode

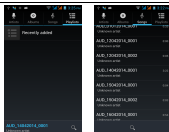

FM function

 
Open radio

Enter radio interface, click the switch button, turn on the radio



Search Channel

Enter the Options menu, select the search channel, enter the search channel interface



Switch to Speaker

FM player interface, enter the Options menu, choose speakers play



 
Bluetooth Function

Select "Settings" -" Select "Bluetooth" function,




Wi-Fi Features

Select "Settings"- "Select Wi-Fi"- select "Add NETWORK ", select the desired access APN

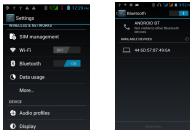


Flight mode Function

 Select "Settings"- "Select More"- choose "Flight Mode" function




 Or select the phone, "Off" button - select the "Flight Mode" function



Black unlock

 Select "Settings"->Select "security "-> Select the " Screen lock"-Pattern

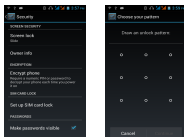

Restore to factory default

Select "Settings"->Select "Backup & reset "- select "Factory data reset"



Storage Settings

Select "Settings"->Select "storage"



 
English language switching phone

Select "Settings"- "Language & input "- Select "Language ", select English or other




Input set

Select "Settings"- " Language & input "-click  button



Replacement mobile phone input method

 Select "Settings"- " Language & input "-Default



Android phone data cable links

Select "Settings"-Select "Developer options"-Check "USB debugging "

Products installed on your computer drive, the link on the USB cable;



Introduce cross-screen display

Select "Settings"->"Display "-Check "Auto- rotate screen" according to the phone automatically change the direction of rotation



Browser Features

 
Visit the website

Browser - "Click url input area "- Enter the URL of web browsing-click **C** button




Download Web page images or other objects

Browser - "browse the web, long press on the picture, there shortcut keys, choose "Save Image "function



Browser settings / search page

 Browser - "browse the web" - "click "menu button", - select settings / find on page



Q/A

1. How to turn off the software running in the background too much

Download Advanced Task Manager Advanced Task Manager and select install, it can help you achieve, automatic end of the program services, to switch between programs, display memory information, exclusion list, an end of all widgets, fast uninstall program and other functions, To free up memory space, reducing the CPU's operation long pressure, increase speed, to extend the purpose of standby time.

2. How to quickly set up Email

In the Android system, can automatically set the POP3 or IMAP e-mail most accounts, the e-mail application, directly enter the e-mail address and password; if not automatically fit in the mailbox, the mailbox will be required by user Server information. See details in front of the "E-mail Features" section.

3. How do I view the capacity of SD card case

Select the "Settings"-Select Storage -select "SD card and phone memory", will see the current SD card capacity information phone

4. How to save electricity

First, reduce the screen brightness can be used in peacetime by reducing the brightness

to reduce battery consumption, in the "Settings " in the "sound and display" found on "brightness", and then sliding scale in respect of the brightness can be set Android phones; Close GPS global positioning, in the "Settings" and select "location services" -uncheck the following "Enable GPS satellite set" can be;

Usually if you do not use the Wi-Fi, Bluetooth headset can be improved by turning off these options to the standby time, turn off the WLAN search can save about 30% to 40% of standby time;

Usually close calls and text messages to remind vibration;

5. How lock screen, to prevent others from using

In the "Settings", select " Security "and then select "screen lock""pattern", to set individual unlock pattern, to prevent strangers use or purpose of ensuring privacy of confidential documents.

6. Why does not the USB data cable links your computer

Confirmed in the phone's "Settings"-""Developer options"- " in the "USB debugging "functionality check; also installed the correct USB driver

7. How to install a program on a non-Android Market

Select "Settings"-"" Security ", the "unknown source "function check

8. In browsing the web or other applications, how to switch to other applications

If you need to open when browsing other applications, you can long press the Home key to achieving long task switch, long press return directly to the desktop (note that the system default task only last 6 months)

9. How to enter the silent mode quickly

In addition to continuing foreign long press the volume down key, and directly In to the status bar select the silent mode.

10. How to forward SMS / MMS

Long press and Information applications in the information content of an item in the list, until the pop-up shortcut menu, select "Forward" can be realized.

11. how to paste and copy text

Into the input field - "input string, long press and enter the region, there shortcut keys - "select All " " cut All " ,"copy All", "paste All"

12. In the phone program group is installed too many applications, how to solve

In the desktop space – sliding the application to another application – click the application to open New Folder

13. Contacts are sorted, can change

Sort of way platform, the first number, then letters, then the Chinese way of sorting; the user can not set their own sort

14. Contacts whether to support the group

Enter contacts - > select group, you can create groups, then will contact man to join the corresponding group

15. Contacts and SMS storage capacity limits the number of

Platform reason, contacts and SMS storage for no clear limit value, depending on the size of the current mobile phone memory space

16. How to set the SD card, personalized ring tones

In the SD card, are established "ringtones" (ringtones) "alarms" (alarm tone) "notifications" (SMS notification tone), the ring tones into a different folder, the phone can be automatically identified.

17. How to sync the phone contacts to the original

using Bluetooth the way, the two cell phone, sync contacts;

18. How to use the access Wifi (WLAN)

Wi-Fi signal at the scene to ensure that the premise of the specific see "Wi-Fi function "

19. How to Find Contact

Into the contact interface, select the "Search" menu, you can search for contacts, you can use the first letter of query letters;

20 How do I delete the downloaded software

"Settings" - ""Manage app"- "Select the application to be deleted

21. How to view mobile phone version information

"Settings" - "" About phone "mobile phone version information can be obtained, including the Android version, Linux version, software version, hardware version, etc.

22. How do I copy SIM card contact information

Into the Contacts application, click the menu button, select "Import Contacts", then you can see the SIM card contacts, if only to import one, you can click an item. If all the import needs to long press the menu key, select Import to import all.

23 why the message has a different time and date display

Message displayed on the principle that the display of the day time and date have shown that non-day

24. Whether to support the Java

Platform reason, does not support Java, if you need to install third-party Java applications, you need to install the Java runtime environment.

25. How to open developer options

Enter the Settings -- the About phone -- click the Build number four times, system will be generated developer options

26. Gestures

If the phone is not turned unlock pattern:

1. When you double-click on the screen, you can light up the screen
2. When the slide to the left of the screen, you can receive information directly into the interface
3. When you slide the screen to the right, you go directly dial interface
4. When you slide up the screen, you can go directly to the camera interface
5. When you slide down the screen, you go directly to MP3 player interface

If the phone is turned unlock pattern:

1. Double-click the screen lights up, directly into the unlock screen
2. Directly into the left slide to unlock screen, then manually enter the unlock received information interface
3. Slide to unlock directly into the interface, and then manually enter the dialing interface solution
4. Slide up to unlock directly into the interface, and then manually enter the camera interface solution
5. Slide down directly into the unlock screen, then manually enter the MP3 player interface solution

FCC:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

Specific Absorption Rate (SAR) information: SAR tests are conducted using standard operating positions accepted by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new mobile phone is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each phone are performed in positions and locations (e.g. at the ear and worn on the body) as required by the FCC.

For body worn operation, this mobile phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 1.0cm from the body.