

User's Guide

FlyMax Transmitter

The FlyMax transmitter is shipped from the factory fully configured and ready to use.

Install Batteries

Remove the battery door on the back of the transmitter. Install 2 AA alkaline batteries making sure to match the polarity marking inside the battery compartment. Use two new alkaline batteries; do not mix old and new batteries.

The transmitter is now ready to use. Depressing any button the transmitter will activate the corresponding function on the receiver. The green indicator located between Throttle Up and Pitch Up button displays the transmitter status.

Indicator OFF	No buttons depressed transmitter off
Indicator FLASHING	Transmitter active
Indicator SOLID	Replace batteries

IMPORTANT NOTE:

This device has been certified to comply with FCC Part 15 rules. Changes or modifications not expressly approved by Control Chief Corporation could void the end user's authority to operate this equipment